


ASSEMBLY INSTRUCTIONS

DINING CHAIRS


If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

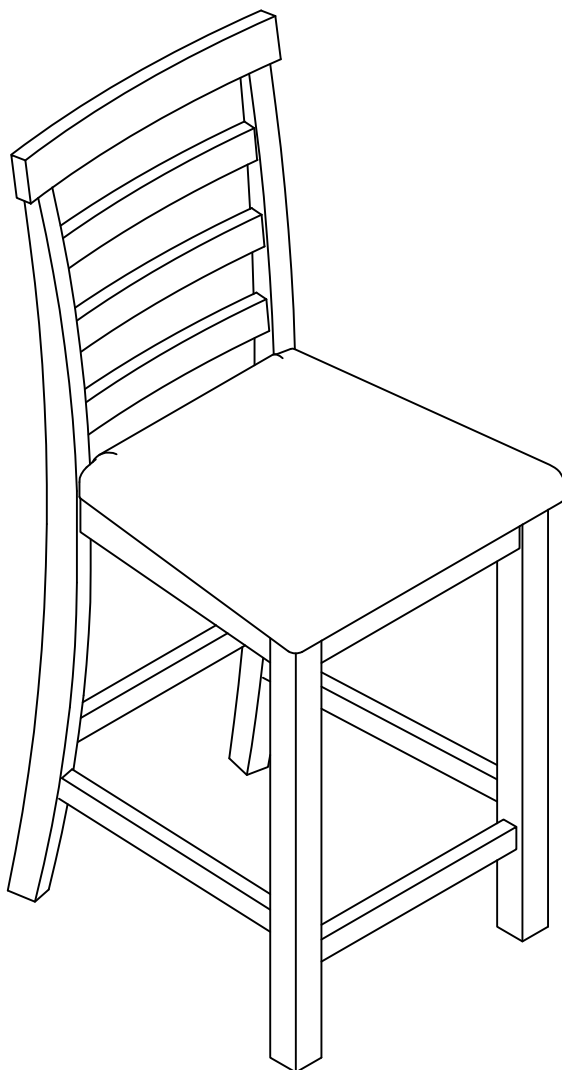








WF301501

IMPORTANT NOTE :

- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**
- 2 BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**
- 3 DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP**

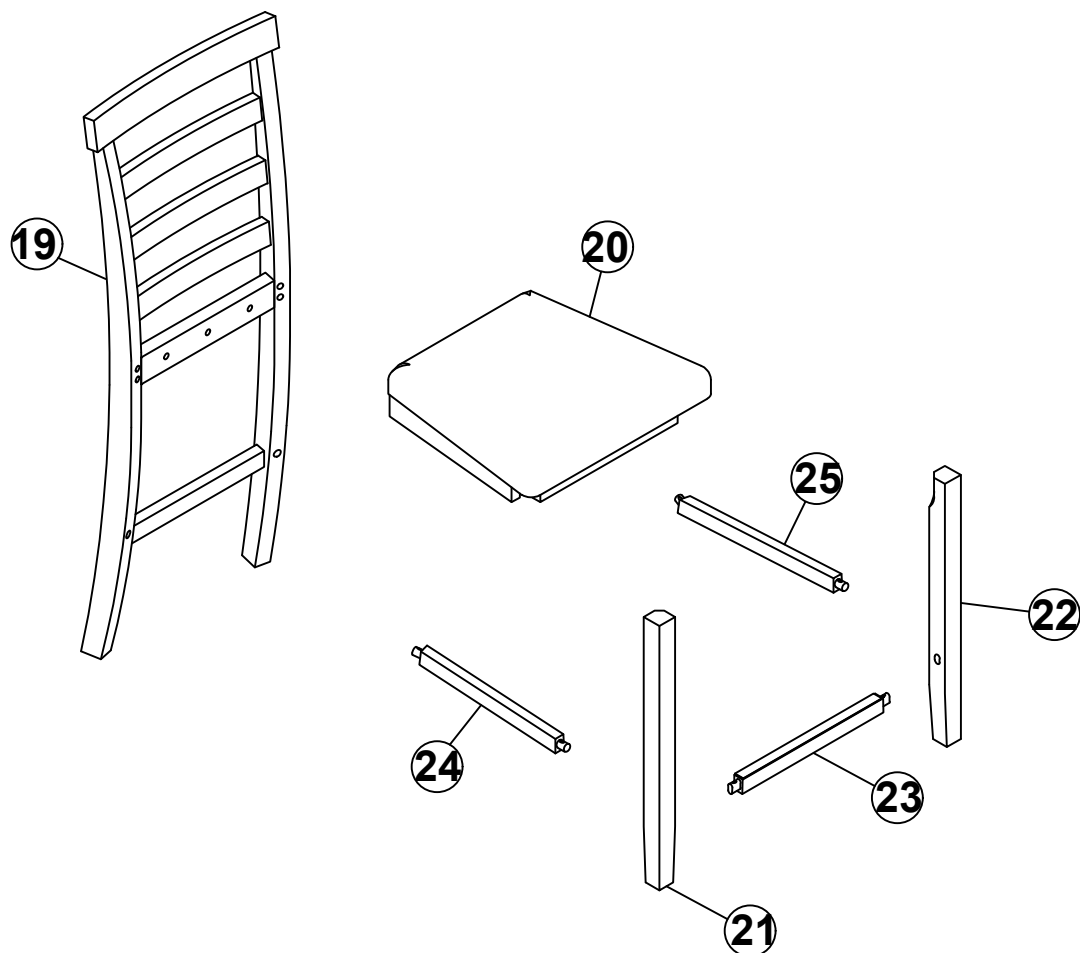



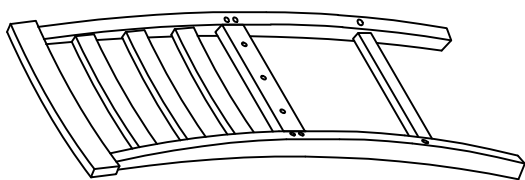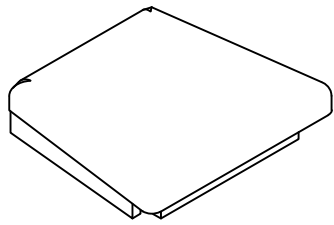





Part List For One Chair


19 	21 
	LEFT CHAIR LEG(1pc)
20 	22 
	RIGHT CHAIR LEG(1pc)
	23 
	FRONT STRETCHER (1pc)
BACK FRAME (1pc)	24 
	LEFT STRETCHER (1pc)
SEAT FRAME (1pc)	25 
	RIGHT STRETCHER (1pc)

ASSEMBLY INSTRUCTIONS


Hardware List For One Chair







I	 Ø1/4" x 75mm BOLT (4pcs)	N	 Ø1/4" x 19mm FLAT WASHER (10pcs)
K	 Ø1/4" x 55mm BOLT (4pcs)	O	 Ø4" x 38mm SCREW (6pcs)
L	 Ø1/4" x 35mm BOLT (2pcs)	P	 Ø10" x 30mm WOODEN PEGS (1pc)
M	 Ø1/4" x 13mm SPRING WASHER (10pcs)	J	 4mm ALLENKEY (1pc)

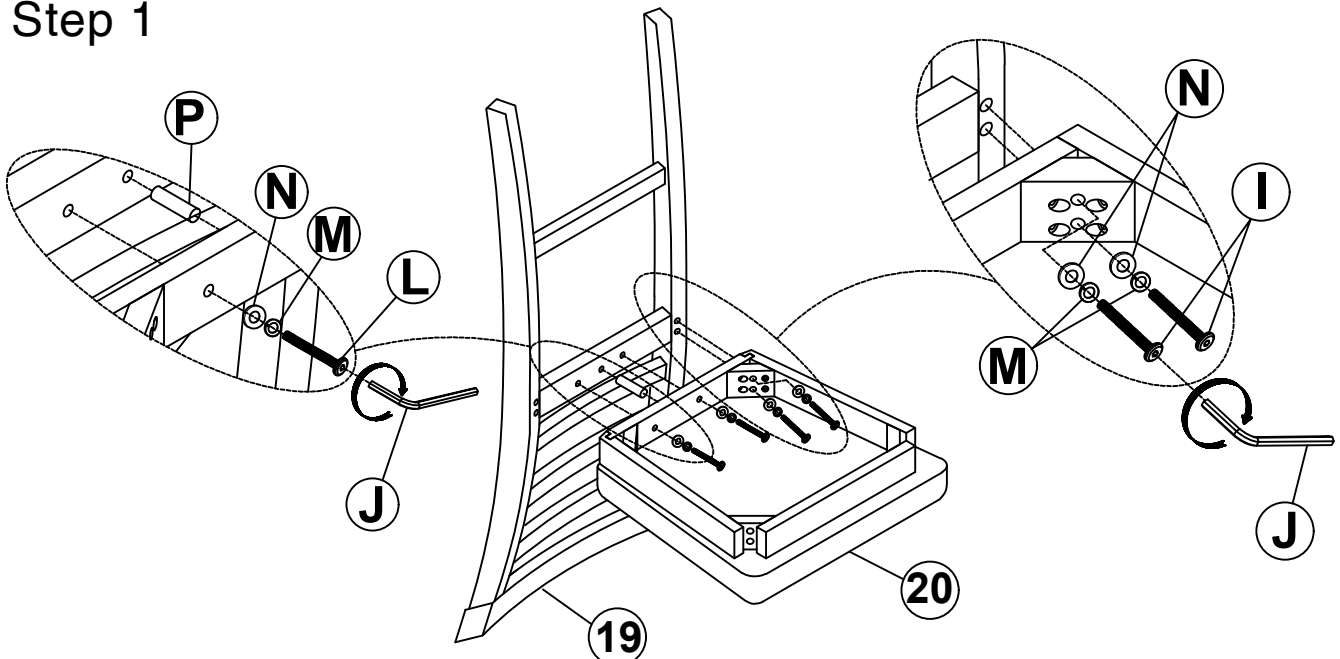ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




Step 1







P	Ø10x30		1PC	M	1/4"x13		6PCS
I	1/4"x75		4PCS	N	1/4"x19		6PCS
L	1/4"x35		2PCS	J	4x58		1PC

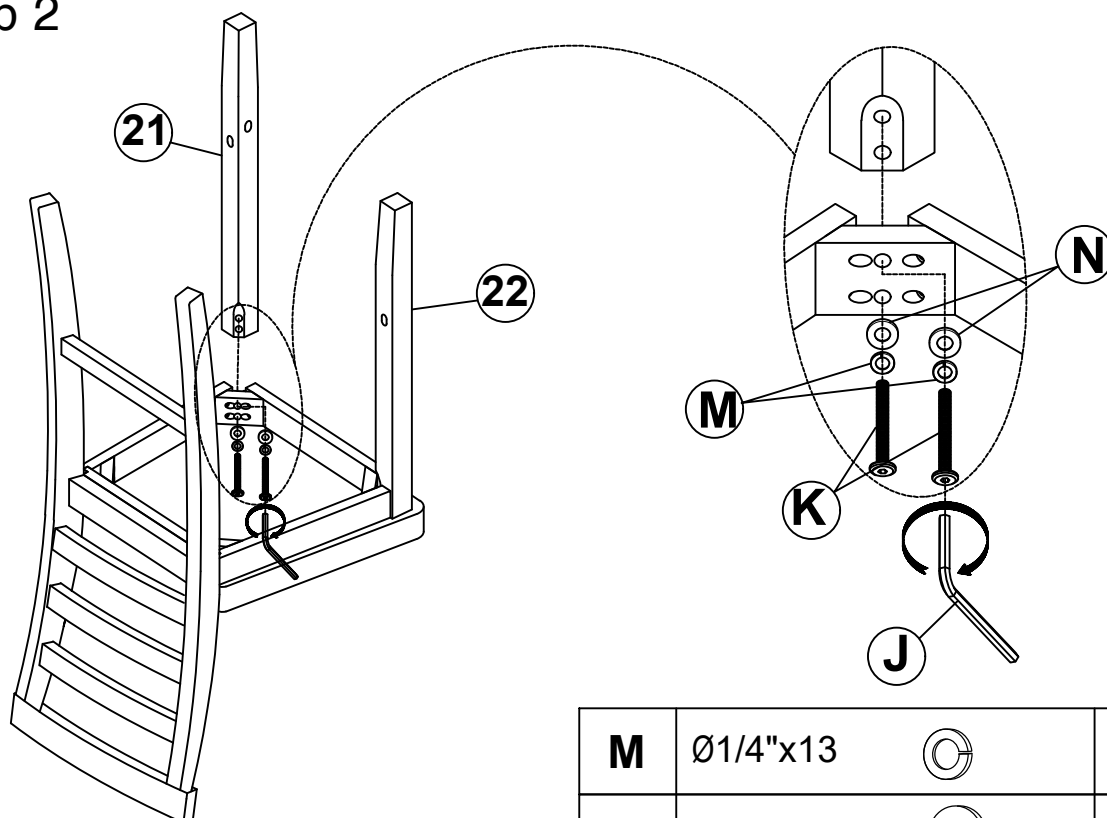
ASSEMBLY INSTRUCTIONS


Step 2



M	Ø1/4"x13		4PCS
N	Ø1/4"x19		4PCS
K	1/4x55		4PCS
J	4x58		1PC

Step 3

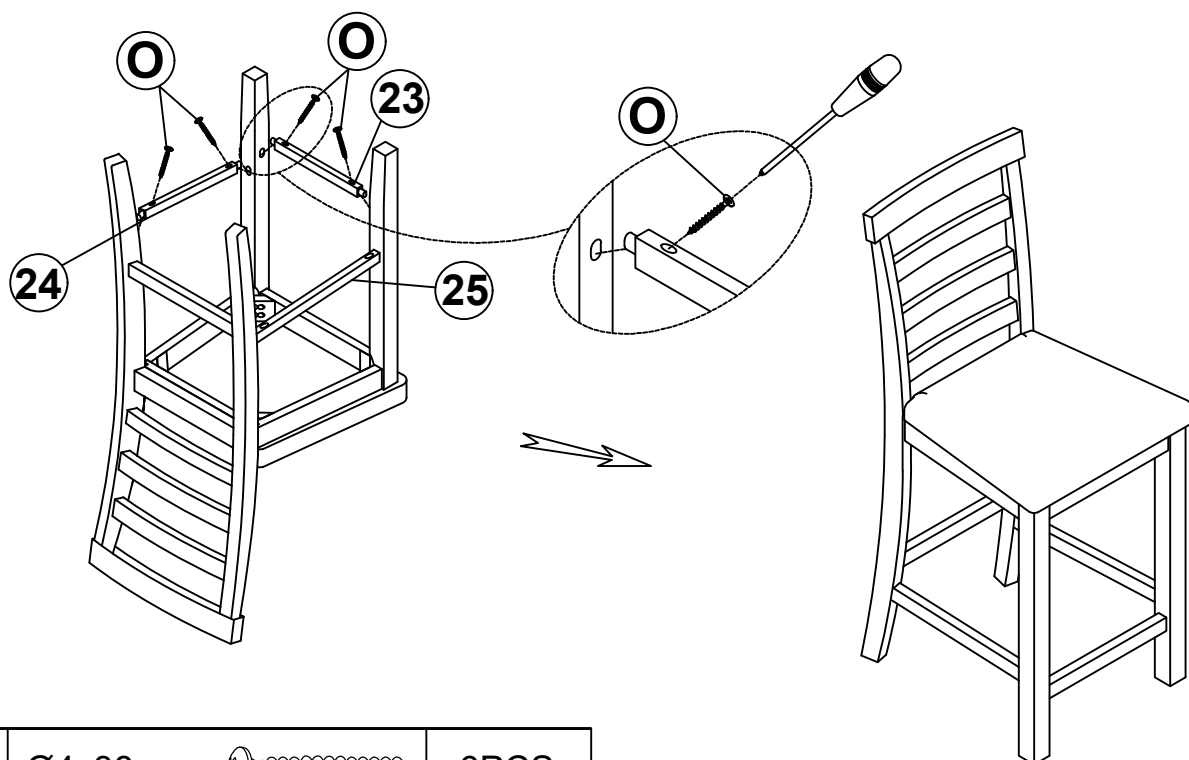

O	Ø4x38		6PCS
----------	-------	---	------