



EDGE INSTALLATION INSTRUCTIONS

Optional transition edge compatible with SnapLock products.

There are two parts to the interlocking system:

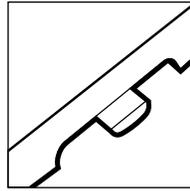

Male (Peg)

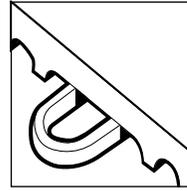


Female (Loop)


When installing your edge pieces, connect the exposed tile edge to the edge piece with the opposite interlocking part.

Installing Edge Pieces On One Side Of The Floor

If your floor has an exposed side of male pegs on the tiles, use a female edge kit to connect to them. See the illustration on the right.

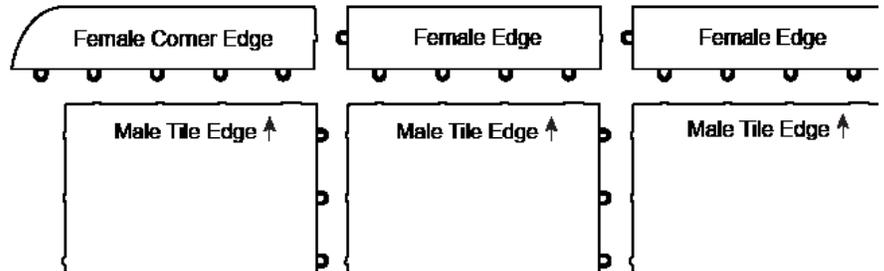

Alternatively, if your floor has an exposed side of female loops on the tiles, use a male edge kit to connect to them. See the illustration on the right.

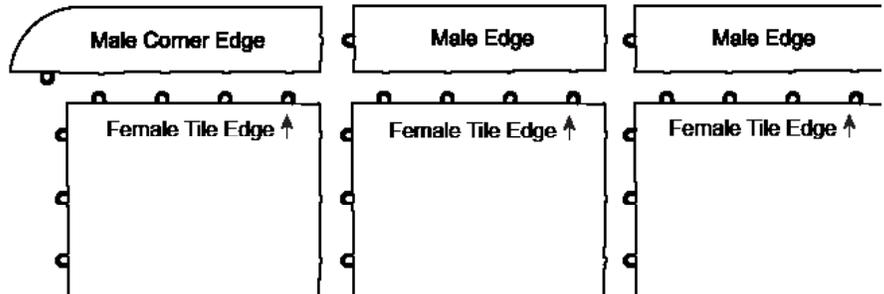

Installing Edge Pieces Around The Entire Floor

To install edges on all sides around a floor, the illustration on the right will show you the proper placement of the tiles and edge pieces.

Always remember to leave a minimum of 1/2" space between the floor edge and wall to allow for expansion. Your floor edge should never be up against anything.

