

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening
- \* This item may require a pair of pliers to unscrew the screws to a suitable length during assembly when feet are too short to fit into the item.

## PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 5 minutes.

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

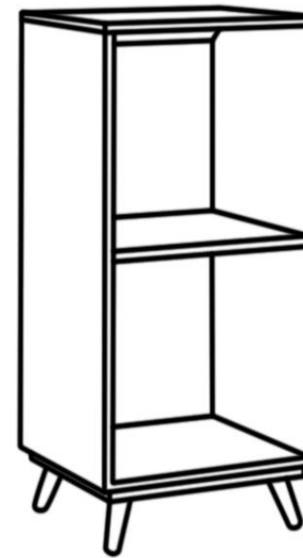
### Part List and Hardware List

| PIECE | DESCRIPTION                     | PICTURE                                                                             | QUANTITY |
|-------|---------------------------------|-------------------------------------------------------------------------------------|----------|
| A     | Table top                       |   | 1X       |
| B     | Right board                     |  | 1X       |
| C     | Back support board              |  | 1X       |
| D     | Left board                      |  | 1X       |
| E     | Middle board                    |  | 1X       |
| F     | Bottom board                    |  | 1X       |
| G     | Feet                            |  | 4X       |
| H     | Wood dowel                      |  | 12X      |
| I     | Cam lock set (bolt, nut, cover) |  | 12X      |
| J     | Flat head screw                 |  | 4X       |

 **SAFAVIEH**  
FURNITURE

Item# ACC5740

Product Dimensions: 15.7"W x 14"D x 31.6"H



 WARNING 

Weight Capacity: 40LBS

Warning: Do not stand on the desk

Warning: Do not over torque bolts.

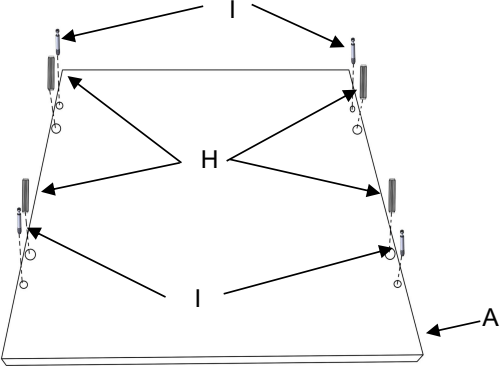
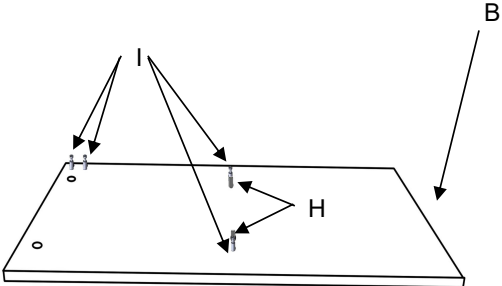
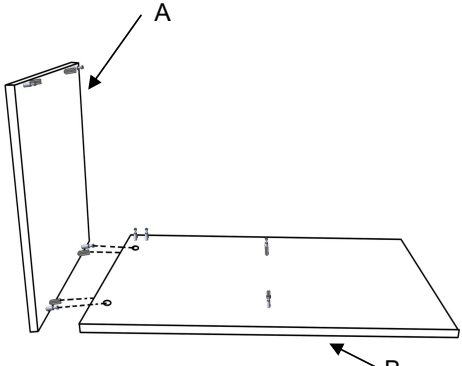
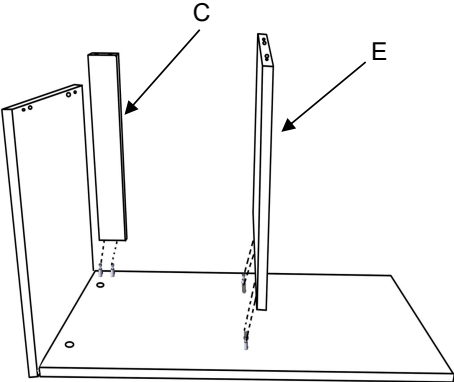
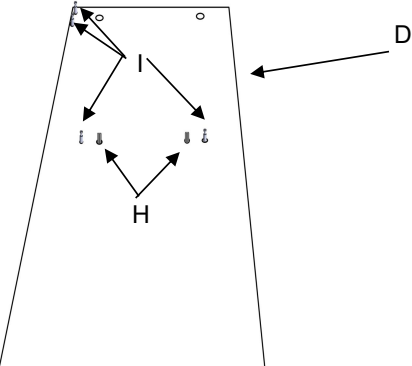
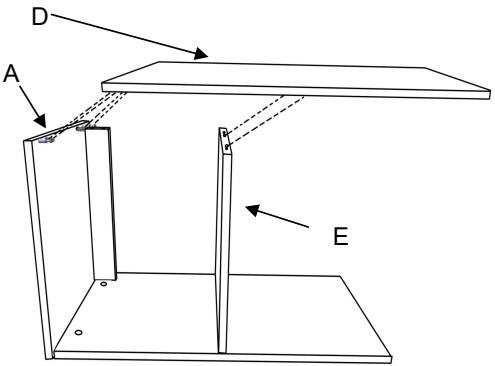
## PREPARATION

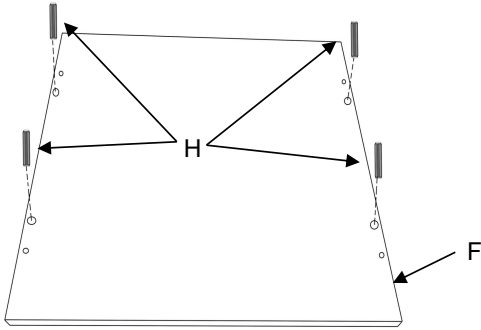
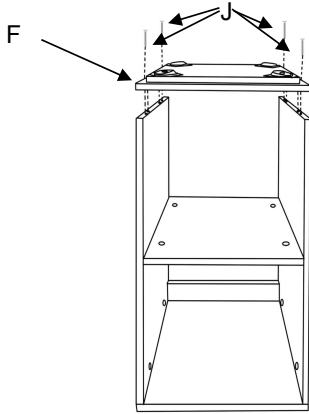
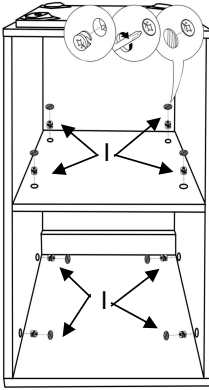
\*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

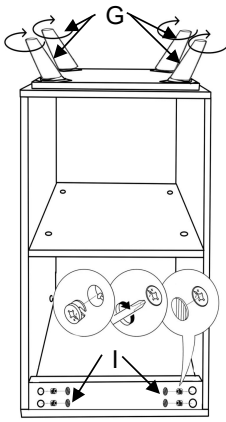
\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 30 minutes.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

|                                                                                                                                                                                                        |                                                                                        |                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                       |      |                                                                                                                                                                                          |
| <p>Step 1: Take all packaging off the table. Turn over table top A and insert 4pcs wood dowels H and 4pcs cam lock bolts I into table top A.</p>                                                       | <p>Step 2: Insert 4pcs cam lock bolts I and 2pcs wood dowels H into right board B.</p> | <p>Step 3: Insert the right board B into the wood dowels and cam lock bolts on the right side of table top A.</p>                                                                                                                                                           |
|                                                                                                                      |     |                                                                                                                                                                                         |
| <p>Step 4: Insert the back support board C into the cam lock bolts on the edge of the right board B. Insert middle panel E into the wood dowels and cam lock bolts on the middle of right board B.</p> | <p>Step 5: Insert 4pcs cam lock bolts I and 2pcs wood dowels H into left board D.</p>  | <p>Step 6: Slightly lift the table top A to allow the cam lock bolts of the left board D to be inserted into the back support board C and middle board E, and then insert the left board D into the wood dowels and cam lock bolts on the left side of the table top A.</p> |

|                                                                                   |                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |                                                                                                                                                                   |                                                                                                                                                                        |
| <p>Step 7: Insert 4pcs wood dowels H into bottom board F.</p>                     | <p>Step 8: Align the 4pcs wooden dowels of the bottom board F and insert them into the 4 pre-drilled holes in the left board and right board. Then, use 4pcs flat head screws J to lock the bottom board F into the left board and right board.</p> | <p>Step 9: Align the 8pcs cam lock nuts into the pre-drilled holes in the left board, middle board and right board. Use a screwdriver to rotate clockwise to lock the cam lock nuts, and then attach 8pcs cam lock covers to the corresponding holes.</p> |

|                                                                                    |                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Step 10: Align the 4pcs cam lock nuts into the pre-drilled holes in the back support board C. Use a screwdriver to rotate clockwise to lock the cam lock nuts, and then attach the 4pcs cam lock covers to the corresponding holes. Attach the 4pcs feet G into the holes of the iron plate on the bottom board. The table</p> |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|