

# How To Accurately Measure Your Window

---


## Measuring for Inside Mount

Measure the inside width of the window opening in three places; top, middle and bottom.

Record the widest measurement.

Next, measure the inside height of the window opening in three places; left, middle and right.

Record the longest measurement.

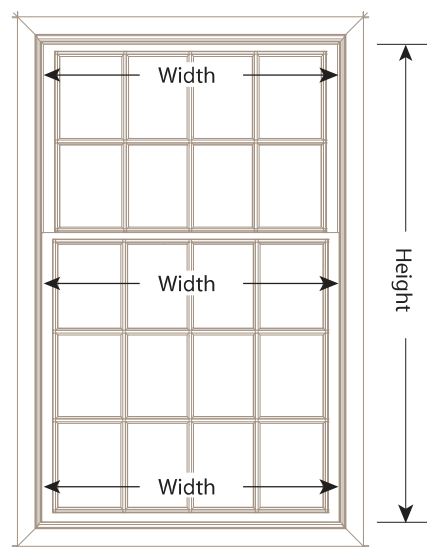

## Measuring For Outside Mount

Measure the width from point to point on your molding or wall where you want your shade to cover.

Next, measure the height from point to point on your molding or wall where you want your shade to be hung. If you have a window sill, measure from the top of the sill to the point on your molding or wall where the shade will be hung (a minimum of 3/4 in. flat space is needed at the point on your molding, wall or ceiling where the headrail brackets will be hung.)

