





! Before purchasing, please check that this SmartBidet will fit your toilet.

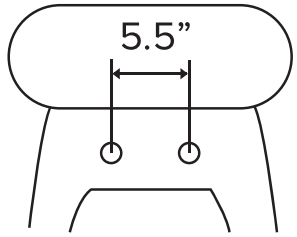


1. Measure the distance between the center of the toilet bolt holes. It should be **5.5 in.**

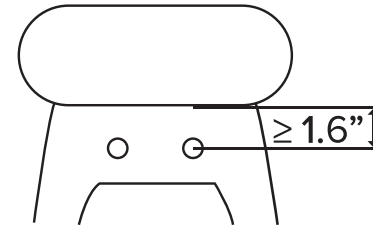

2. Measure the distance from the center of the toilet bolt holes to the toilet tank. The toilet will need a minimum of **1.6 in.** of clearance.

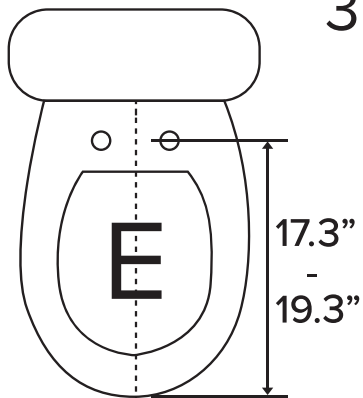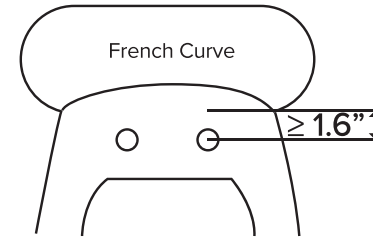

3. Measure the distance from the toilet bolt holes to the front of the toilet **17.3 in. to 19.3 in.:**
ELONGATED SmartBidet

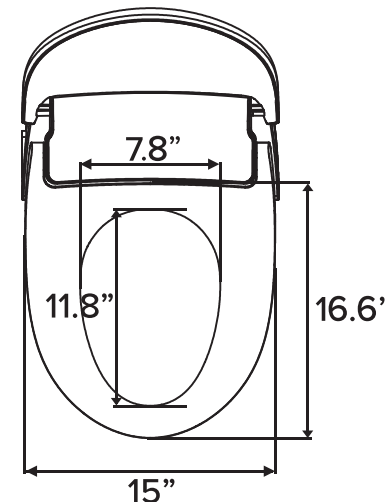

**SB-2400ER Elongated
Seat Dimensions**