



6" Rail Installation instructions

1. Choose the bolt that is just a bit longer than your spindle width

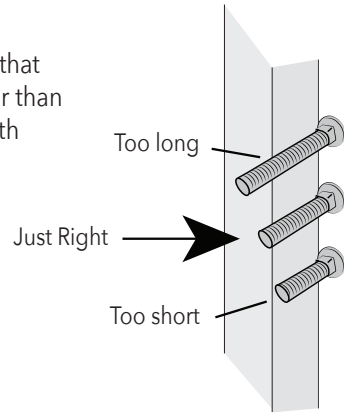


2. Insert sleeve nut into recessed hole side of Rail B and loosely screw bolt into the sleeve nut. Next, insert round bolt end into the round end of the key hole slot of Rail A (it goes in best at an angle).


OPTIONAL: Insert plastic plug into round hole of Rail A which can keep Rail A from falling off the bolt during installation.

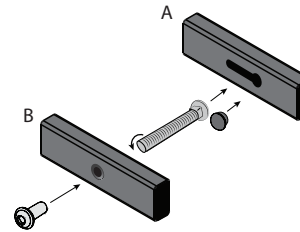


3. Hang Rail A horizontally so the bolt is up in the narrow end of the key hole slot, allowing it to fit through the decks spindles.

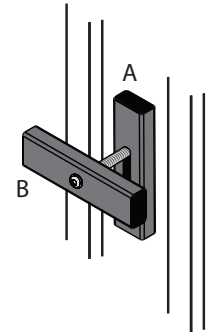


4. Turn Rail A to be level with Rail B at the desired height on railing.

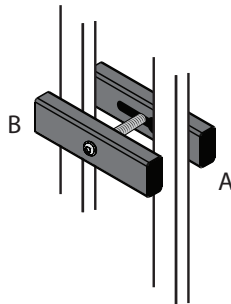

5. Once level, tighten sleeve nut with Allen wrench – do not over tighten – a snug fit will do. If releveing is needed, simply loosen the sleeve nut a little, adjust and repeat step.

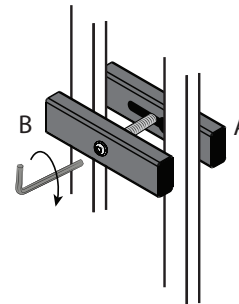

6. Connect Hold It Mate Accessory. If you'd like to position rail and accessory flush with the hand rail on your deck, simply loosen the sleeve nut with the accessory attached, slide them up and retighten.

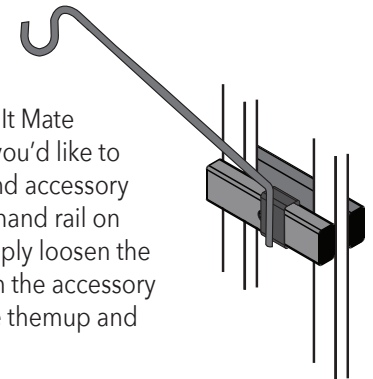

Visit holditmate.com/install for a video tutorial.