

ASSEMBLY INSTRUCTIONS

MDET - MID CENTURY MODERN END TABLE

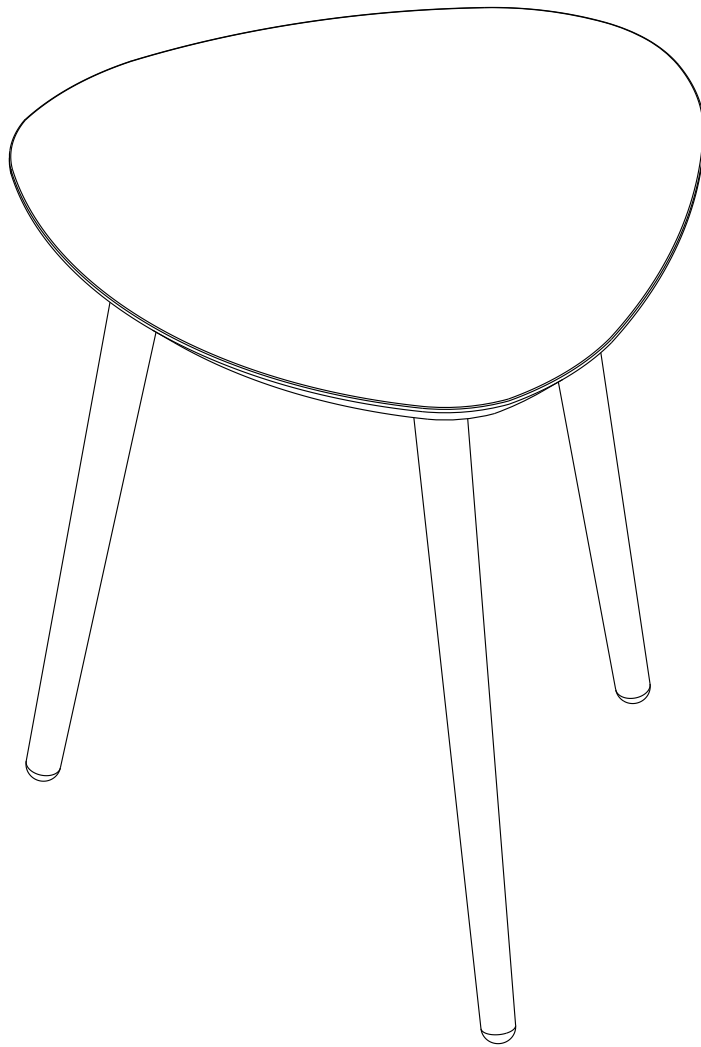





IMPORTANT NOTE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid parts from being scratched.


Before you begin, kindly follow the assembly instructions step by step.

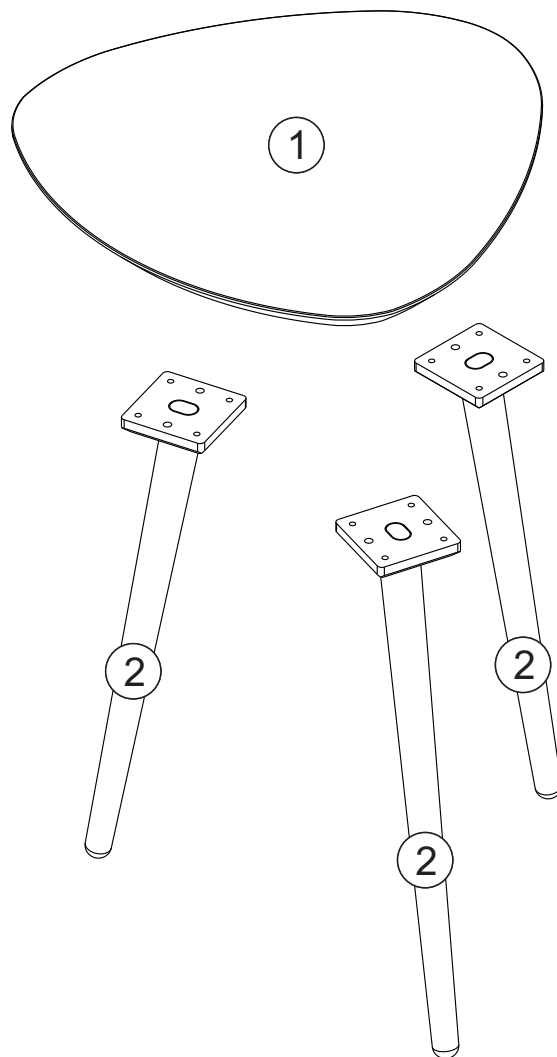PARTS INCLUDED

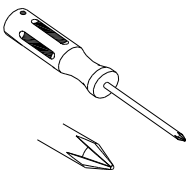

00:20 Min 		 Philips head screwdriver required for assembly. (not included)
--	---	---

HARDWARE INCLUDED



A - 4,5 x 35 Screw
Qty. 12
(+ 3x spare)





B - 8,0 x 30 Wood Dowels
Qty. 06

The hardware quantities listed above are required for proper assembly.


STEP 1

Insert wood dowels (B) into legs (2)

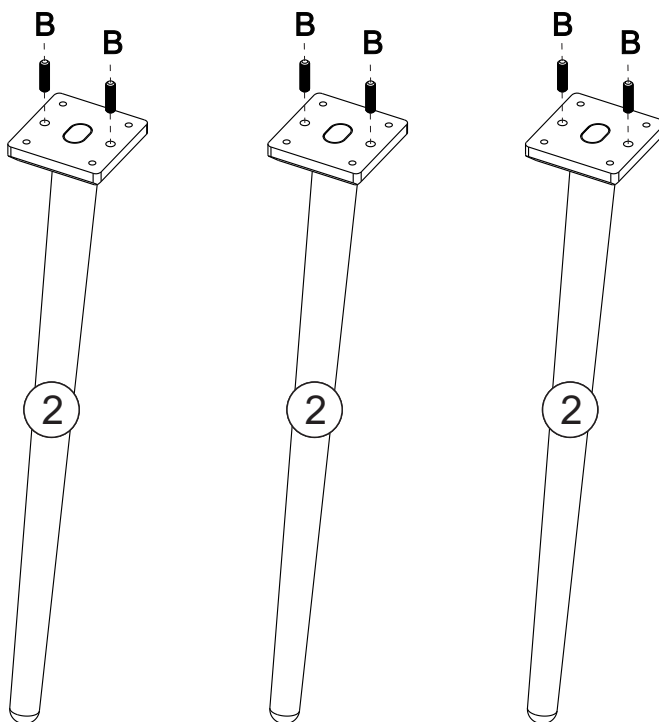


STEP 2


Attach legs (2) to the top (1).
CHECK THE CORRECT LEG POSITION.

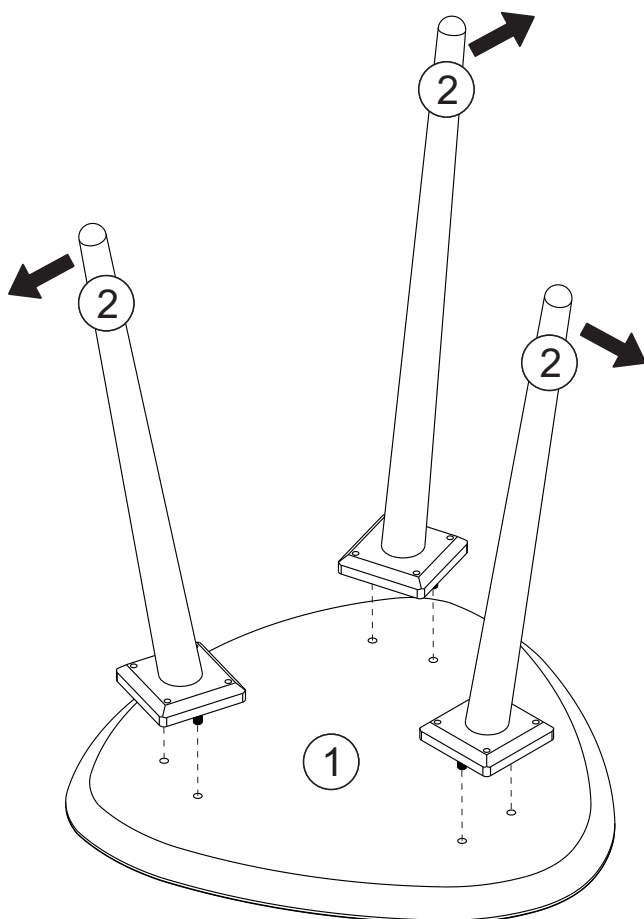


STEP 3

Attach legs (2) in the top,
using screws (A) and philips
head screwdriver.

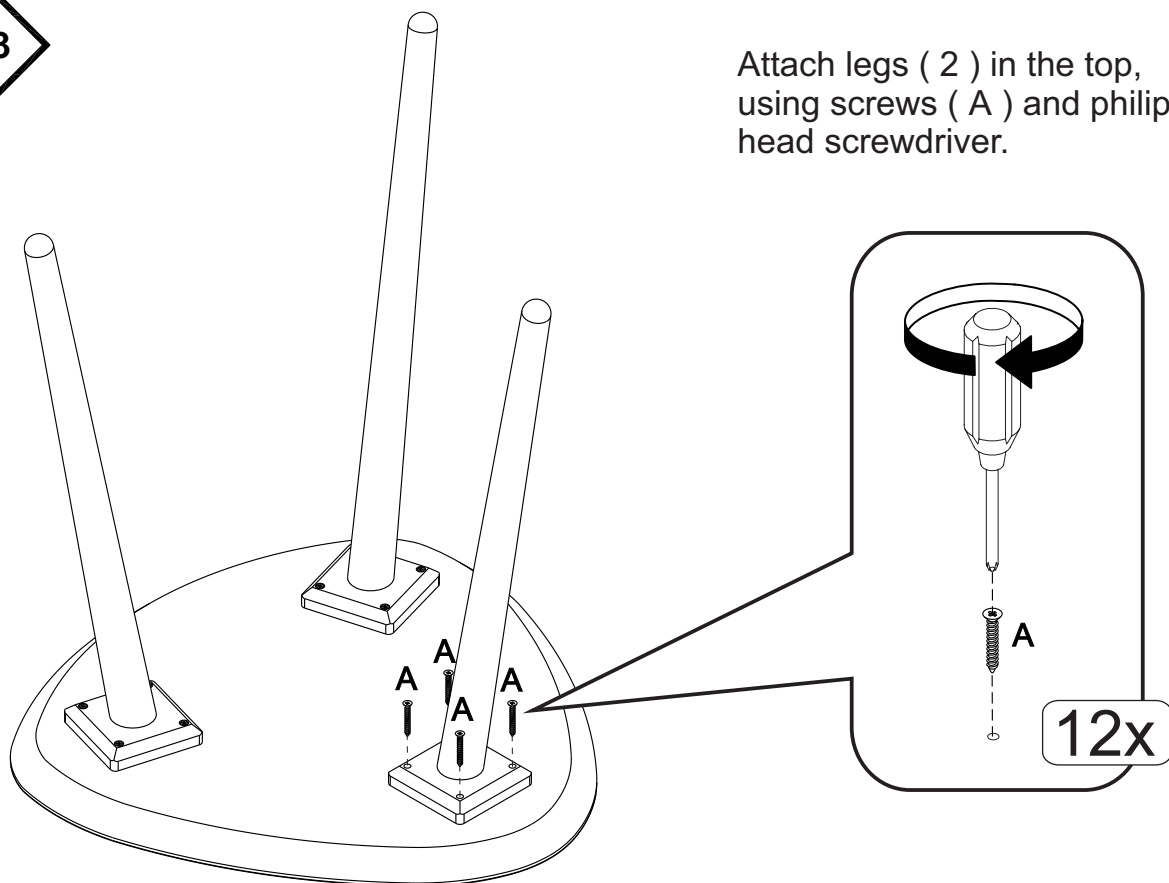

A		12
Screw Ø4,5 x 35		

STEP 4

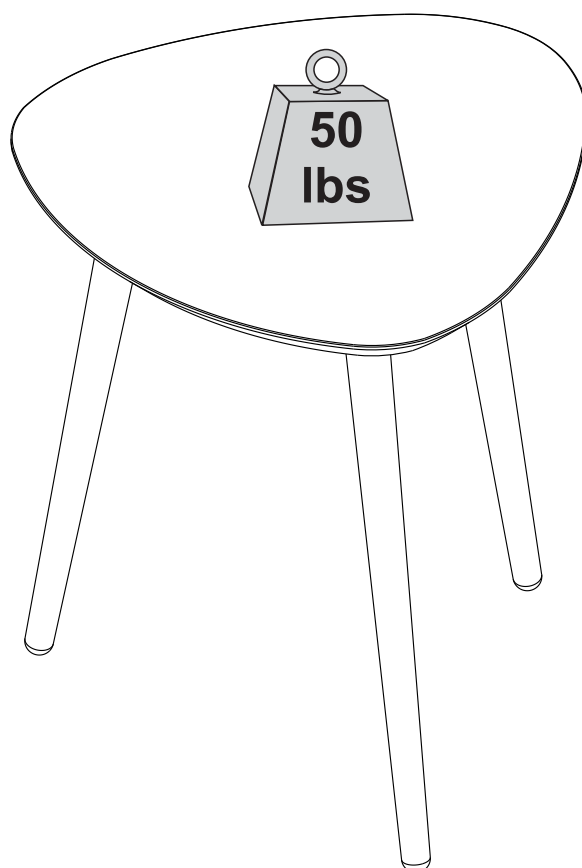

Final Assembly