


aqua

S U P P L Y


SQUARE TILE INSERT DRAIN

Installation Instructions

- STEP 1 :** Pre-slope shower pan and install waterproofing per manufacturer's instructions; any waterproofing material or procedure can be utilized (i.e. vinyl, CPE membrane, roll/paint on, metal pan, hot mop, surface sheet membrane, etc.). Perform leak test as required.
- STEP 2:** Remove adjustable drain barrel and replace with the AQUA Square Tile Drain threading into clamp ring and drain base.
- STEP 3:** Build mortar bed and install tile to create a 1-2% grade towards drain.
- STEP 4:** Install tile into tile insert tray. Insert tile tray into drain body.
- STEP 5:** Finish by sealing the drain perimeter with a high quality flexible sealant.

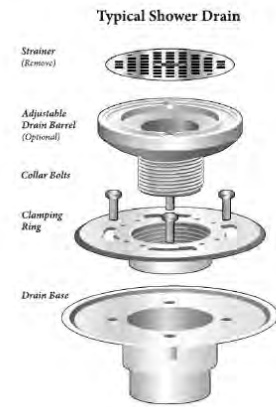

An exploded view of a typical shower flanged drain assembly is shown below. This assembly can be made from PVC, cast iron or other composite materials. Square tile insert drain will replace the strainer only.

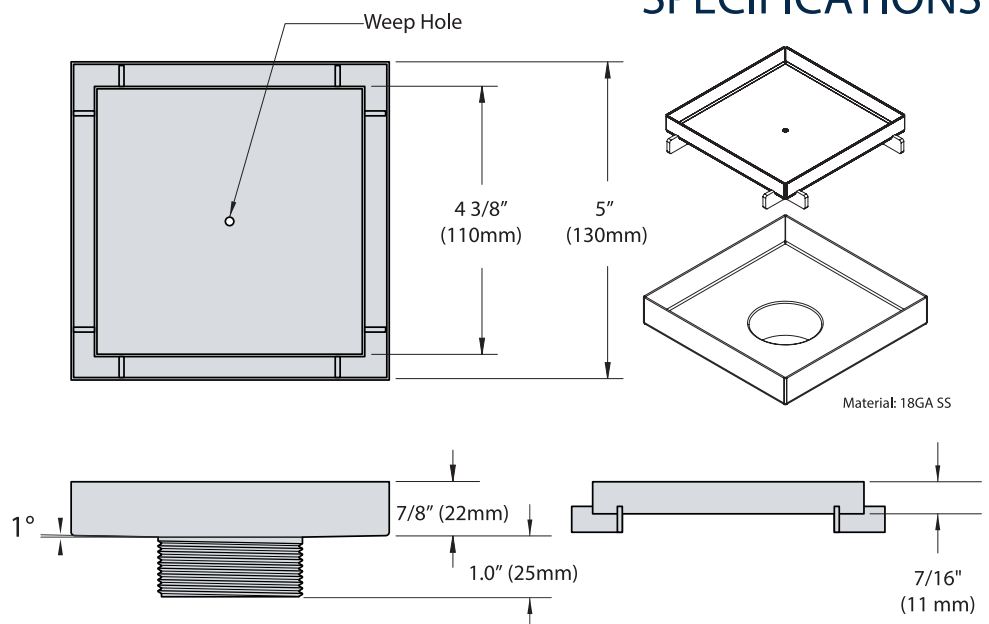

SPECIFICATIONS

Lowes Model
ID 874623



EXCLUSIVELY FOR

