




MANHATTAN
COMFORT

888-230-2225


help@manhattancomfort.com

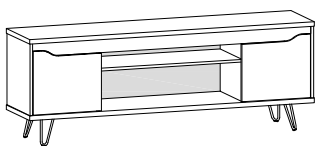


Baxter TV Stand 62.99

Model # 217BMC1, 217BMC12, 217BMC2, 217BMC21, 217BMC6, 217BMC8,
217BMC9, 217BMC94


INCLUDED IN THE PACKAGE

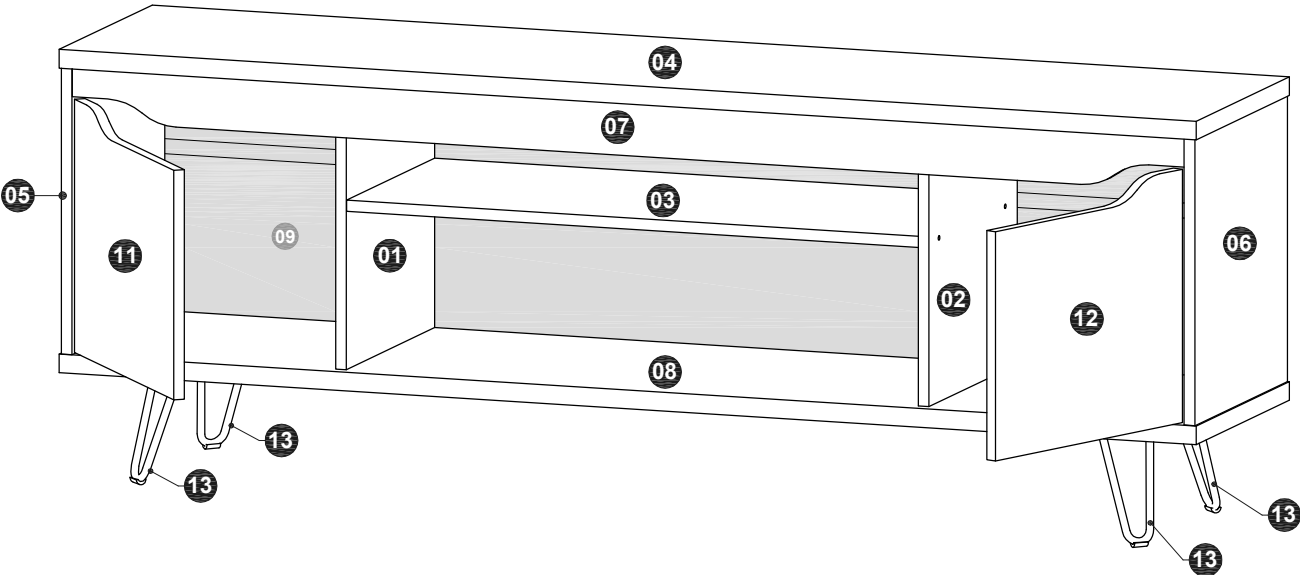

REAR VIEW

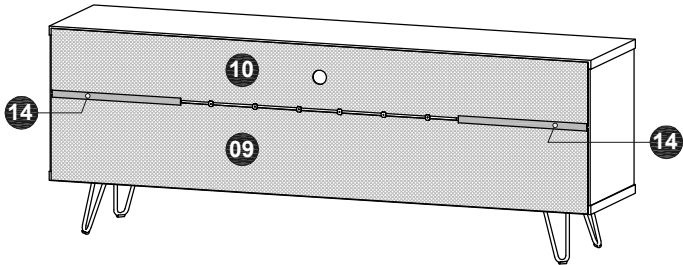

FINAL APPEARANCE - FRONT VIEW






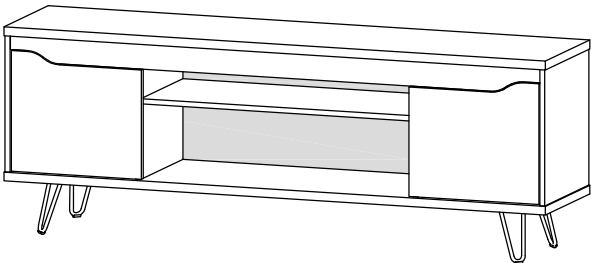


n.° ID	Parts Identification (Description)	Quantity
01	Left Partition	1
02	Right Partition	1
03	Middle Shelf	1
04	Top Panel	1
05	Left Side Panel	1
06	Right Side Panel	1
07	Front Frame	1
08	Base	1
09	Lower Back Panel	1
10	Upper Back Panel	1
11	Left Door	1
12	Right Door	1
13	Metallic Feet	4
14	Plastic Profile "H" 380mm	2


TOOLS NEEDED

  	
--	---

INCLUDED IN THE PACKAGE

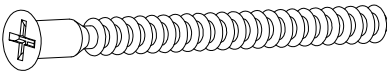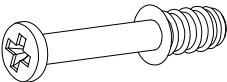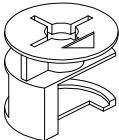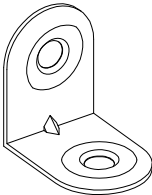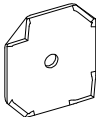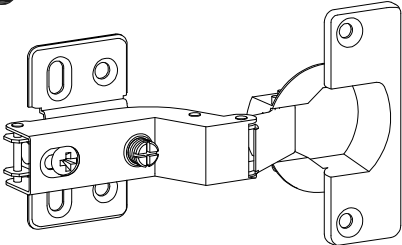A 20x 	B 12x 	C 8x 
D 8x 	E 8x 	F 16x 
G 6x 	H 55x 	I 16x 
J 4x 	K 24x 	


STEP 1

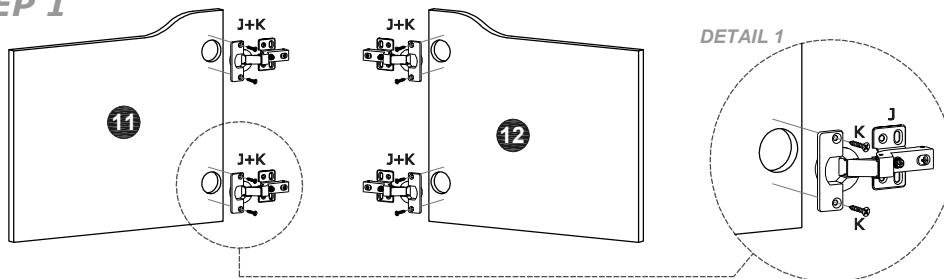

Preparing the Doors:


- Fix the hinges (J) in the Doors (11) and (12) with bolts (K), as shown in DETAIL 1.

STEP 2

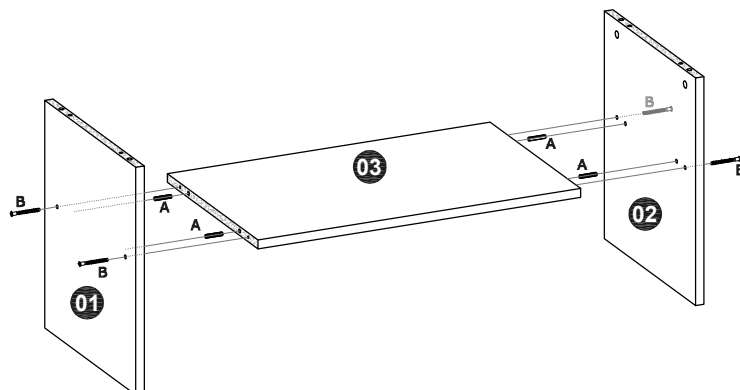


- Connect the Shelf (03) into Partitions (01) and (02) with dowels (A) and bolts (B).

STEP 3

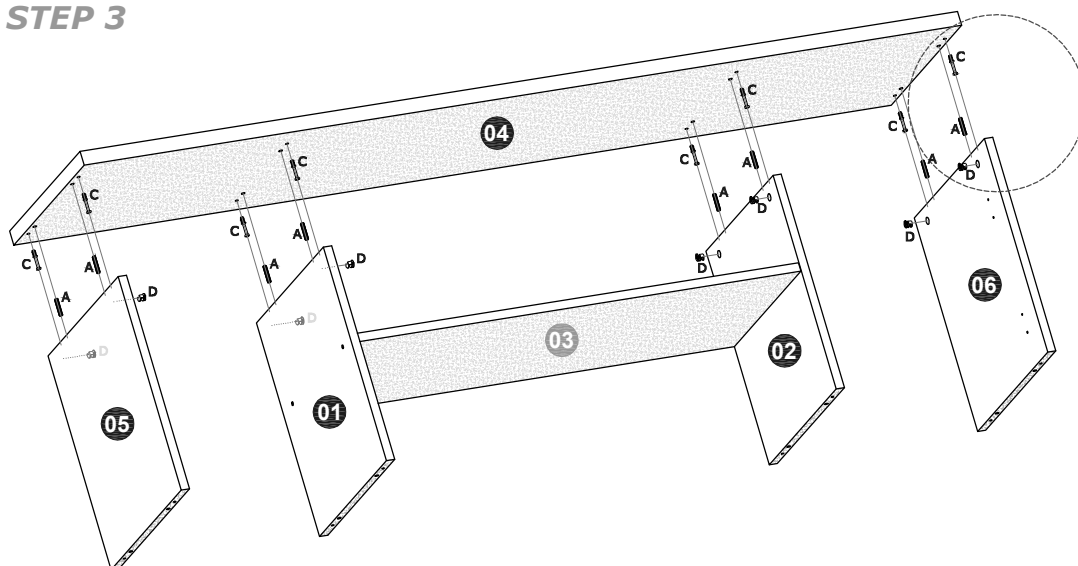


- Connect the Top Panel (04) onto the Partitions (01) and (02) and onto the Side Panels (05) and (06) using dowels (A) and the Minifix hardware (C+D), as shown in DETAIL 2.

STEP 4

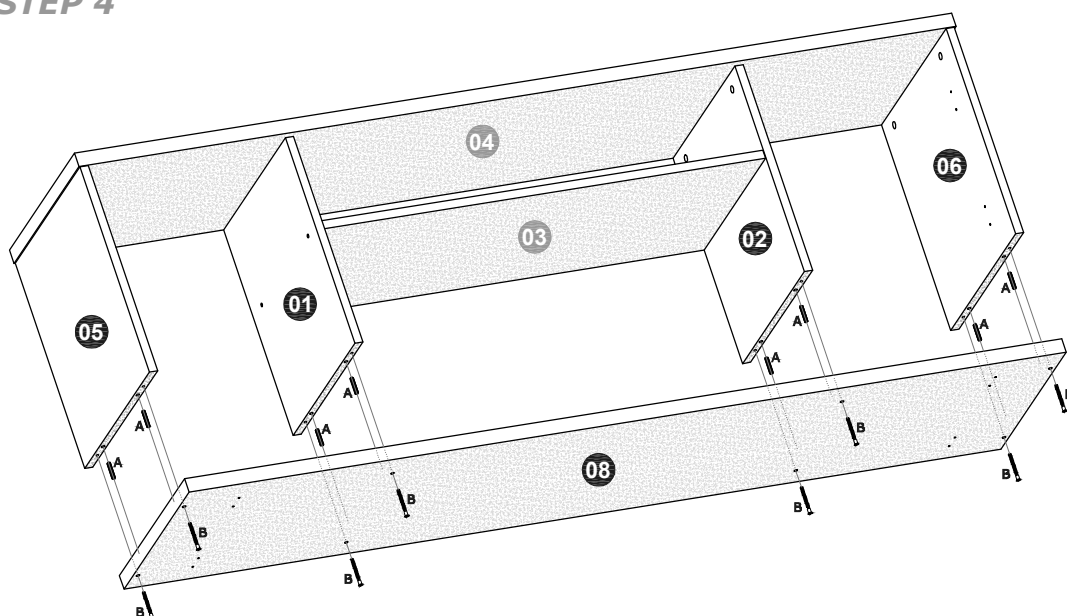

- Connect the Base (08) into the Partitions (01) and (02) and into the Side Panels (05) and (06) with dowels (A) and bolts (B).

STEP 5

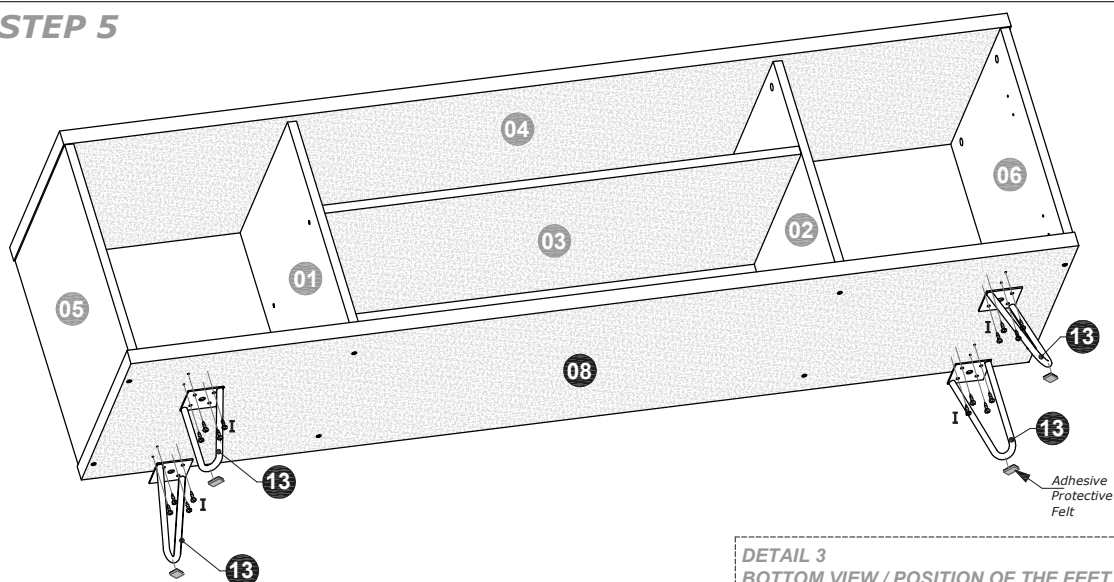


- Fix the metallic feet (13) under the Base (08) with bolts (I).
Pay attention to the position of the feet, as shown in DETAIL 3.
- Apply the adhesive protective felt to the lower end of the feet (13).

DETAIL 3
BOTTOM VIEW / POSITION OF THE FEET



STEP 6

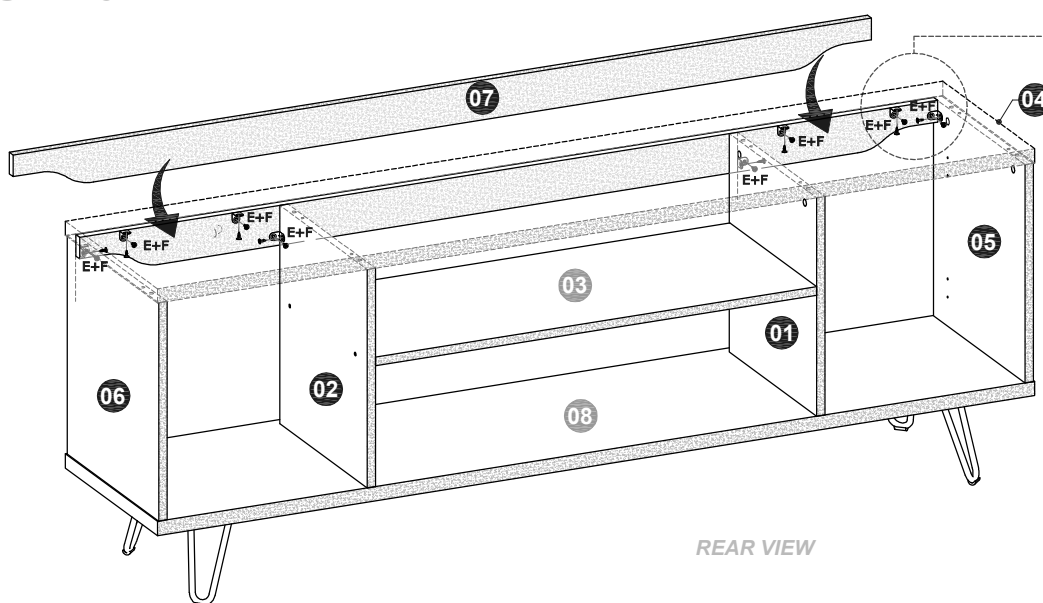


DETAIL 4

- Fit the Front Frame (07) under the Top Panel (04) and between the Side Panels (05) and (06) and fix it into the Top Panel (04), the Side Panels (05) and (06) and the Partitions (01) and (02) with metal brackets (E) and bolts (F), as shown in DETAIL 4.

REAR VIEW



STEP 7

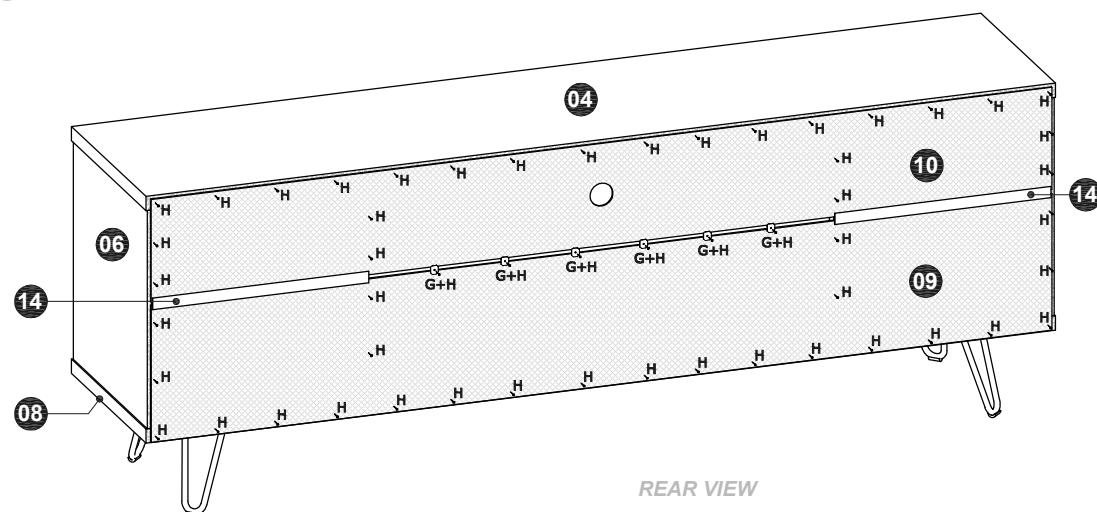

- Connect the Lower Back Panel (09) and the Upper Back Panel (10) with metal plates (G), nails (H) and Plastic Profiles (14), applying them to the positions shown in drawing.

REAR VIEW

STEP 8

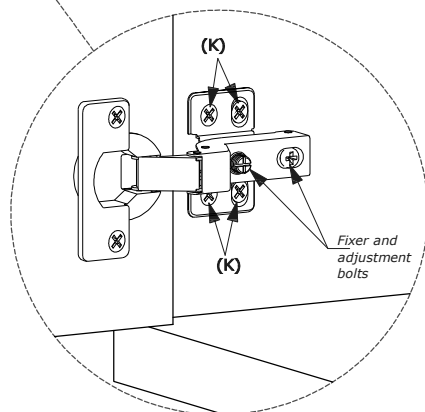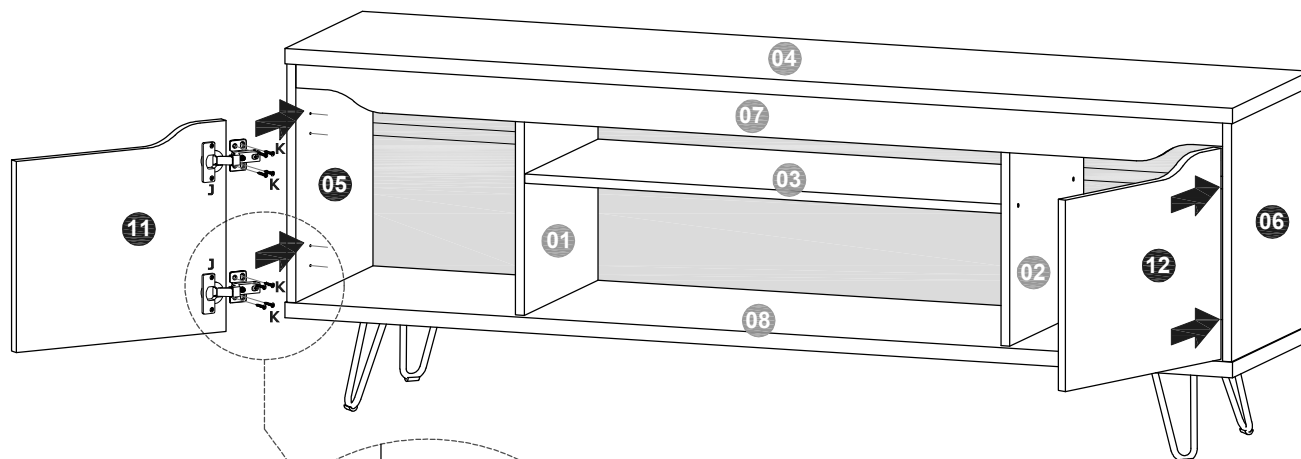

DETAIL 5

Installing the Doors (11) and (12):


- Fix the hinges connectors (K) of the Doors (11) and (12) on the Left Side Panel (05) and Right Side Panel (06) with bolts 3.5 x 14mm (L), taking the markings on the panels (05) and (06) as reference for correct positioning.

The hinge and connector includes two more bolts, shown in DETAIL 5. Use these **fixer and adjustment bolts** to tighten, adjust and align the doors.



MANHATTAN
COMFORT

888-230-2225
help@manhattancomfort.com

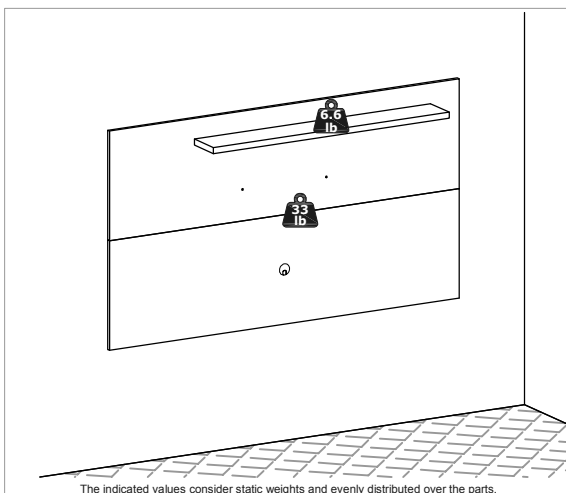


Liberty Panel 62.99


Model # 221BMC1, 221BMC12, 221BMC2, 221BMC21,
221BMC6, 221BMC8, 221BMC9, 221BMC94



INCLUDED IN THE PACKAGE

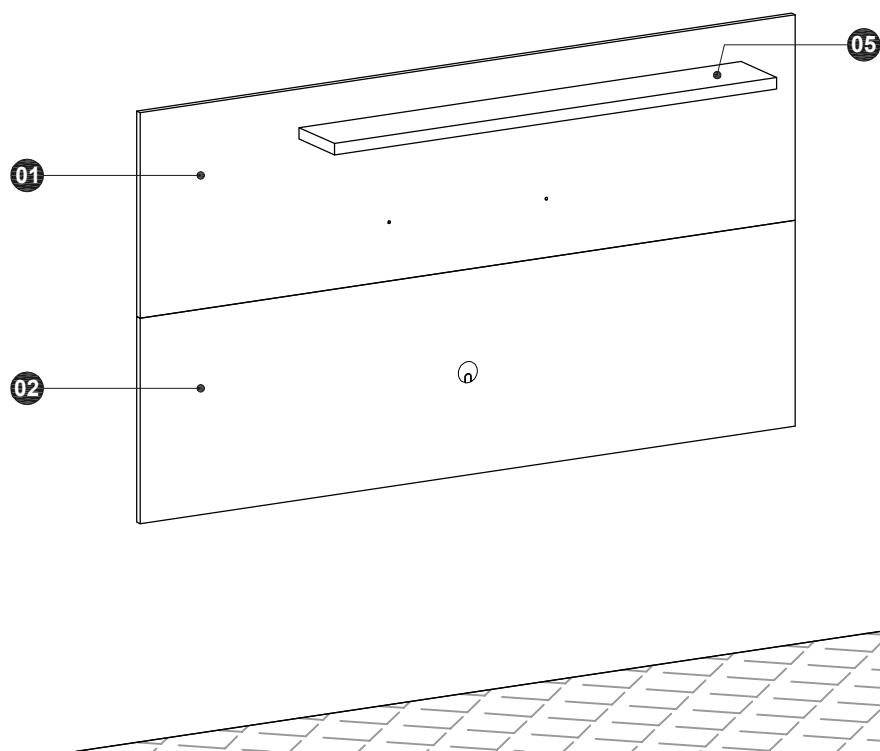

REAR VIEW

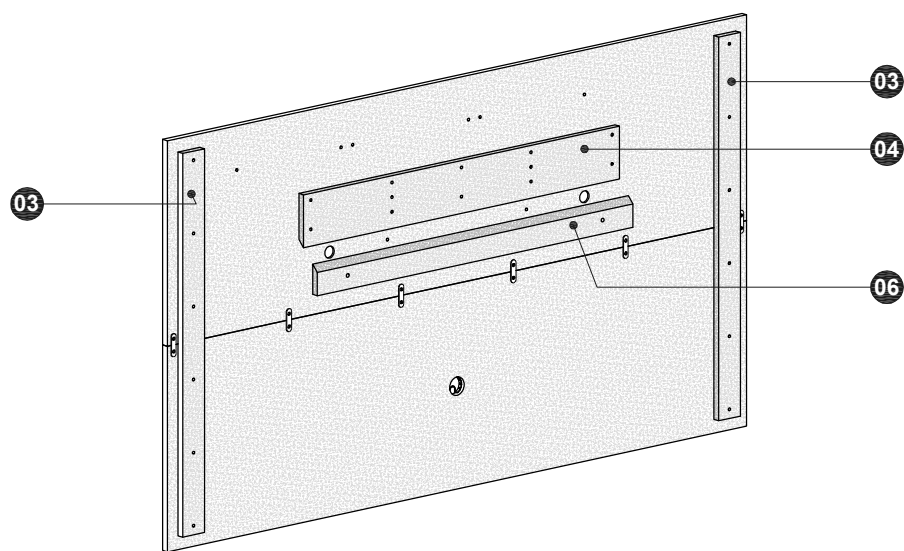

n.° ID	Parts Identification (Description)	Quantity
01	Upper Panel	1
02	Lower Panel	1
03	Rear Column	2
04	Upper Rear Bar	1
05	Upper Shelf	1
06	Bar for wall	1

TOOLS NEEDED

Simple and phillips screwdriver.



Simple hammer.



Level indicator.



Drilling machine and electric screwdriver with drill bit Ø1/2 inch and phillips tips.



INCLUDED IN THE PACKAGE

A 2x




B 2x



C 1x




D 6x



E 12x




F 24x




G 4x



H 1x

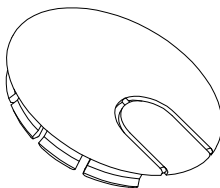


I 2x

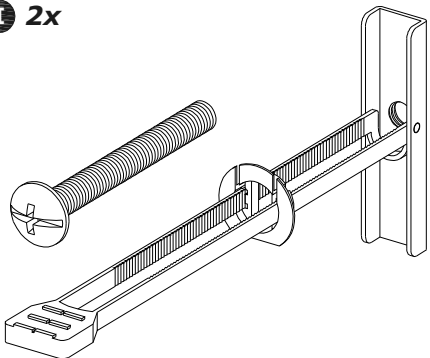


STEP 1

- Line the floor with the foam mantle of the packing to protect the parts and arrange the Panels (01) and (02) with the rear face upwards, correctly checking the position of each according the holes and as the drawing.
- Align the edges of the Panels (01) and (02) and fix them together by applying the steel plates (D) with bolts (E), as shown in the DETAIL 1.

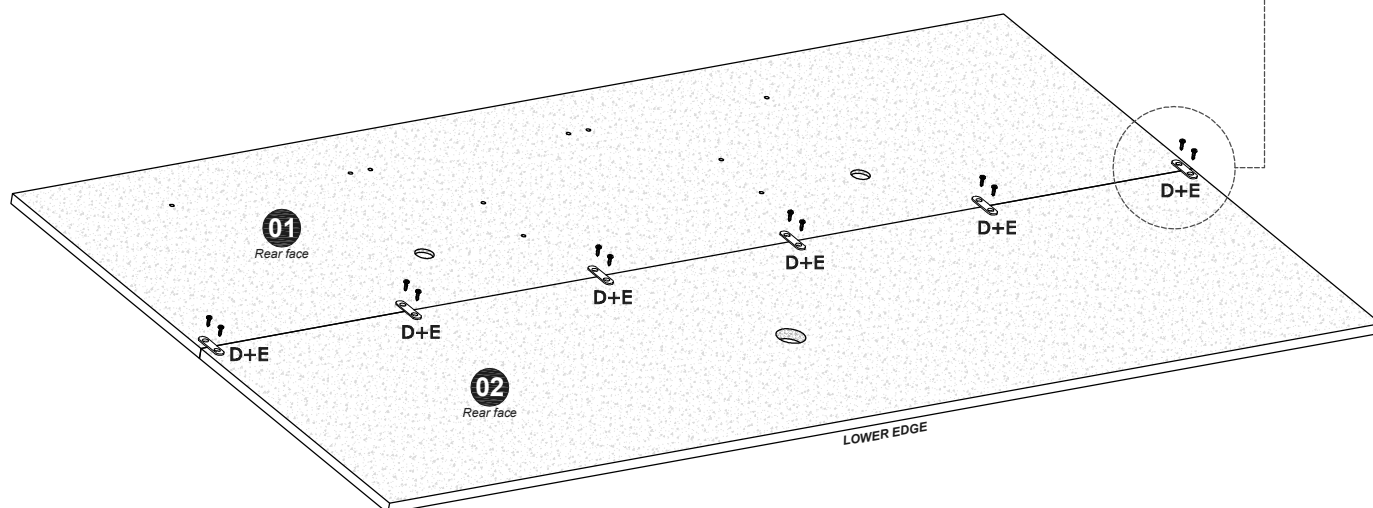


STEP 2

- Position the Rear Columns (03) behind the Panels (01) and (02) according to the drawing, and fix them applying bolts (F).
- Position the Rear Bar (04) behind the Upper Panel (01) with dowels (A) and glue (C) according to the drawing, and fasten it applying the indicated ten bolts (F).

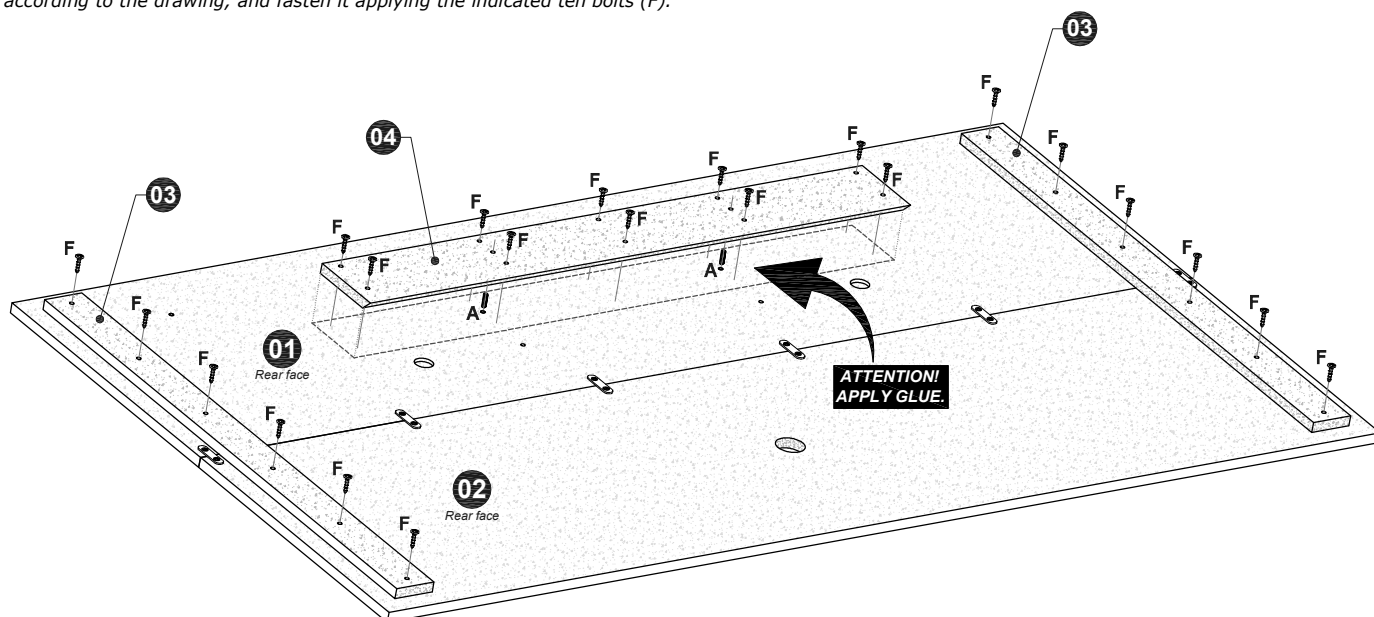


STEP 3

- Fix the Upper Shelf (05) in the Upper Panel (01) with dowels (B) and bolts (G).

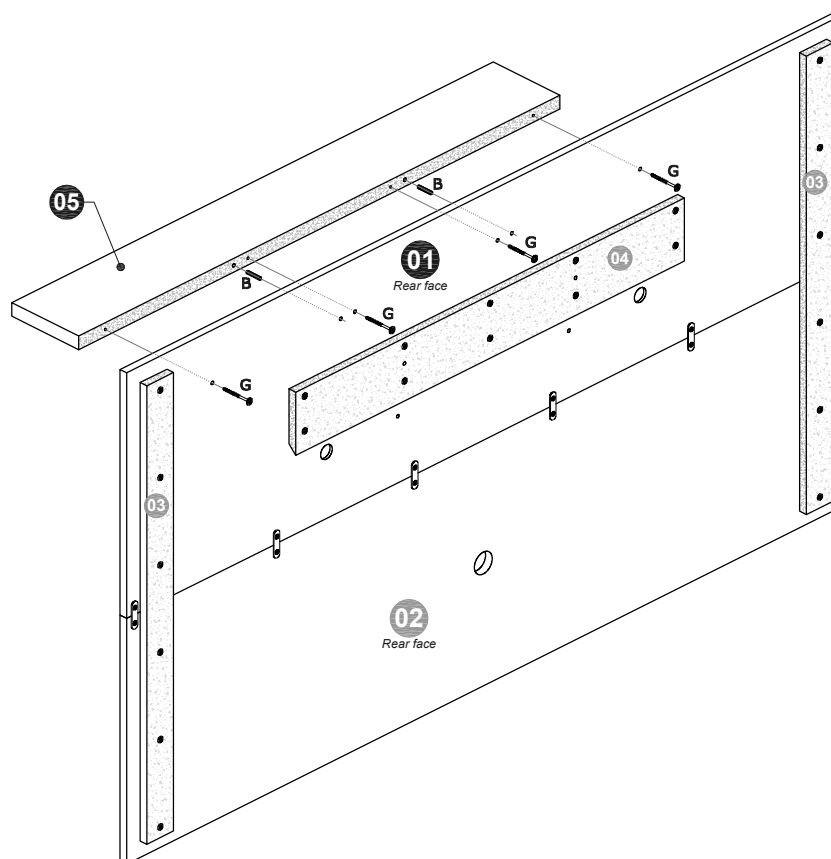


STEP 4

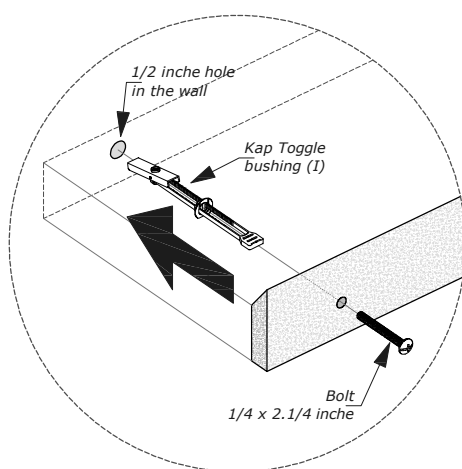

ATTENTION! Before installing the panel, check the conditions of the wall for strength to properly support and anchor the weight of the suspended furniture, including equipment and objects that may be fixed to the panel. The Kap Toggle bushings (I) supplied with the product are for hollow walls or dry wall type. Check the type of wall on which the installation will be made and, if necessary, look for more suitable bushings or fastening systems. To mark the position and fix the Bar (06) on the wall, check the level of the part.


*The height 54.50in indicated in the drawing, between the floor and the lower edge of the Bar (06) is only suggestive to install the Liberty Panel with its lower edge at approximately 32.50in from the floor.

- Mark the position of the holes on the wall to fix the Bar (06), as shown in the drawing and using the bar itself as a reference.
- With drilling machine and drill bit Ø1/2 inch, make the holes in the wall.
- Apply the bushings (I) into the holes in the wall and fix the Bar (06) with the bevelled edge facing up and to the wall, applying the bolts as indicated in the drawing.

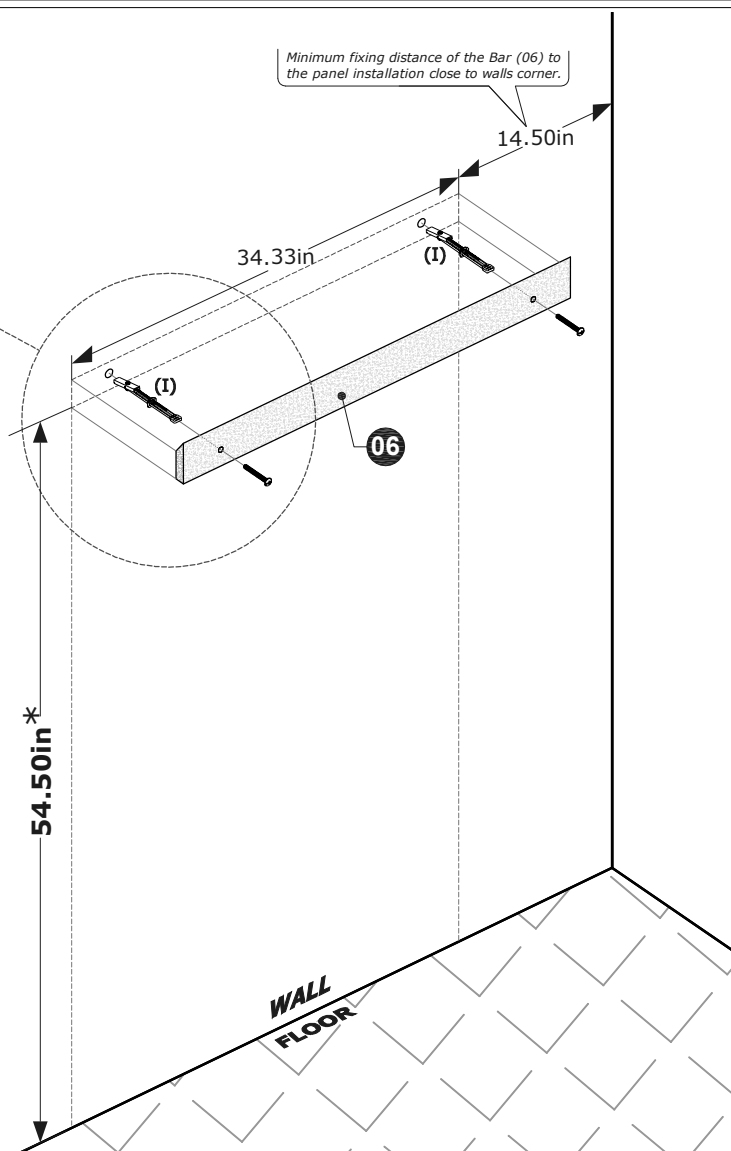

STEP 5

- With the Panel already assembled, fit the Bar (04) fixed behind the panel in the Bar (06) fixed on the wall.

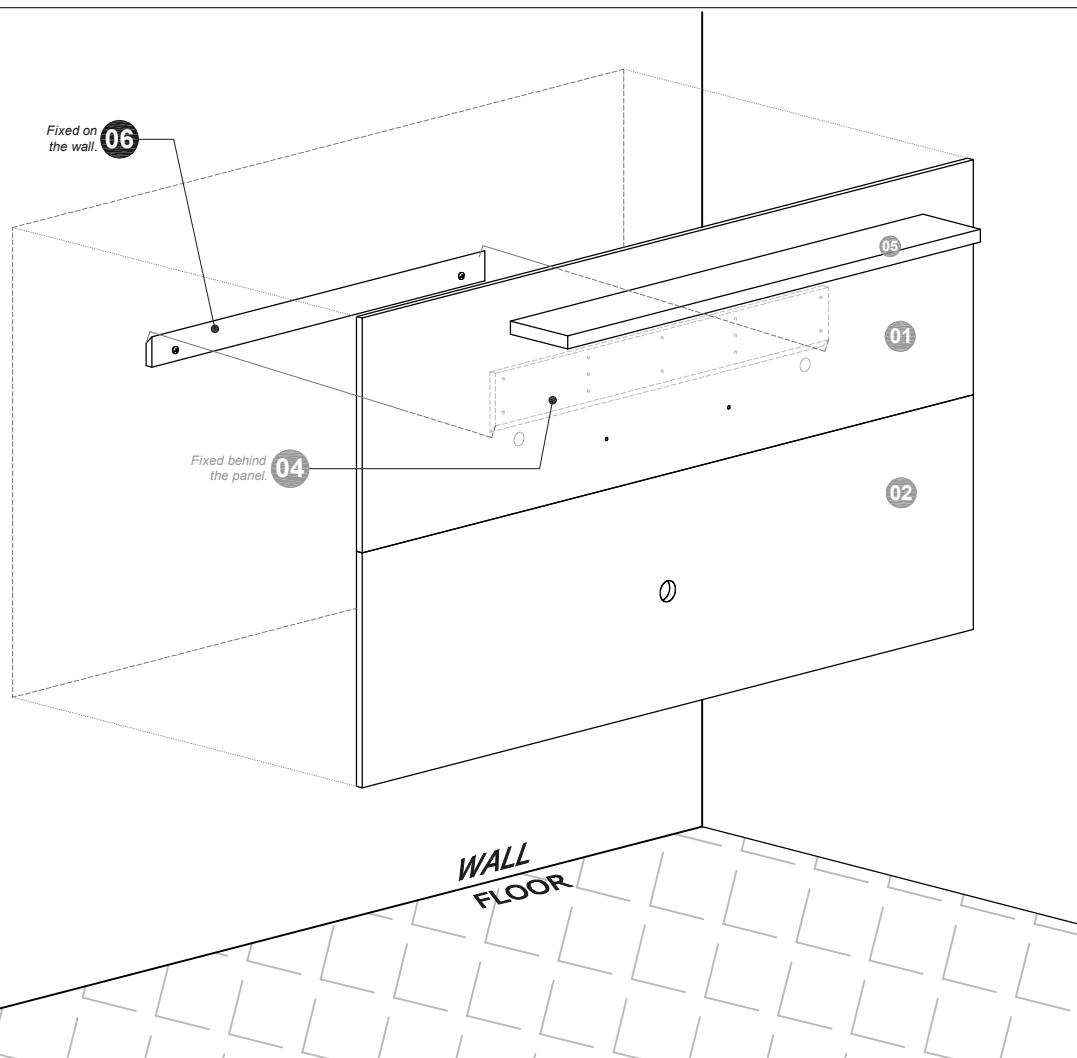

STEP 6

- At the end of the installation, apply the security bolts (F) into the indicated holes, to fix the Panel (01) in the Bar (06) on the wall and prevent movement and accidentally dropping the panel.

IMPORTANT! To remove the panel from the wall, to unscrew the security bolts (F) applied as in STEP 06 and moving it upwards slightly so as to disengage the chamfered edges of the Bars (04) fixed behind the panel and on the wall. Before moving the panel, remove TV and other objects that are installed and ensure that the entire set is safe, preventing falls and damage to the panel and equipment.

