




## Installation Guide

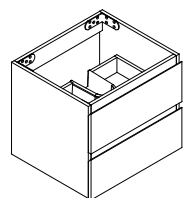


Angela

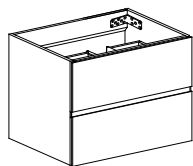

Edi

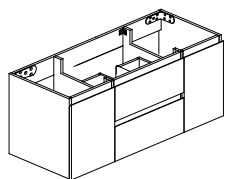

Angela



Angela



Electric drill



Drill bit  
( $\Phi 8 \Phi 5$ )



Tape measure  
(3m~5m)



Silicone



Pencil




Screwdriver

Tools required for installation

## CABINET



4B




2E



4C



2F




1D




2G


1

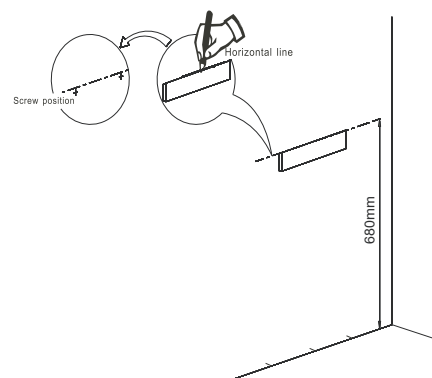


4

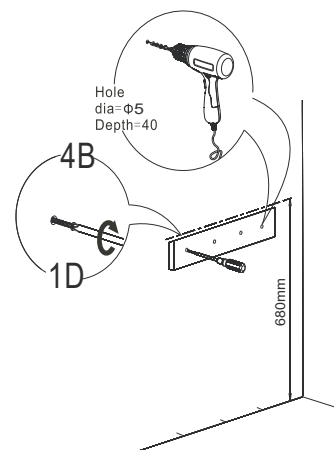


6

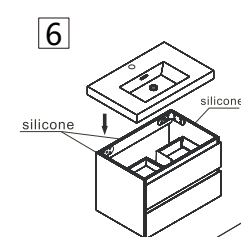



7

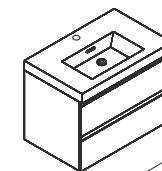


2

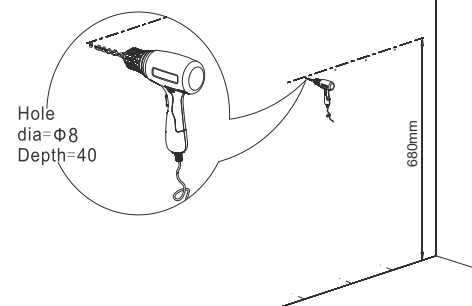


5

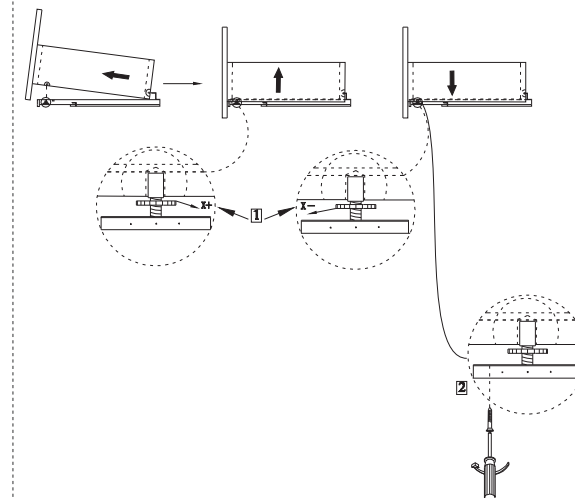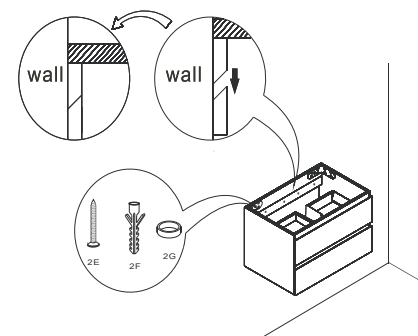


3

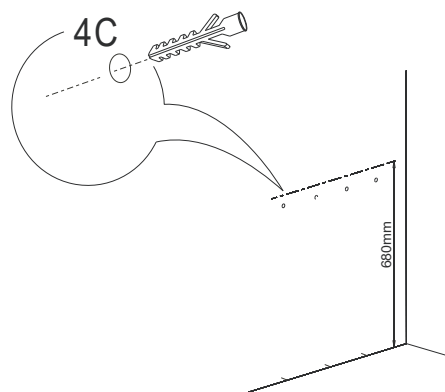

1

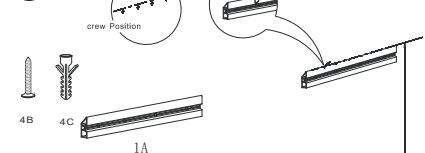

2

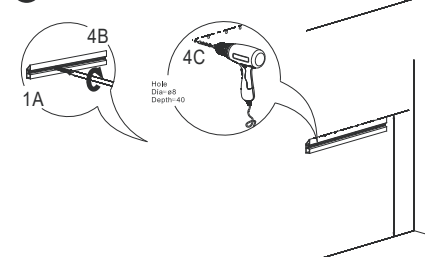

3

