


Thank you for purchasing the **MODWAY CABINET** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the Cabinet, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 70 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.

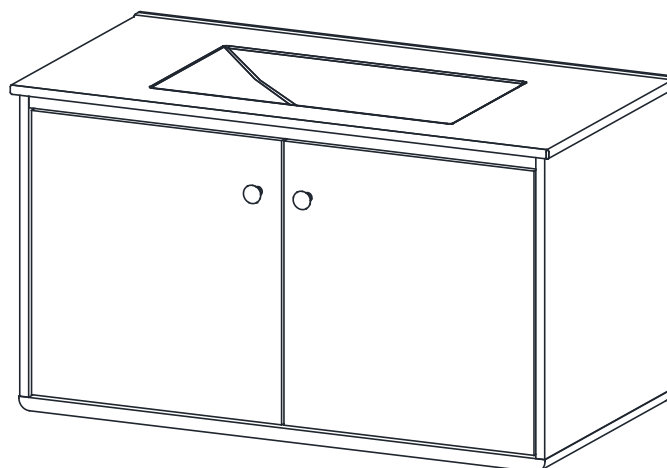

Hardware :


A) Cambolt/Metal $\varnothing$ 6 x 35 mm x 14	B) Camlock/Metal $\varnothing$ 15 mm x 14	C) Dowel/Wood $\varnothing$ 8 x 30 mm x 18	D) Screw/Metal M 7 x 50 mm x 4	E) Hex/Allen Key/Metal L 4 x 1
F) Hinge Set / Metal x 4	G) Screw/Metal M 4.5 x 12.5 mm x 48	H) Bracket/Metal x 4	I) Screw/Metal 5.5 x 45 mm x 9	J) Door/Drawer Knob/Metal Chrome x 2
K) Screw/Metal M 4 x 22 mm x 2	L) Hanger/Metal x 2	M) Floor Protector/Sponge/Felt 25 x 15 x 2 mm x 8	N) Short Bracket / Aluminium x 3	O) Screw/Metal M 6.4 x 14 mm x 6
P) Wall Plug/Plastic 5002 x 9	Q) Long Bracket/Aluminium x 1	R) Screw Cap/Plastic $\varnothing$ 15 mm x 4	S) Screwdriver (Not Include)	

Components:

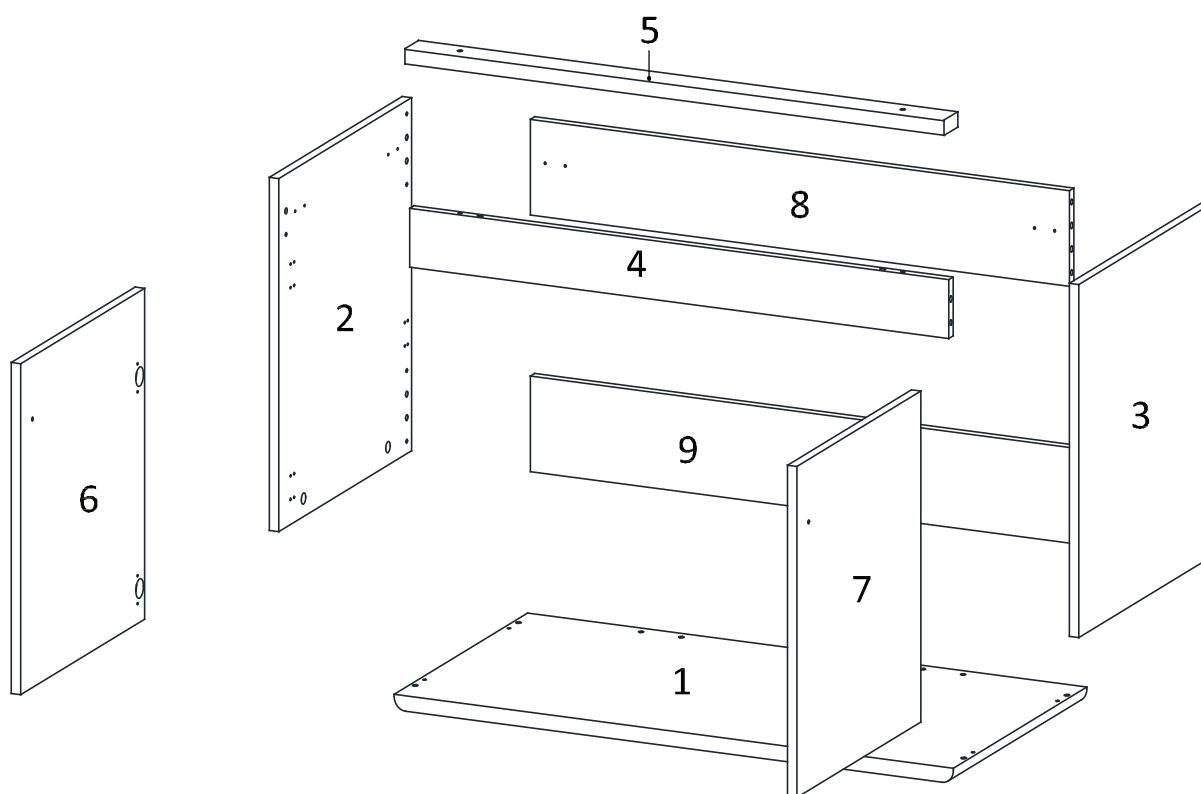

1	Bottom Board	x1	2	Side Board Left	x1	3	Side Board Right	x1	4	Front Skirt 1	x1
5	Front Skirt 2	x1	6	Wooden Door Left	x1	7	Wooden Door Right	x1	8	Back Board 1	x1
9	Back Board 2	x1									


STEP 1:

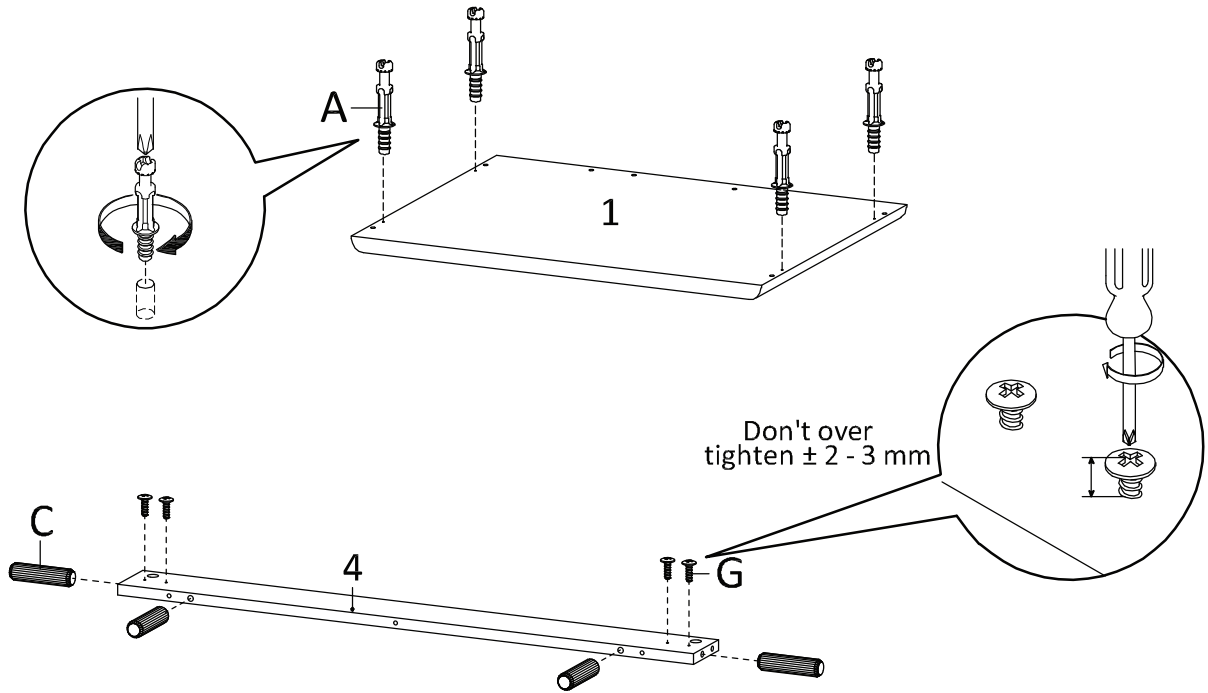


			
Ax4	Cx4	Gx4	Sx1

Hardware required.
Screwdriver not included


STEP 2:

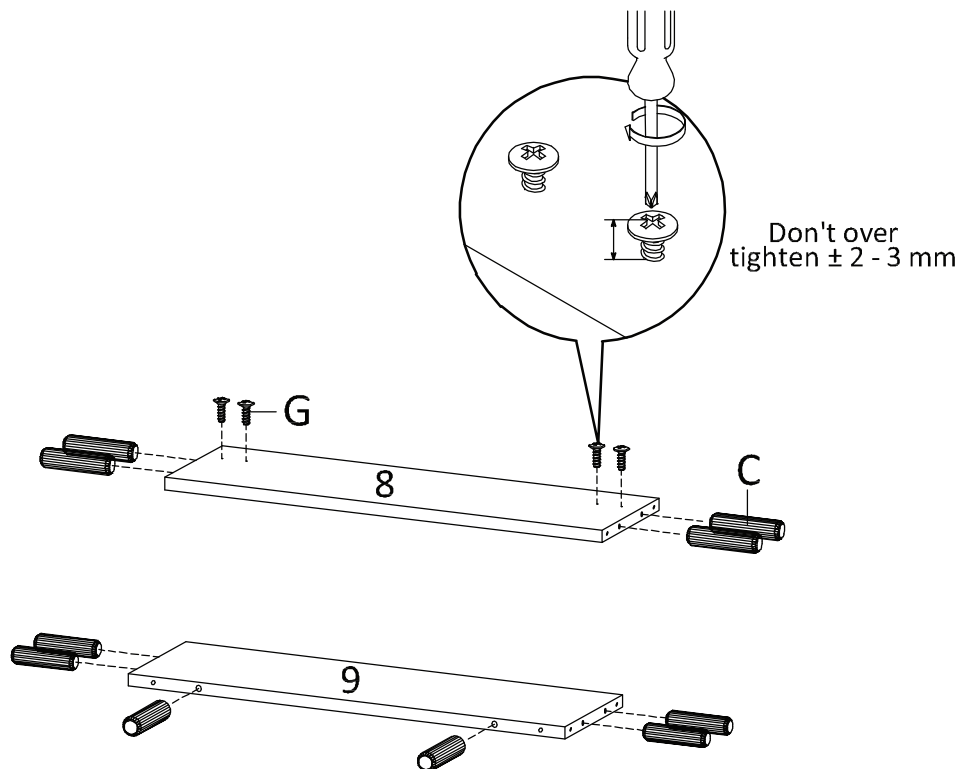

		
Cx10	Gx4	Sx1


Hardware required.
Screwdriver not included

STEP 3:

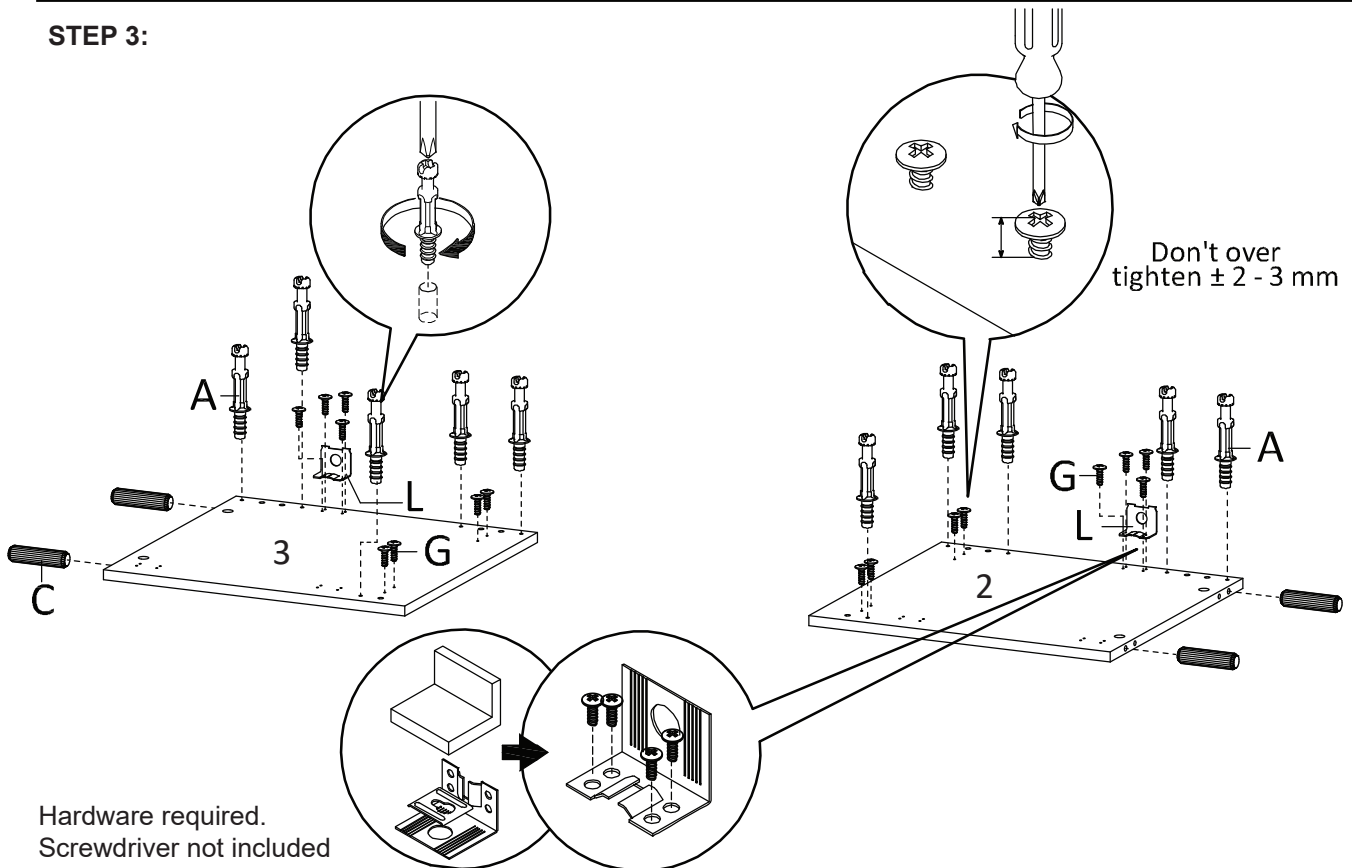

Ax10	Cx4	Gx16	Lx2	Sx1


STEP 4:

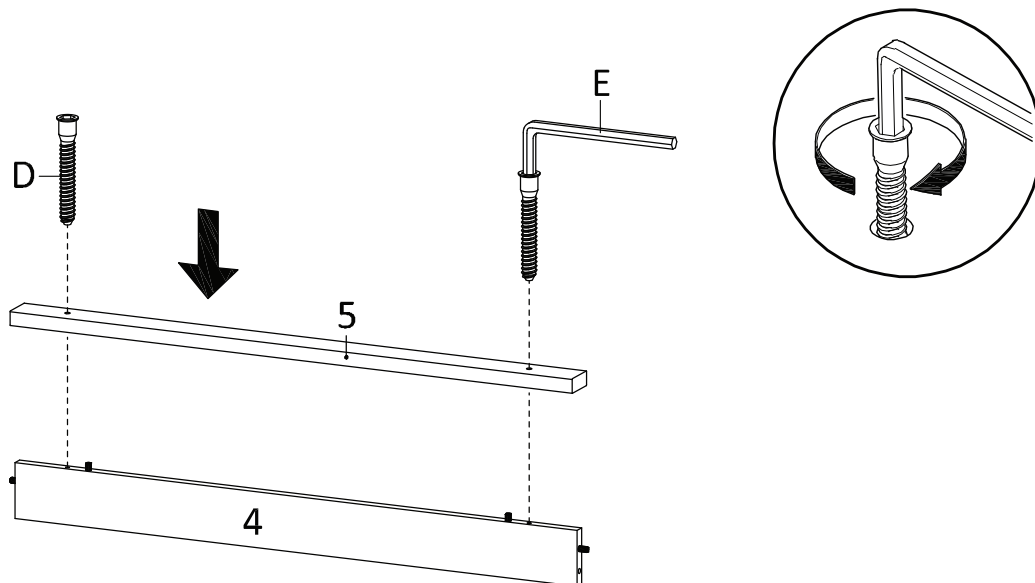

Dx2	Ex1

Hardware required.


STEP 5:

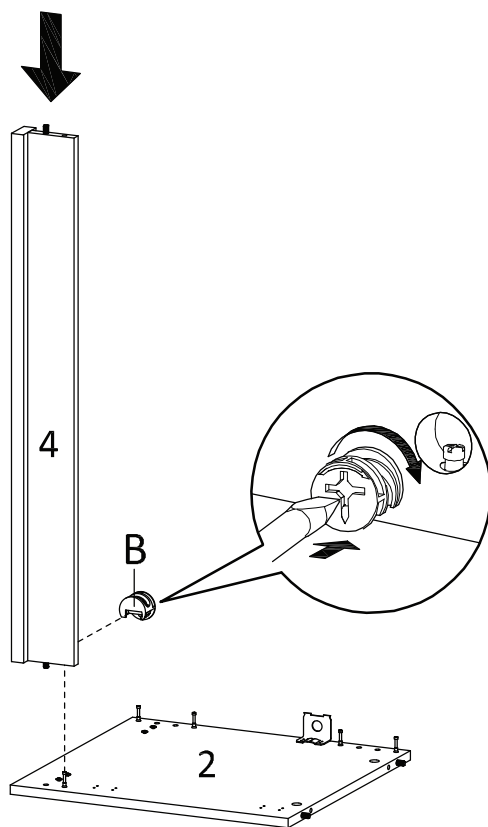

Bx1	Sx1

Hardware required.
Screwdriver not included


STEP 6:

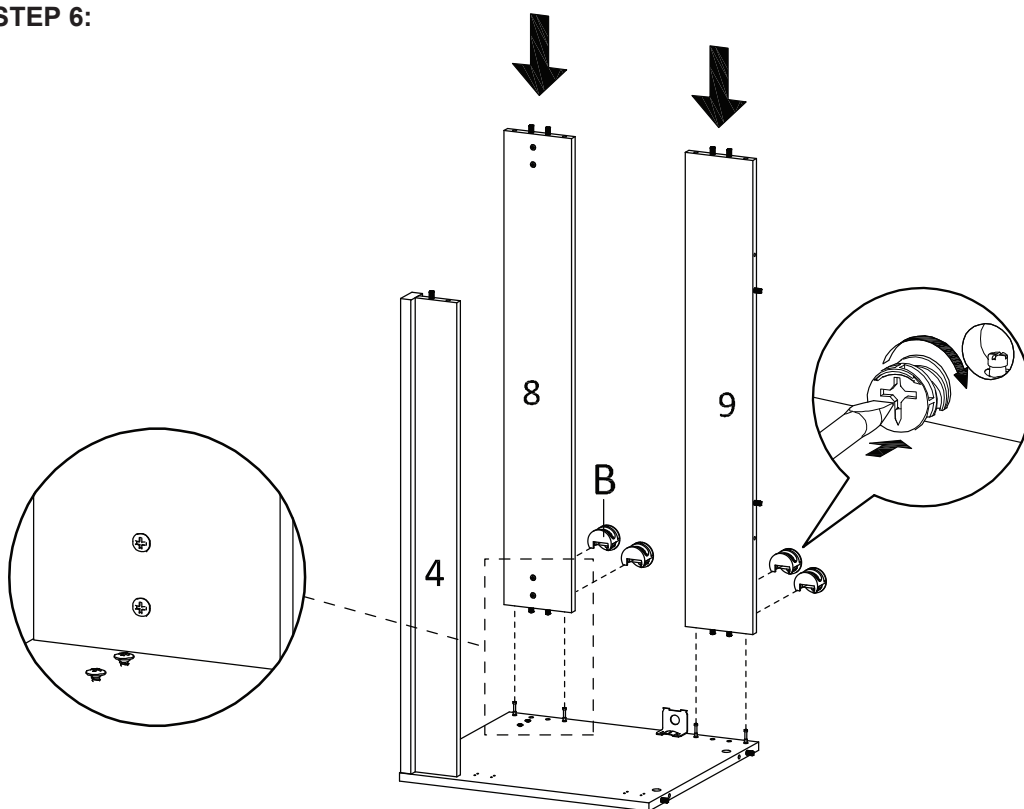

Bx4	Sx1

Hardware required.
Screwdriver not included


STEP 7:

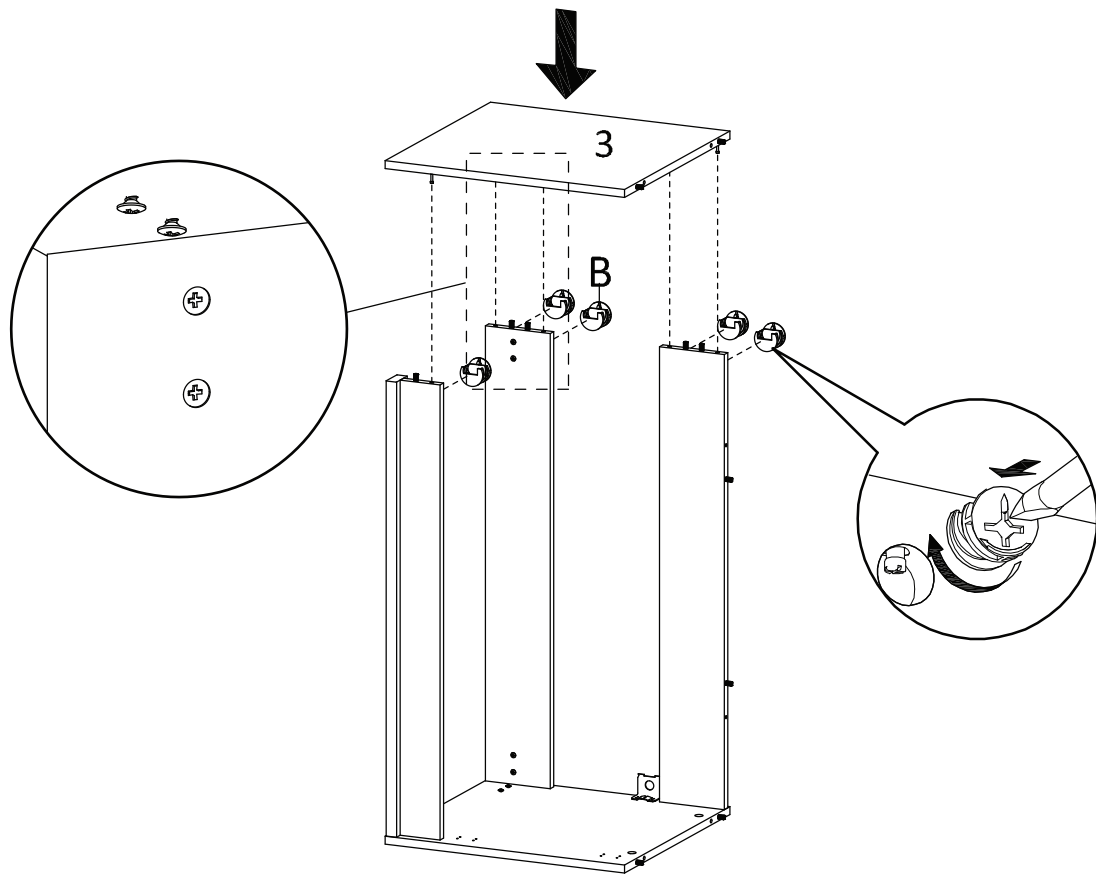

Bx5	Sx1

Hardware required.
Screwdriver not included


STEP 8:

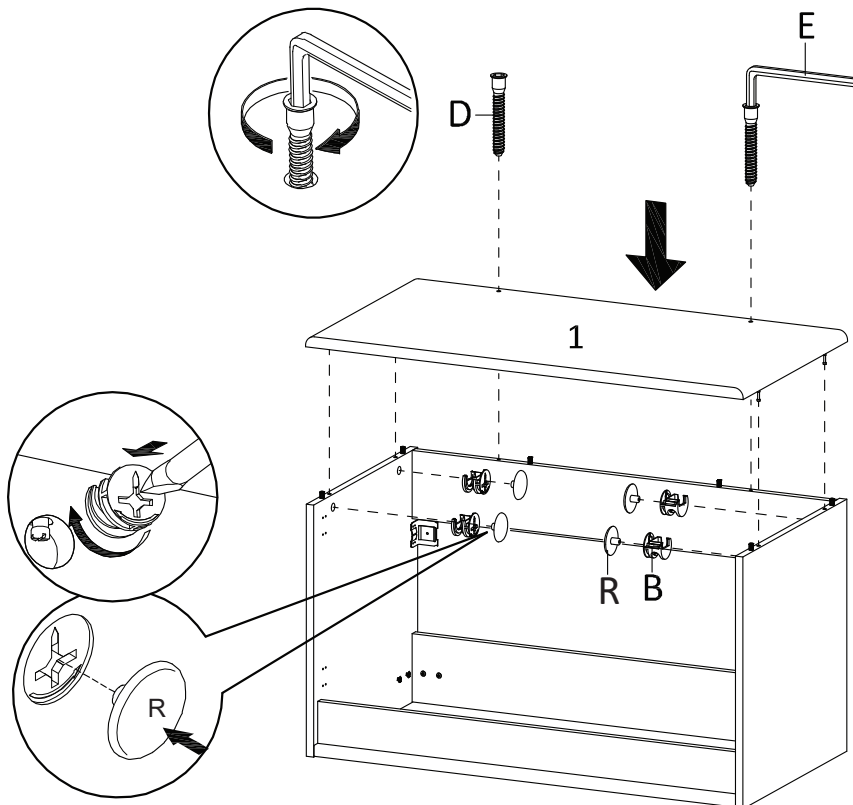



Bx4	Dx2	Ex1	Rx4	Sx1

Hardware required.
Screwdriver not included

STEP 9:




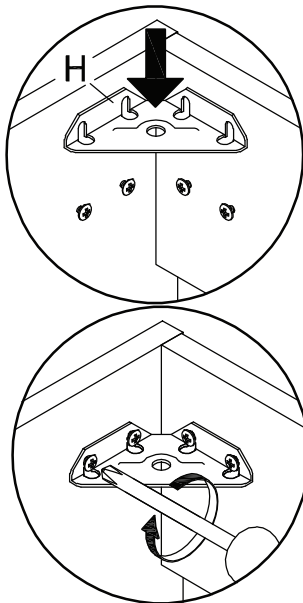


NOTE :
Tighten all the screw

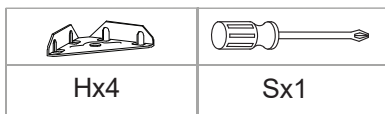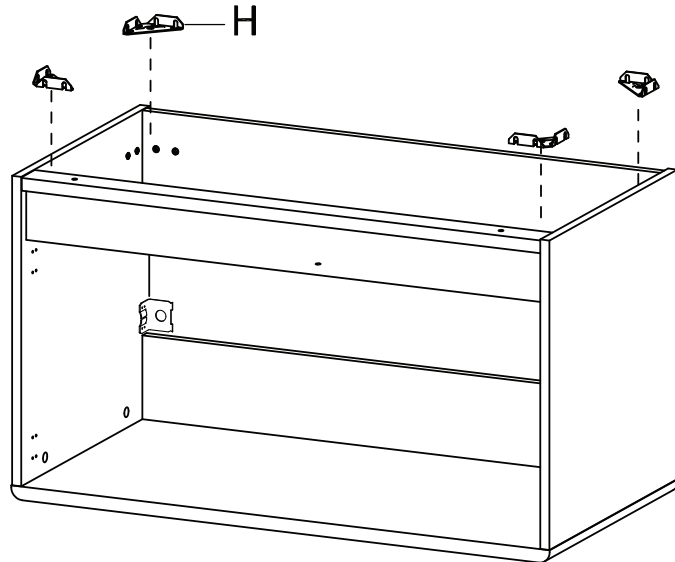

Hardware required.
Screwdriver not included


STEP 10:

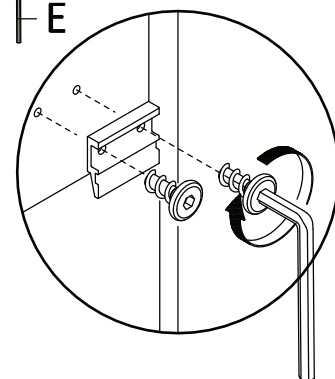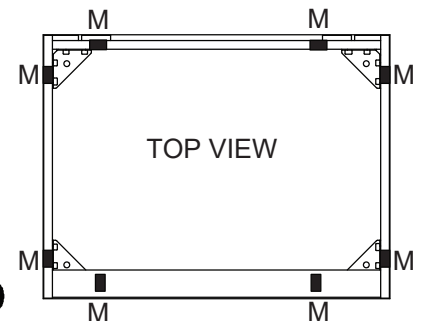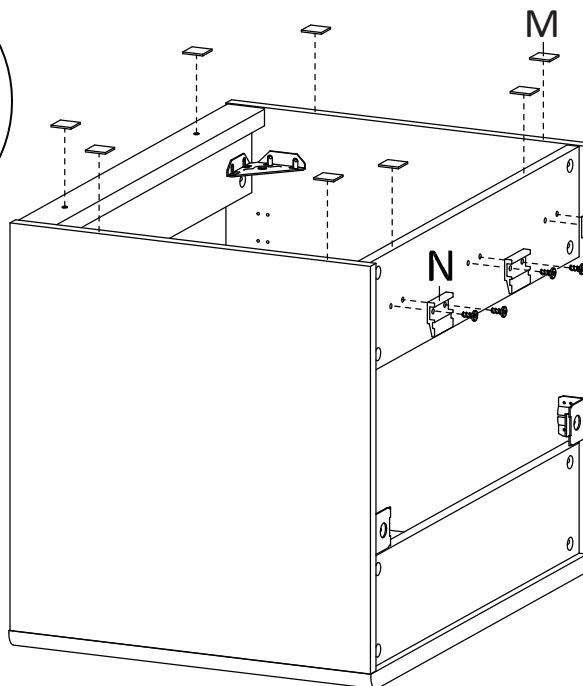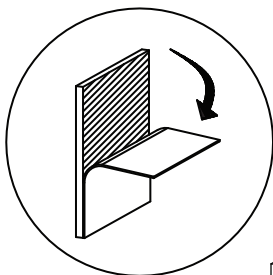

Hardware required.

STEP 11:


Determine your desired height (Y), then subtract by 106 mm. This is the drill holes height from the floor (Z).

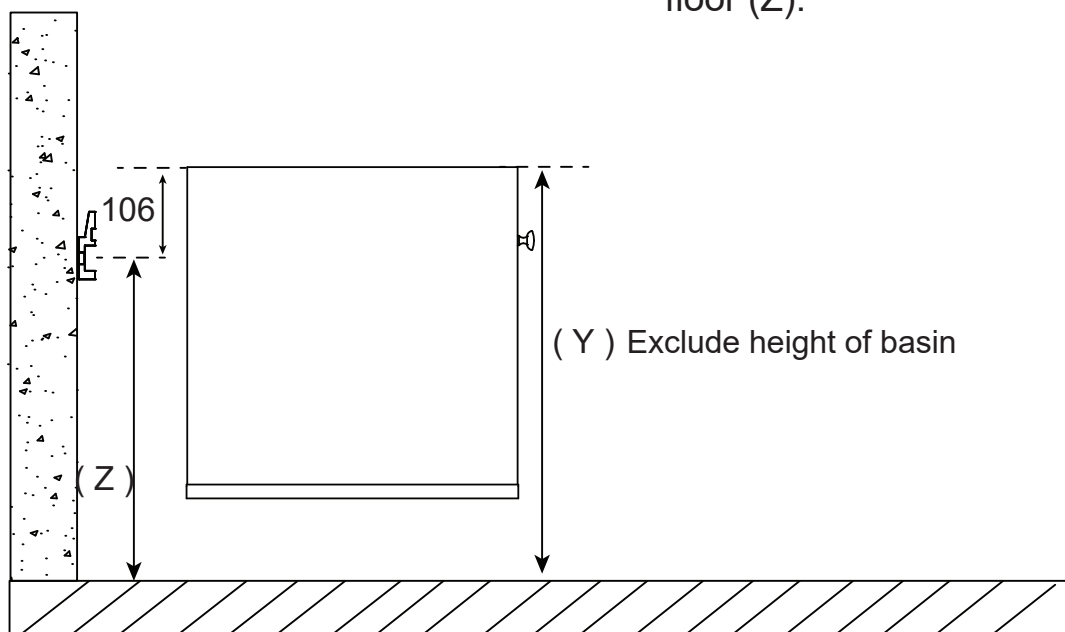

STEP 12:

Please use minimum 2 holes on group 1 and group 3, and minimum 1 hole on group 2, to apply the wall plug and screw. Use additional holes when necessary.

* Long Bracket

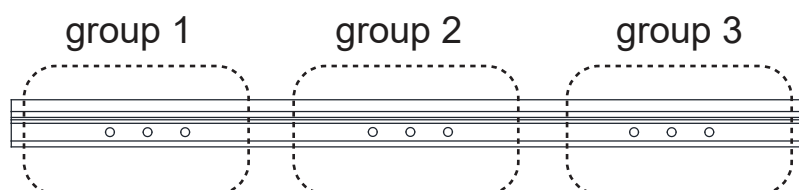



Different wall materials require unique wall fasteners.

The wall plugs (P) and screws (I) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

Q	I	P

STEP 13:

Use Waterpass to ensure the drill position

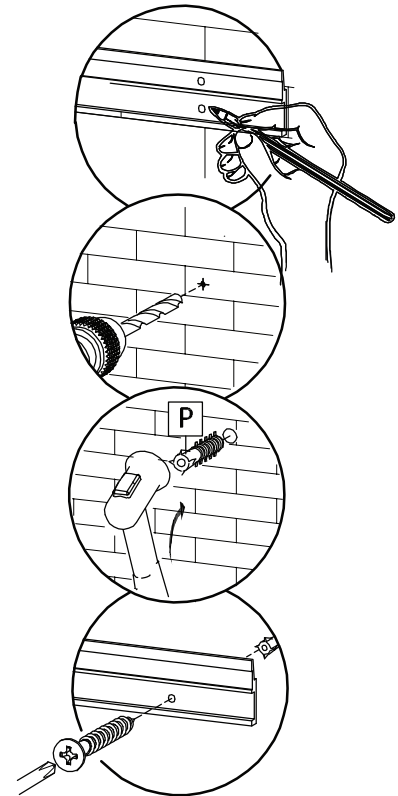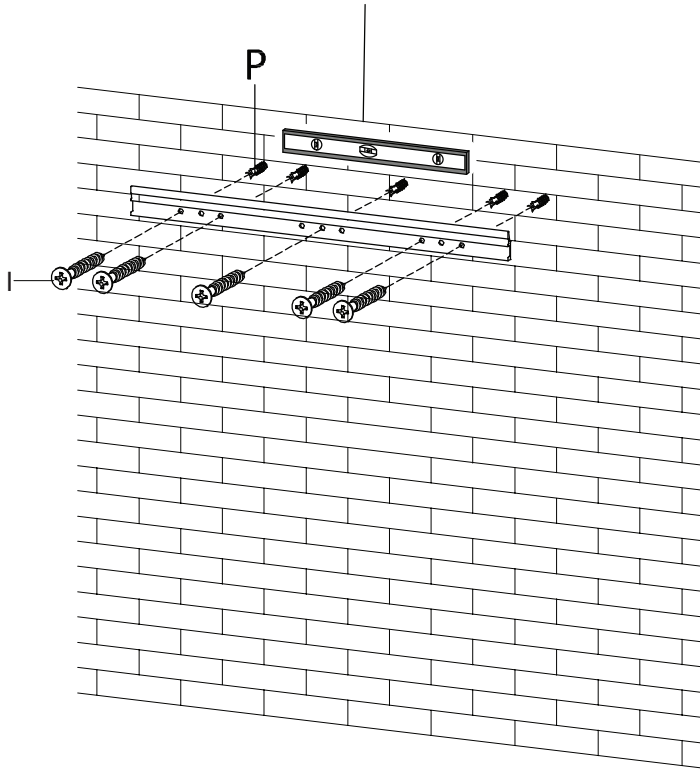




Px5	Ix5	Qx1	Sx1

Hardware required.
Screwdriver not included

STEP 14:

2


GUIDE FOR DRILLING

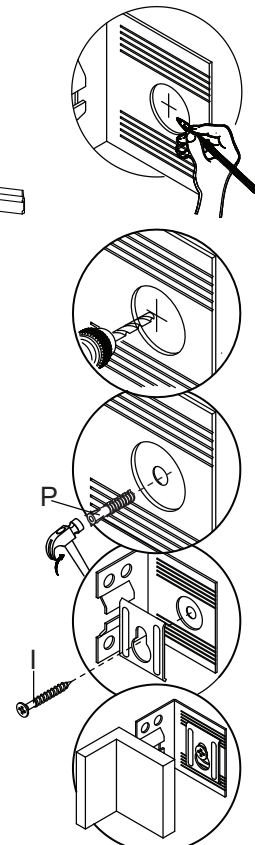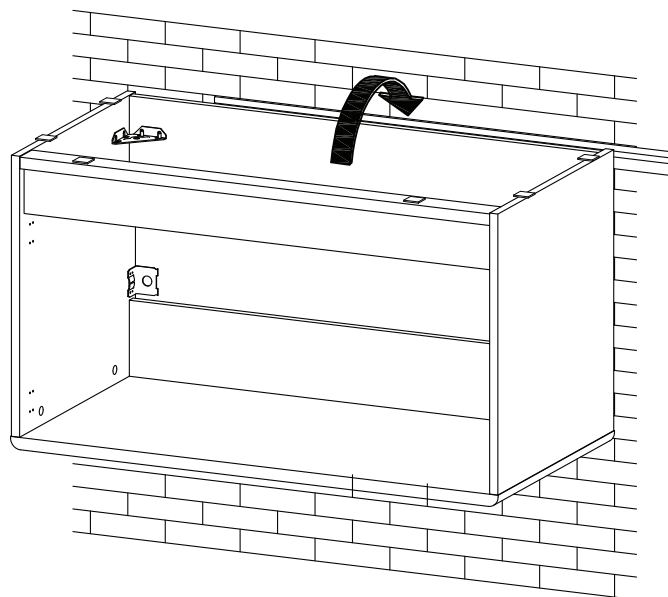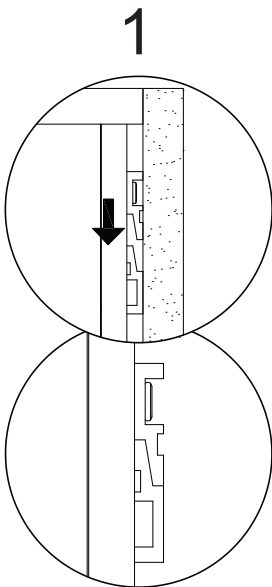

Px2	Ix2	Sx1

Hardware required.
Screwdriver not included


STEP 15:

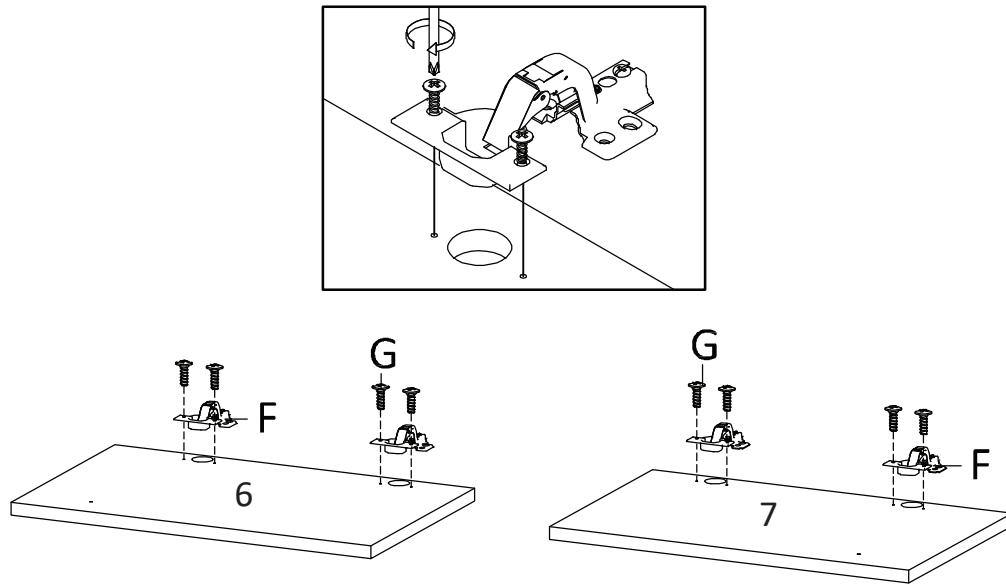

Fx4	Gx8	Sx1

Hardware required.
Screwdriver not included

STEP 16:


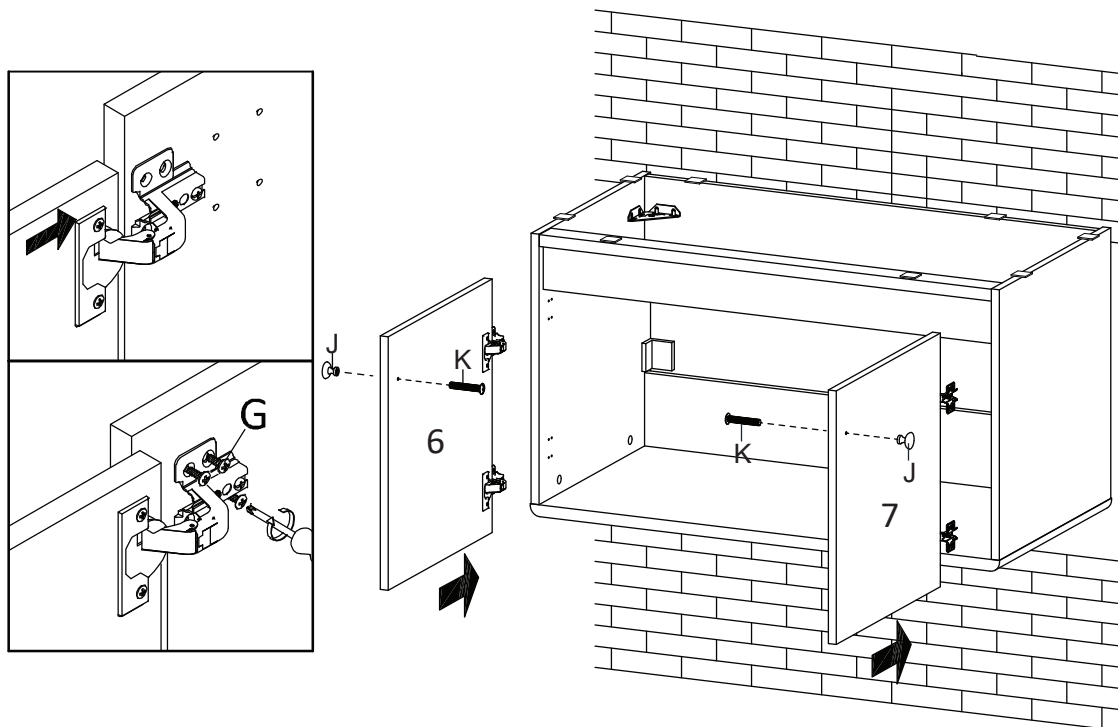


Hardware required.
Screwdriver not included

Gx16	Jx2	Kx2	Sx1

STEP 17:

Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag

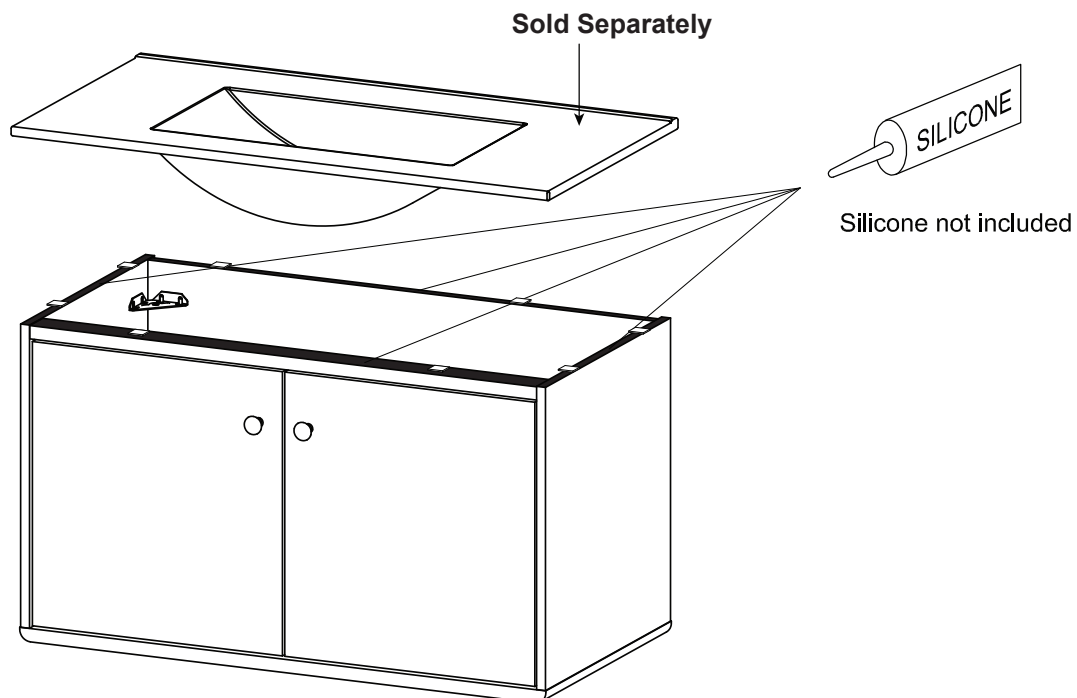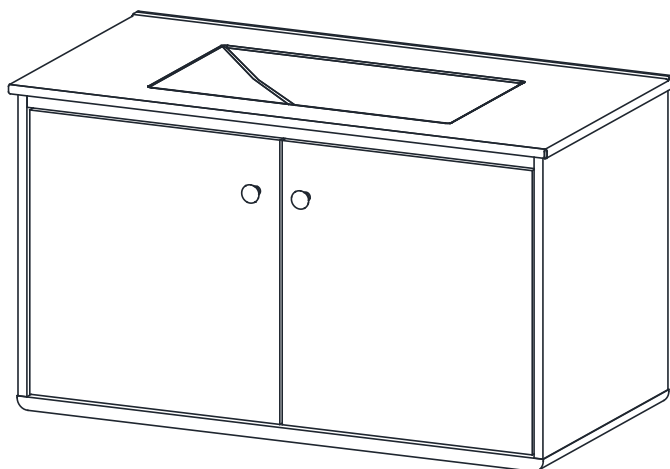**STEP 18:**

Assembly is complete. The Cabinet is ready to enjoy now !