






# ASSEMBLY INSTRUCTION

If you have any questions, please feel free to contact us.  
Email: [lowesteam@aminalife.com](mailto:lowesteam@aminalife.com)

## *ROPE SOFA SET 6PCS*

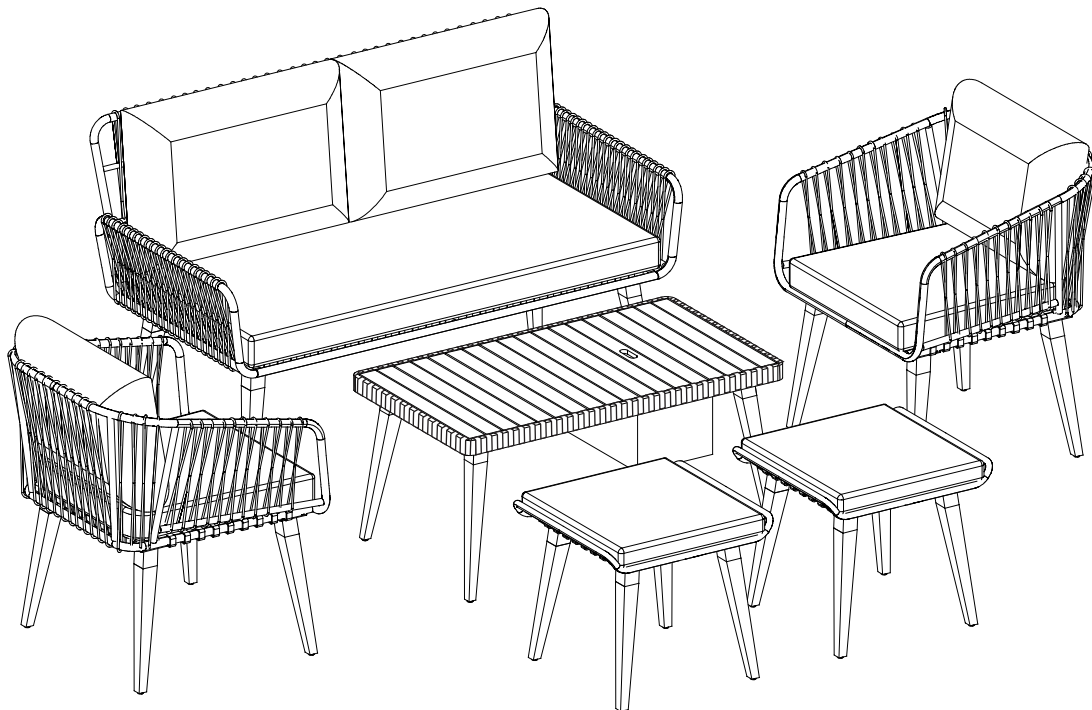


***WF324108, WF324109***

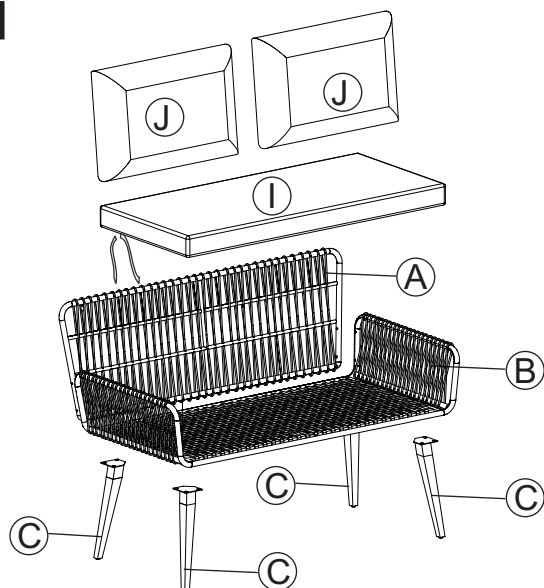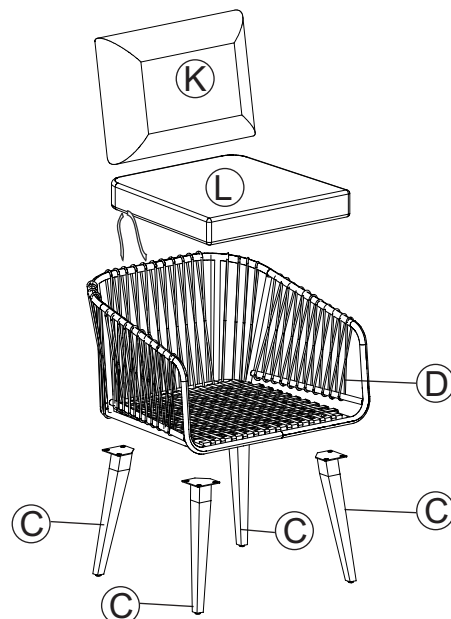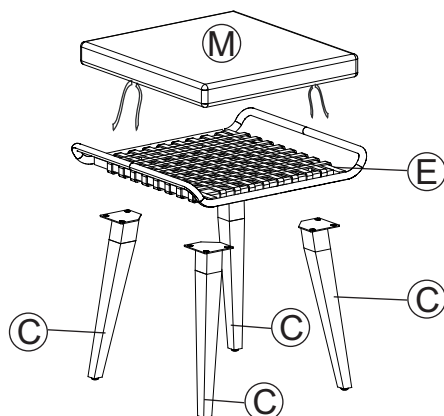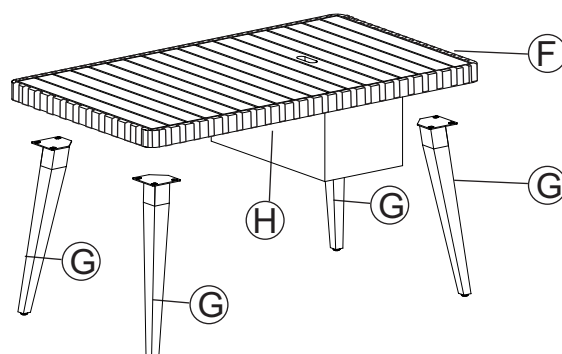**X1****X2****X2****X1****Note:**


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

## CARTON CONTENT:

### **WF324108**

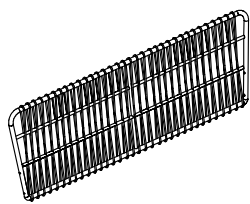


Ⓐ x 1

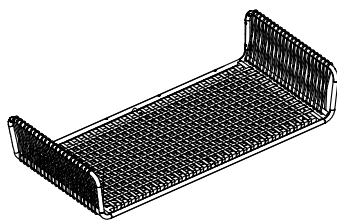

Ⓑ x 1




Ⓒ x 20

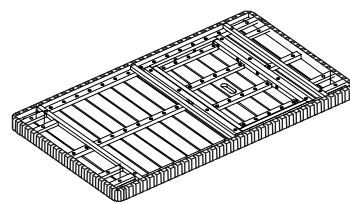


Ⓕ x 1



Ⓖ x 4

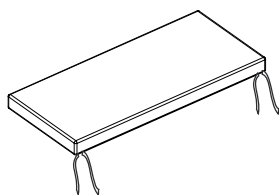


Ⓘ x 1

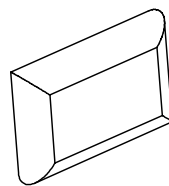


Ⓙ x 1


### **WF324109**

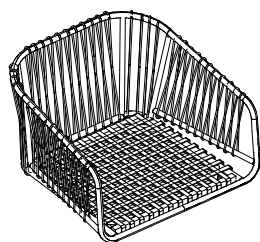


Ⓓ x 2

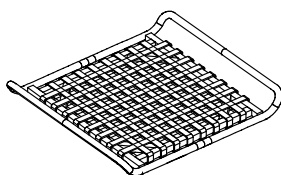


Ⓔ x 2




Ⓗ x 1

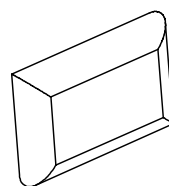


Ⓙ x 1

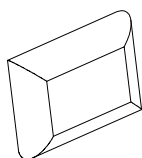


Ⓚ x 2

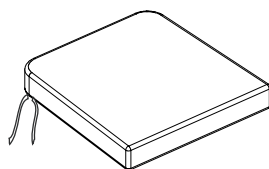

Ⓛ x 2

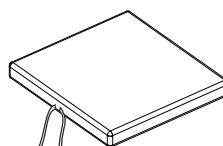


Ⓜ x 2

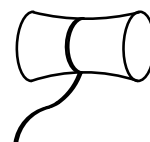


Hardware

**Part List:**

(A) x 1

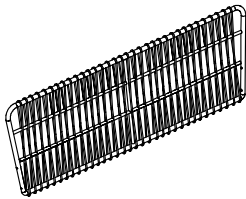

(B) x 1

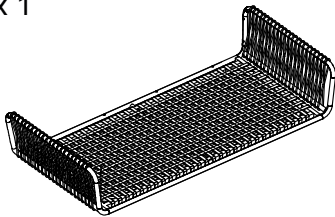


(C) x 20




(D) x 2



(E) x 2

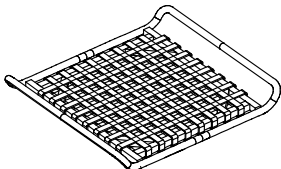


(F) x 1

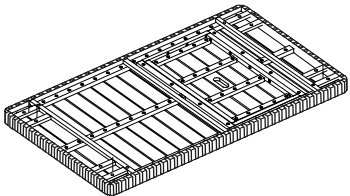


(G) x 4




(H) x 1

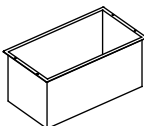


(I) x 1

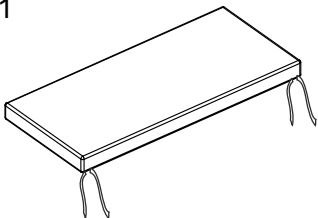


(J) x 2

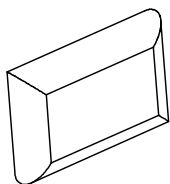


(K) x 2

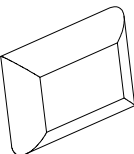

(L) x 2

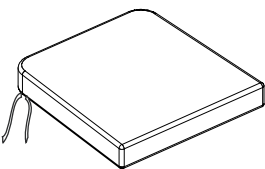

(M) x 2

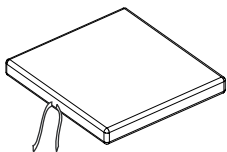

**Hardware List:**

① x 8


Extra 1 pcs



BOLT M6 x 45MM

② x 72

Extra 2 pcs



BOLT M6 x 15MM


③ x 80

Extra 2 pcs




WASHER M6/1

④ x 4



SCREW M4 x 12MM

⑤ x 2





ALLEN KEY M4

## STEP 1

① x 8

③ x 8

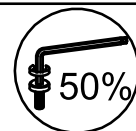
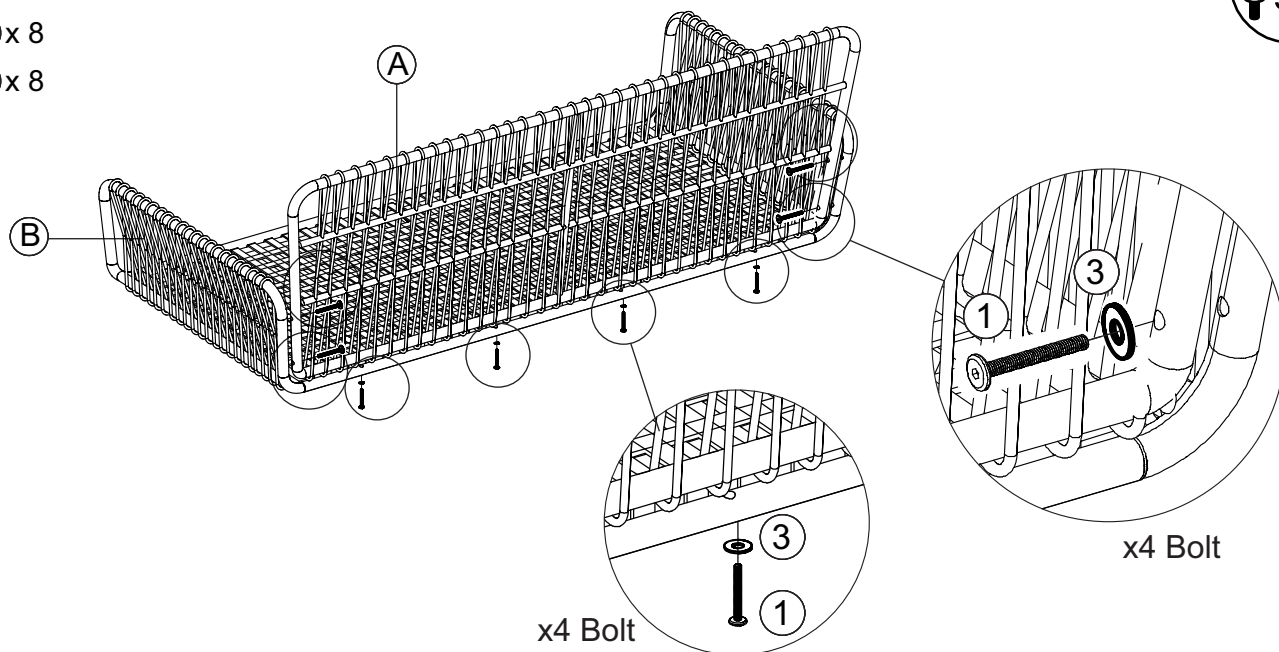


Connect the back (A) & seat (B), tighten bolt (1), flat washer (3) with allen key (5).

## STEP 2



② x 12

③ x 12

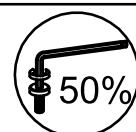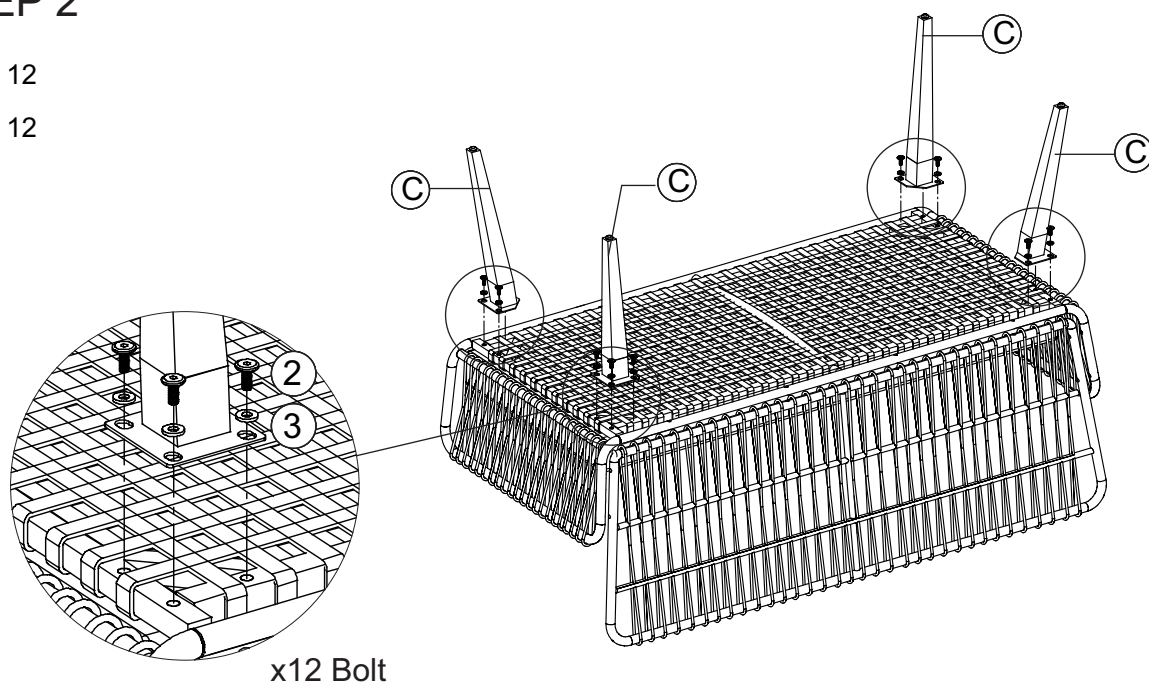



Connect the part from STEP 1 & leg (C), tighten bolt (2), flat washer (3) with allen key (5).

## STEP 3

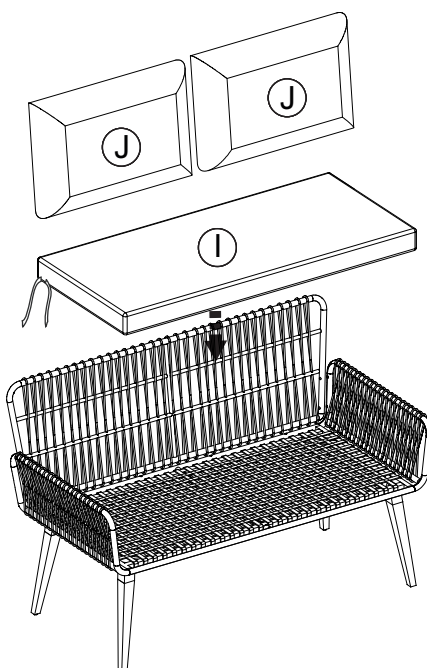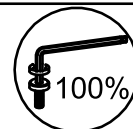

Put on cushion seat bench (I) & cushion back (J).

## STEP 4

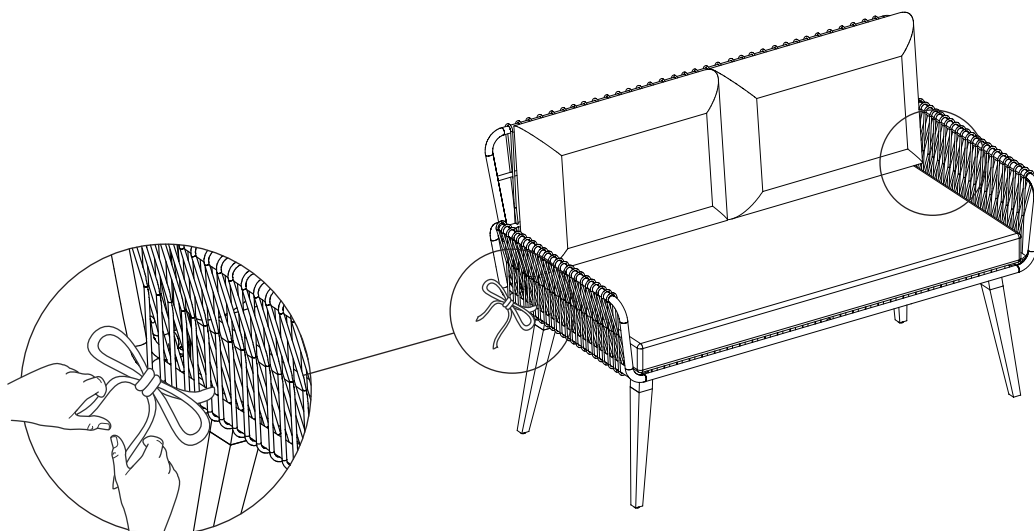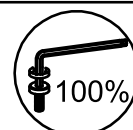






## STEP 5

② x 12

③ x 12


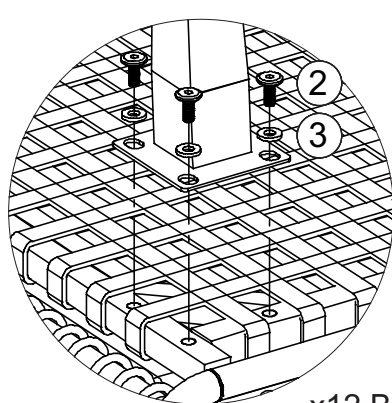


x12 Bolt

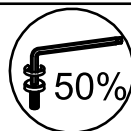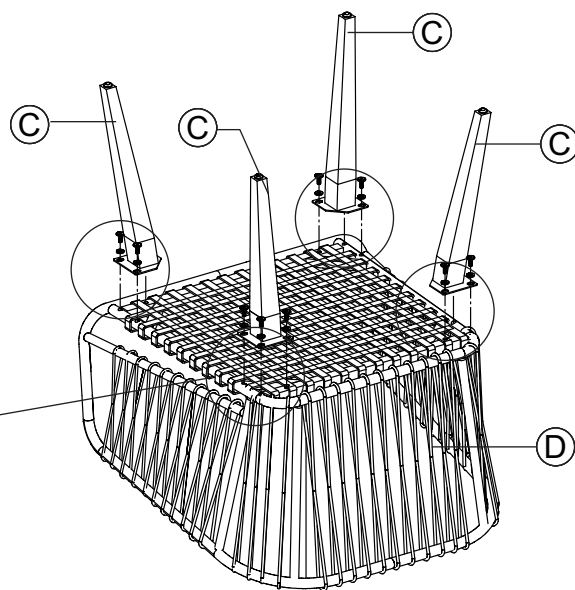

Connect the chair (D) & leg (C), tighten bolt (2), flat washer (3) with allen key (5).



## STEP 6

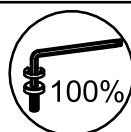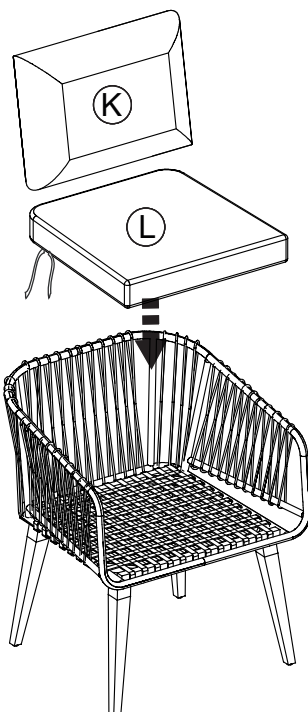

Put on cushion seat chair (L) & cushion back (K).





## STEP 7

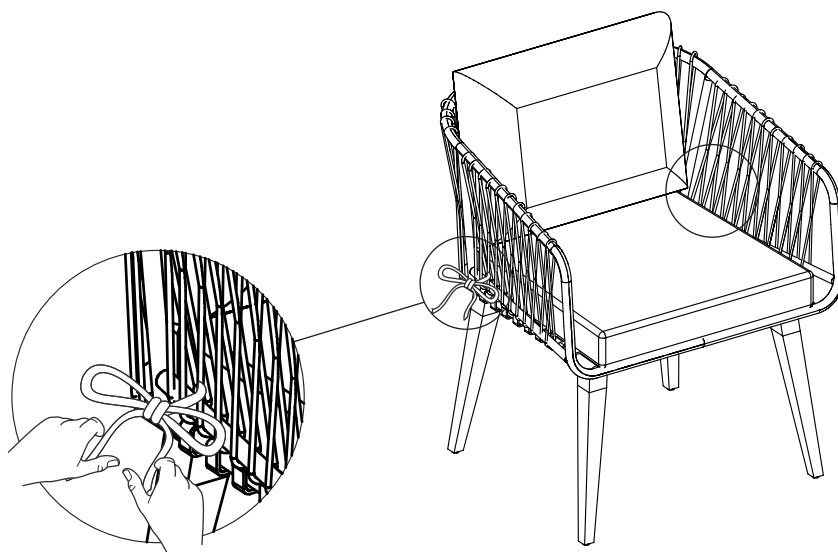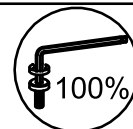

## STEP 8

② x 12



③ x 12

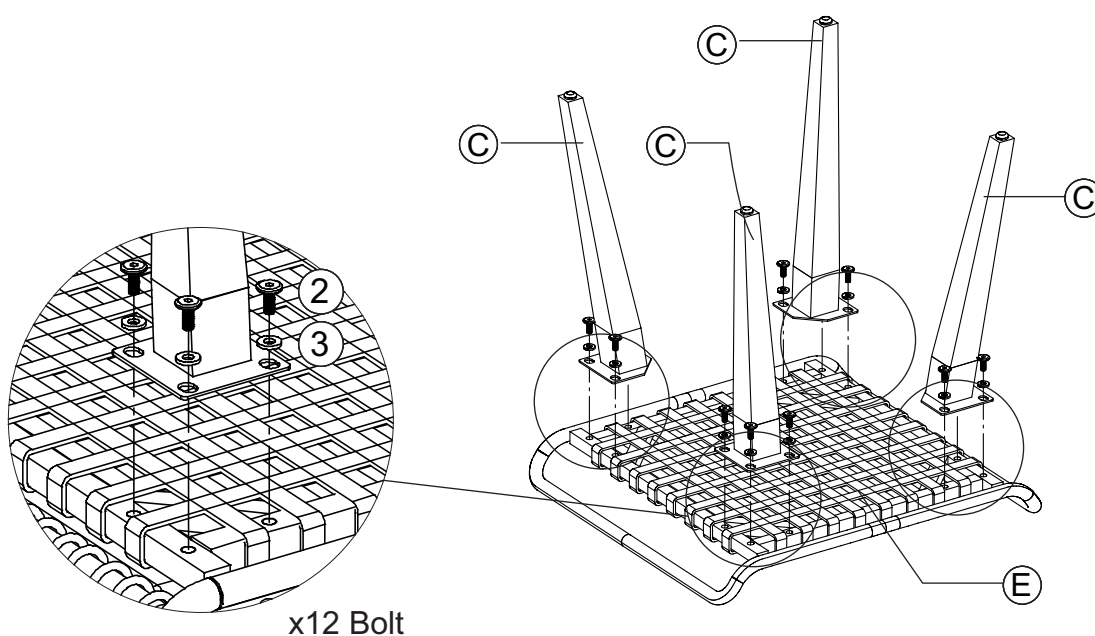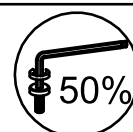

x12 Bolt



Connect the seat stool (E) & leg (C), tighten bolt (2), flat washer (3) with allen key (5).

## STEP 9

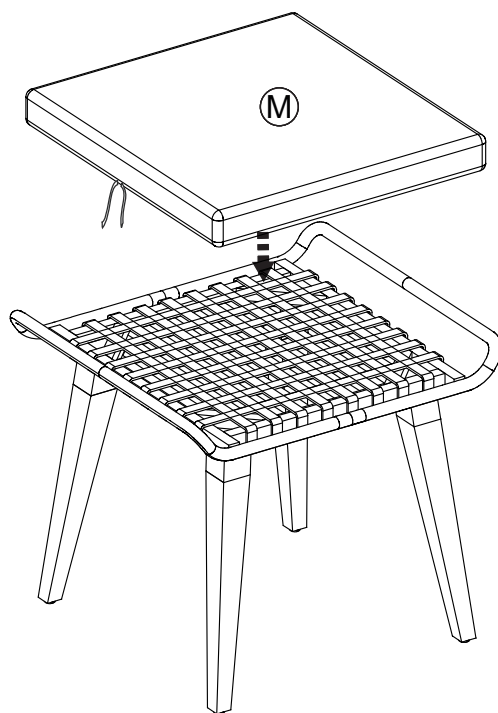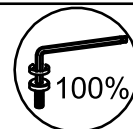

Put on cushion seat stool (M) .


## STEP 10

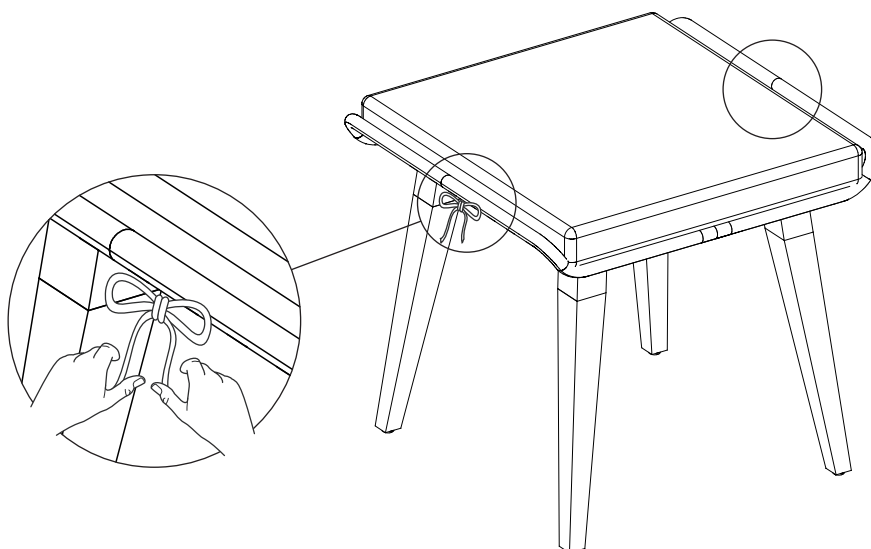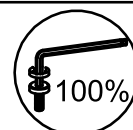

## STEP 11


② x 12

③ x 12

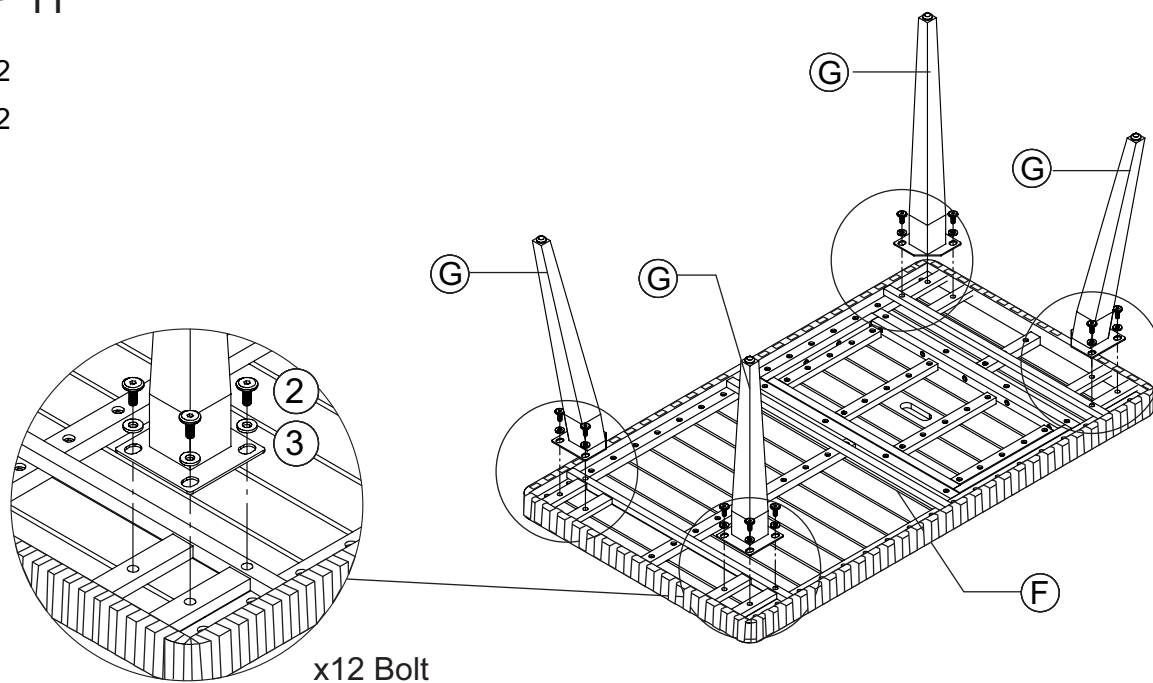



Connect the top table (F) & leg table (G), tighten bolt (2), flat washer (3) with allen key (5).

## STEP 12

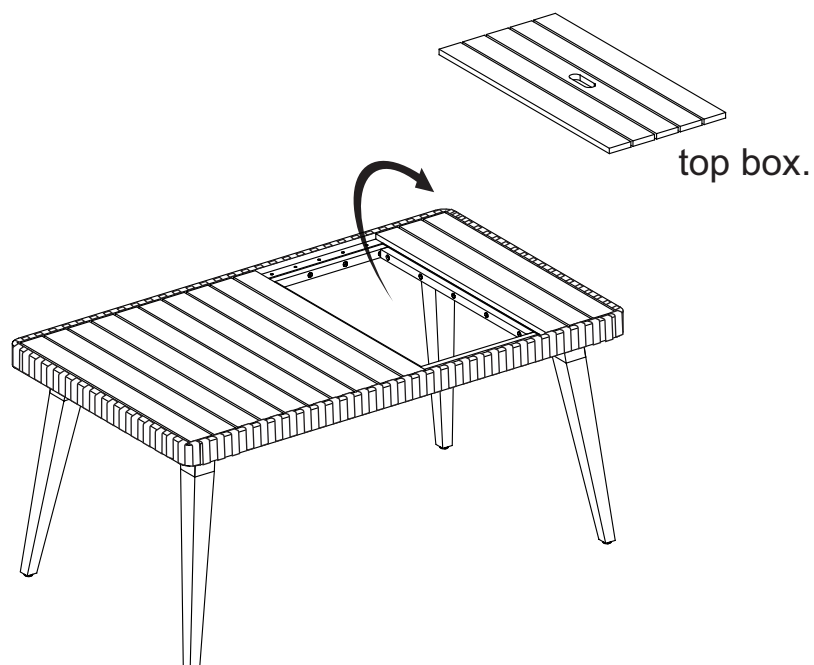

Put out top box cover.


## STEP 13

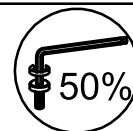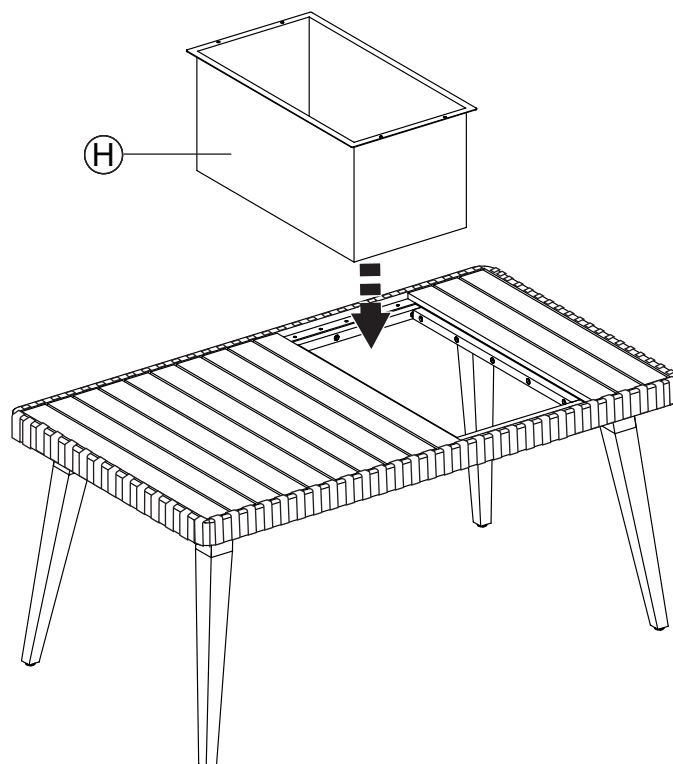



Connect the part from STEP 12 & box (H)

## STEP 14

④ x 4

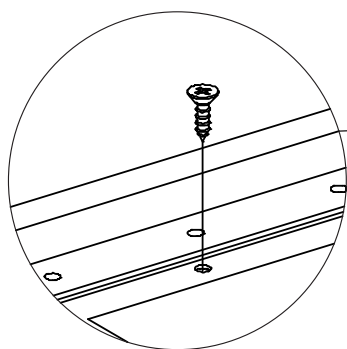


x4 Screw

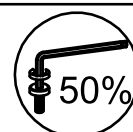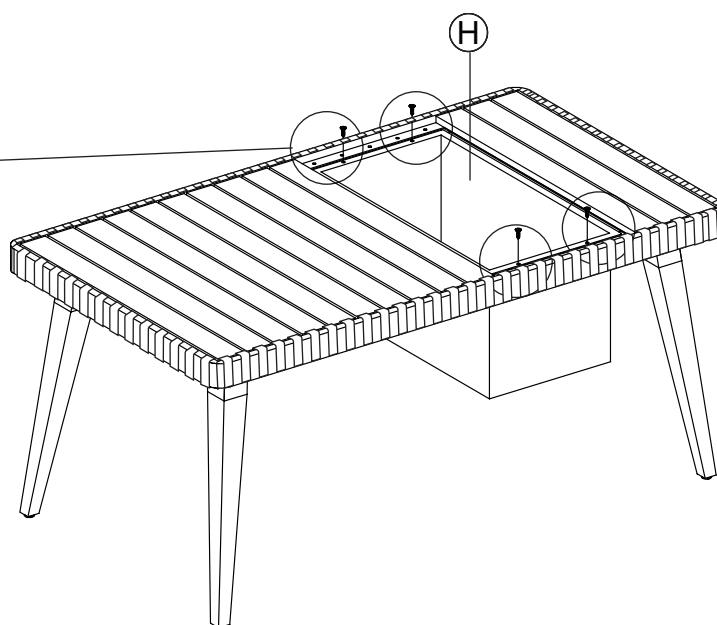


Connect the part from STEP 13 & box (H) with screw (4)

STEP 15

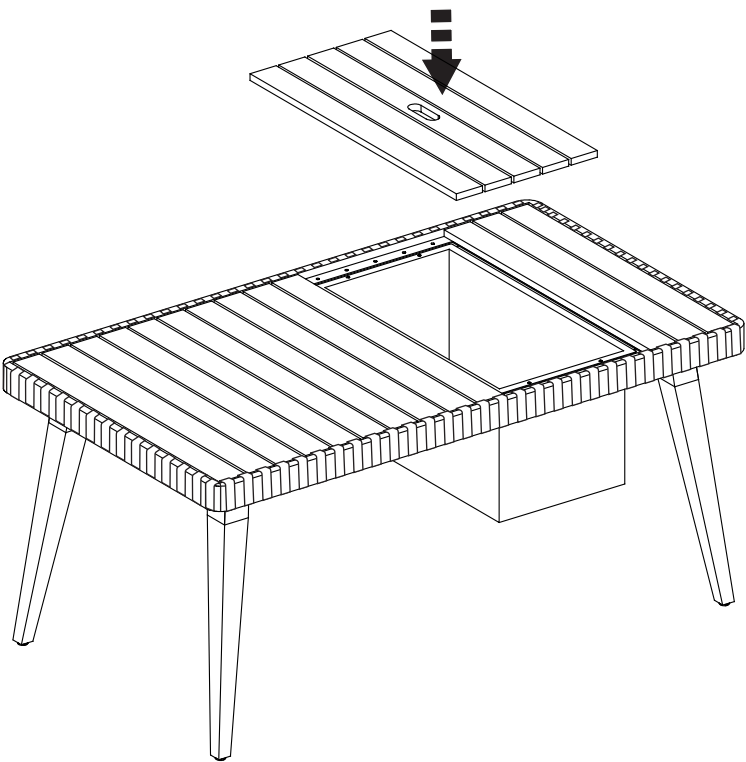


Put in top box.

STEP 16

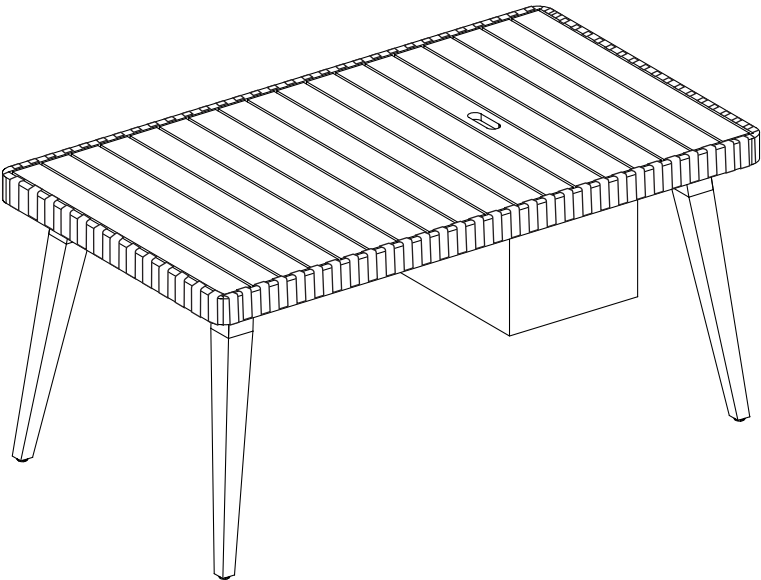

STEP 17

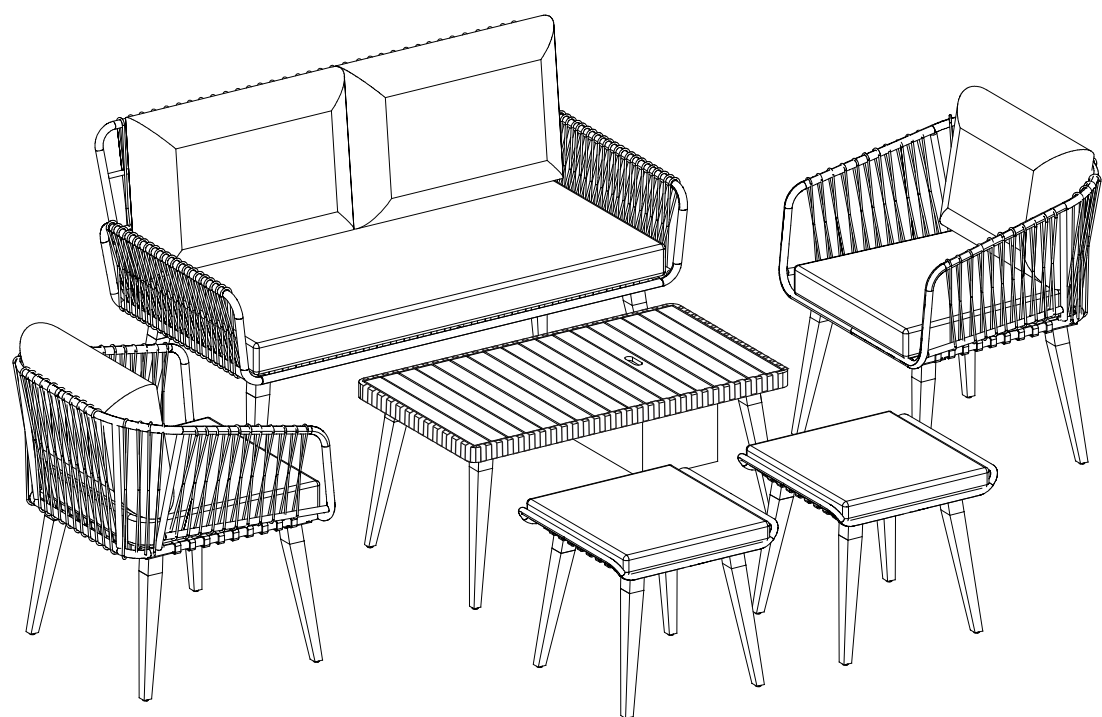

Finish