



Assembly Instruction

Advice:

- 1.Power tools are suggested to be used during installation.
- 2.More than one person may be required to assemble this product.
- 3.The best advice is not tightening up any screws until the whole piece is assembled.If having difficulty aligning holes,loosen the screws already installed and readjust the armrest.
- 4.To avoid mess-up or mismatch,please use the hardware of each box to install the furniture in the same box.

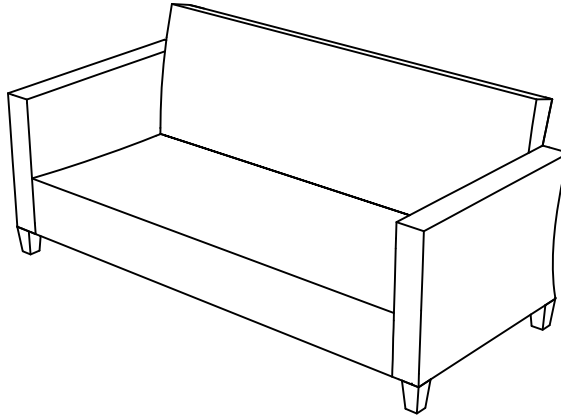

3-Seat Sofa

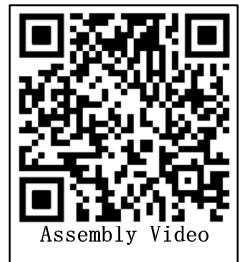


Parts List


Part Number	Picture	Description	QTY
S-A		Sofa Back	1
S-B		Sofa Seat	1
S-C		Left Arm	1
S-D		Right Arm	1
S-E		Seat and Back Cushion	3
F		Sofa Leg	4
V		Screw (M6*35)	4
Q		Screw (M6*75)	4

Part Number	Picture	Description	QTY
S		Screw (M6*60)	2
P		Screw (M6*95)	2
N		Washer (M6)	22
M		Nut (M6)	10
G		Nut (M8)	4
L		Allen Key	1
K		Wrench (M8)	1
J		Wrench (M6)	1
I		Washer (M8)	4

STEP 1

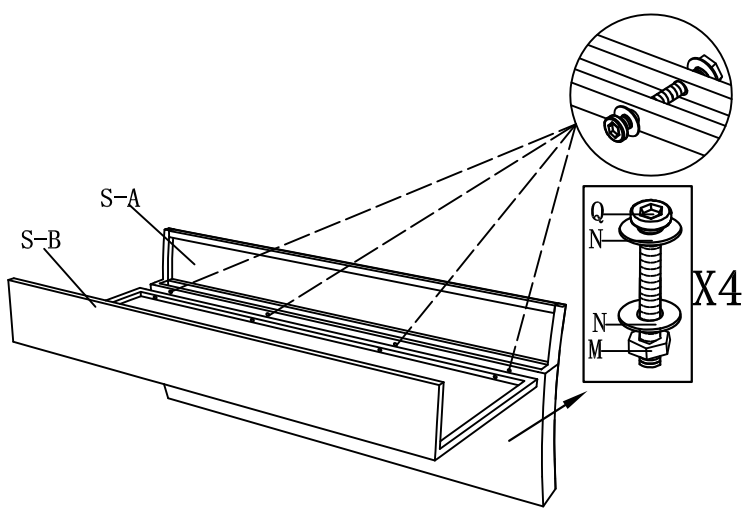


STEP 2

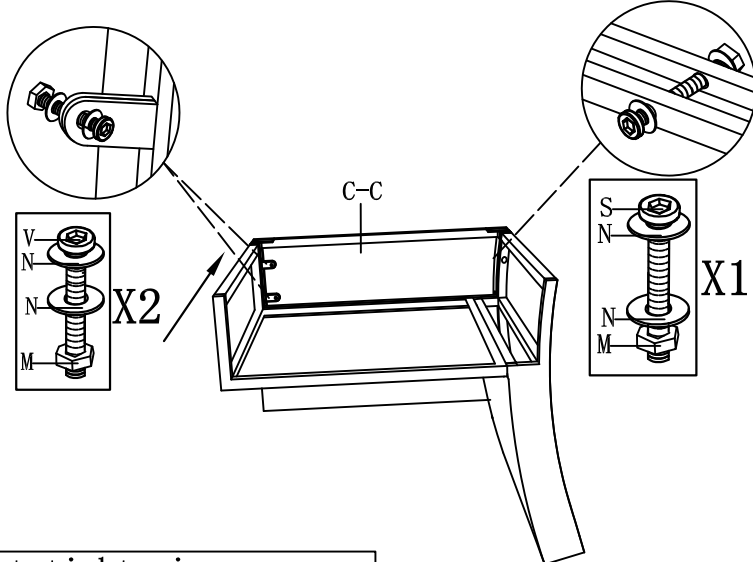


The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

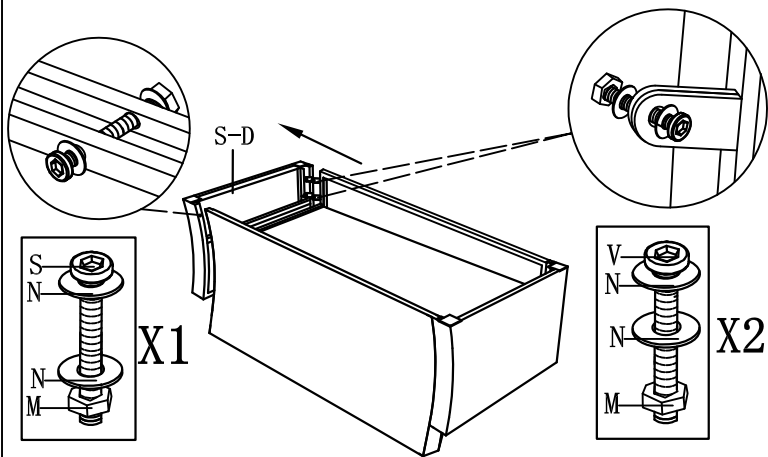


STEP 4

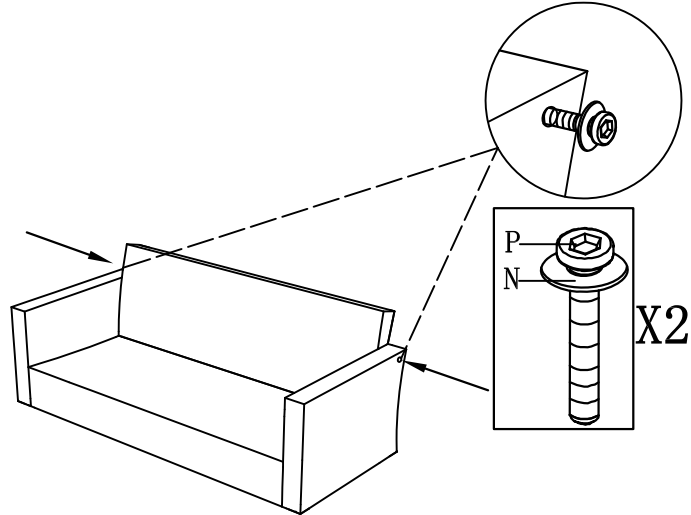

STEP 5

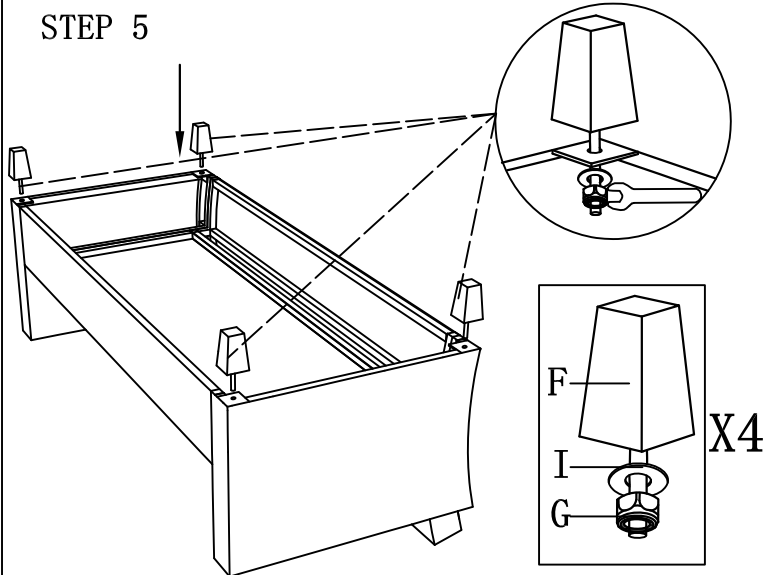

FINISH

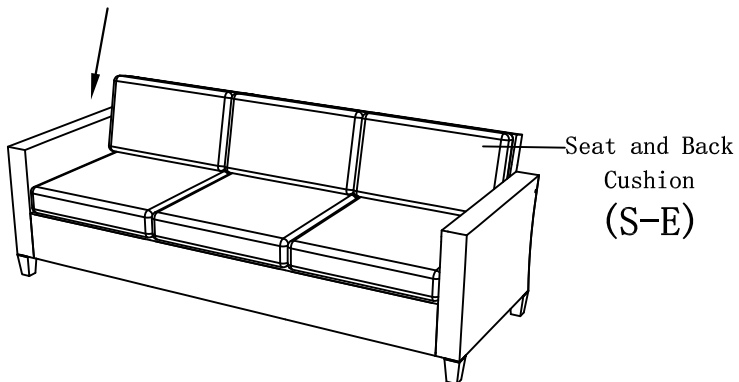


It is recommended to tighten the anti-slip screws with your own M8 wrench.

Please tap the cushions and wait 48 to 72 hours to fully rebound


Assembly Instruction

Advice:

- 1.Power tools are suggested to be used during installation.
- 2.More than one person may be required to assemble this product.
- 3.The best advice is not tightening up any screws until the whole piece is assembled.If having difficulty aligning holes,loosen the screws already installed and readjust the armrest.
- 4.To avoid mess-up or mismatch,please use the hardware of each box to install the furniture in the same box.


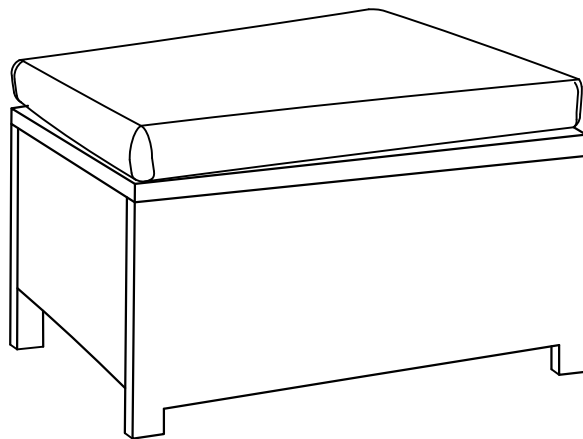


Ottoman

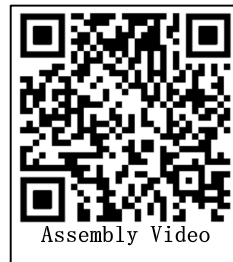


Assembly Video


Parts List

Part Number	Picture	Description	QTY
0-A		Top Panel	1
0-B		Side Panel with Legs	2
0-C		Side Panel without Legs	2
0-D		Cushion	1
N		Washer (M6)	14
V		Screw (M6*35)	14
L		Allen Key	1

STEP 1

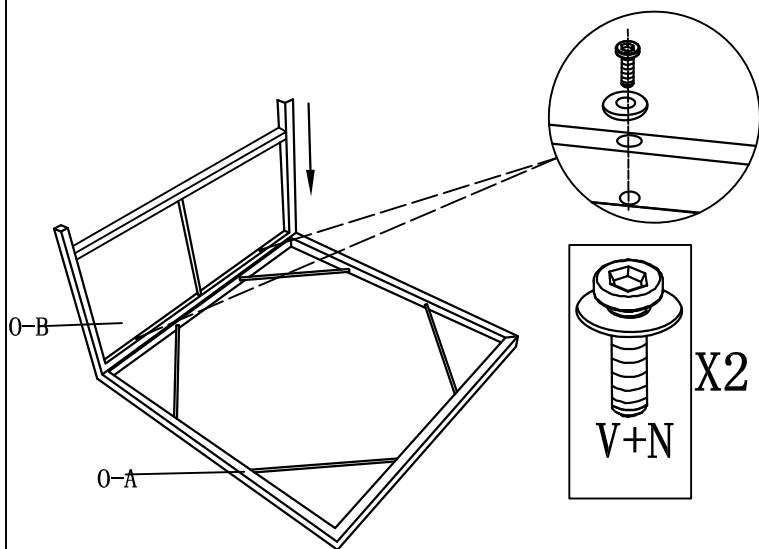


STEP 2

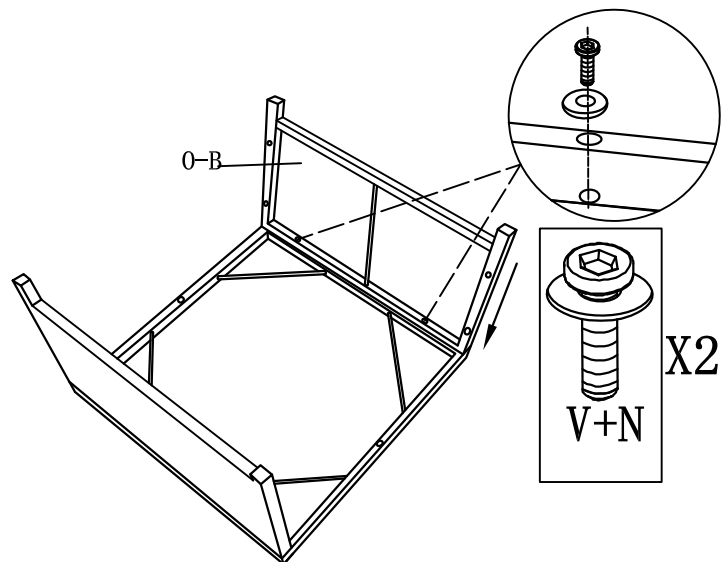


The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

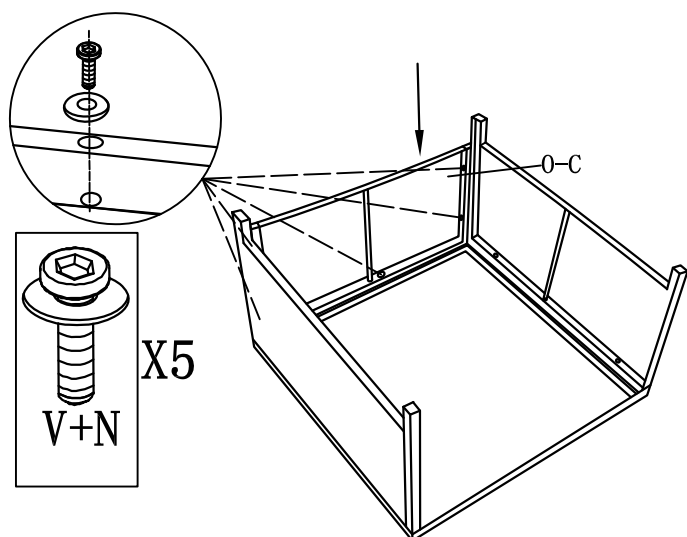

STEP 4

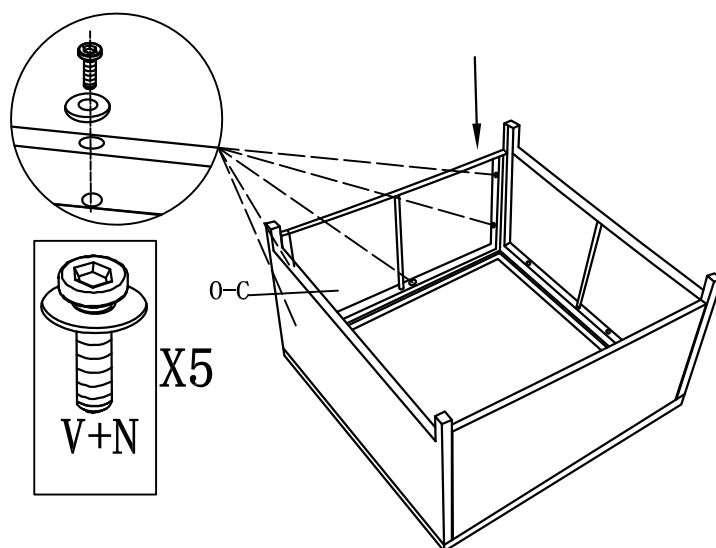

FINISH

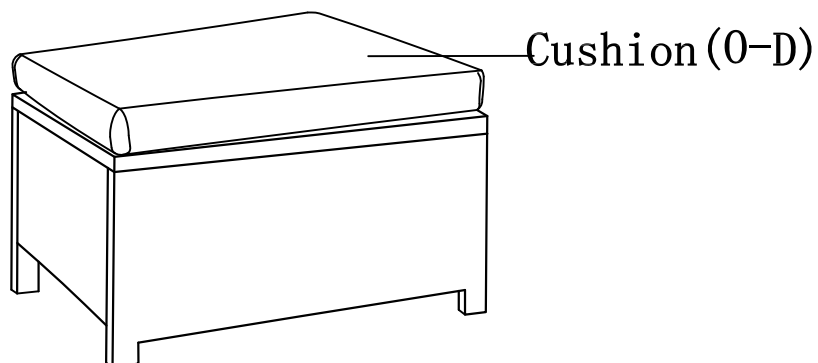

Please tap the cushions and wait 48 to 72 hours to fully rebound