









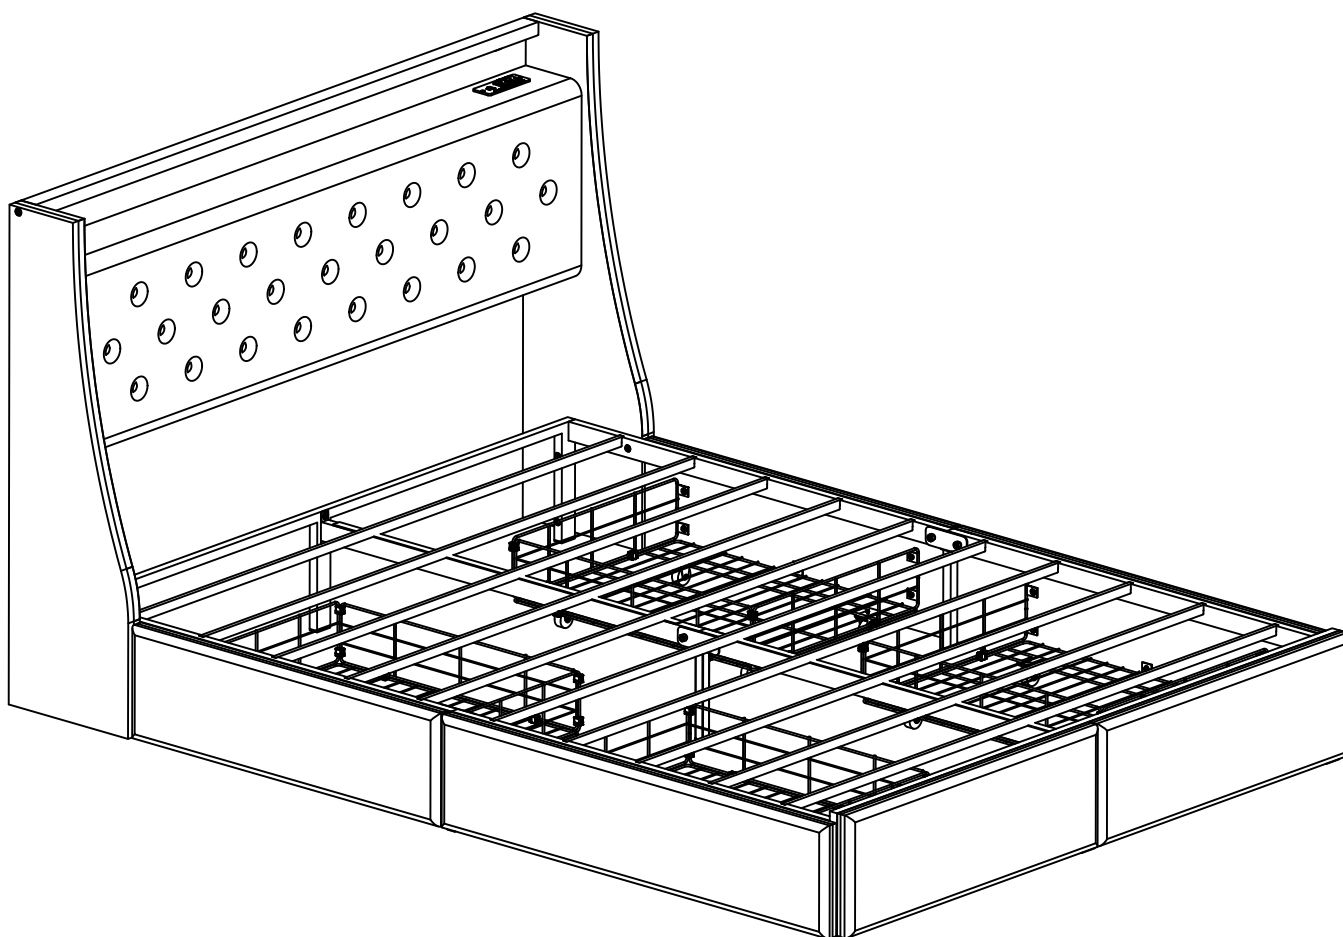







Model: C336B-QC-FH







Please Scan the QR code to watch the tutorial video







Parts List:

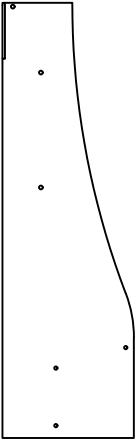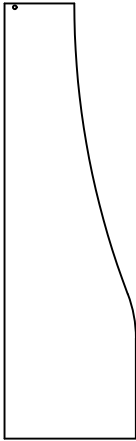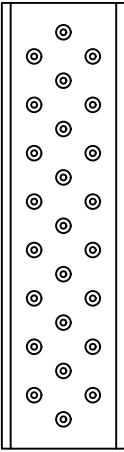
								
A1	A2	B	C	D	E	F	G	H
1pcs	1pcs	1pcs	1pcs	1pcs	2pcs	2pcs	2pcs	1pcs

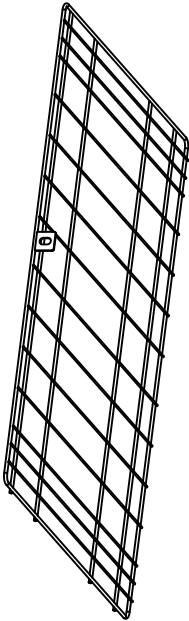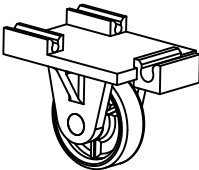					
Z2	Z3	Z4	Z5	Q1	Z8
8pcs	4pcs	4pcs	16pcs	40pcs	4pcs


							
M4x15mm	M6x15mm	M6x30mm	M6x40mm	M6x45mm	M6x55mm	M8x15mm	M8x35mm
V	T1	T2	T3	T4	T5	Y3	Y1
14pcs	24pcs	6pcs	4pcs	4pcs	4pcs	4pcs	8pcs

Parts List:

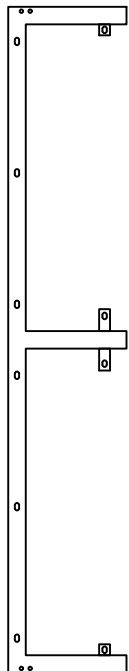
				
I	J	K	L	M
1pcs	1pcs	1pcs	1pcs	10pcs

			
Ø6xØ18mm	KEY 4		
X	W	U1	U3
8pcs	1pcs	1pcs	1pcs


Step 1

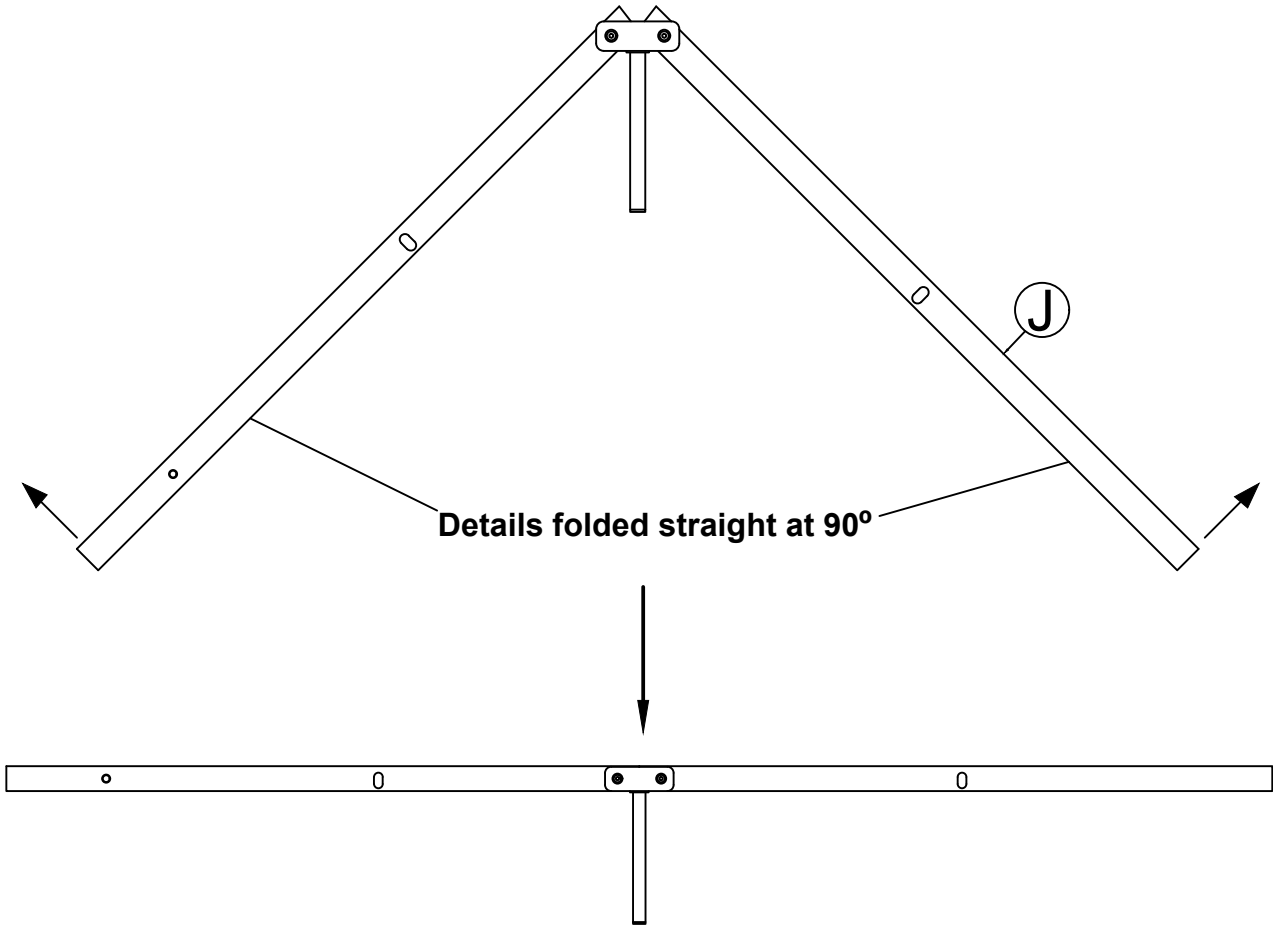


Step 2

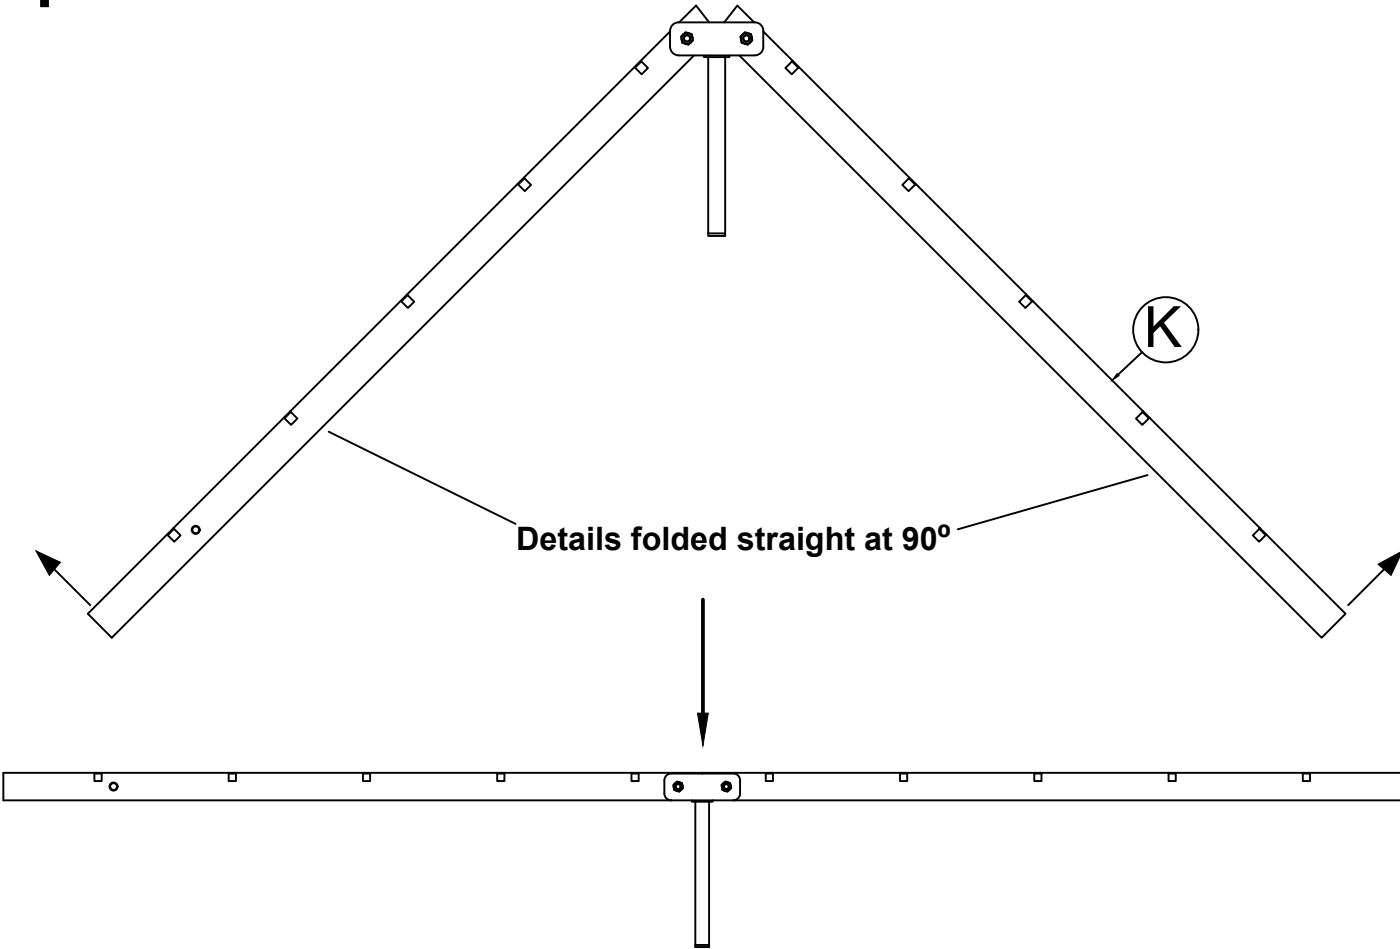


Step 3

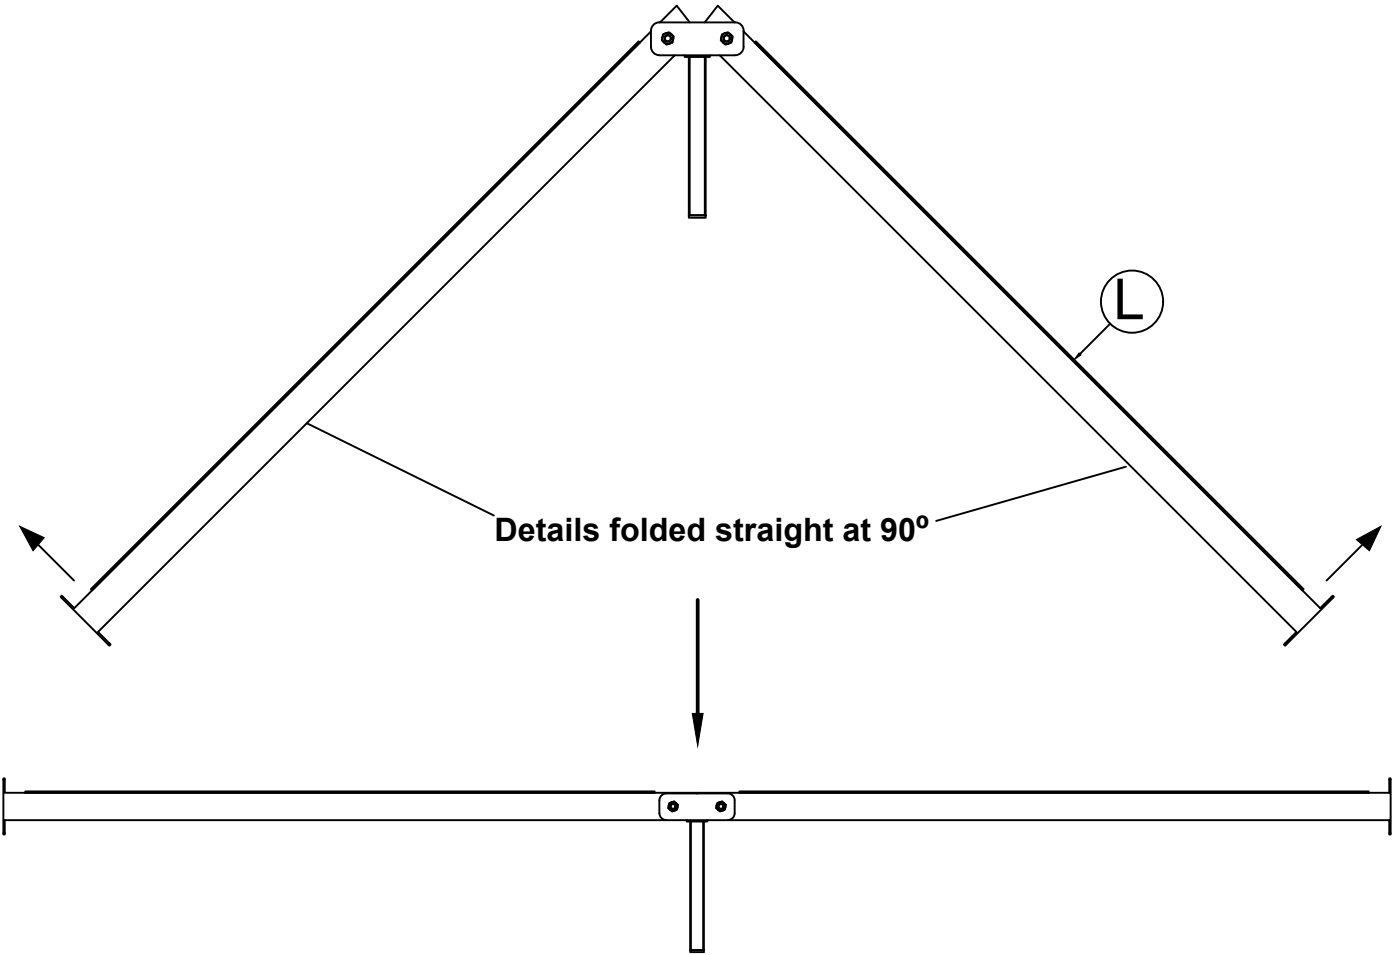


Step 4

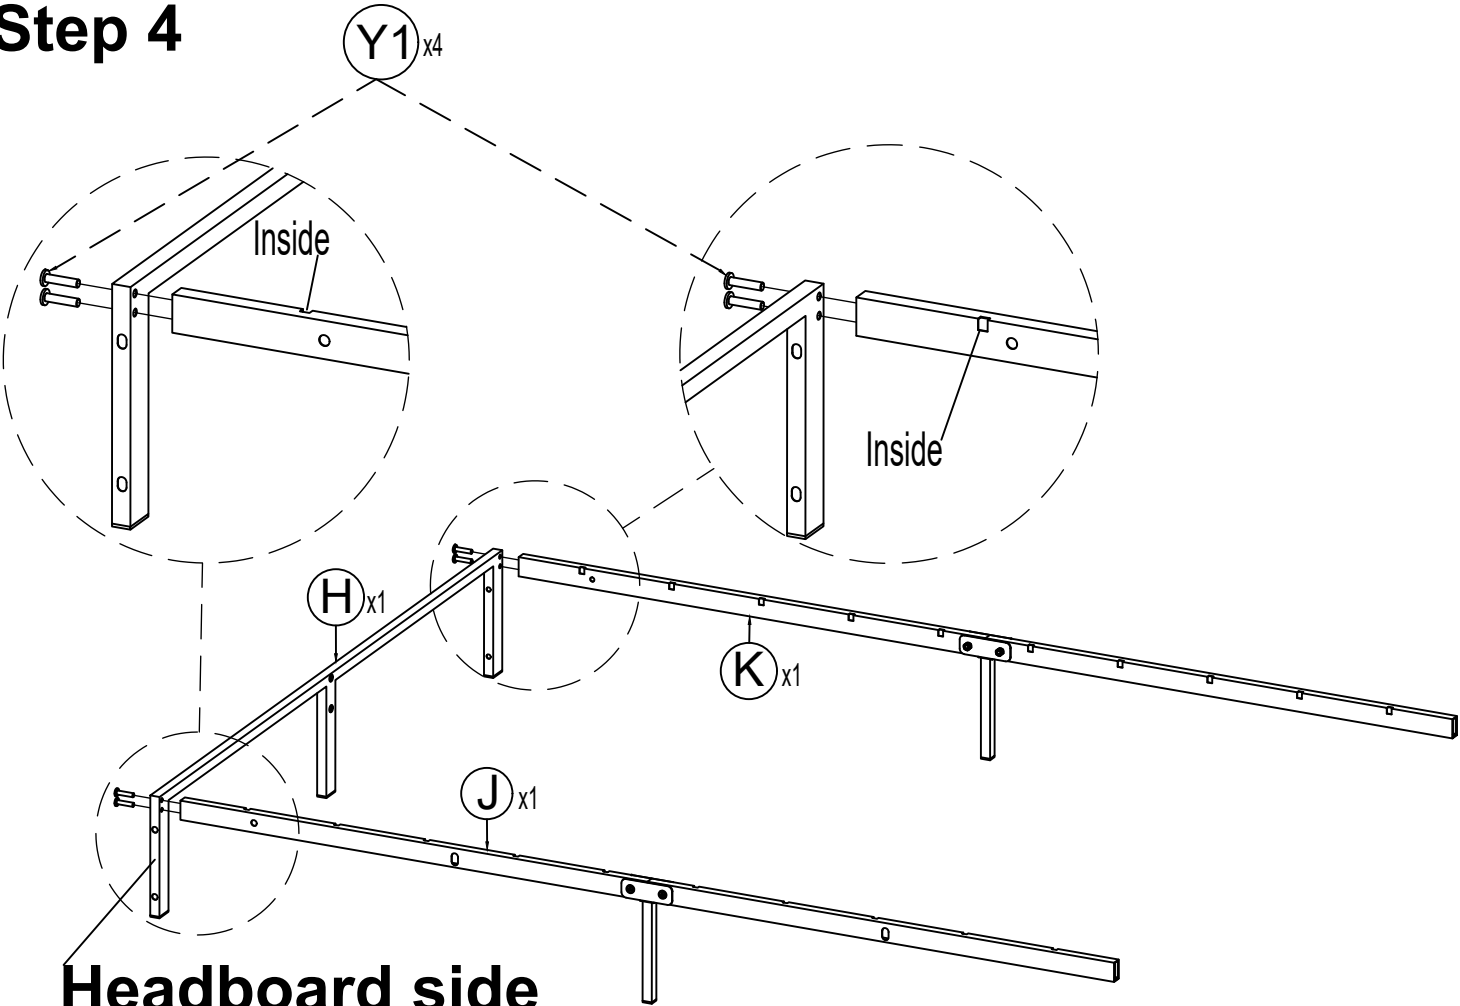

Step 5

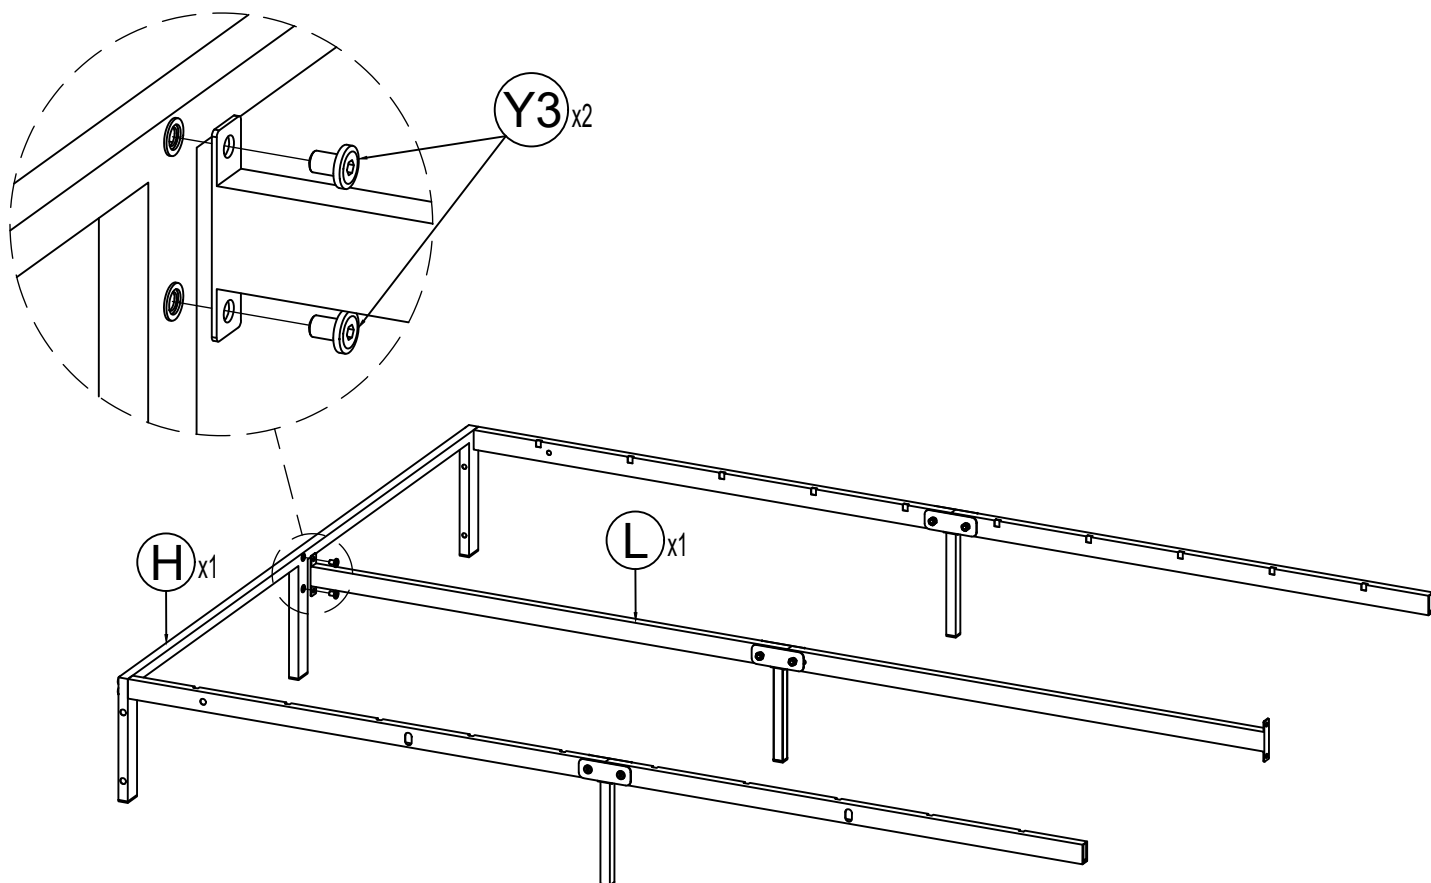


Step 6

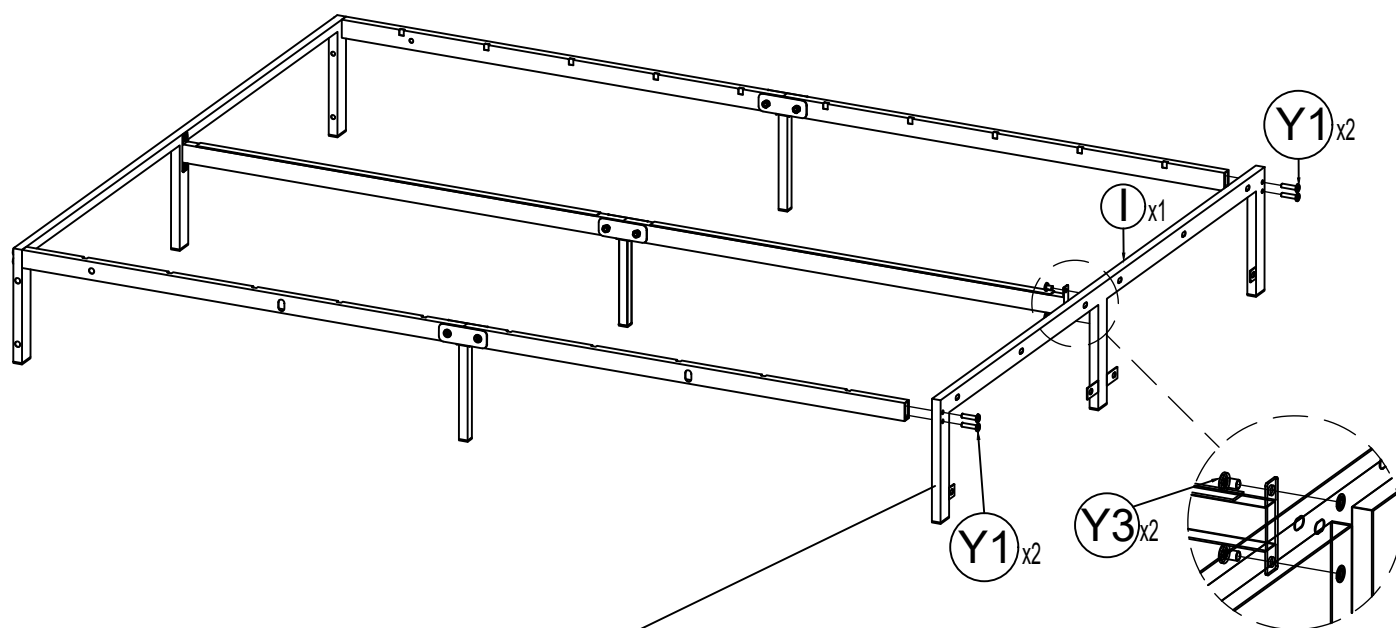


Footboard side


Step 7

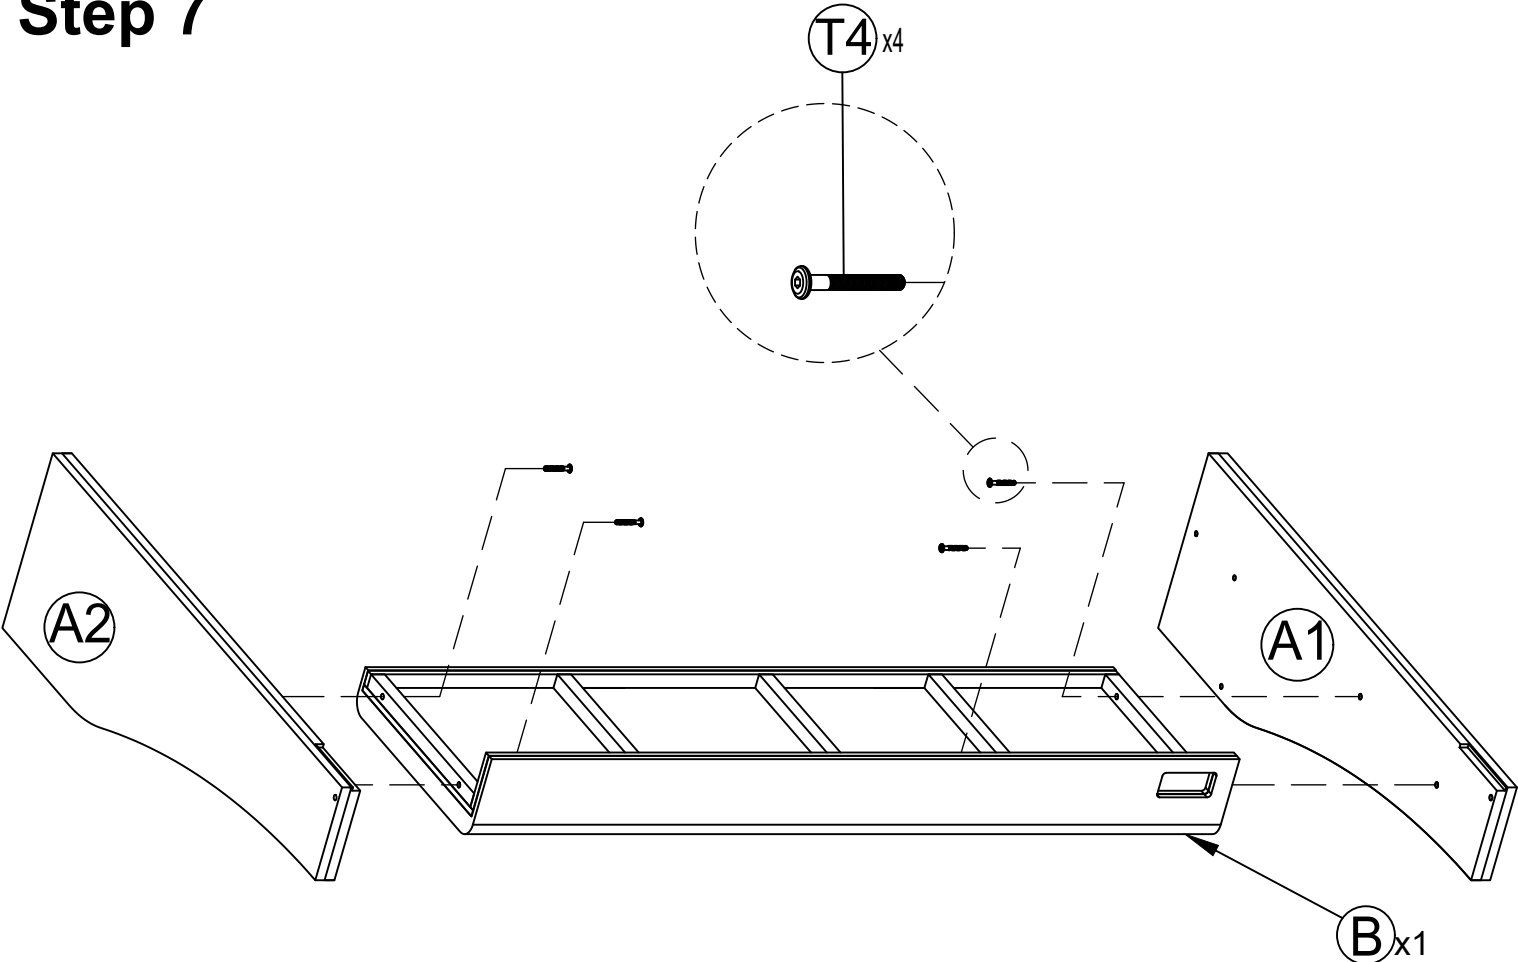

Step 8

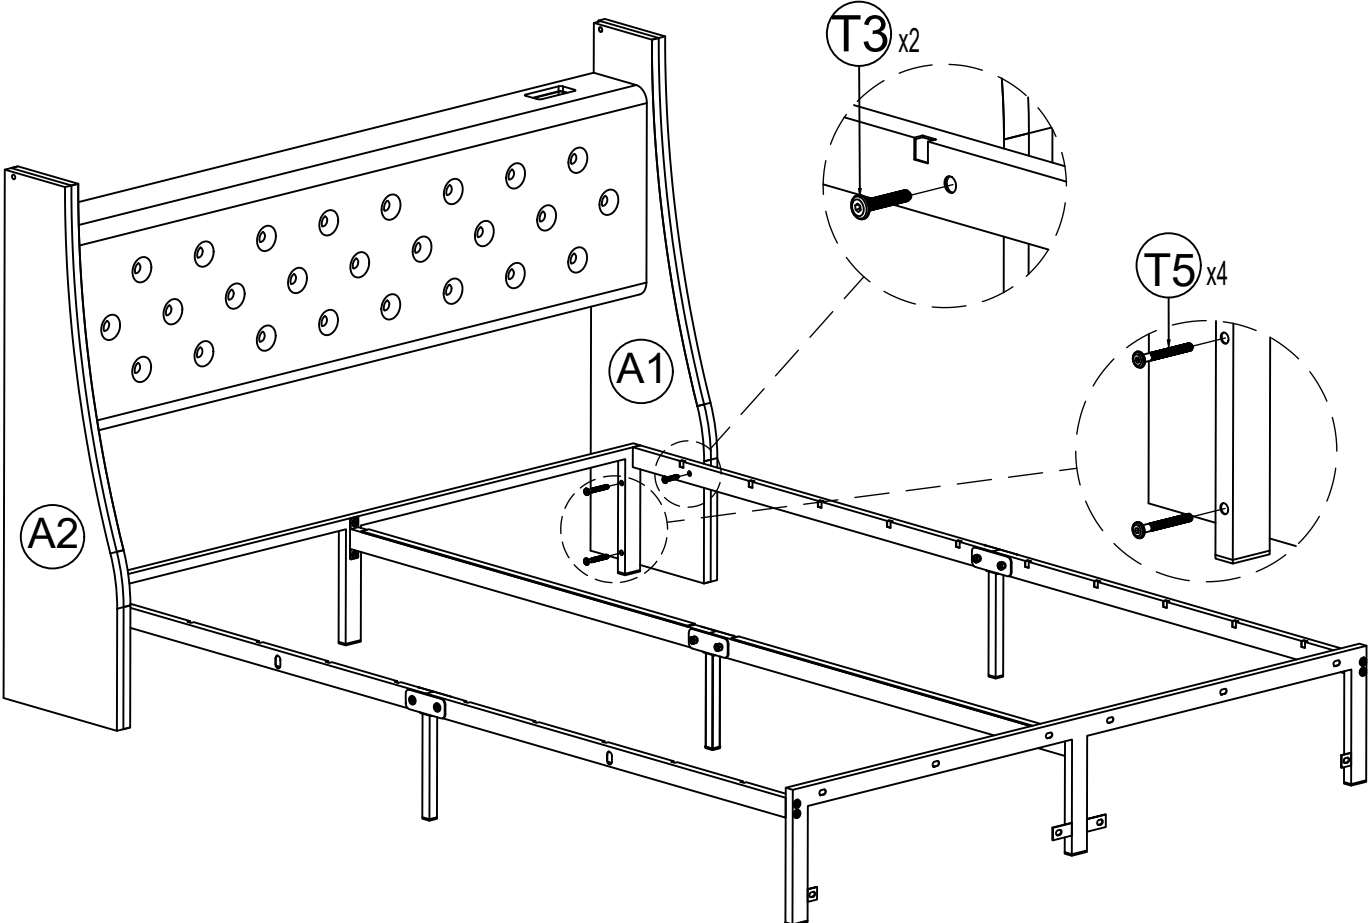


Step 9

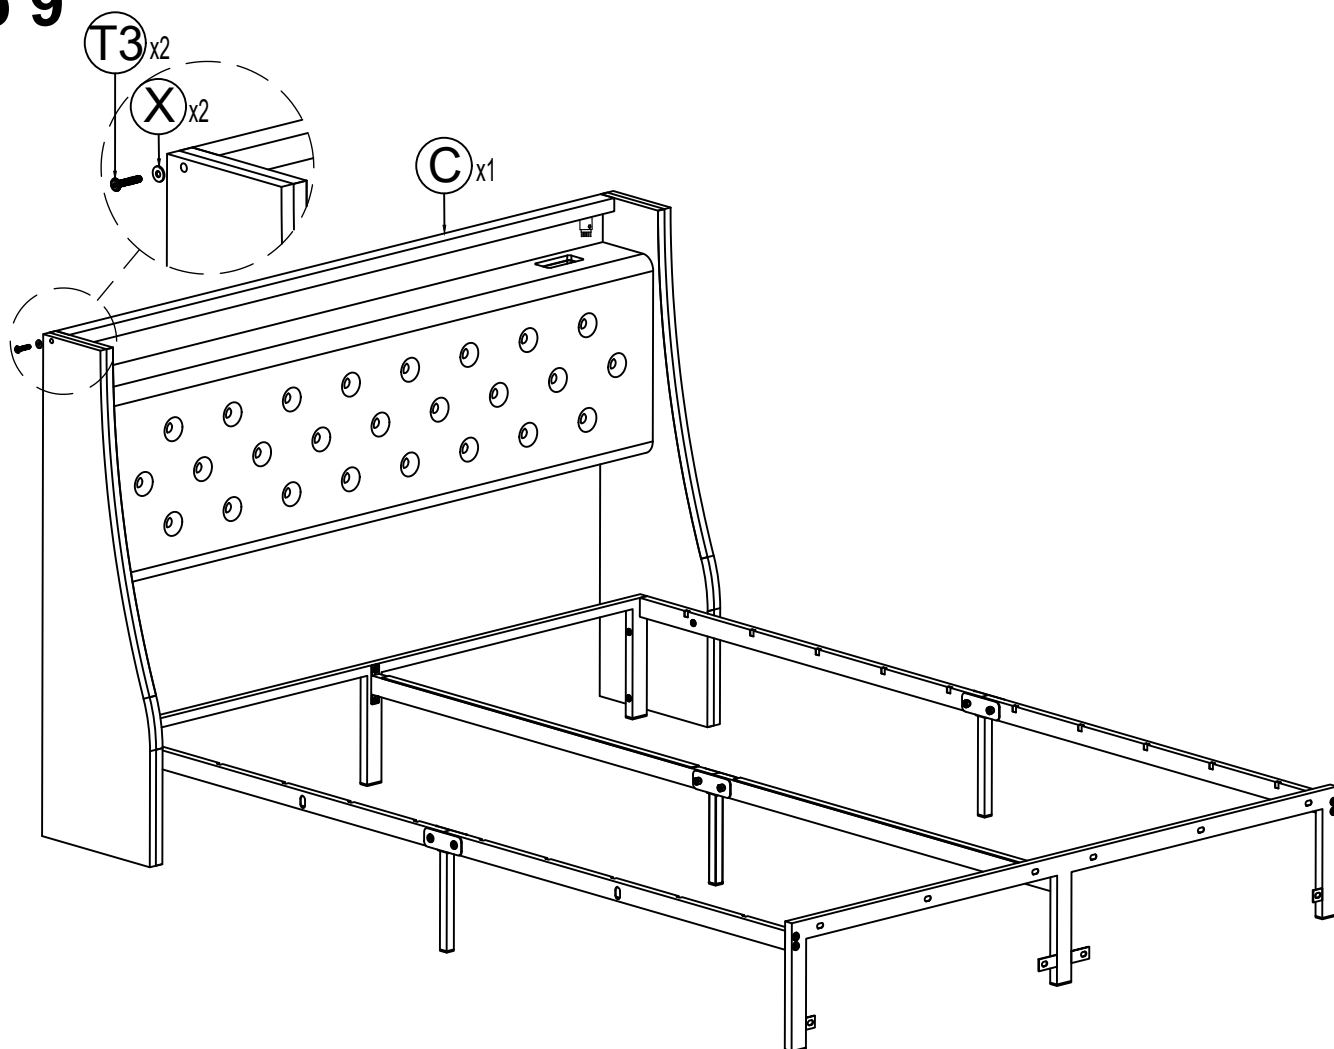


Step 10


We suggest using drill machine to install "V" screws

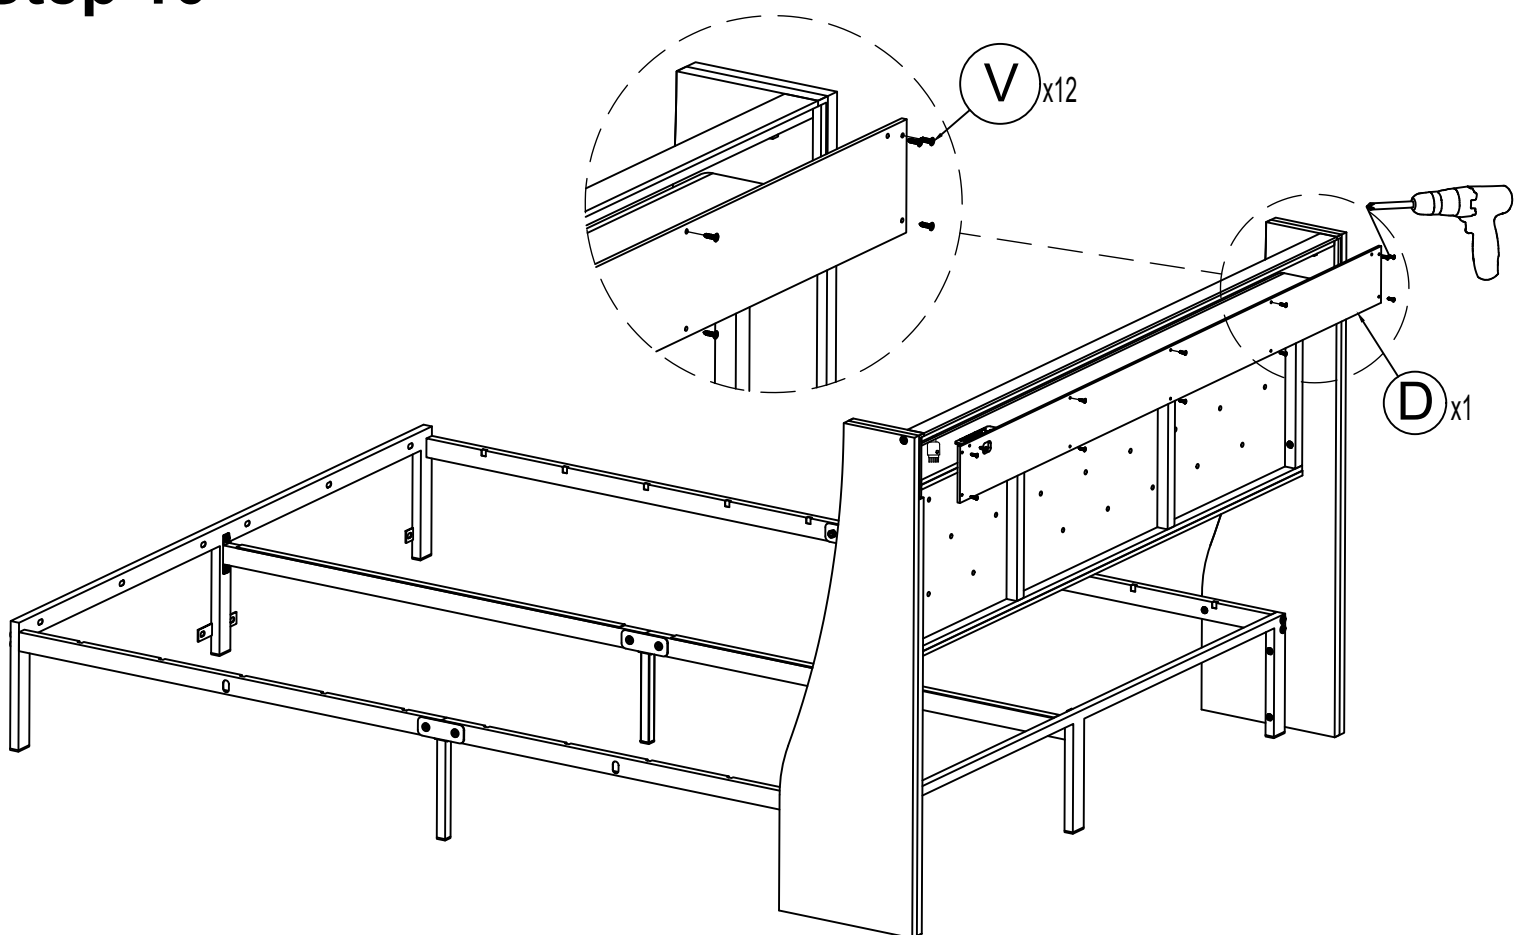

Step 11

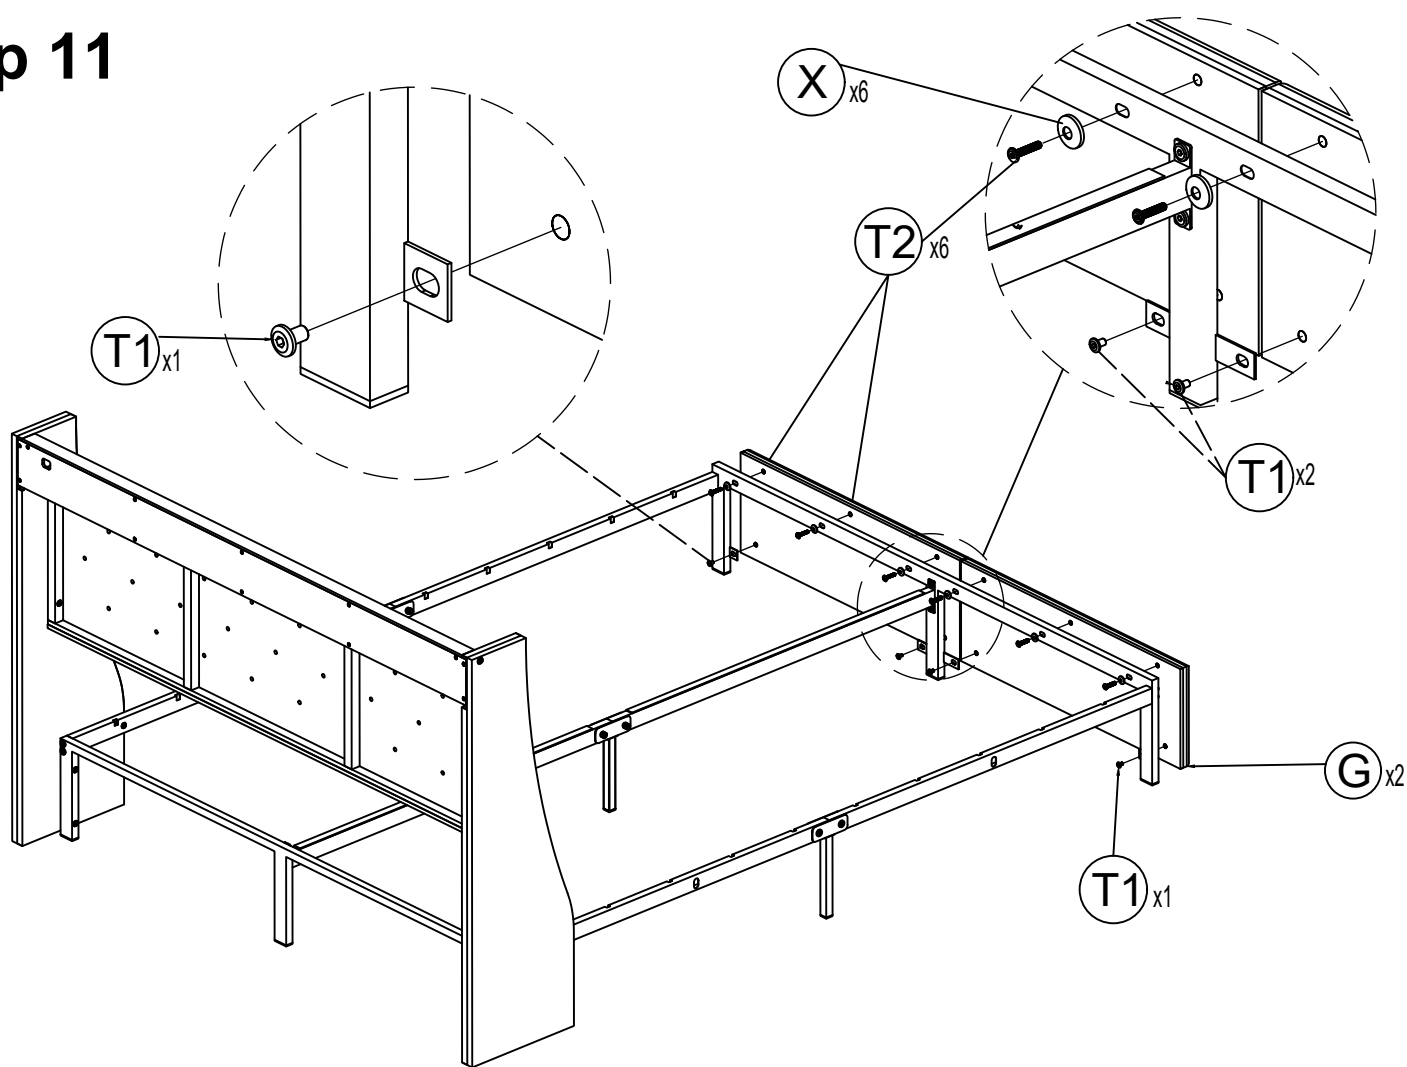


Step 12

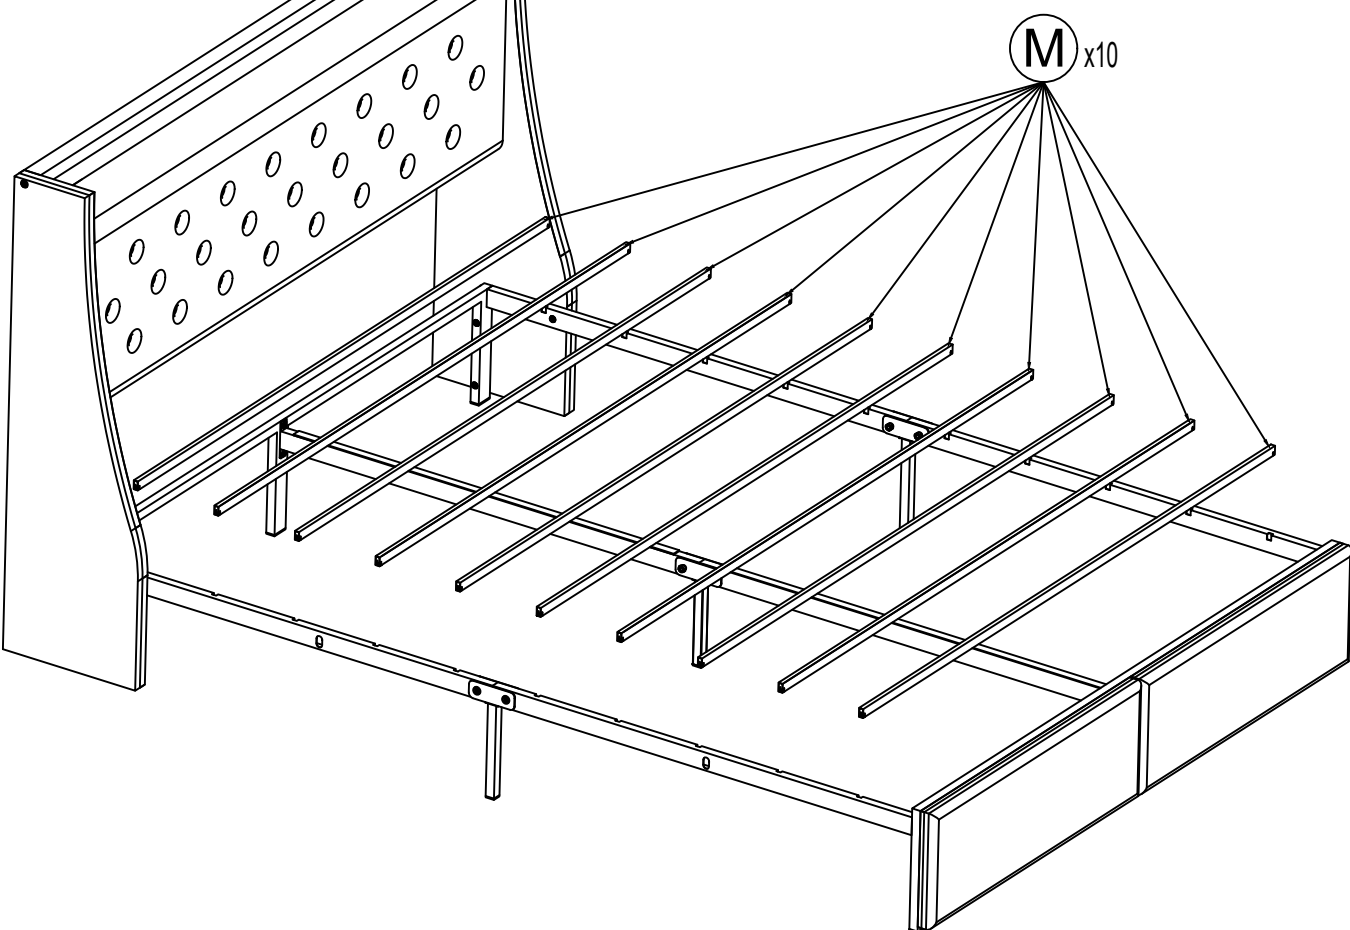


Step 13

We suggest using drill machine to install "V" screws

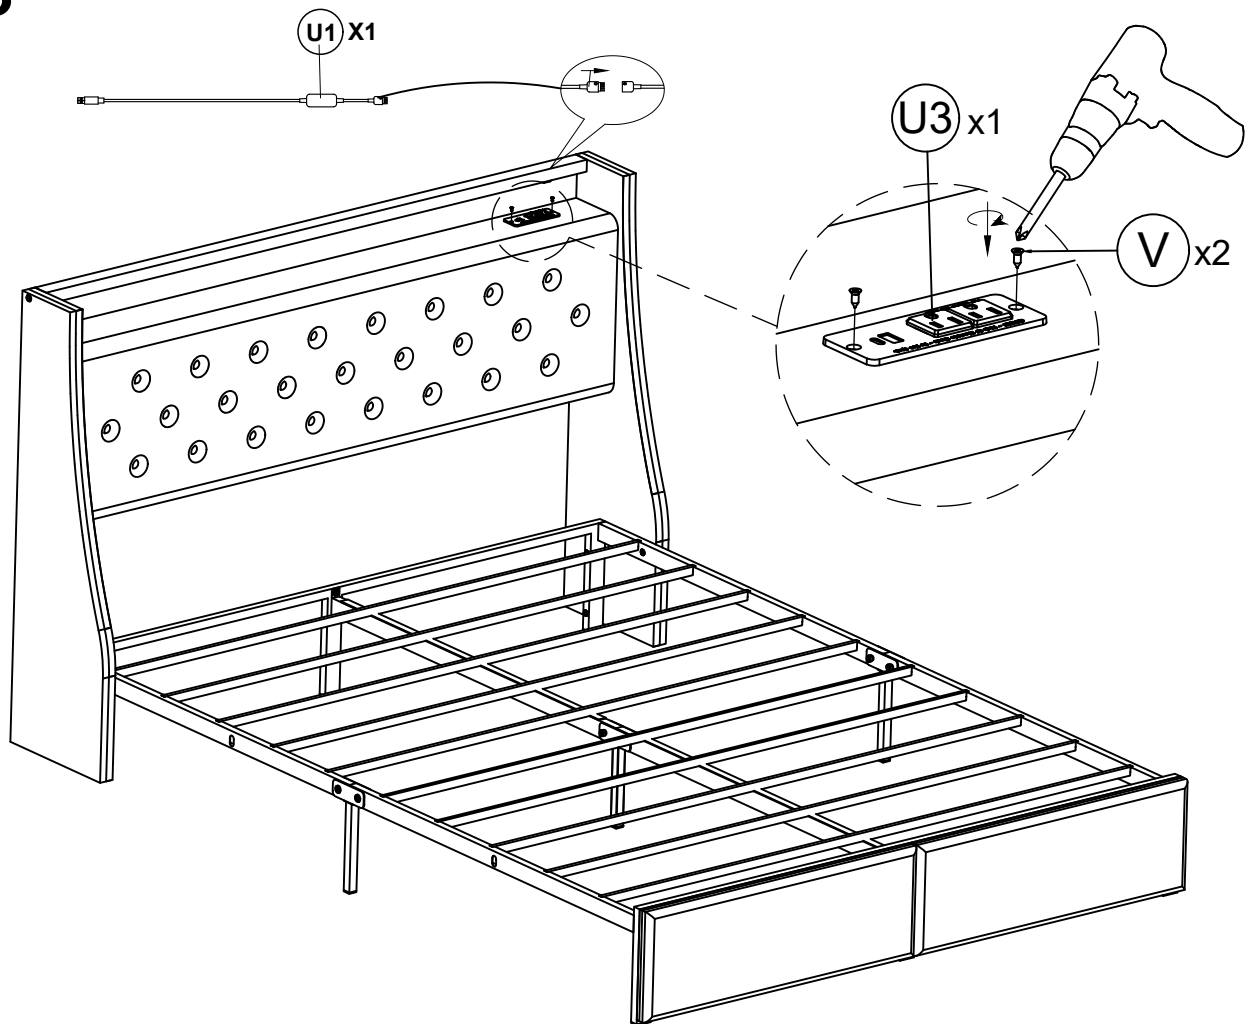


Step 14

Wheel mounting position




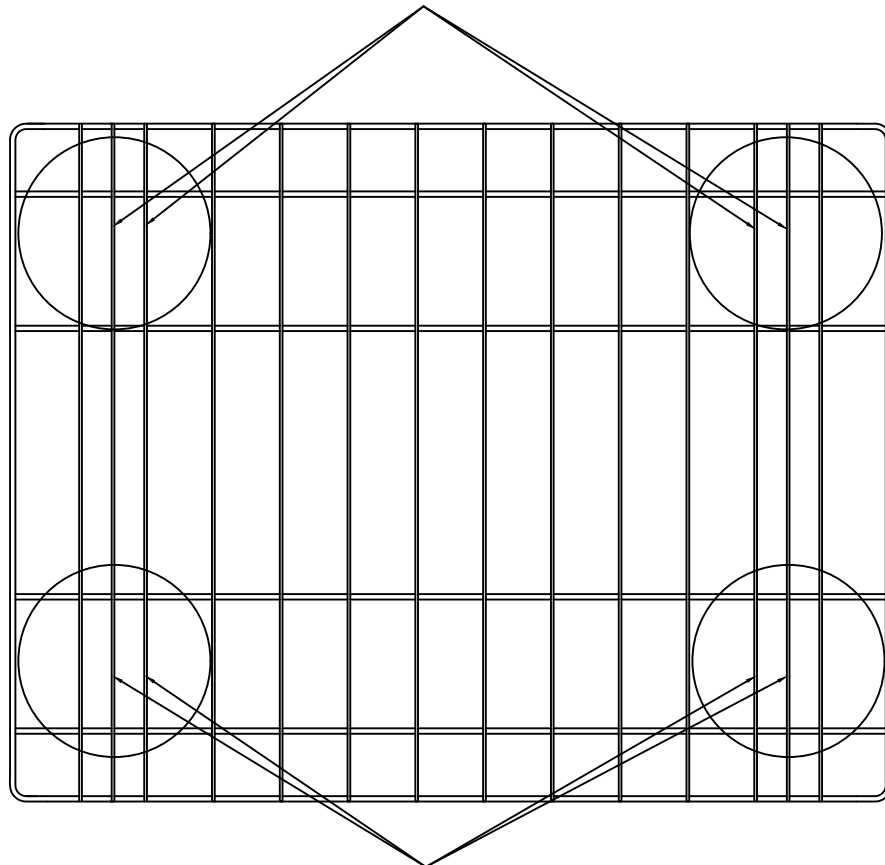


Wheel mounting position

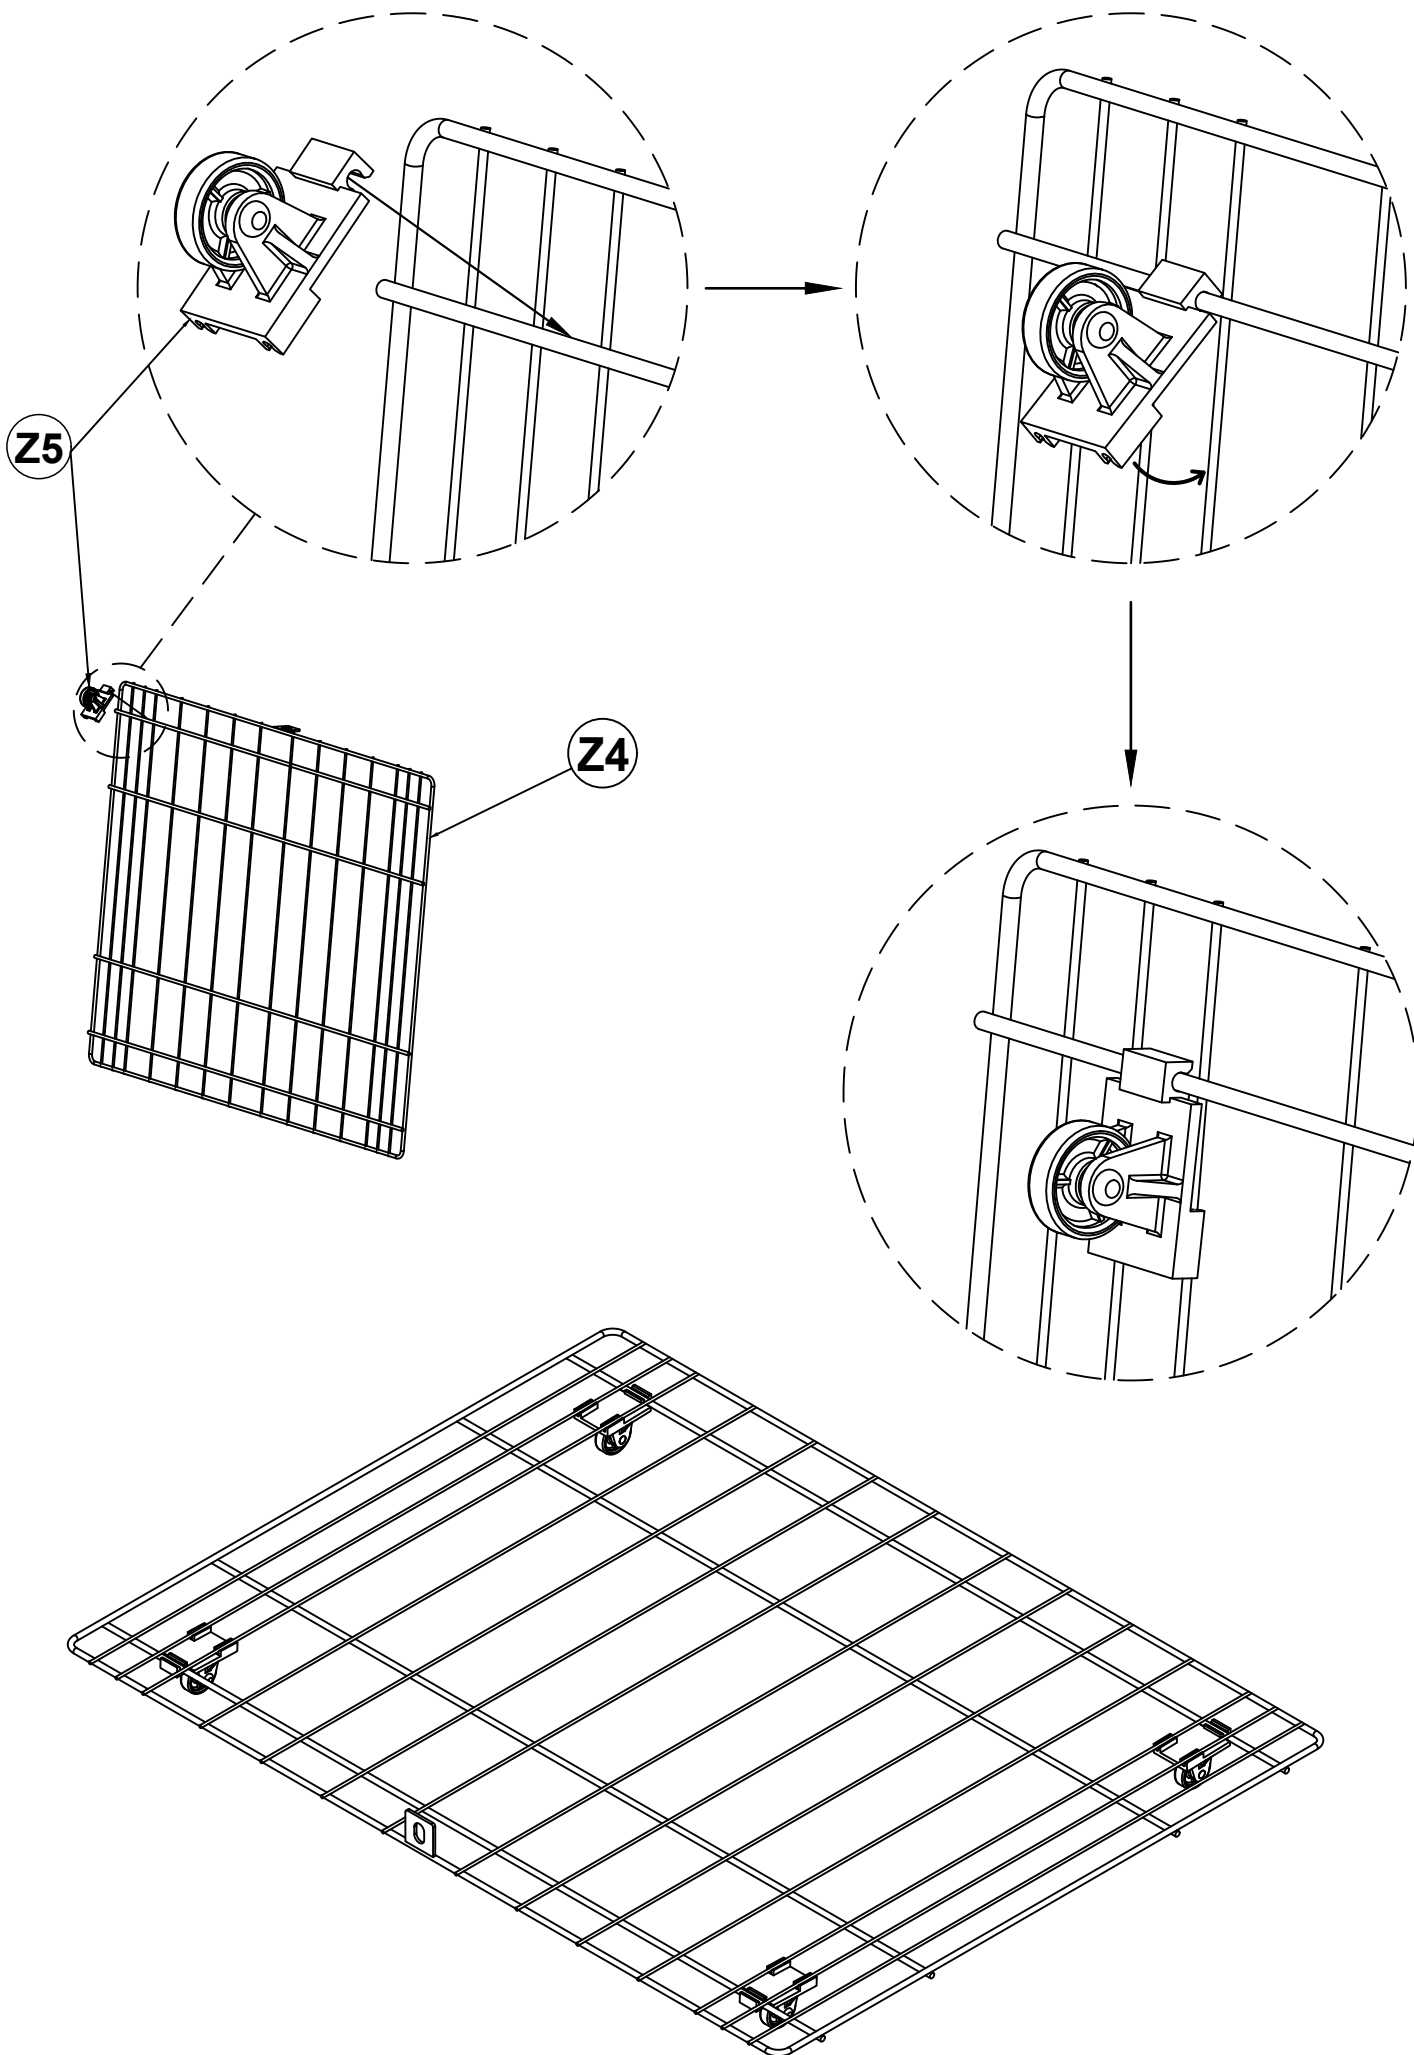


Detailed assembly instructions Q1


these two
lines on Q1.1
and Q1.2 need
to be matched

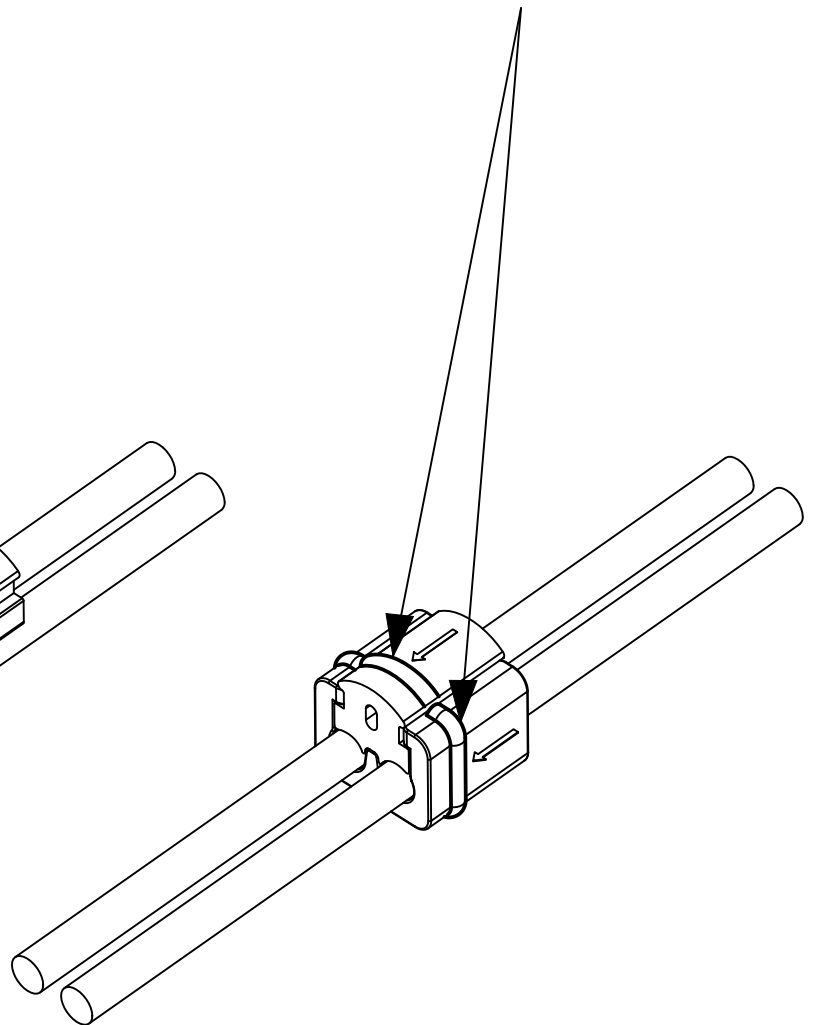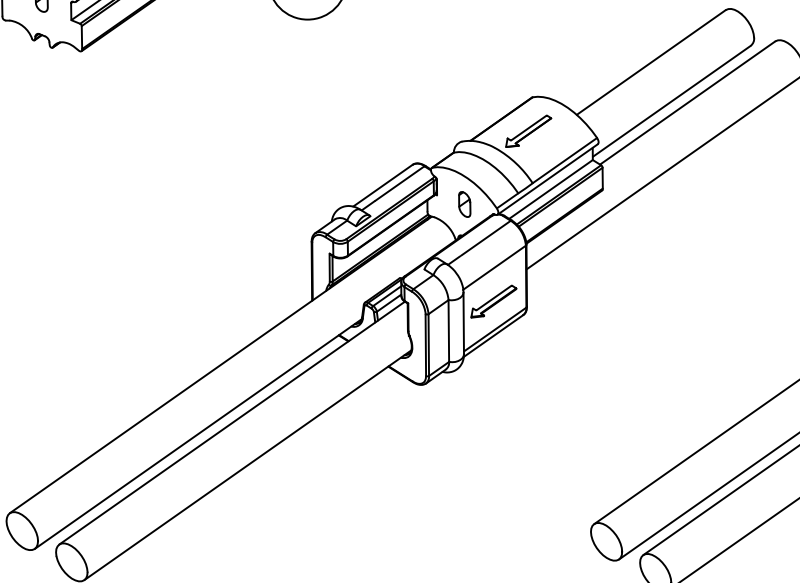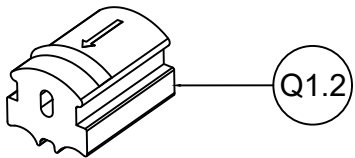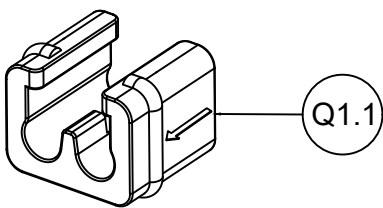


Step 15

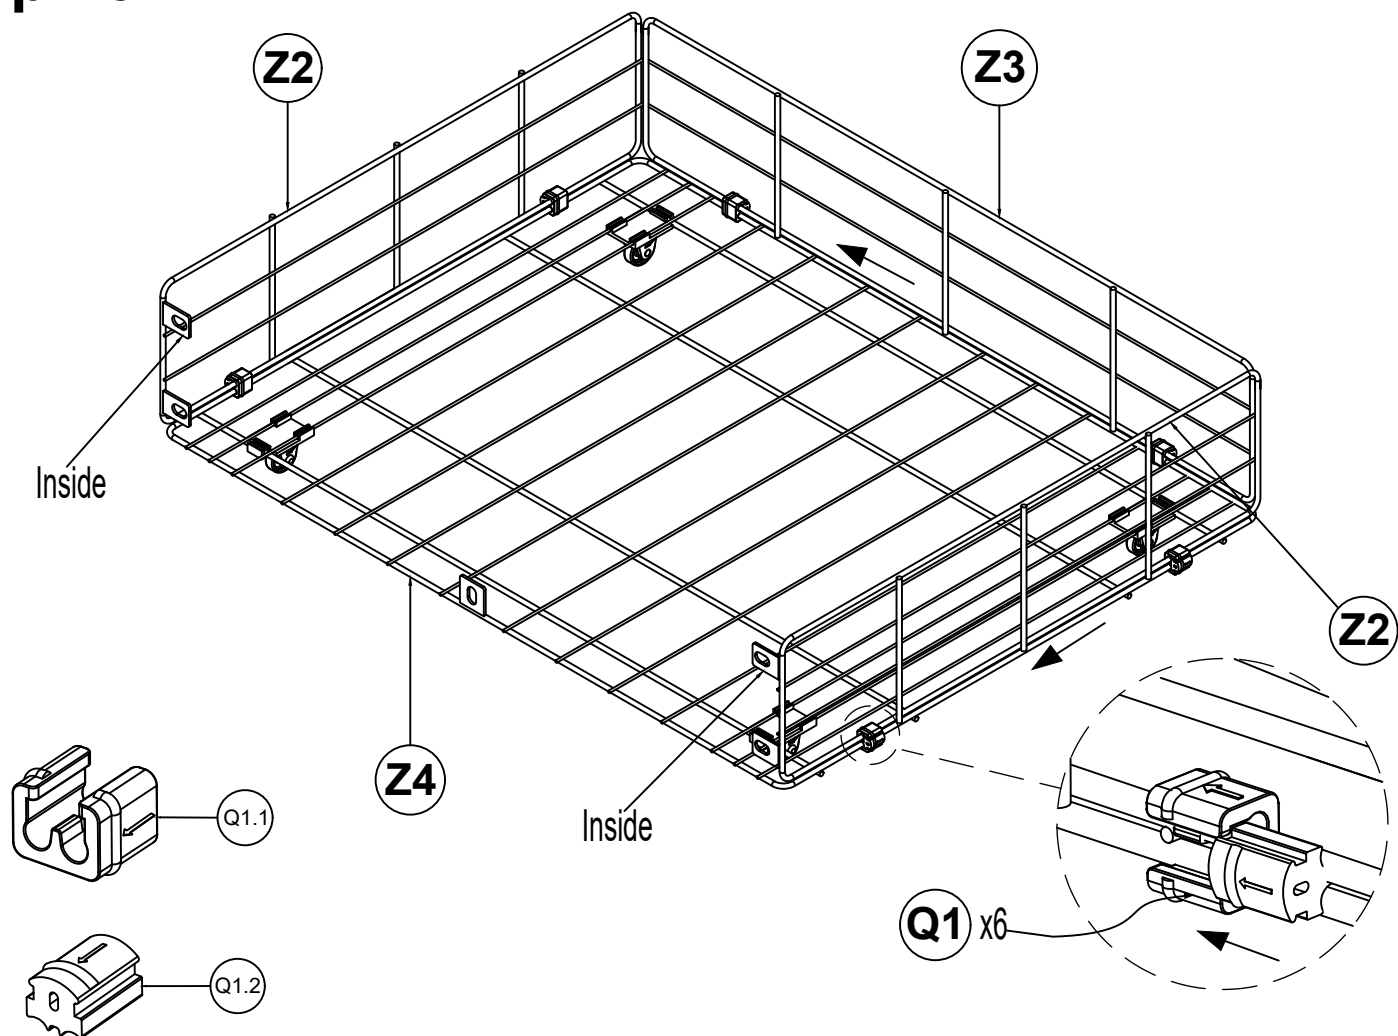

Step 16

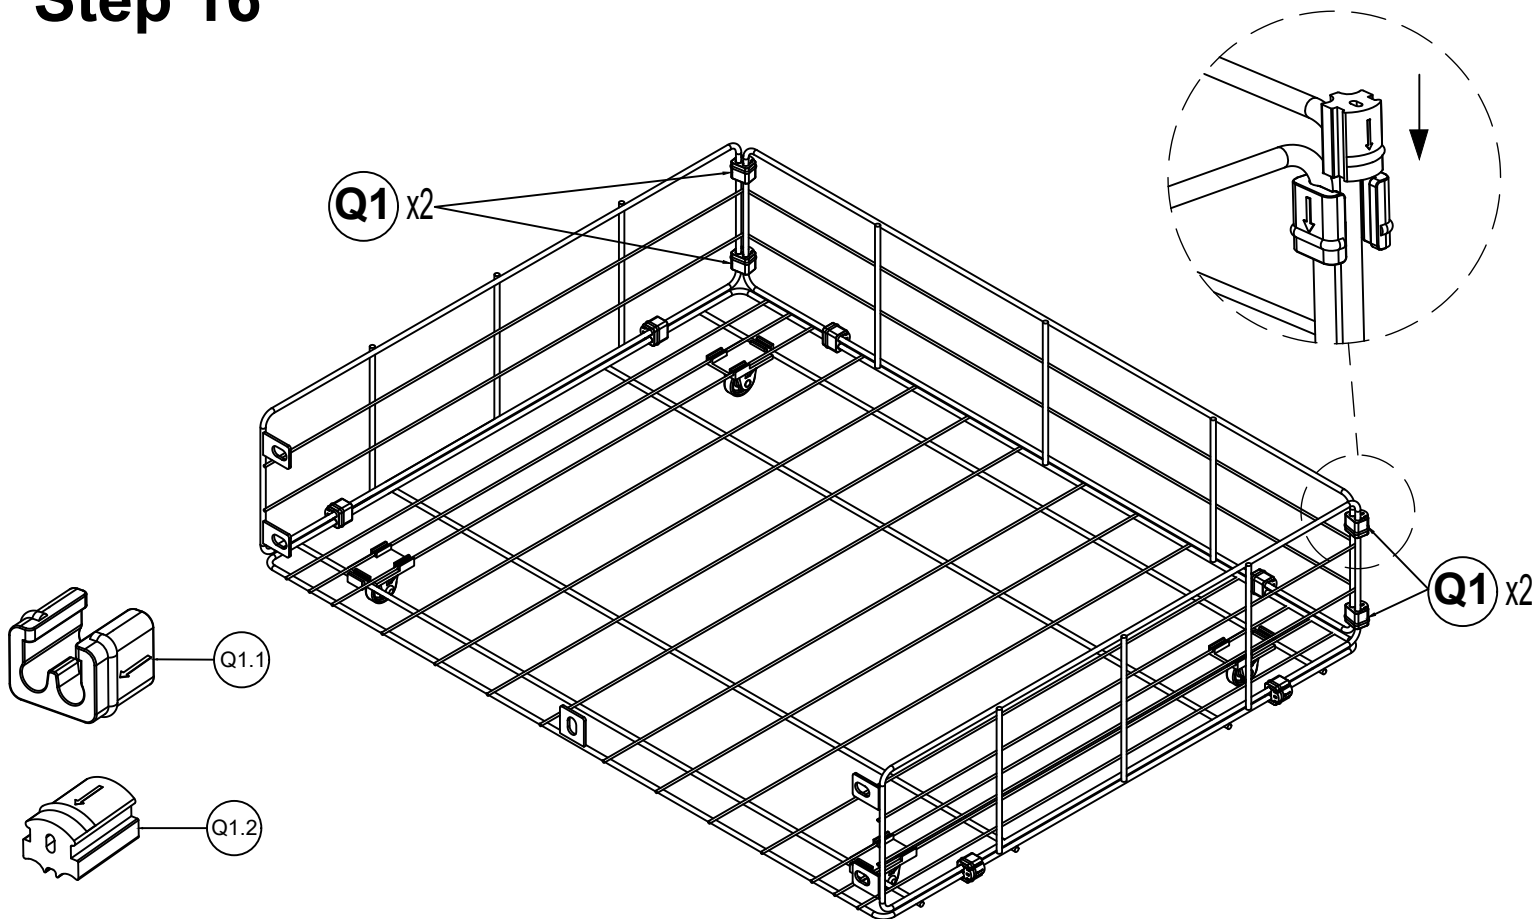


Step 17

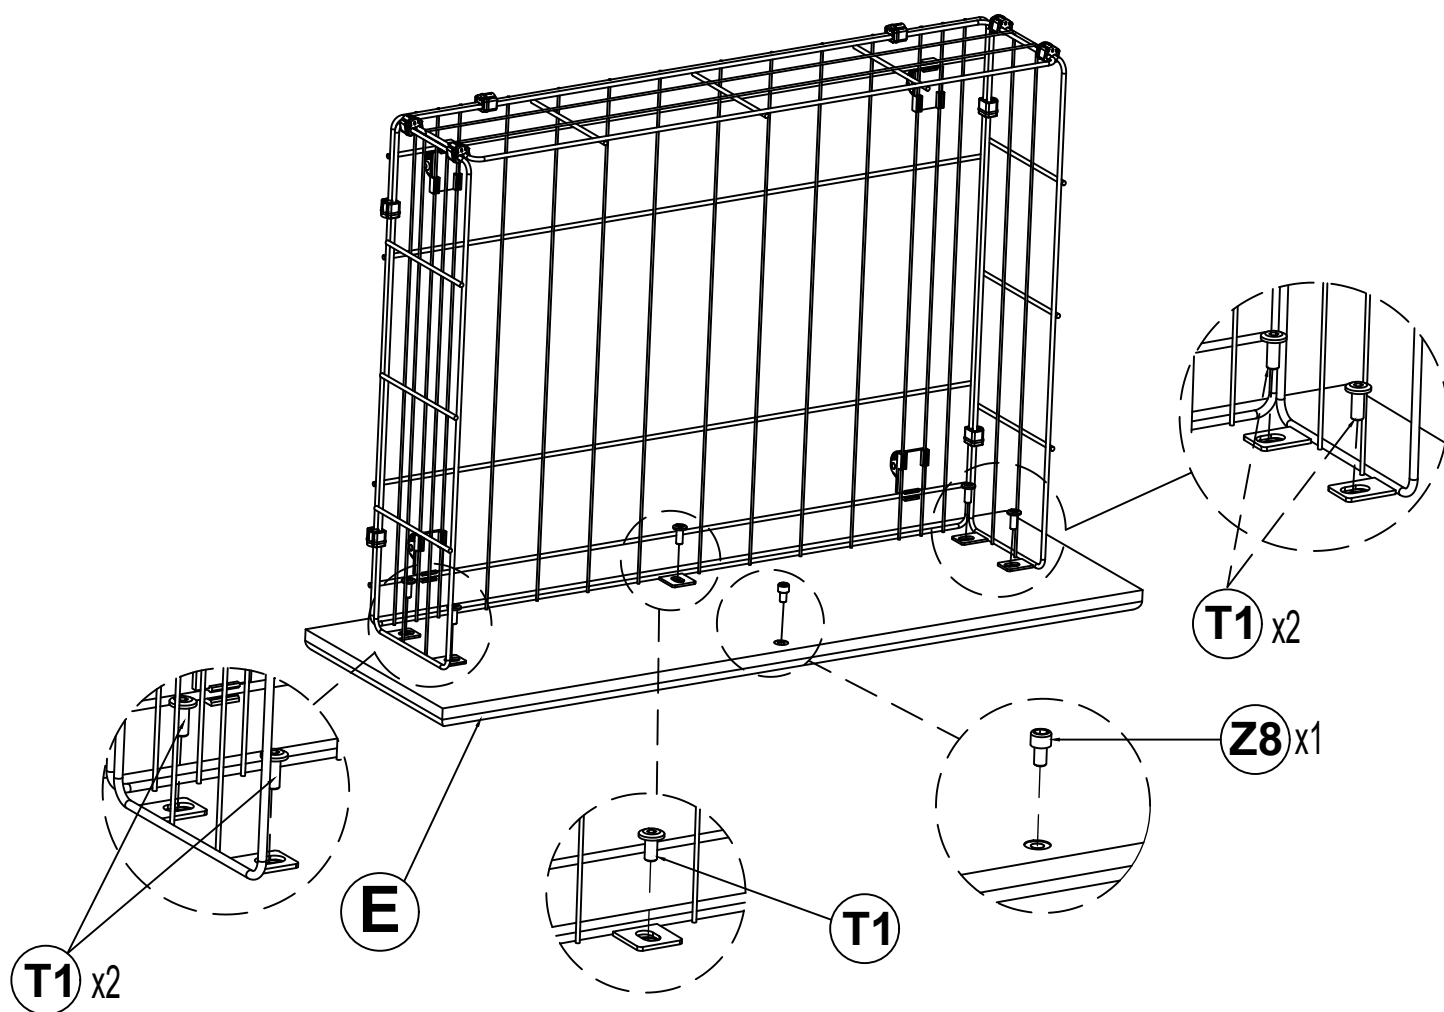

2pcs

E

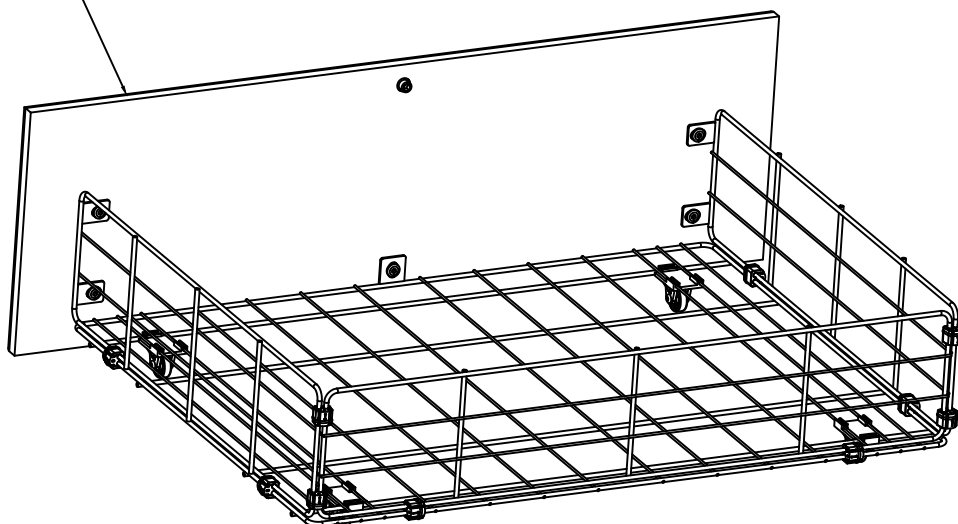

Step 18

