
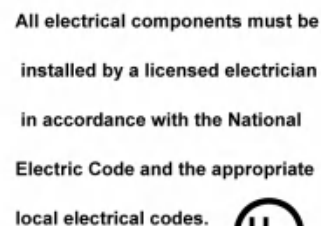
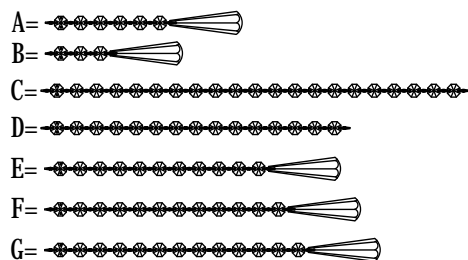


CRYSTORAMA

ASSEMBLY INSTRUCTION MODEL #ARC-1902-GA-CL-MWP

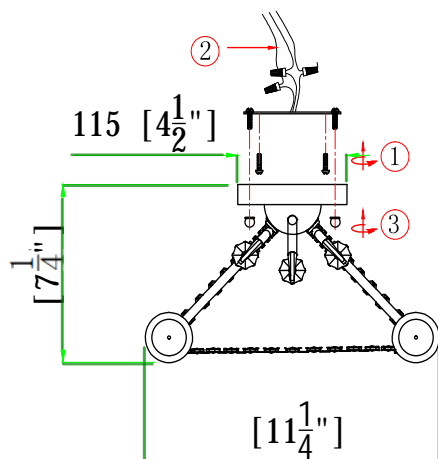

How to Install

1. Do a complete inventory of all parts and components before you start installing.
2. Fasten mounting plate to outlet box with the screws supplied.
Place fixture against mounting surface allowing the machine screws to pass through the backplate, then screw with ball nut.
3. After safely attaching fixture into outlet box ,install bulbs and proceed to connecting the power.
4. When you begin to dress the fixture, start with package labeled(A).
5. **IMPORTANT:**Apply crystal sets in alphabetical order.

Crystal Sets

- A. 1set 6*14mm+1*76mm drop
- B. 2sets 3*14mm+1*76mm drop
- C. 2sets 21*14mm
- D. 1set 15*14mm
- E. 1set 11*14mm+1*76mm drop
- F. 1set 12*14mm+1*76mm drop
- G. 1set 13*14mm+1*76mm drop



⚠ WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

PART NUMBER MODEL #ARC-1902-GA-CL-MWP

Part Number

Part Numbers

- A. (1)-Mounting Plate
- B. (2)-Ball Nut(XBN1900GABANUT)
- C. (2)-Scroll arm;L21 1/5"
- D. (1)-Backplate;W8.5"H4.5"D0.85"
(XBN1902GABKP8.5IN)
- E. (2)-Candle Sleeve;L2 4/5"
(XBN1902GACDL2.8IN)

