





# Installation Instructions

## Drop in Fireclay Kitchen Sink



### Tools you will need:

				
Safety Goggles	Drill	Silicone Adhesive	Jig Saw	Acetone
				
Phillips Screwdriver	Tape Measure	Pencil	Screwdriver	Level

**NOTE:** Specialized tools may be necessary to install Kraus Fireclay sinks with countertop materials other than wood, marble or granite.


# Top Mount Installation

## 1. Measure & Build Supports

---

- Build supports on inside of cabinet based on sink measurements
- The supports should be flush with the top of the cabinet

NOTE: Due to the typical  $\pm 3\text{mm}$  side wall variance in manufacturing, it is recommended that you design / modify the sink cabinet to match your clients individual sink(s) need.

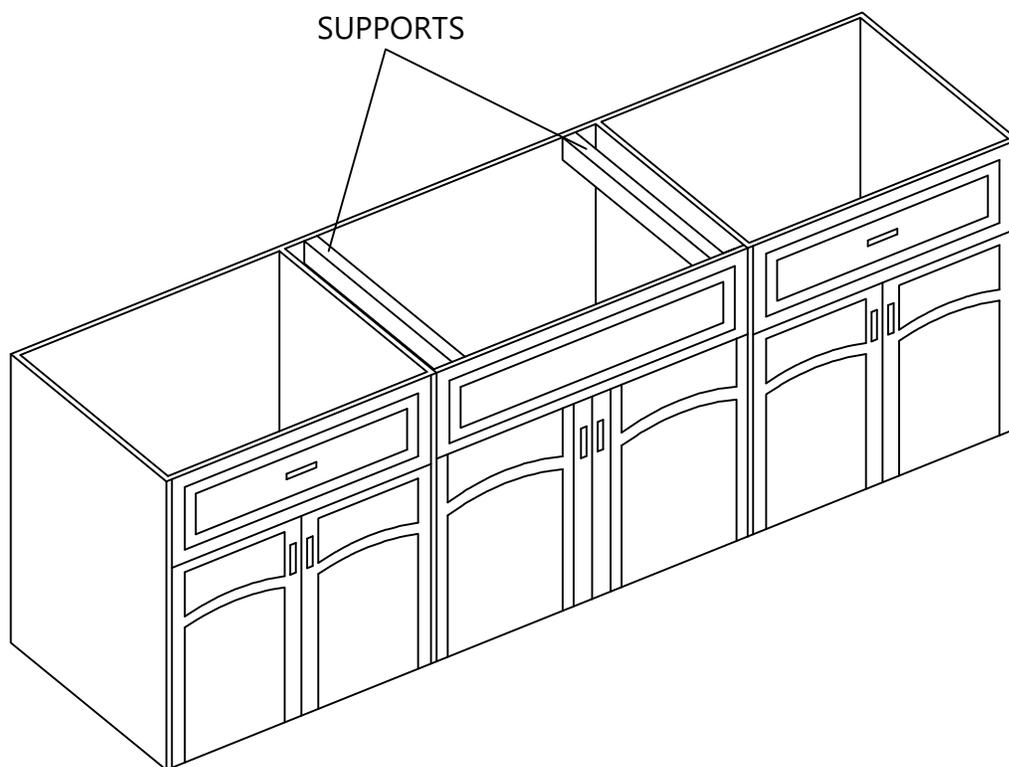


## 2. Position Template

---

- Check the cut-out template against the actual sink to ensure a proper sized cut-out.
- Place the cut-out template in the desired location on the countertop.


**NOTE:** Make sure clearance is suitable for backsplash, faucet and plumbing for the sink.

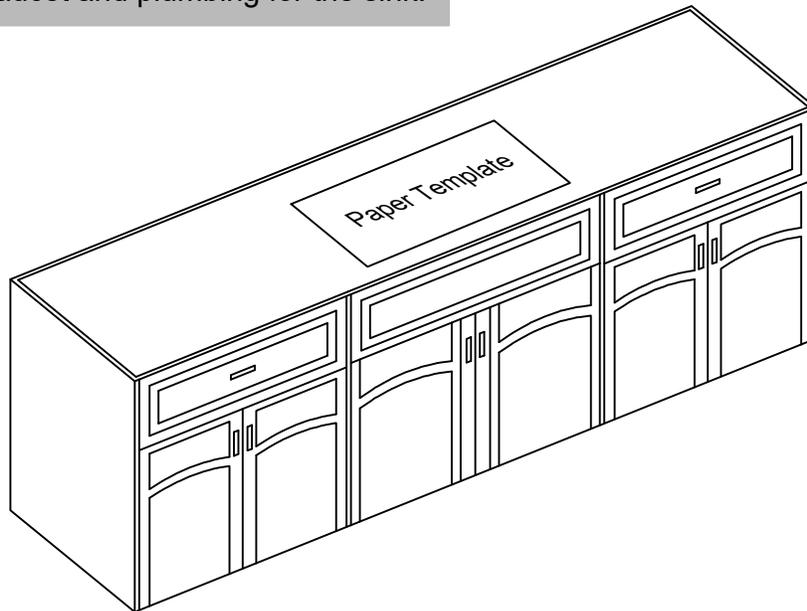

## 3. Trace Template

---

- Trace template on countertop with a pencil.





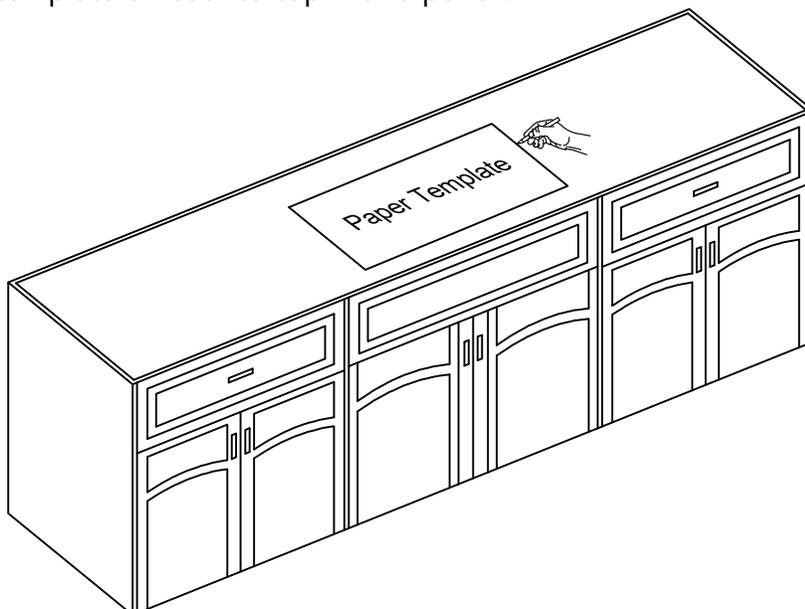


## 4. Cut Countertop

---

- Cut the opening in the countertop by carefully following the traced line.


**NOTE:** Please use the appropriate saw that best fits your countertop material.

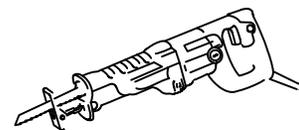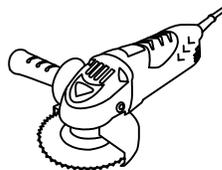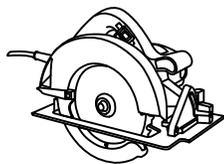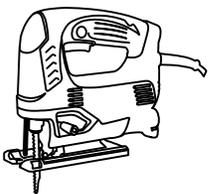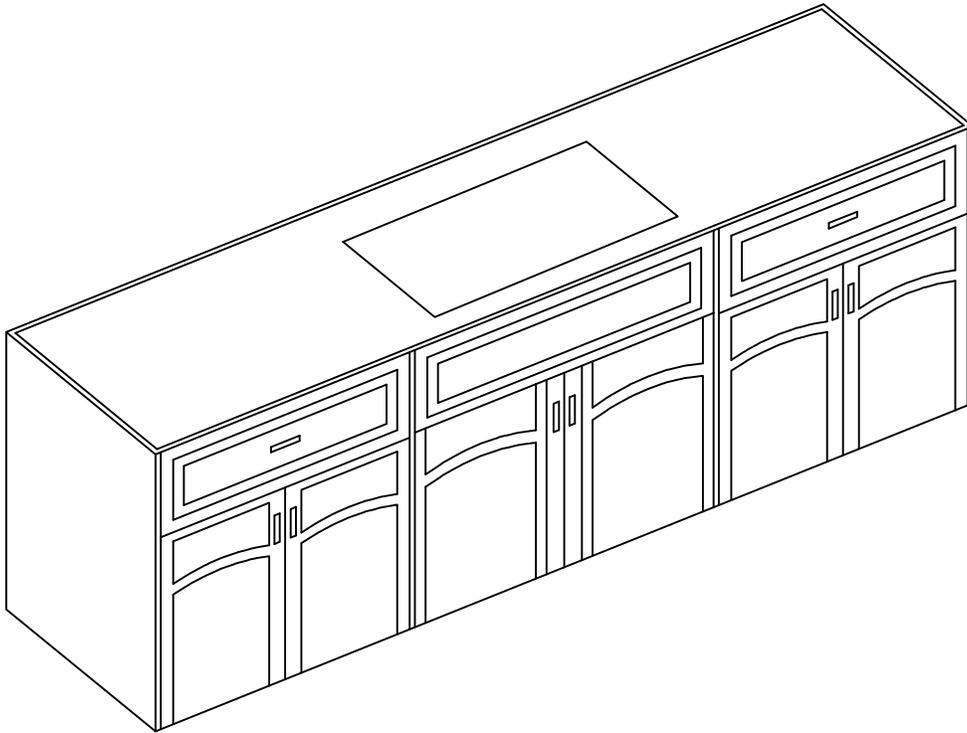

## Step 5. Apply Silicone or Plumber's Putty

---

- Clean and dry the surface around the opening of the sink.
- Turn the unit upside down to apply sealant. Apply silicone-based sealant (not included) underneath the edge of the sink.

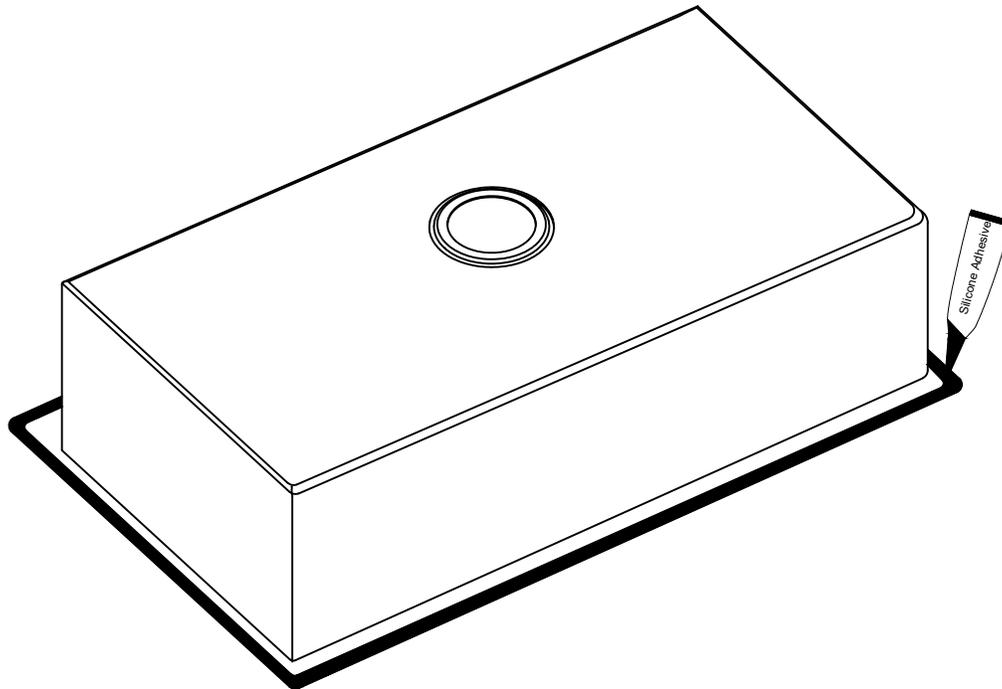

## Step 6. Secure Sink to Countertop

---

- Insert the sink into the opening, check the alignment of the sink to the cutout in the countertop and press firmly.
- Remove excess silicone-based sealant.
- Allow sealant to set for 30-60 minutes.

