


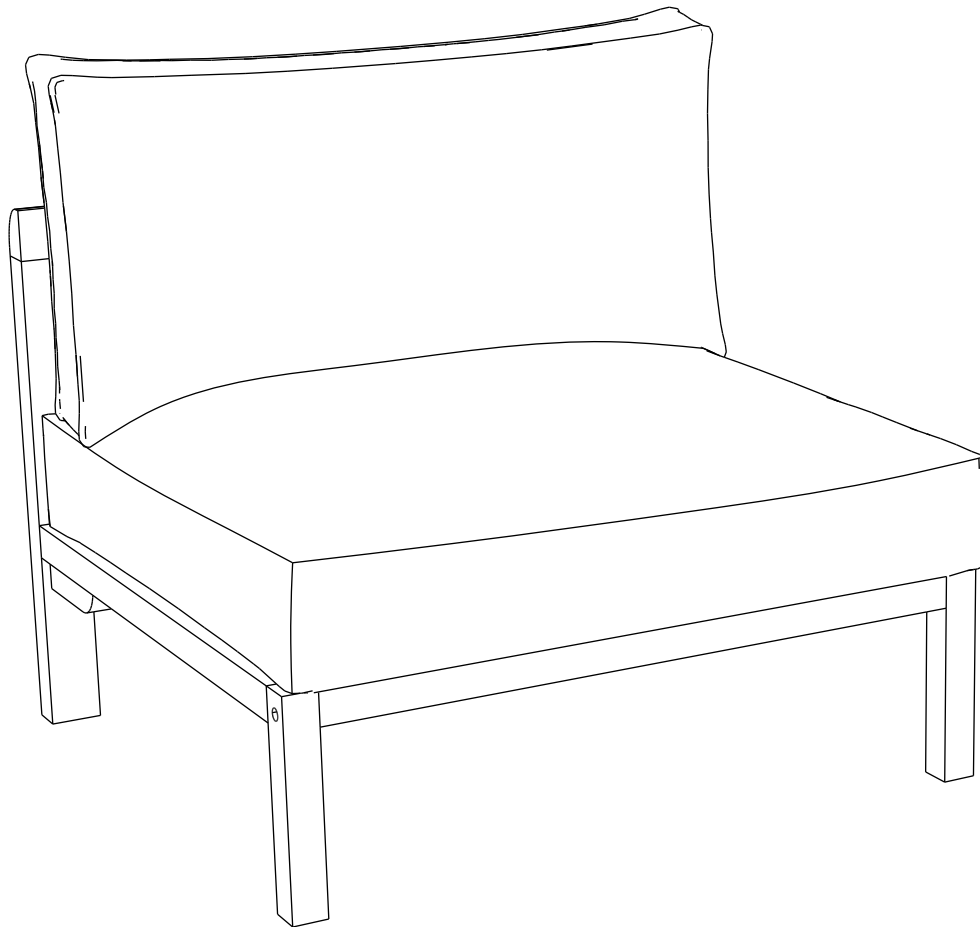

ASSEMBLY INSTRUCTIONS

Armless Chair

EEl-7639 / V0.02.25.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		JCBC Bolt M6 x 50mm	x6
B		JCBC Bolt M6 x 40mm	x4
C		Allen Key	x1
D		Wooden Plug	x2
E		Sectional Strap	x2


FURNITURE COMPONENTS:

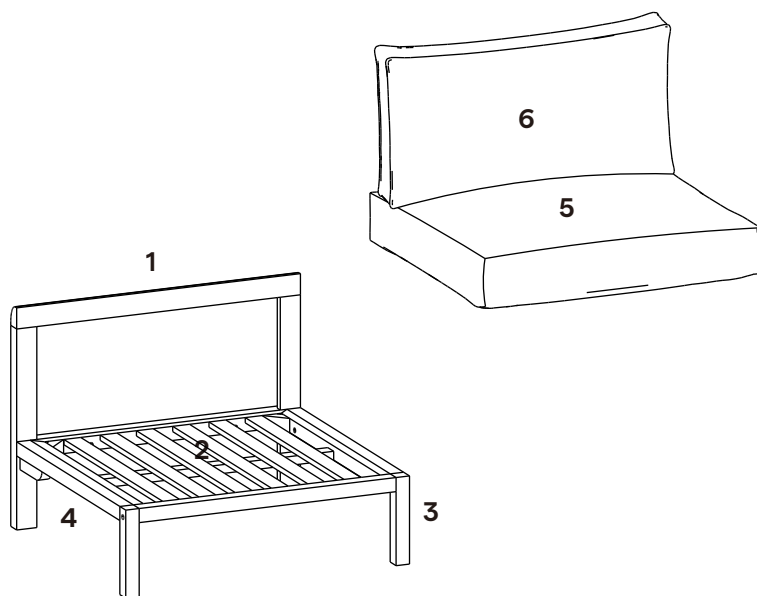

1	Back Frame	x1
2	Seat Base	x1
3	Right Frame	x1
4	Left Frame	x1
5	Seat Cushion	x1
6	Back Cushion	x1

COMPONENTS

- | | | |
|----------|-------------|----|
| 2 | Seat Base | x1 |
| 3 | Right Frame | x1 |

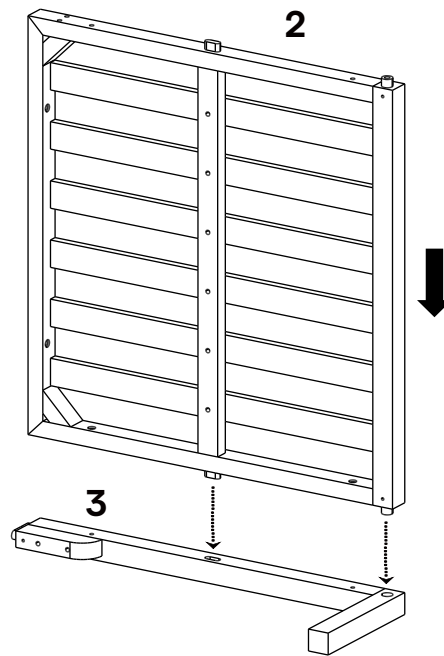


STEP 02

HARDWARE

- | | | |
|----------|---------------------|----|
| A | JCBC Bolt M6 x 50mm | x2 |
|----------|---------------------|----|


TOOLS

- | | | |
|----------|-----------|----|
| C | Allen Key | x1 |
|----------|-----------|----|

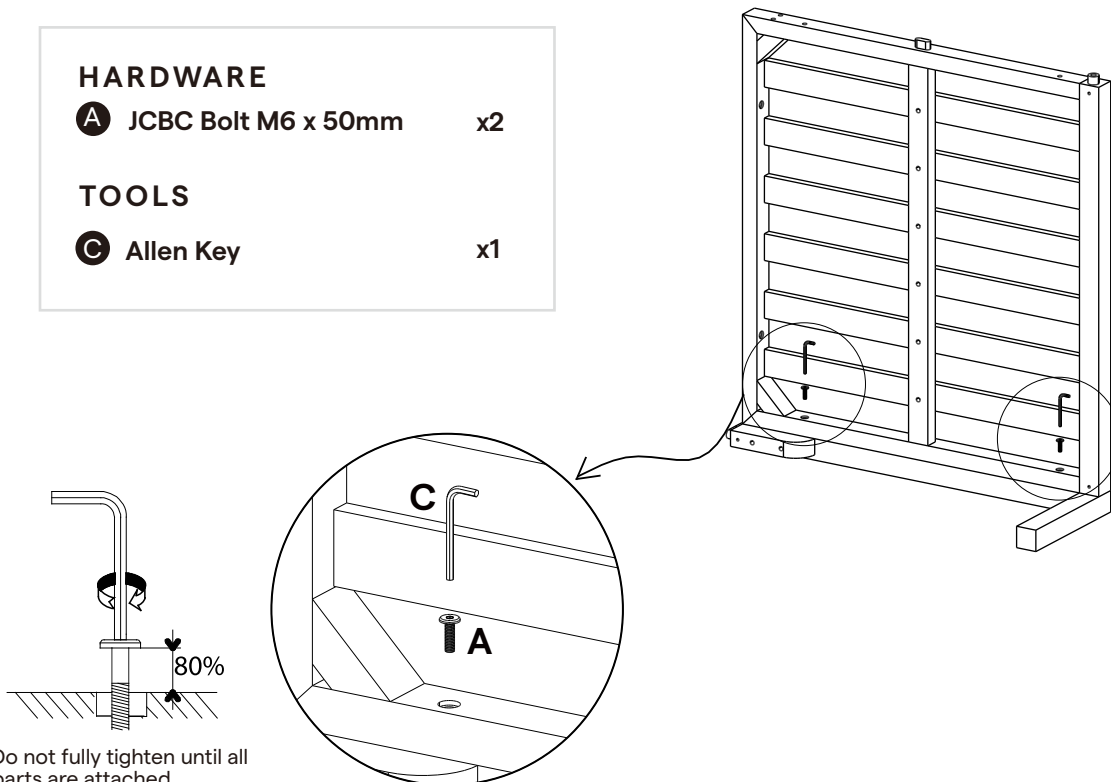

COMPONENTS

4 Left Frame x1

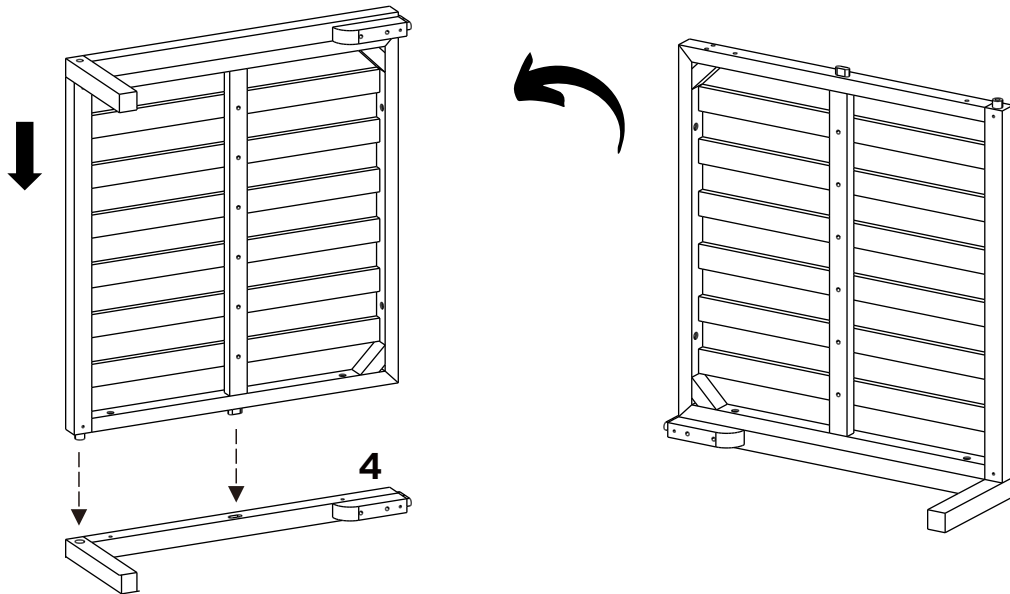


STEP 04

HARDWARE

A JCBC Bolt M6 x 50mm x2


TOOLS

C Allen Key x1

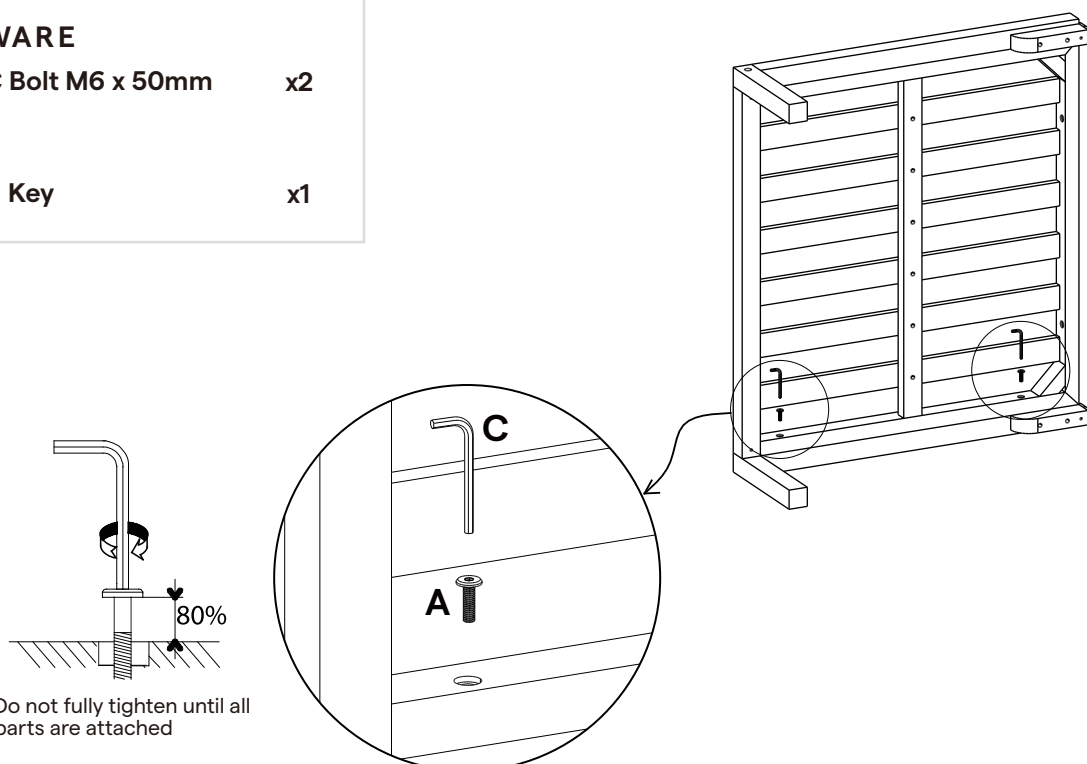

COMPONENTS

1 Back Frame x1

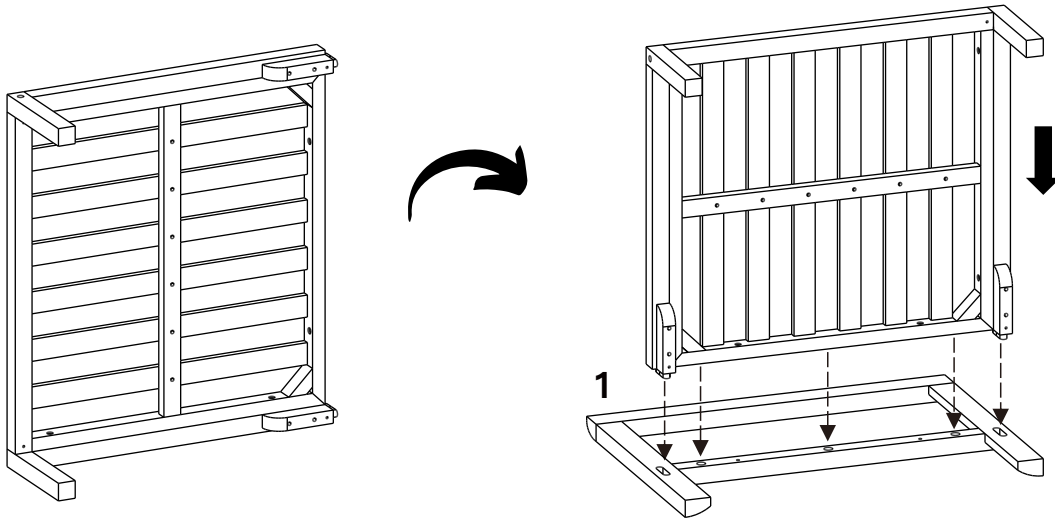


STEP 06


HARDWARE

A JCBC Bolt M6 x 50mm x2


TOOLS

C Allen Key x1

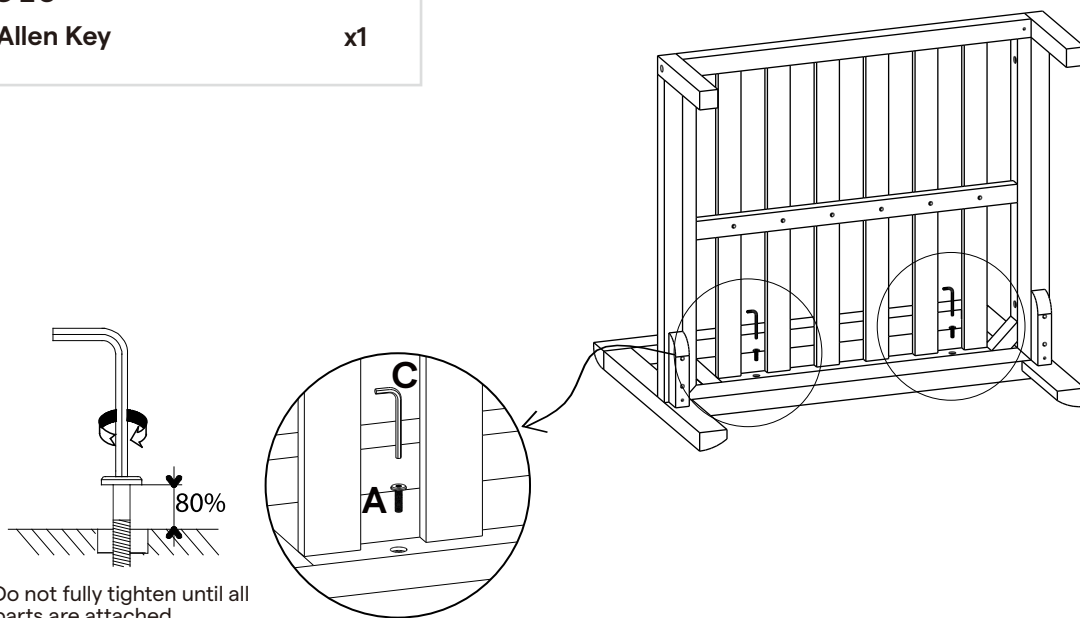

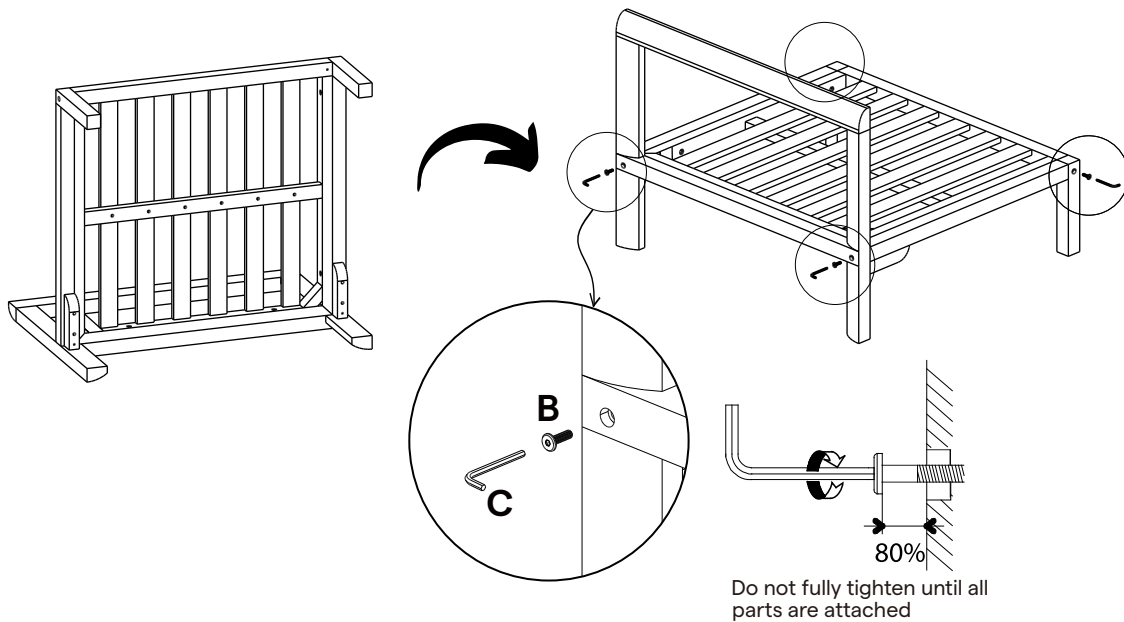
HARDWARE**B** JCBC Bolt M6 x 40mm x4**TOOLS****C** Allen Key x1

STEP 08

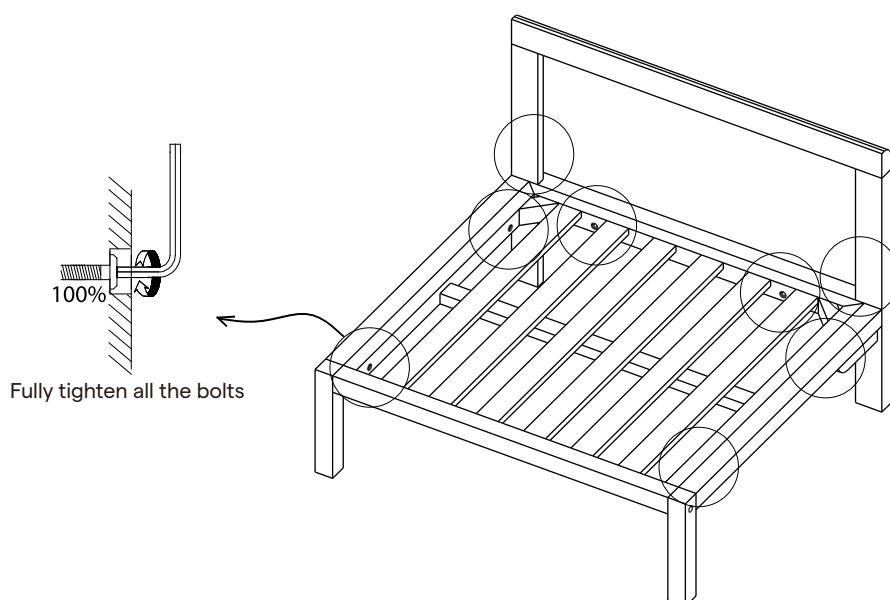

HARDWARE


- D** Wooden Plug x2

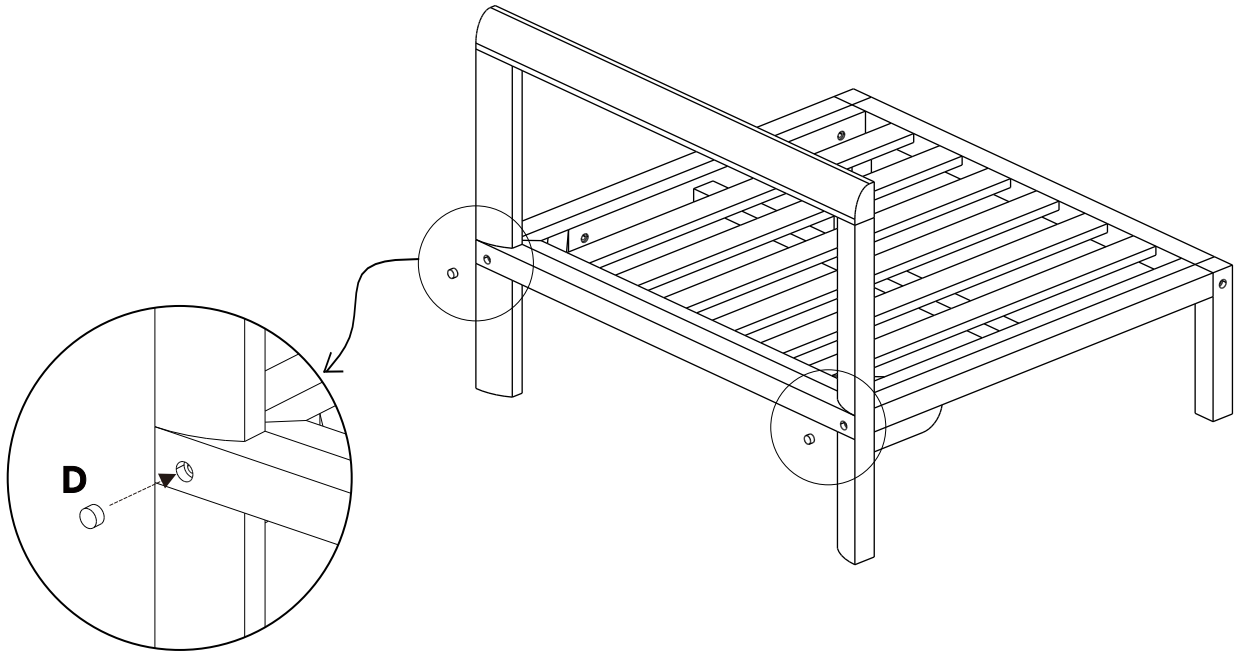


STEP 10





COMPONENTS


- 5** Seat Cushion x1
6 Back Cushion x1

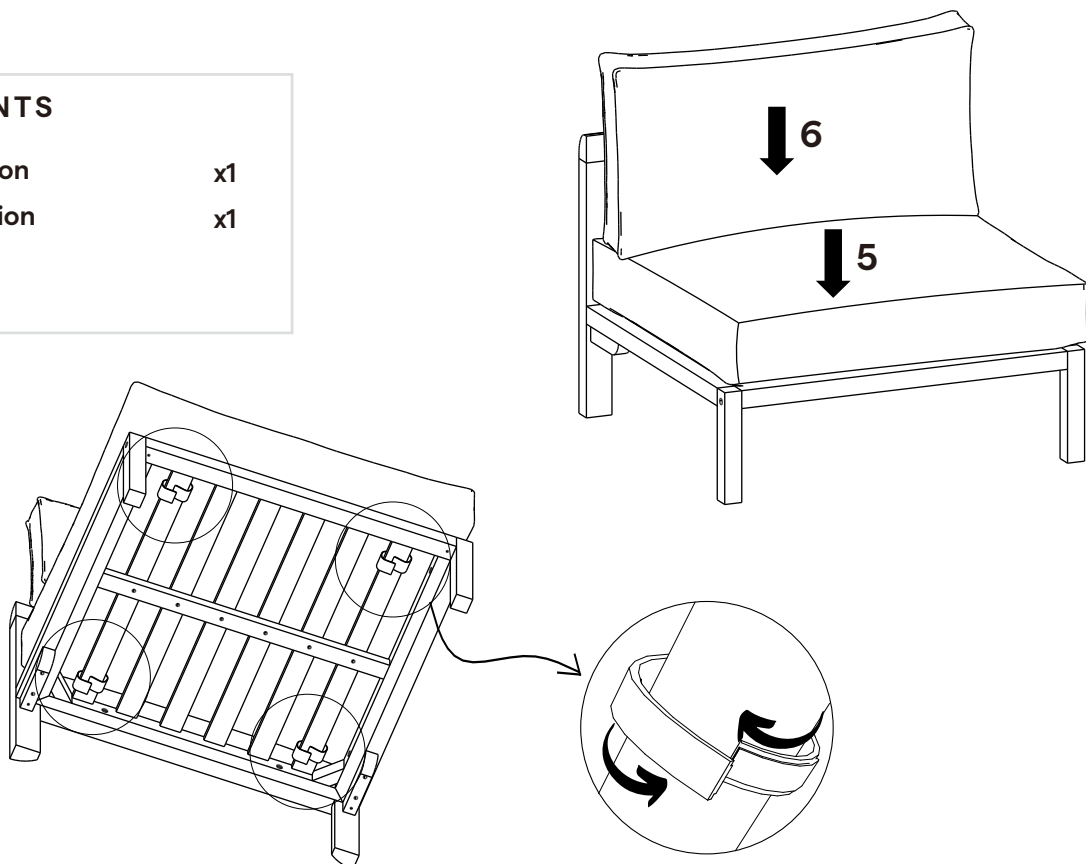


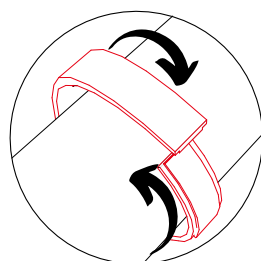


Each module is attached using 2 velcro bands each side

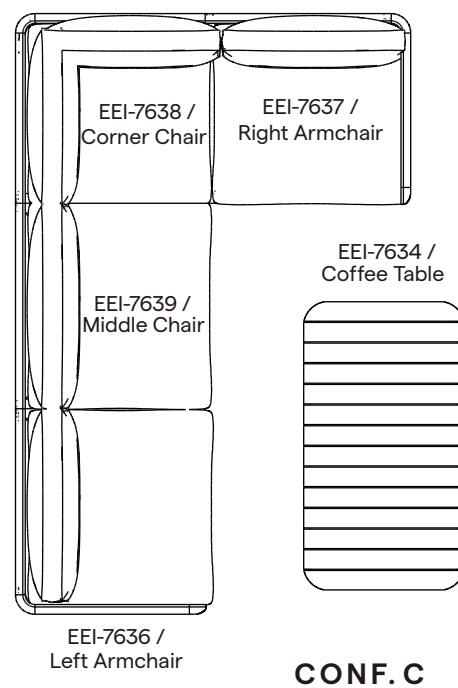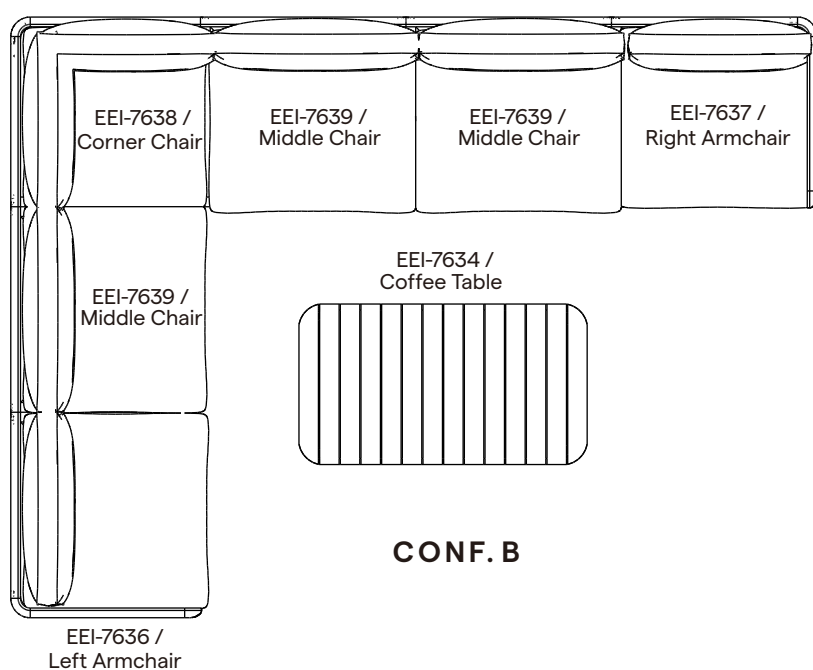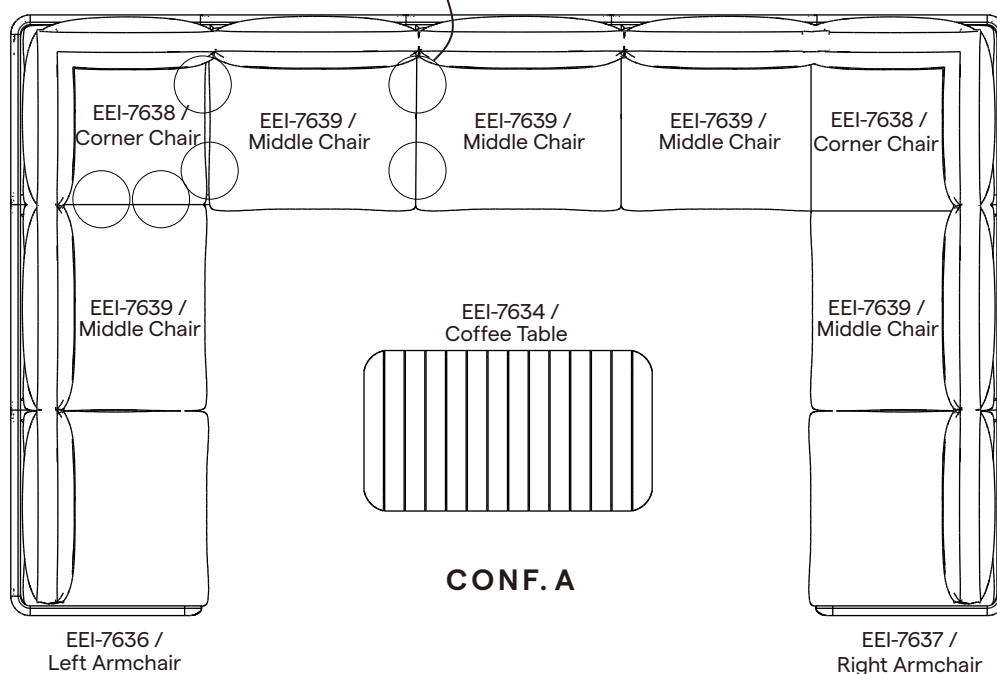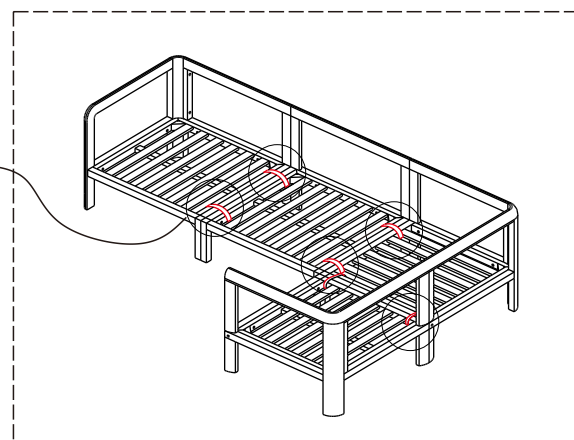


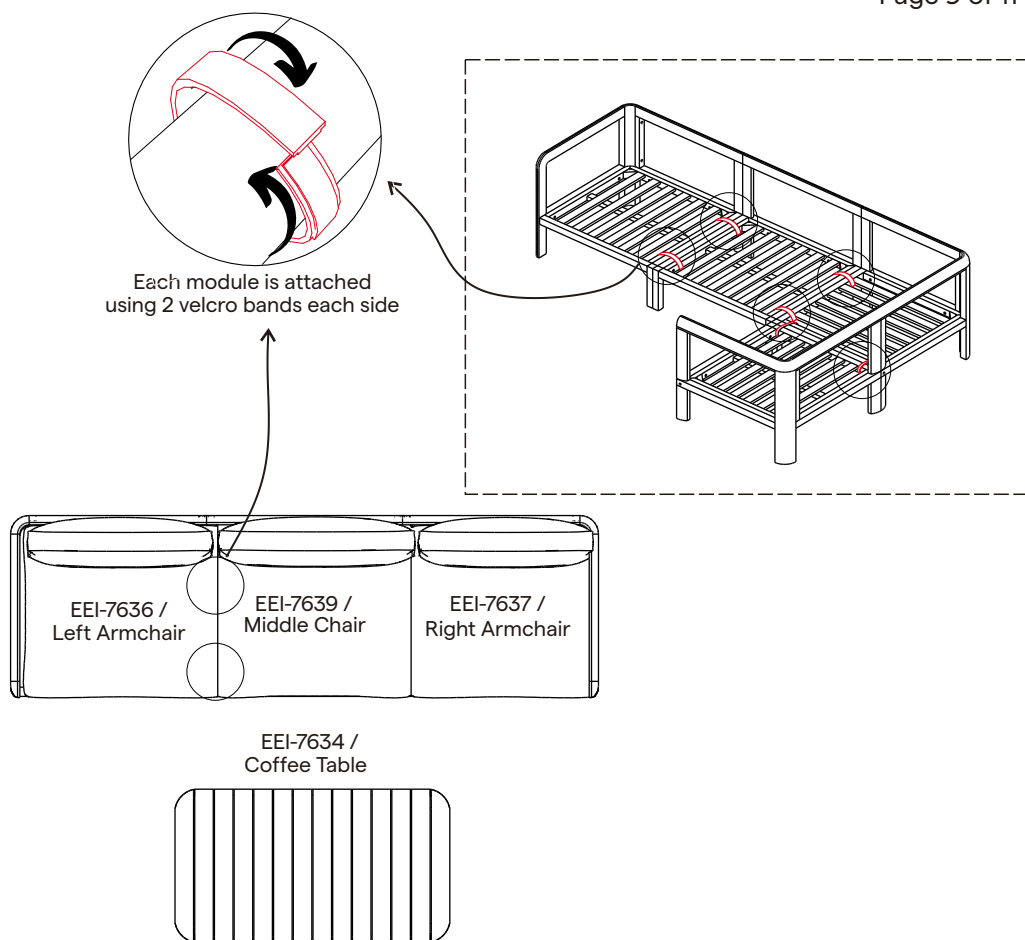


CONF. D

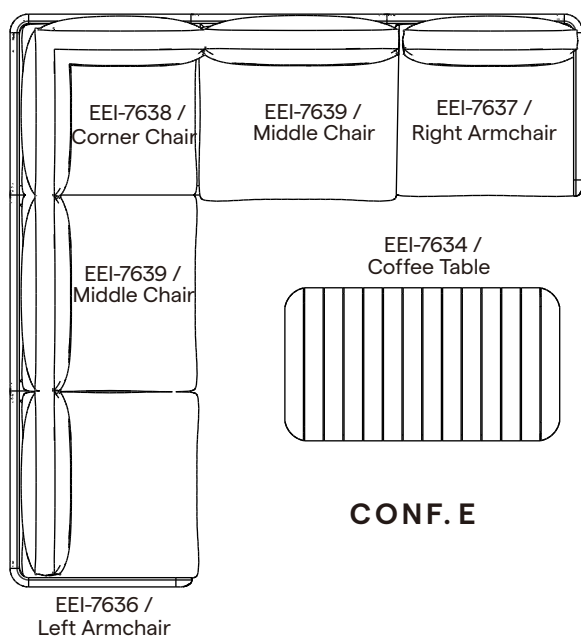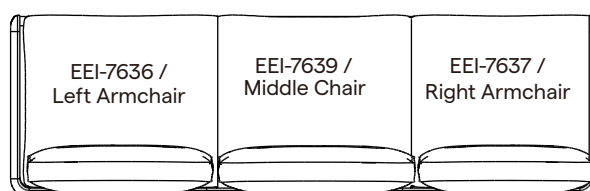



CONF. E

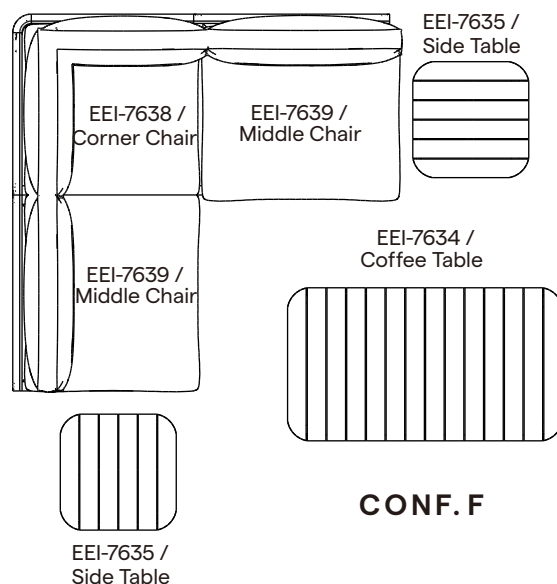


CONF. F

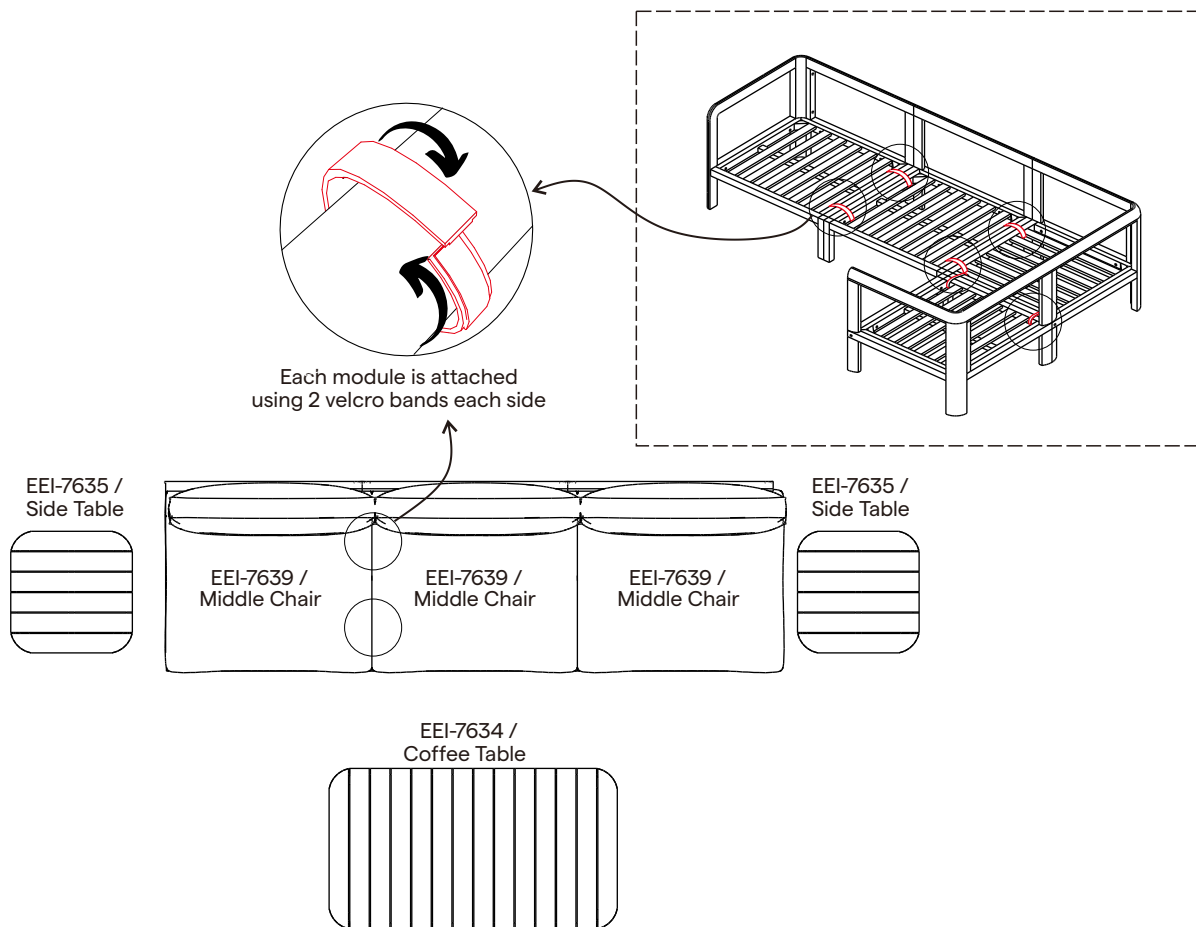

CONF. G

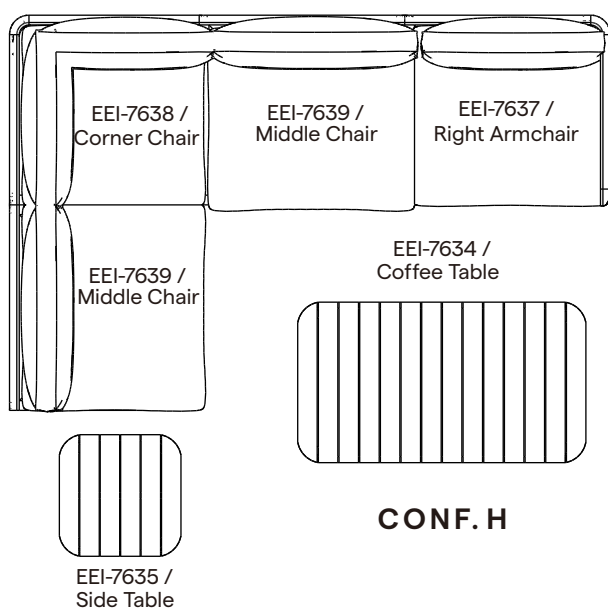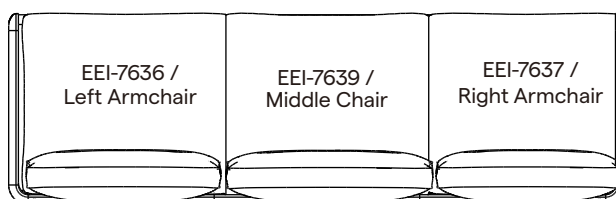

CONF. H

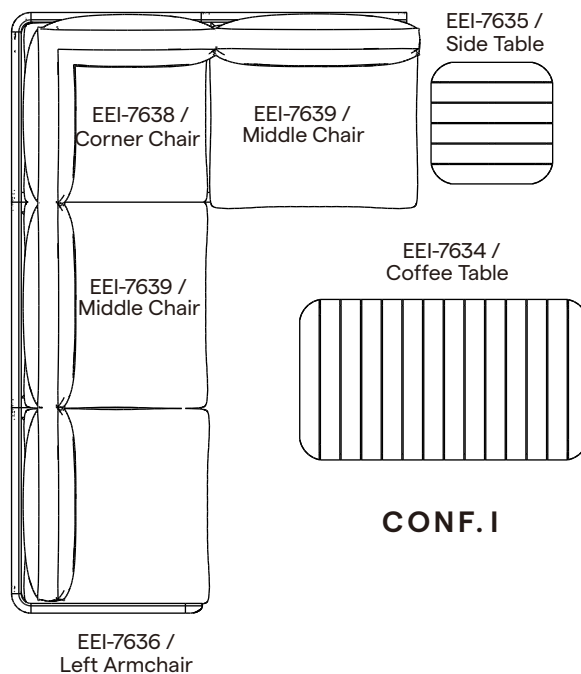


CONF. I

Great job!

Your new armless chair is complete.

CARING FOR YOUR ITEM

- Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Retain the rich wood color by occasionally sanding lightly and applying a teak cleaner and protectant. The oils nourish and help restore the original look.

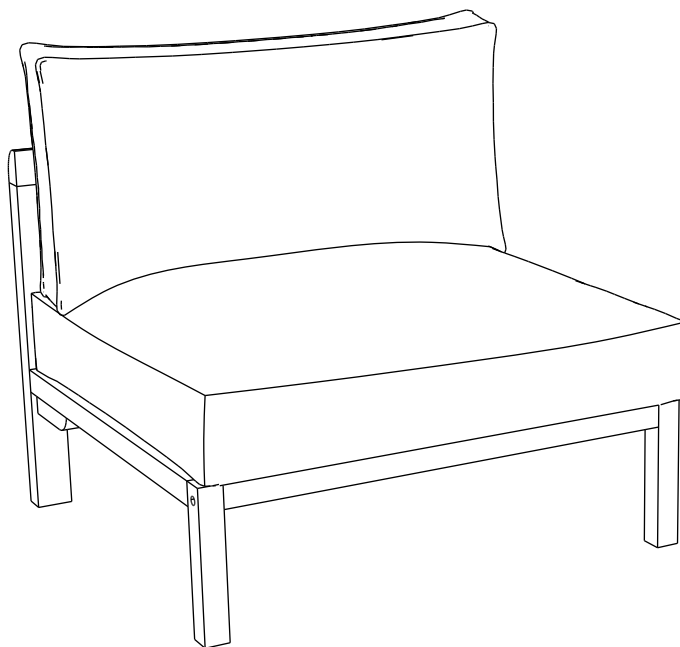

CONNECT WITH US!

Tag us @modway_furniture and #modway
for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com