
WYNDHAM COLLECTION

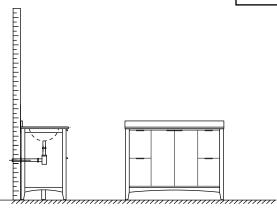

- Prior to installation please check received items against the "Packing List".
 Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door alignment is required, please follow the directions below.





PACKING LIST

(Not all components may be included, depending upon your purchase)






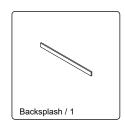


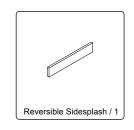



HOW TO ADJUST HINGES (if required)











REQUIRED TOOLS NOT IN BOX







Phillips Screwdriver



Tape measure



Pencil





Electric Drill


WC-9191-48-SGL Installation Guide




INSTALLATION INSTRUCTIONS

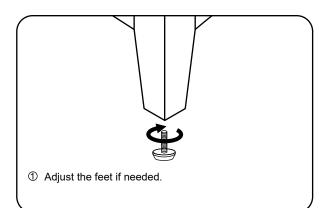

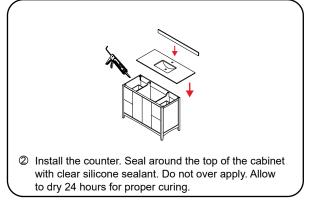

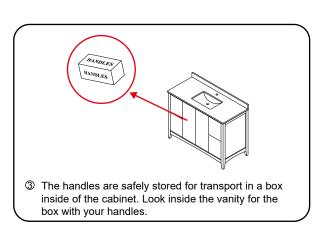

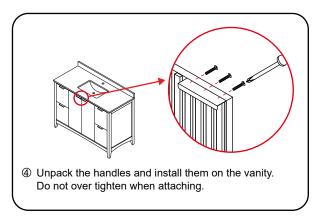

WC-9191-48-SGL Installation Guide