




HIDE IT WITH STYLE

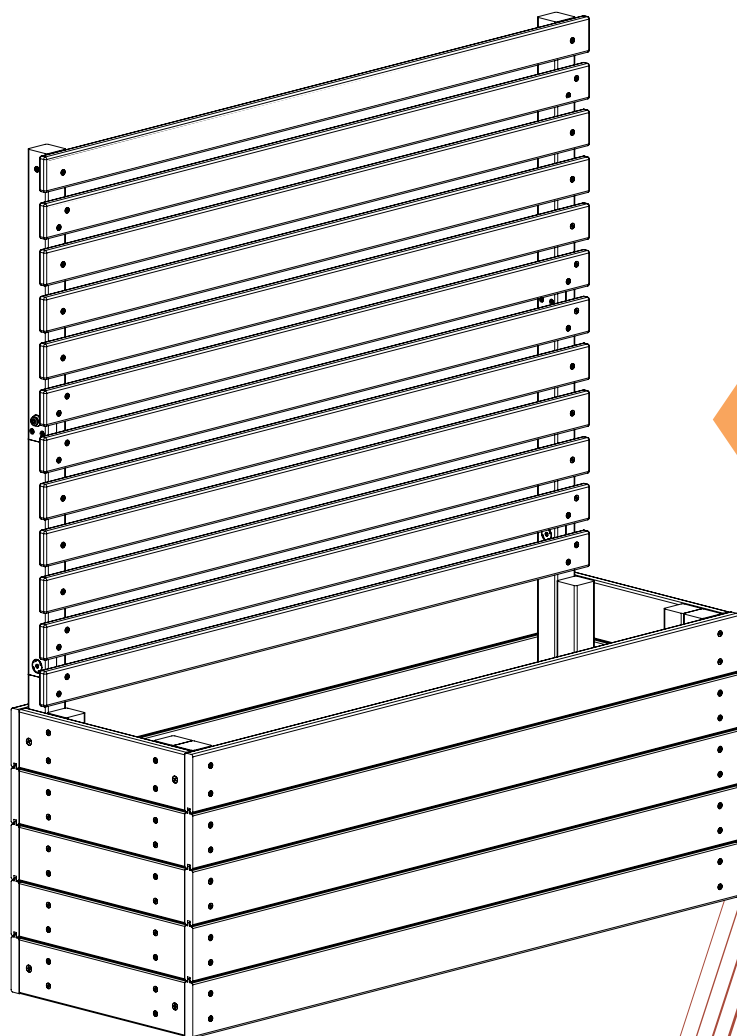

Tacoma Wood Planter Screen

42"W x 14"L x 47 ½"H

30 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below



ASSEMBLY
INSTRUCTIONS
EC18048

www.encloscreens.com

VER. 080825

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18048**)
- Your affected part letters (**pages 4-5**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

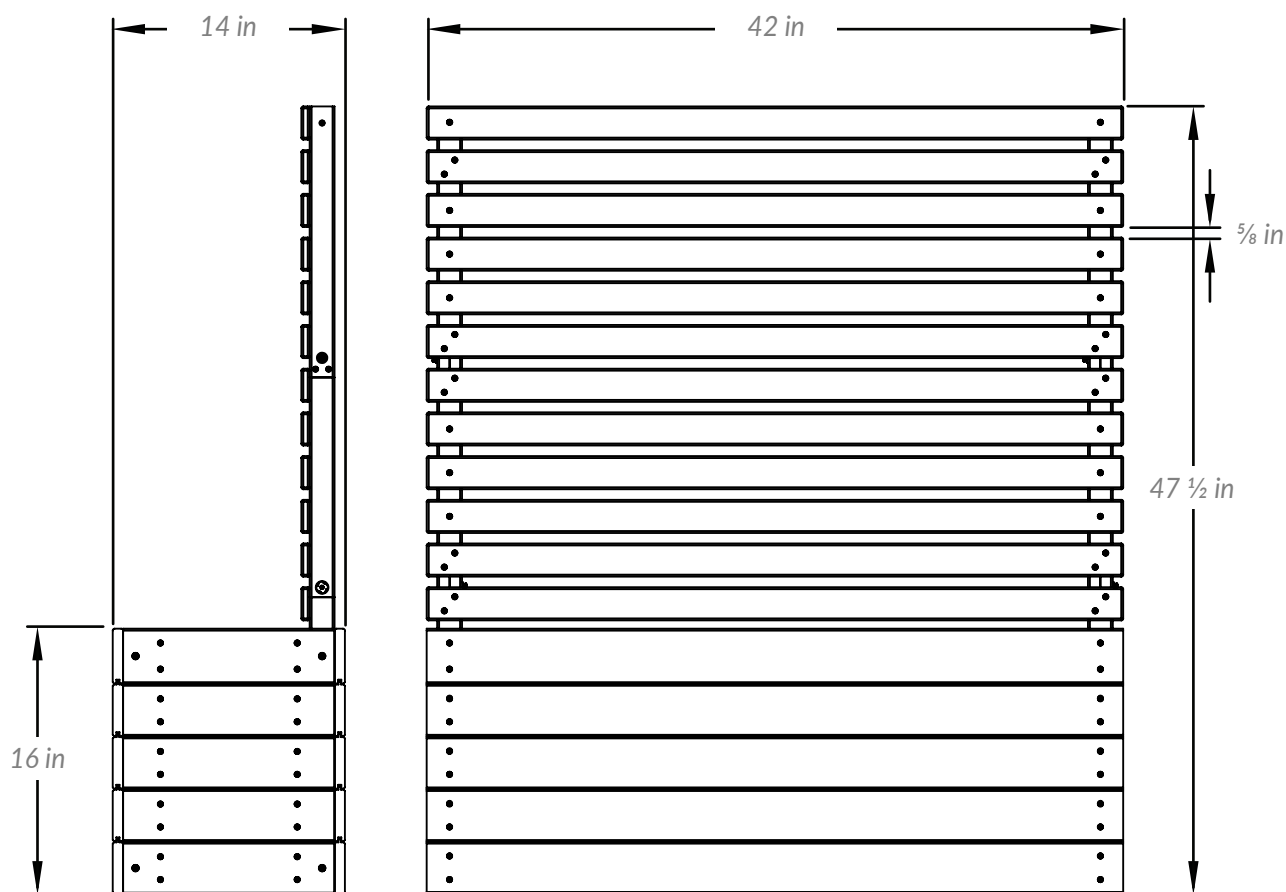


LAY OUT MATERIALS

PLANTER PANELS


A

Front Panel (1)
2 1/8" x 16" x 42"

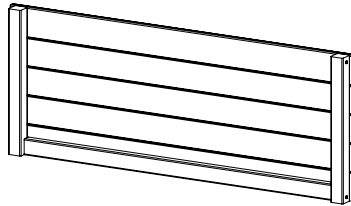


B

Back Panel (1)
2 5/8" x 19 3/4" x 42"

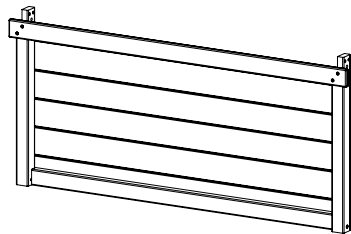

C


Side Panel (2)
2 1/8" x 12 3/4" x 16"

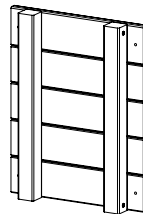

PLANTER SCREEN


D

Middle Screen Panel (1)
2" x 15" x 42"

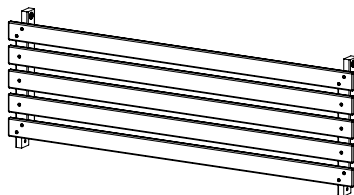


E

Top Screen Panel (1)
2" x 16 3/8" x 42"

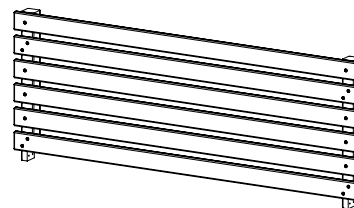


LAY OUT MATERIALS

FLOORBOARDS

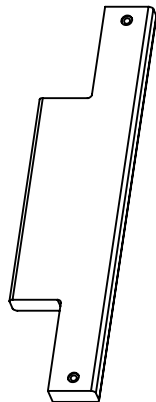


F

End Floor Board (2)
 $\frac{5}{8}$ " x 3" x 12 $\frac{5}{8}$ "

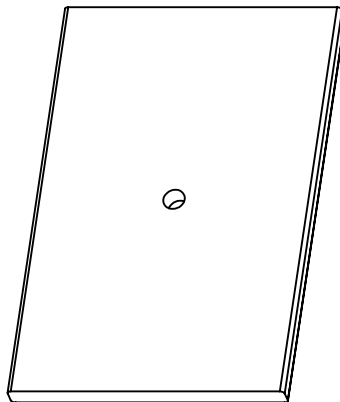

G

Floor Board Panel (4)
 $\frac{5}{8}$ " x 8 $\frac{1}{8}$ " x 12 $\frac{5}{8}$ "

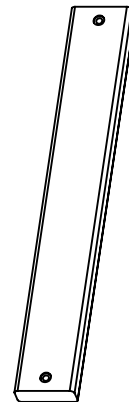


H

Middle Floor Bridge (1)
 $\frac{5}{8}$ " x 1 $\frac{3}{4}$ " x 12 $\frac{5}{8}$ "


HARDWARE

I




1 $\frac{3}{8}$ " Wood Screw (14)

J



1 $\frac{5}{8}$ " Wood Screw (8)

K




1 $\frac{5}{8}$ " Bolt (4)

L




Lock Washer (4)

M




Washer (4)

N

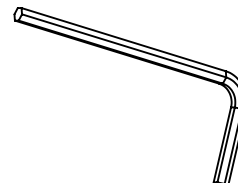


Hex Key (1)

O



Phillips Bit (1)


P

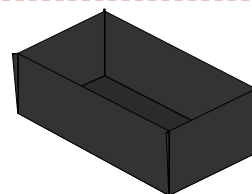


Planter Liner (1)

ASSEMBLING

1

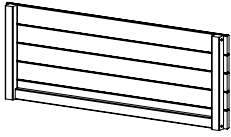


A x1

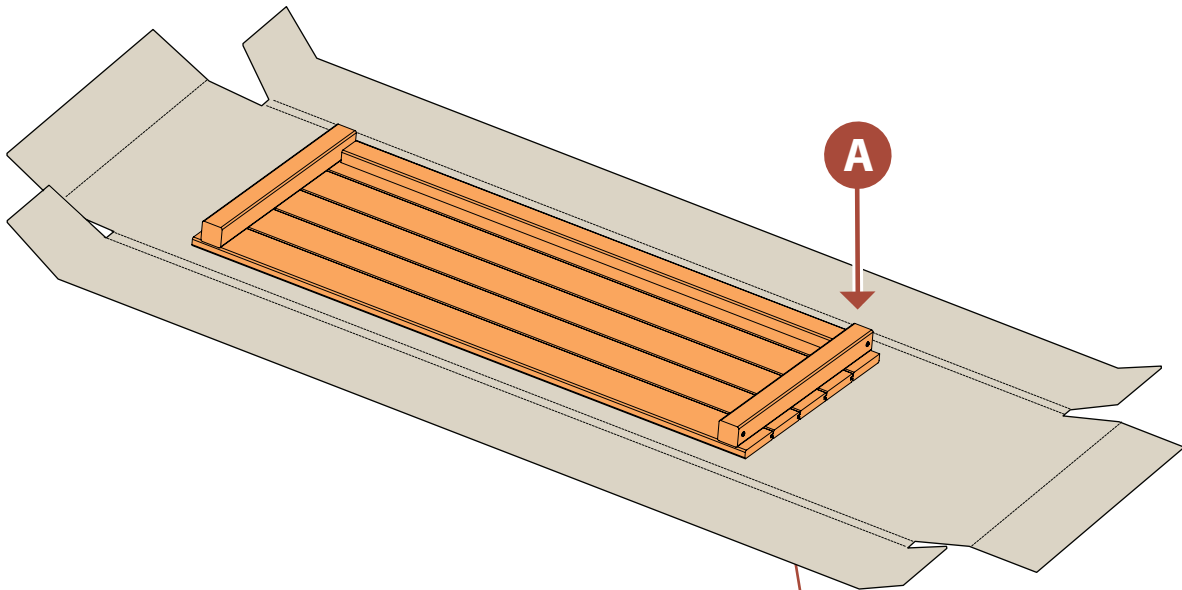


Assemble on box or other smooth surface to prevent scratching


Stand Panel

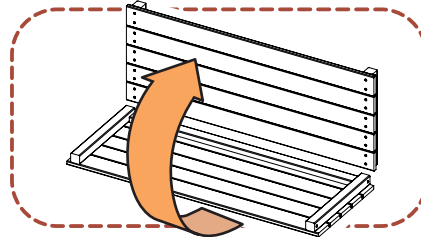


2

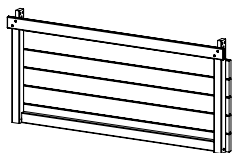


B x1

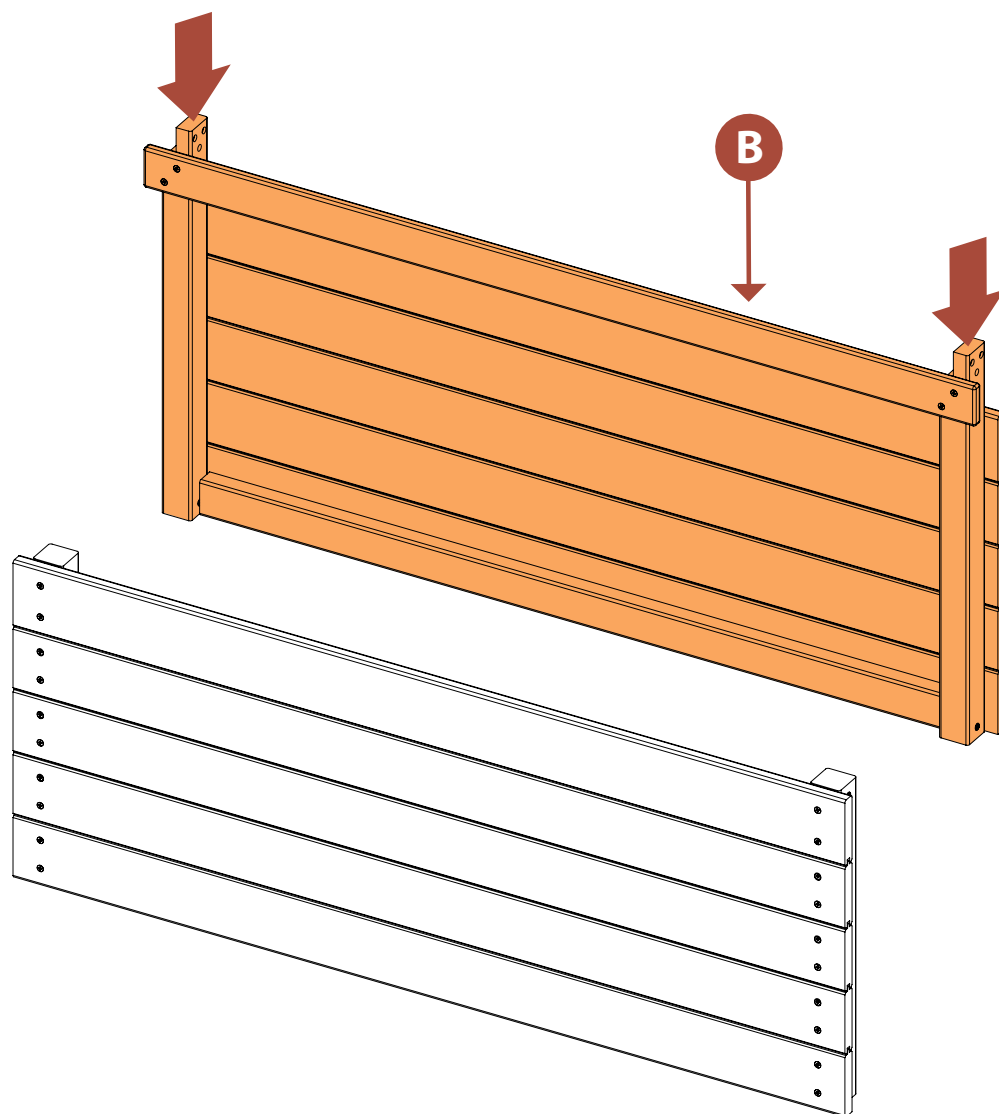


3




C x2

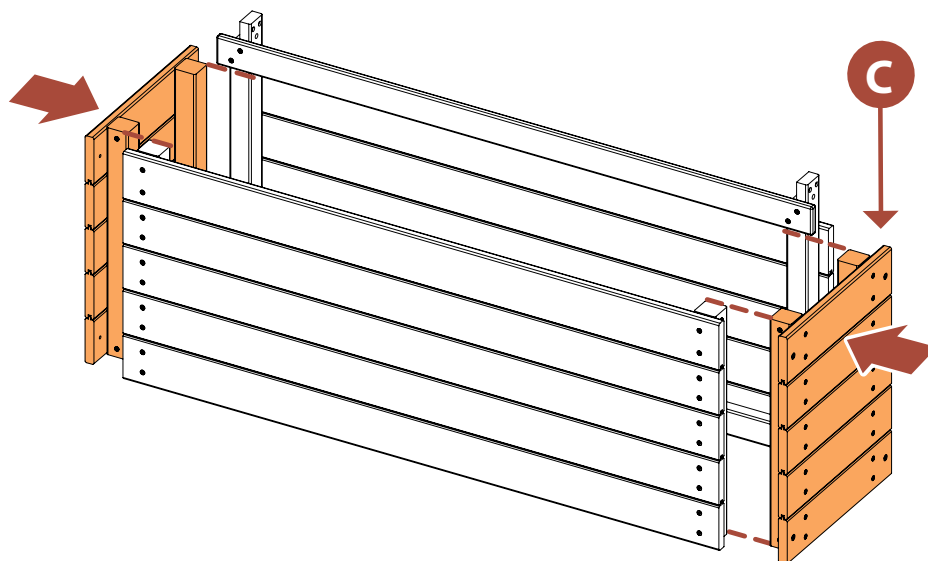



4




J x8

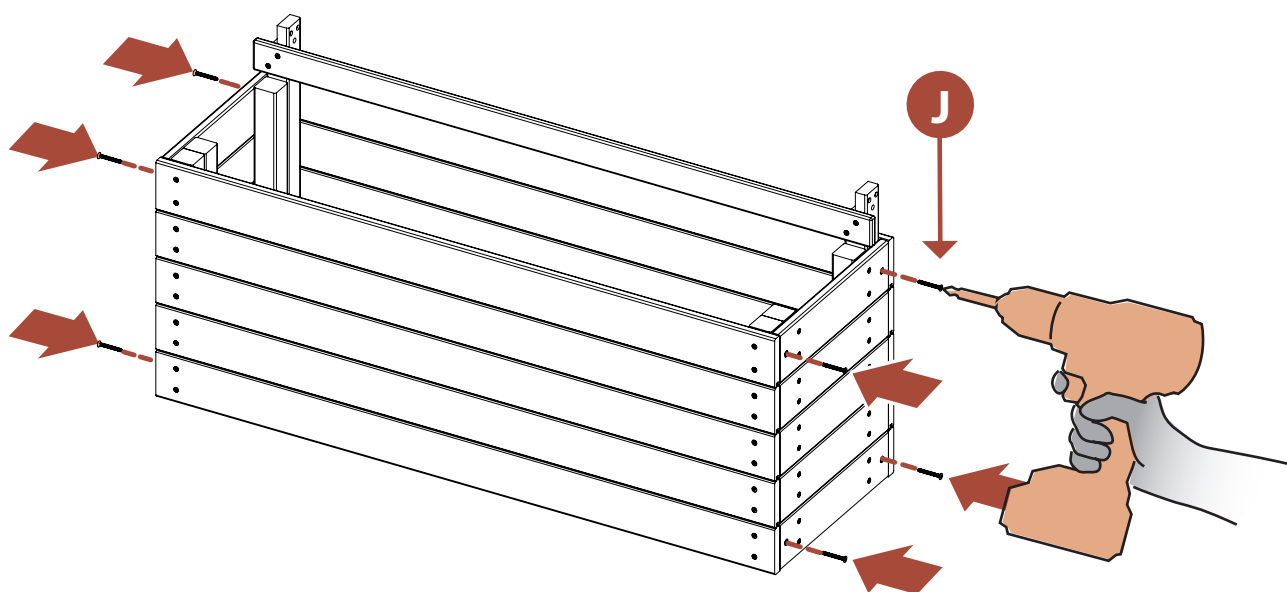


5

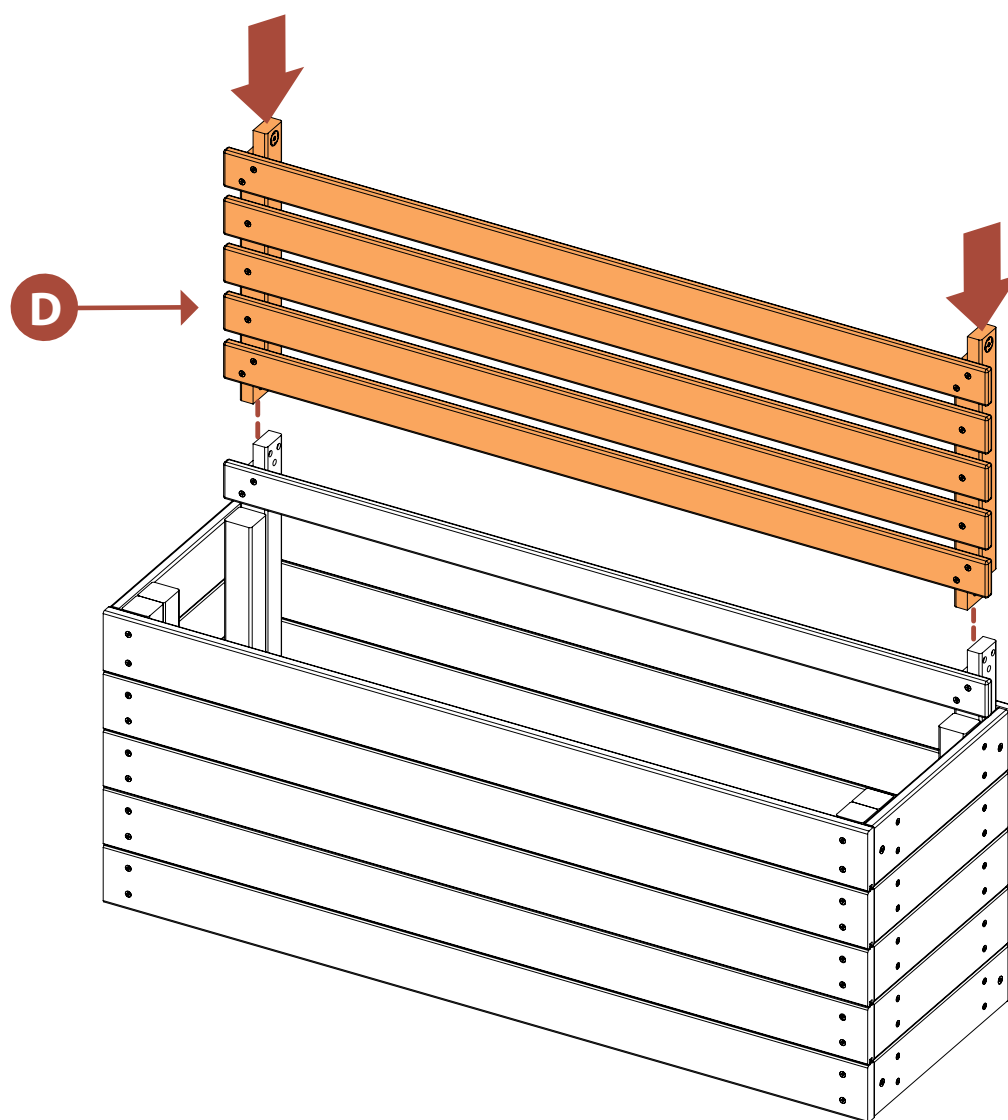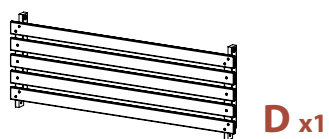


6

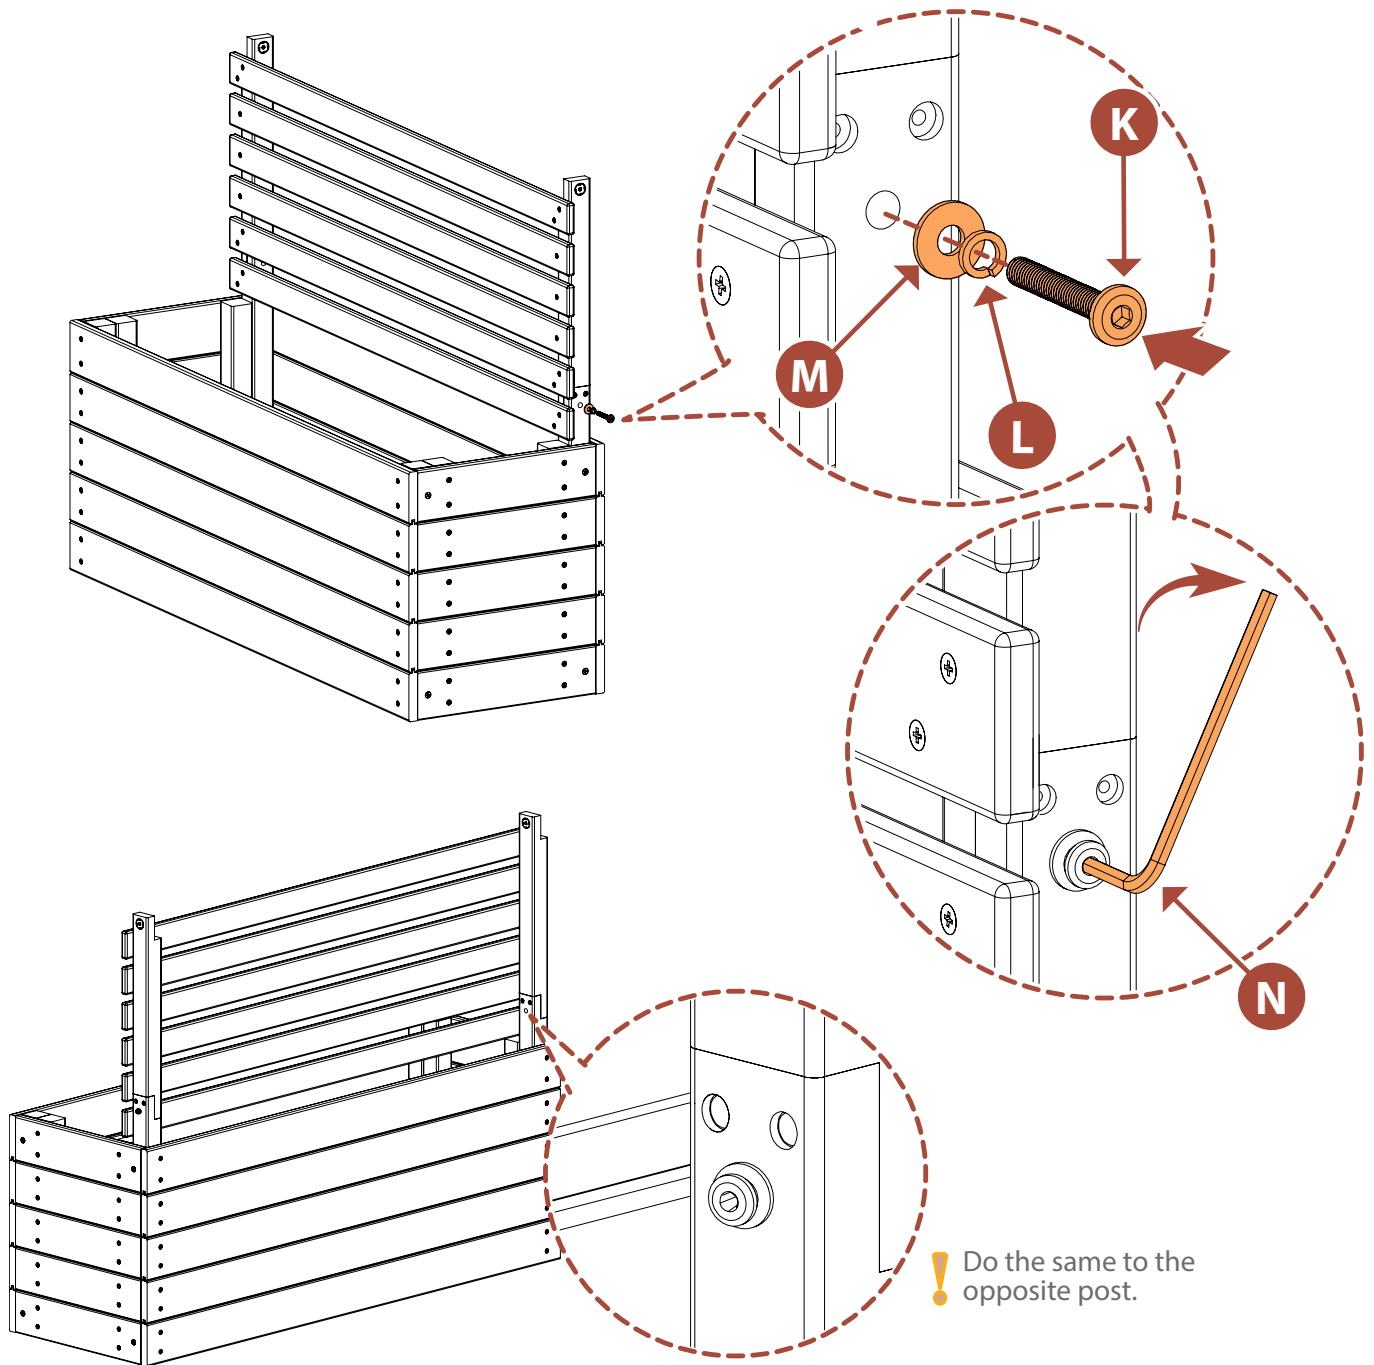





7



I x4



O x1

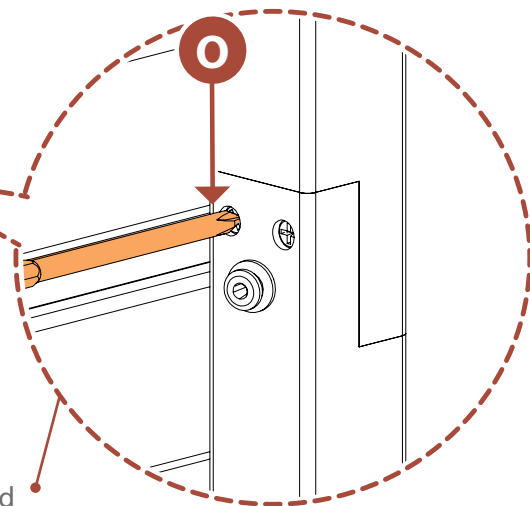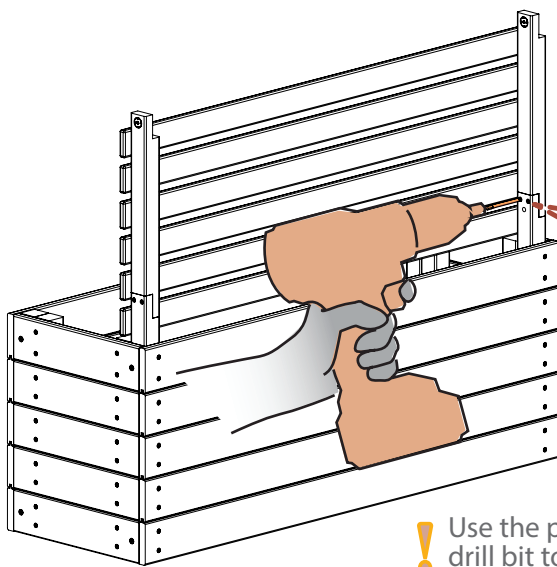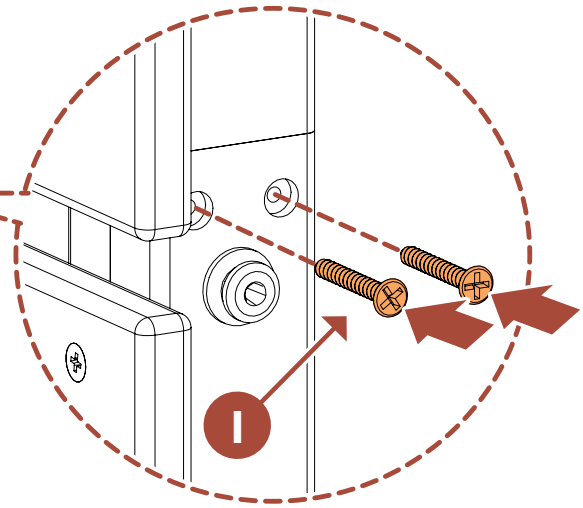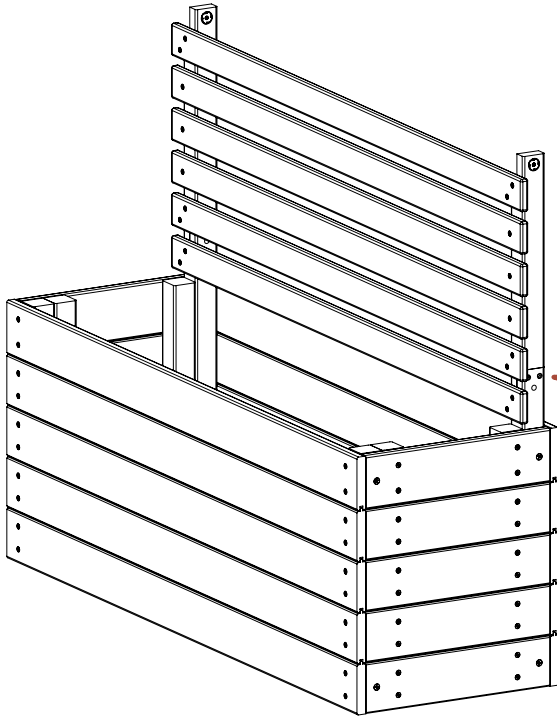


! Use the provided drill bit to reach tight corners.

8



E x1

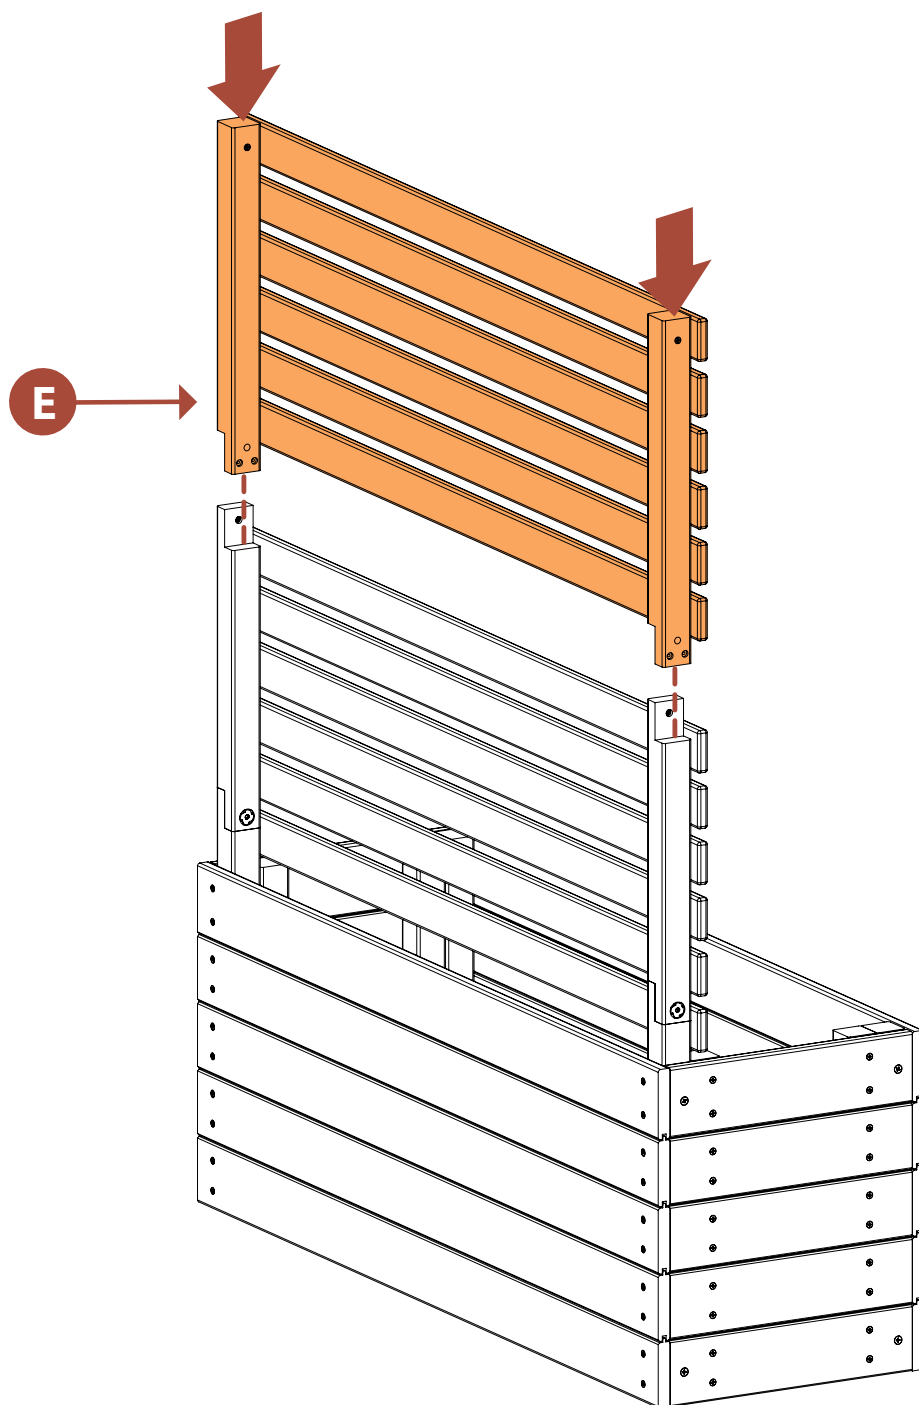

9



I x4




K x2



L x2




M x2

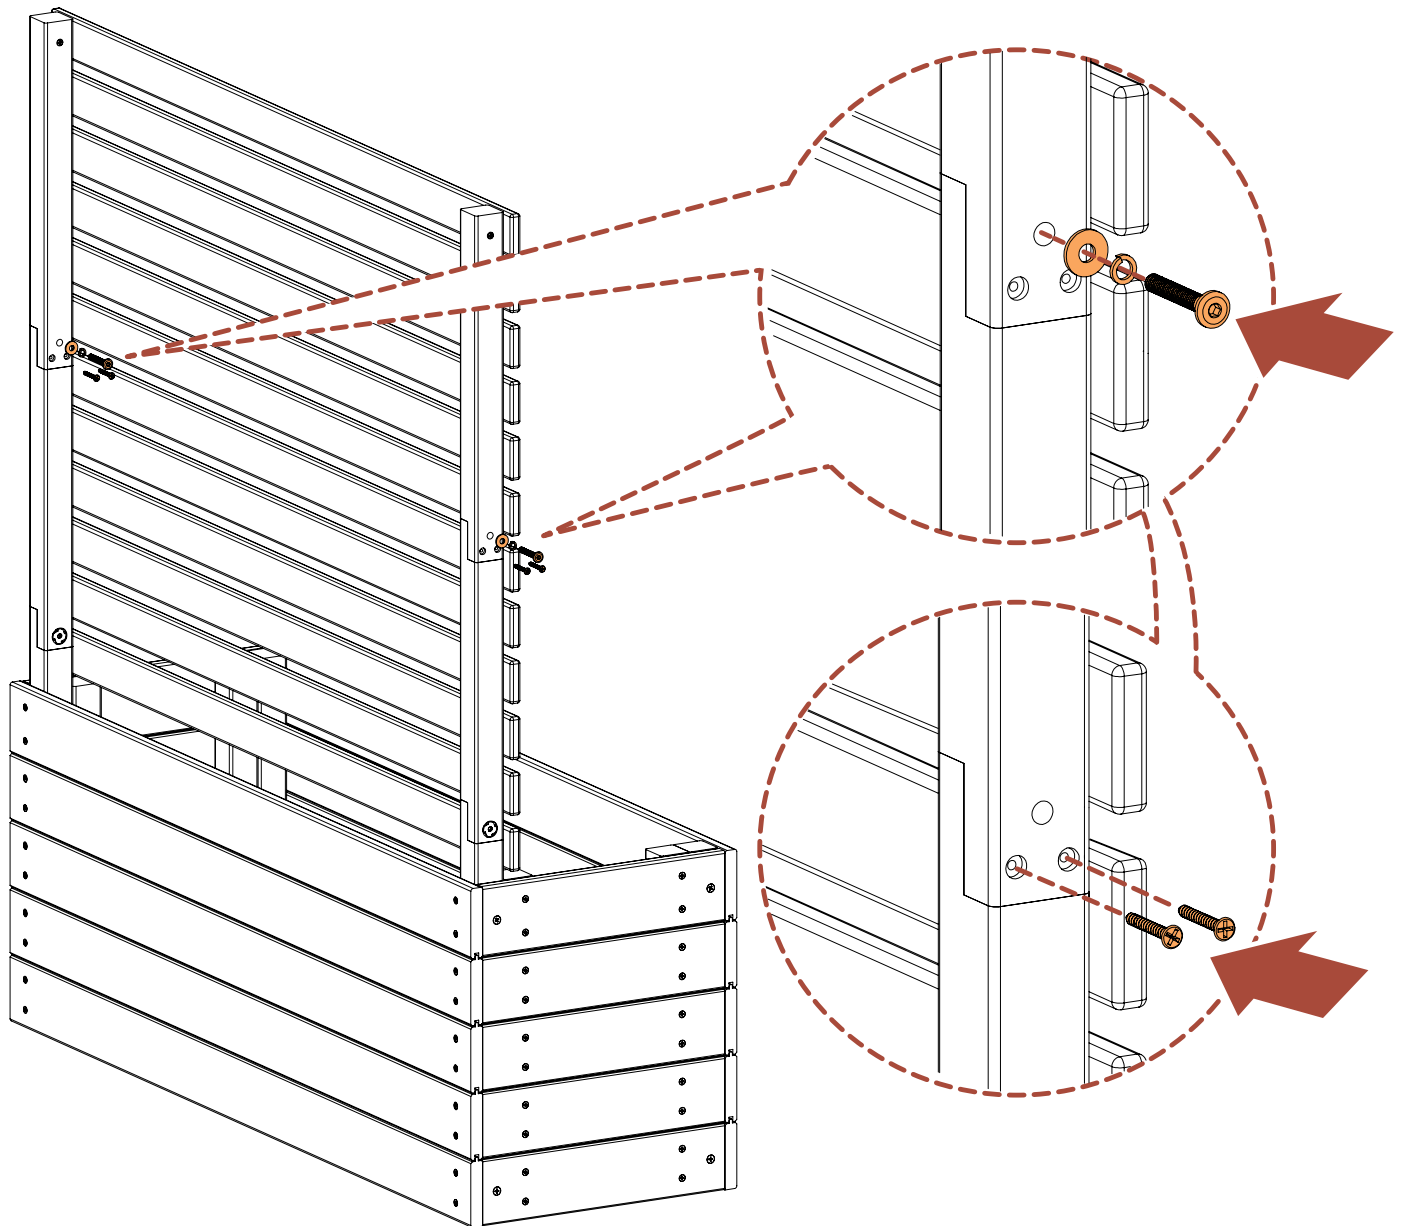

10




F x2

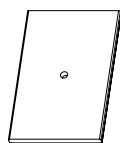

G x4




H x1

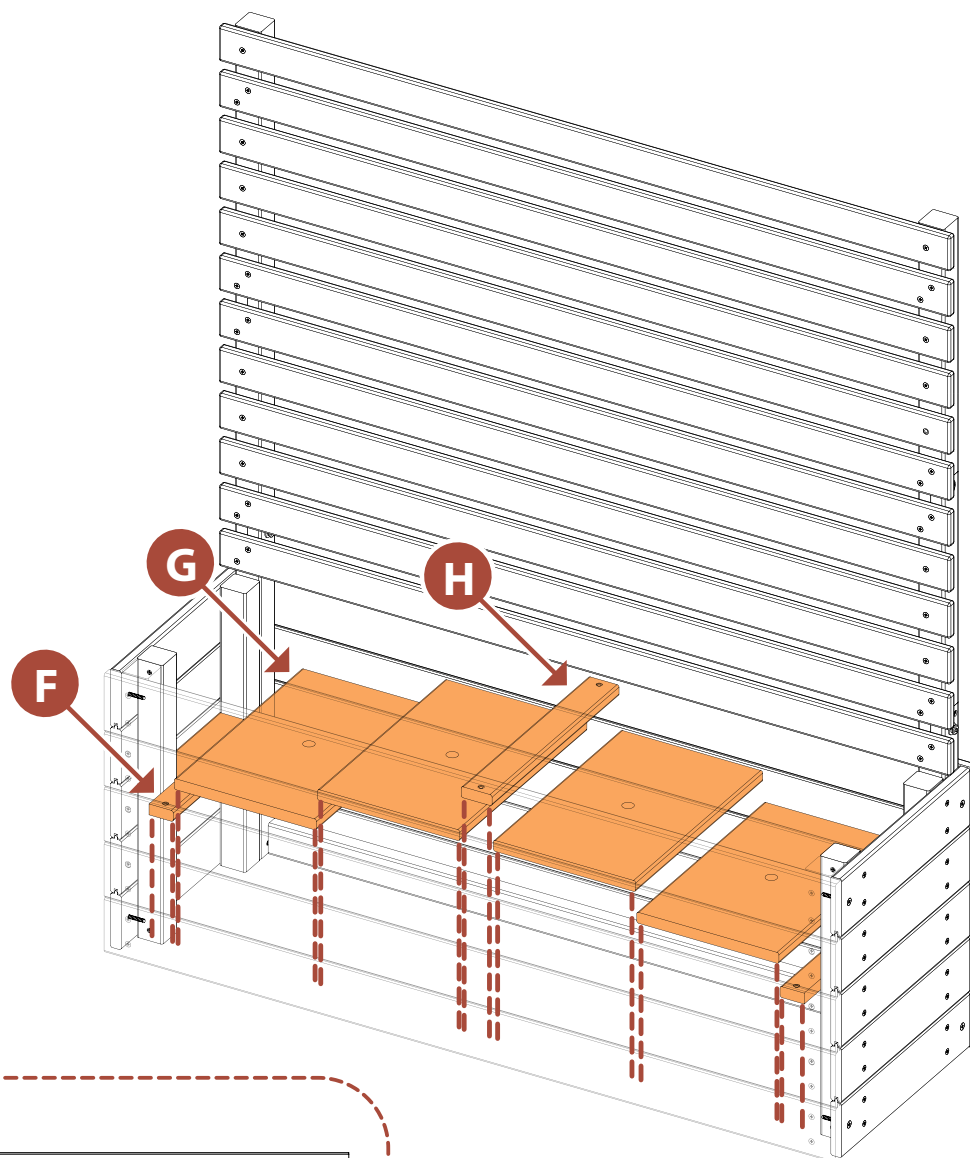

Top View



11

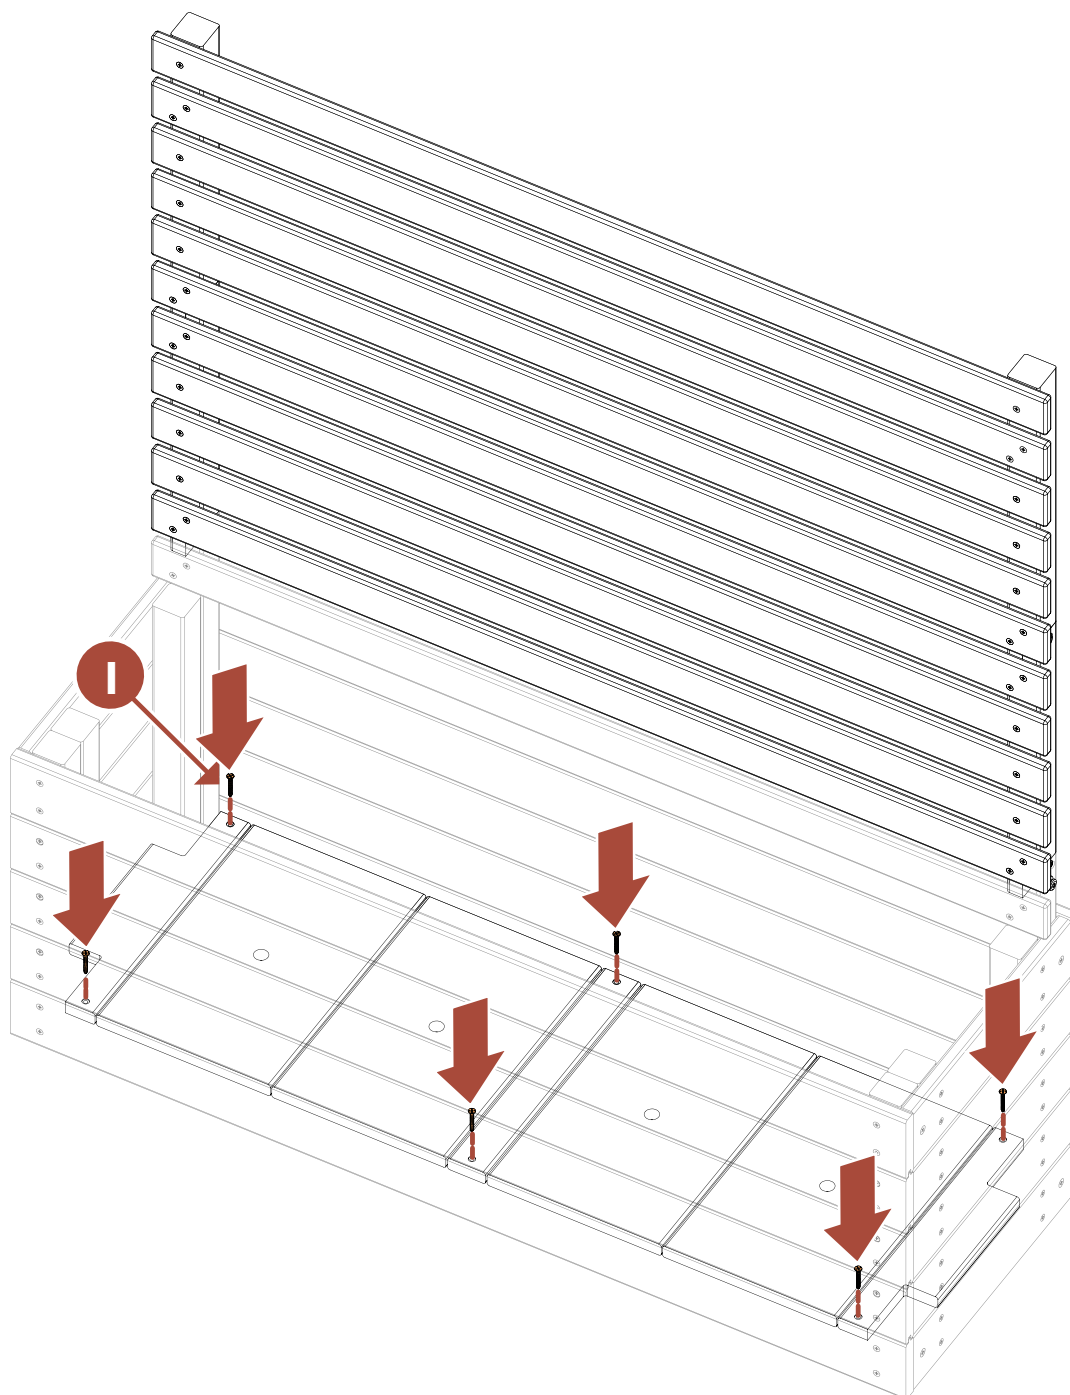



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18048