


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

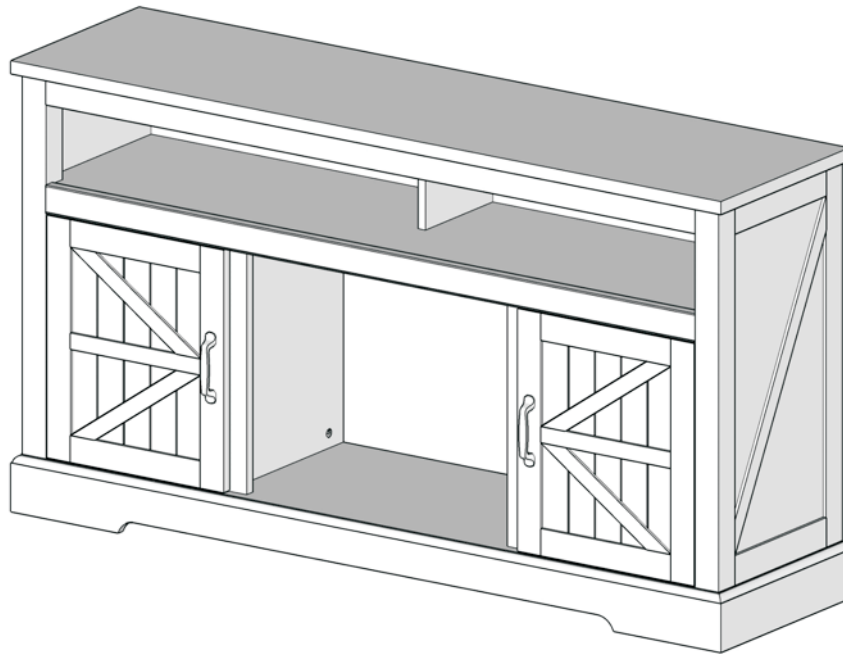

M2301 ELECTRIC FIREPLACE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Do Not Return This Product!

Contact our customer service team for help first.

Call: 213-4467172 or 661-4358826

Monday - Sunday 8:30 am - 5:30 pm P.S.T

ROWAN ELECTRIC APPLIANCE LLC 28407 Ascent Way,
Santa Clarita, CA 91350



WARNING

- Unit can tip over causing severe injury.
- Anchor unit to study on wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.



60MIN



CERTIFIED UNDER CANADIAN AND
AMERICAN NATIONAL STANDARDS: ETL



Contact Us !

DO NOT RETURN THIS PRODUCT!

Contact our friendly customer service team first for help.

Call: 213-4467172 or 661-4358826

(8:30 am - 5:30 pm P.S.T)

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

[Helpful Hints]

**PEOPLE NEEDED FOR ASSEMBLY: 2
ESTIMATED ASSEMBLY TIME: 1 HOUR**

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemicals or abrasive cleaners on this item.


-Never push, pull, or drag your furniture.



PARTS LIST

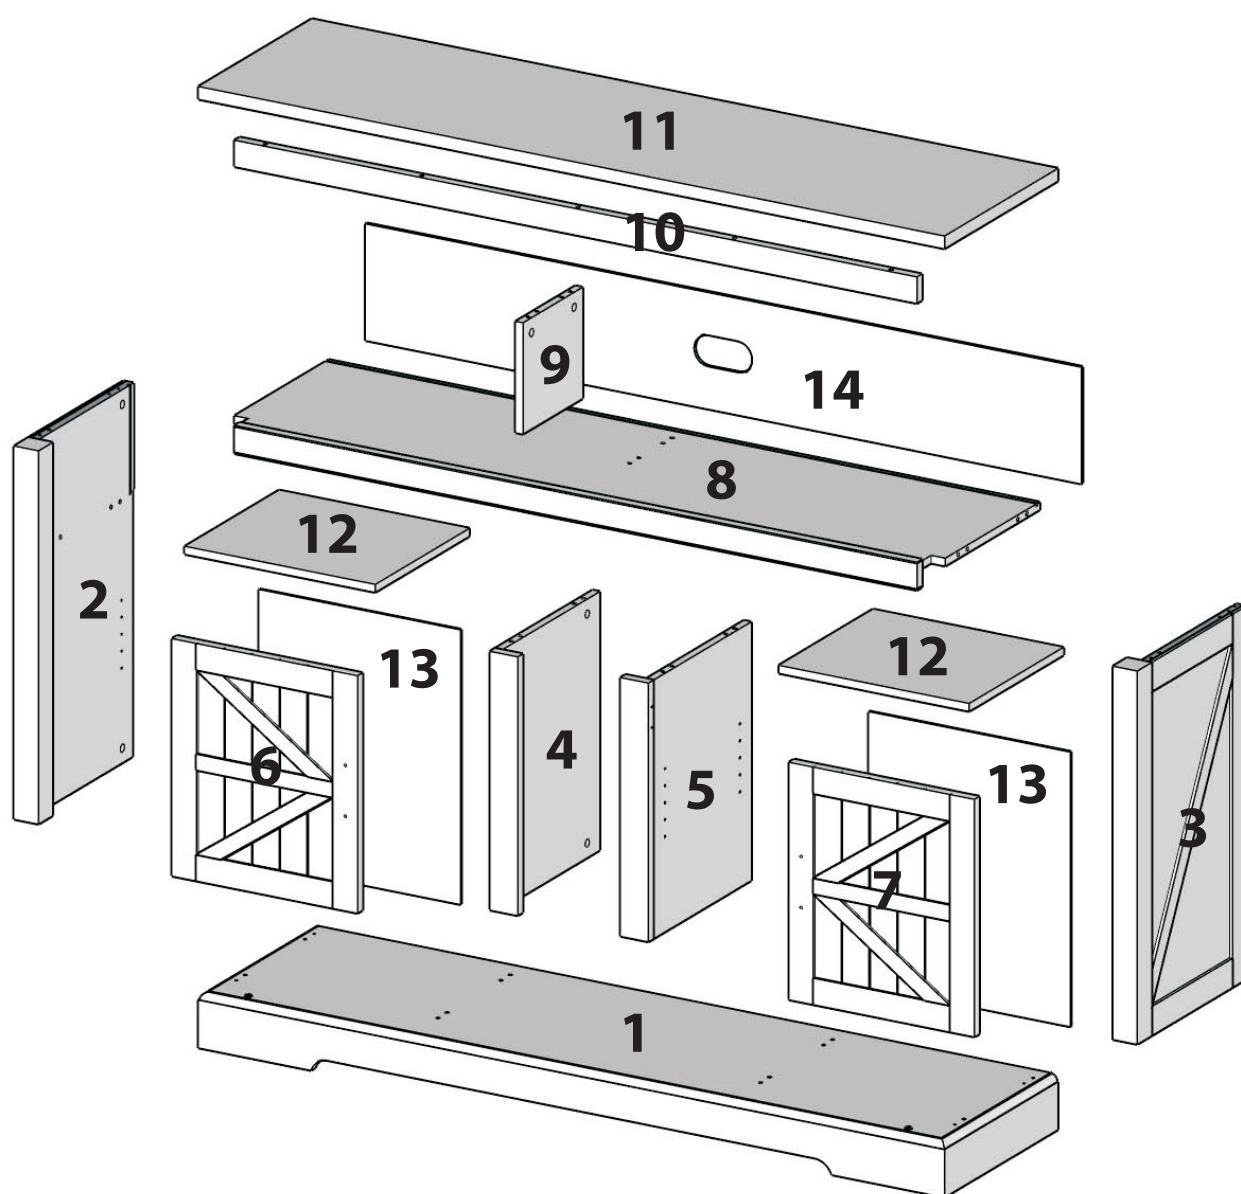

HARDWARE LIST

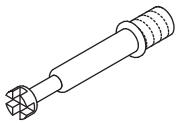


A X 27

Ø6.5 x 35mm




B X 27

Ø15 x 12mm



C X 24

Ø8 x 30mm

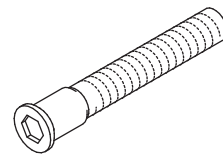


D X 2

Ø7 x 50mm




E X 8

Ø3 x 14mm

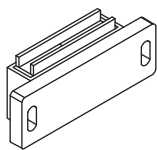

F1 X 2




F2 X 2




G X 32

Ø3 x 12mm



H1 X 2



H2 X 2



I X 4


Ø4 x 18mm



J X 2



K X 8




L X 1



M X 4

Ø4 x 12.7mm

DIMENSIONS

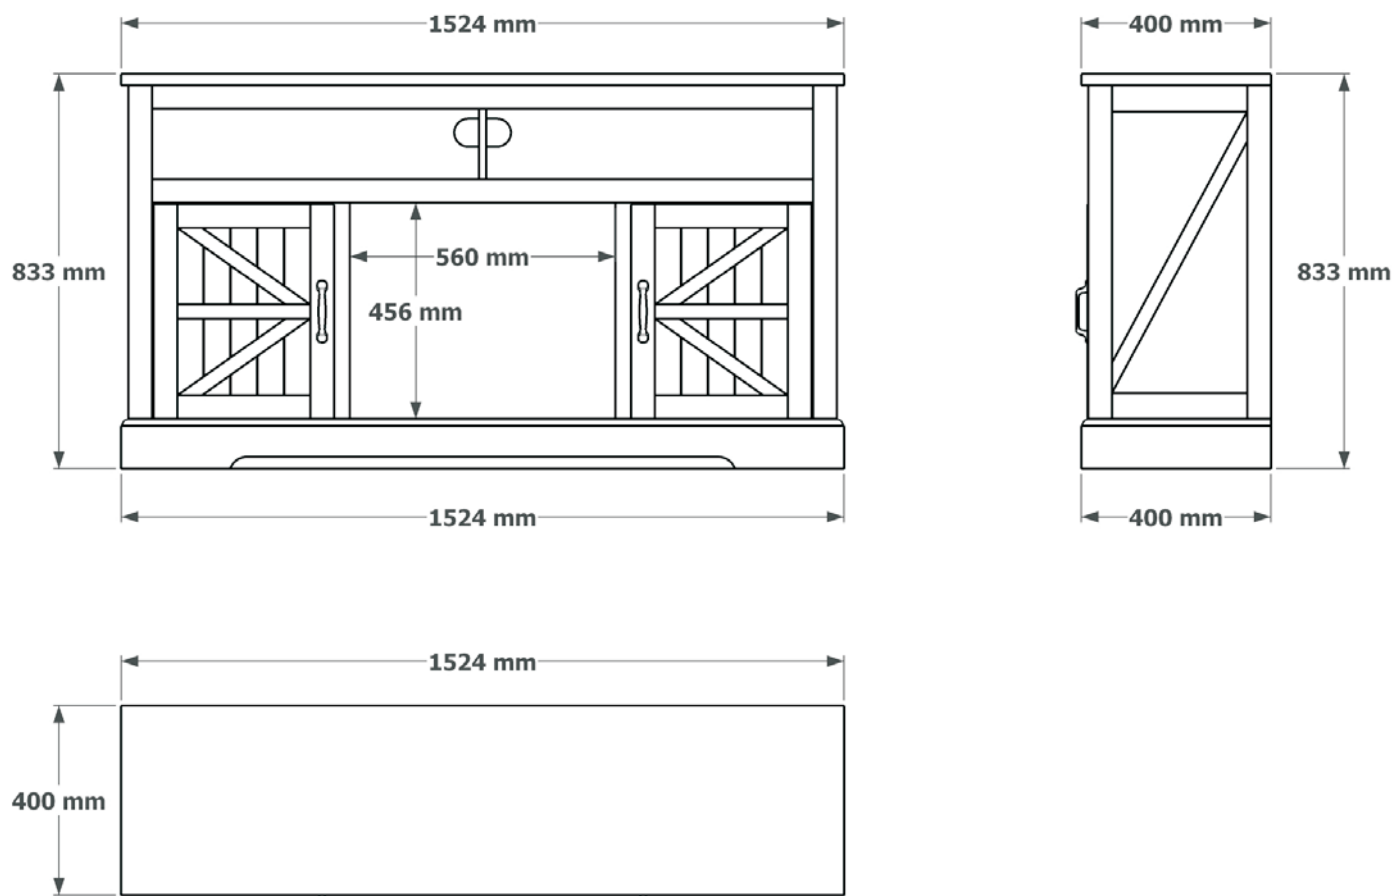



ASSEMBLY

Before installing this fireplace, please read the following steps carefully.

STEP 1:







Screw bolts (A) to panels (1)+(2)+(3)+(8)+(11).

Attach door stoppers (F1) to panels (4)+(5) by securing screws (E).

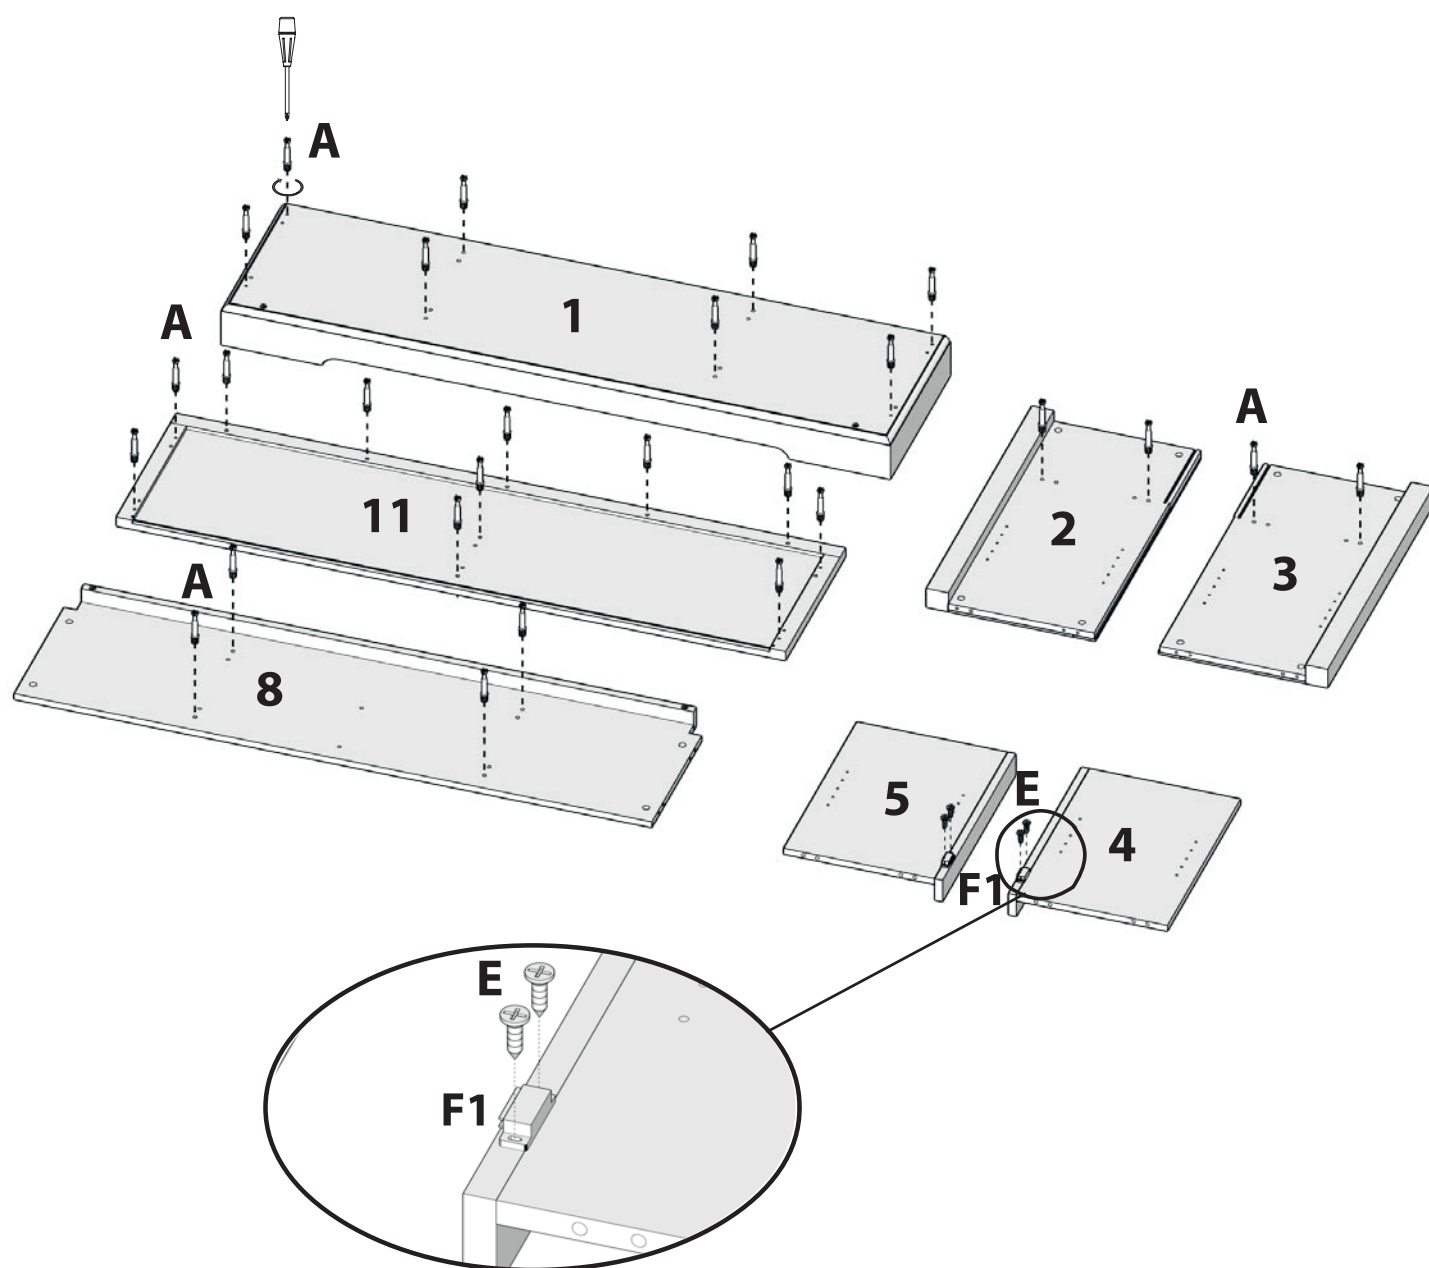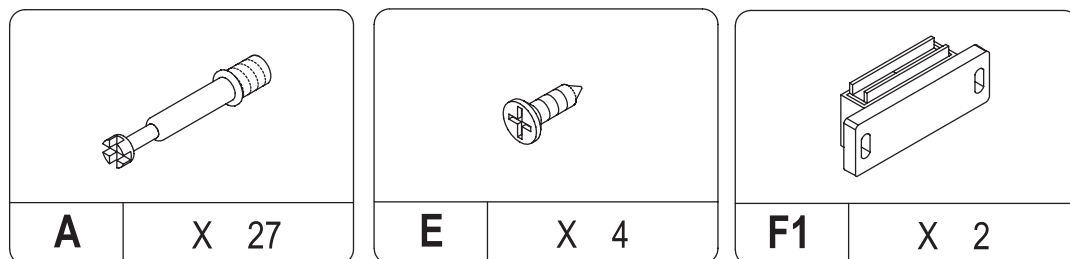

STEP 2:



Join panels (4)+(5) to panel (8) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

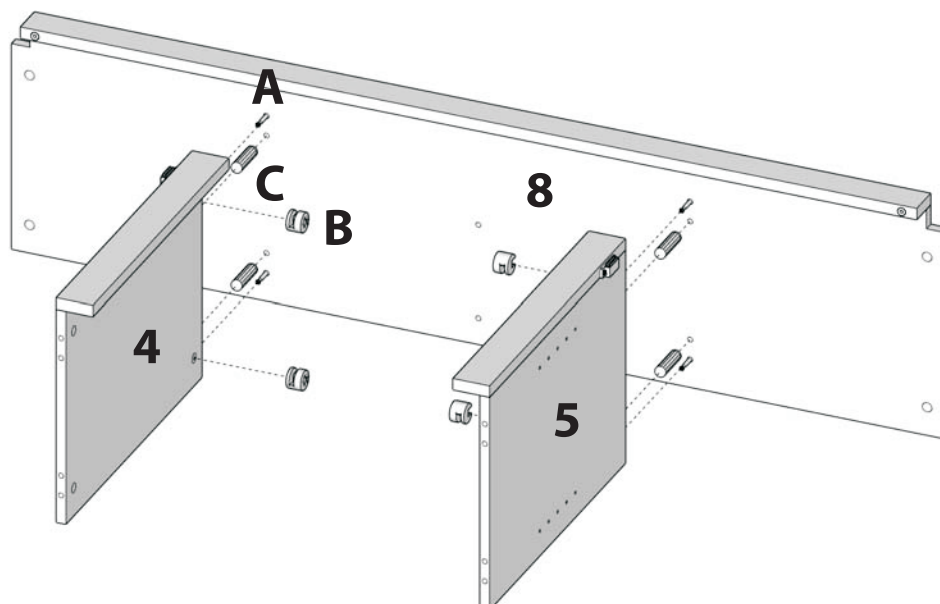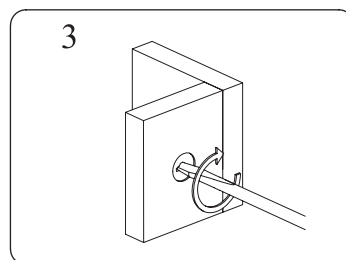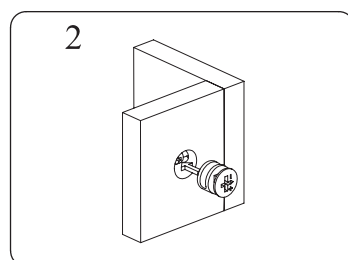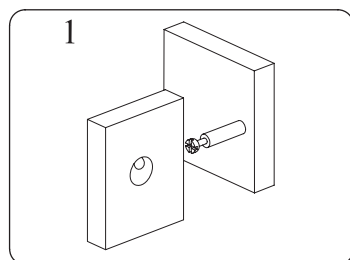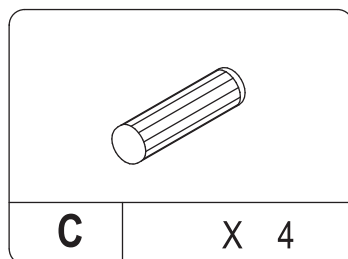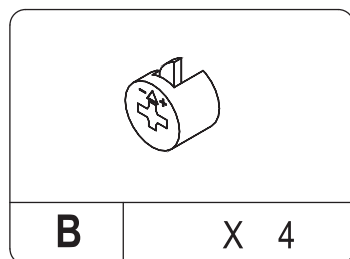

STEP 3:




Join panels (2)+(3) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

Join panel (9) by inserting dowels (C) and securing screws (D) with allen wrench (L).

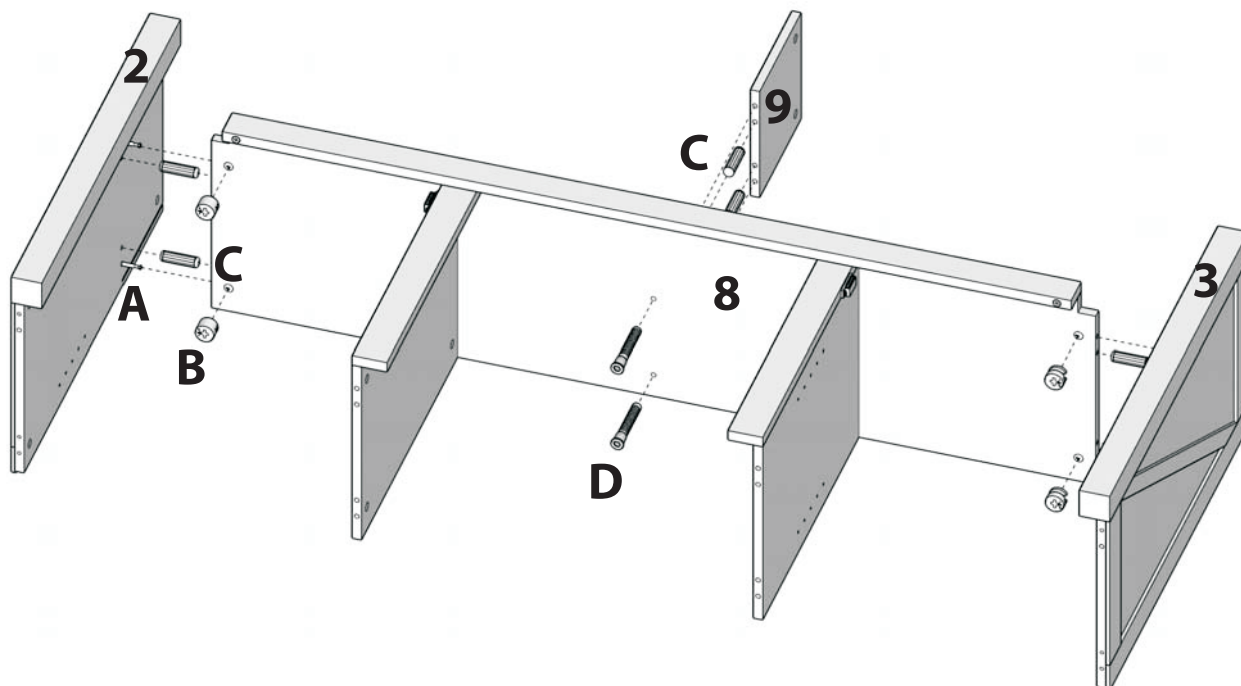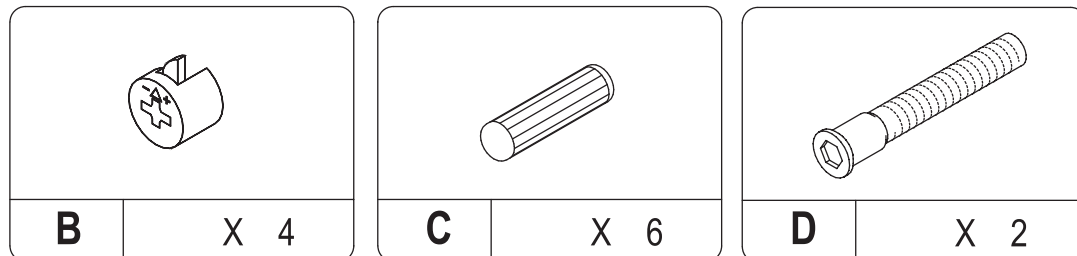


STEP 4:

Join the panel (1) by inserting bolts (A) and dowels (C). Lock it by inserting and securing excenter fittings (B).

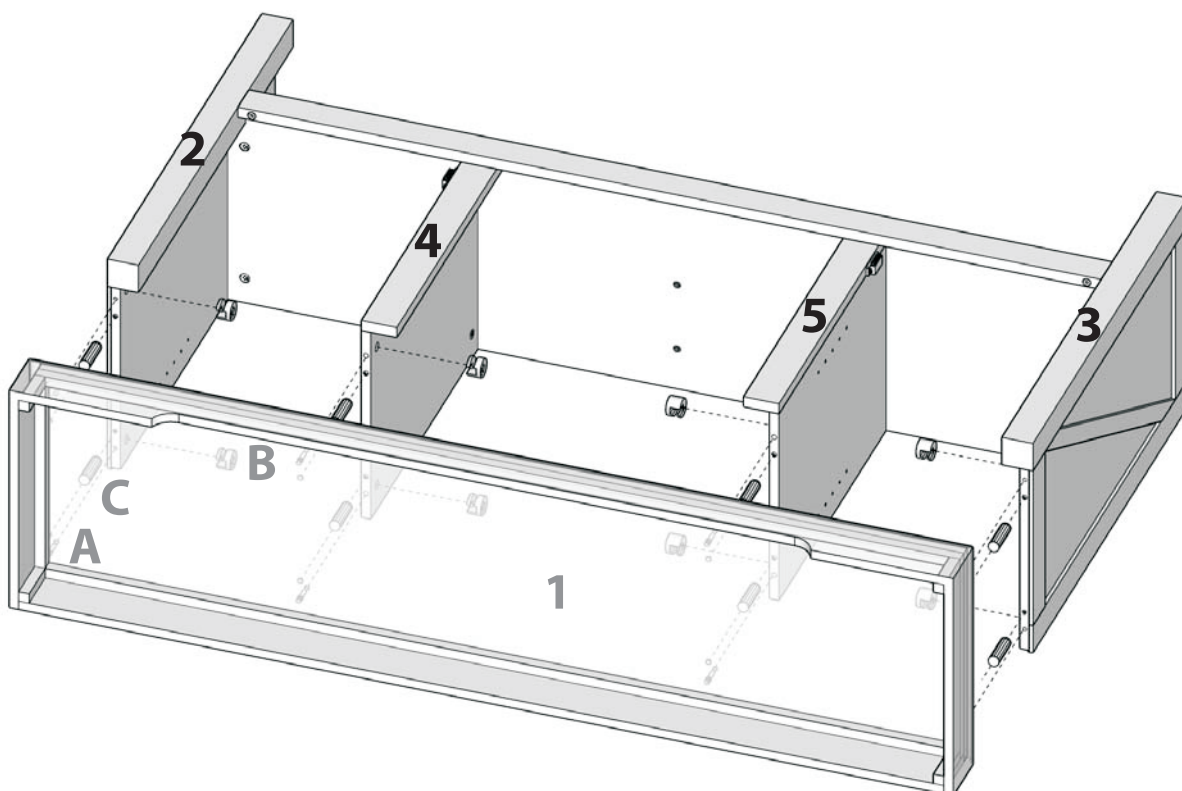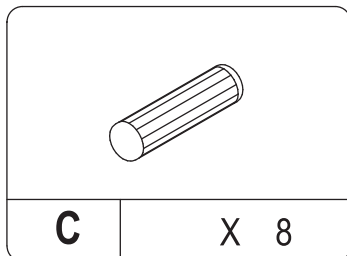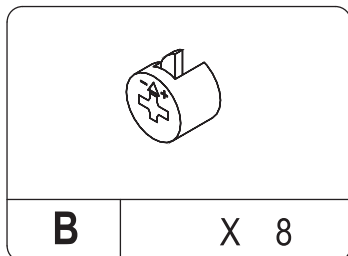



STEP 5:

Join the panel (14) by inserting it along the slots.

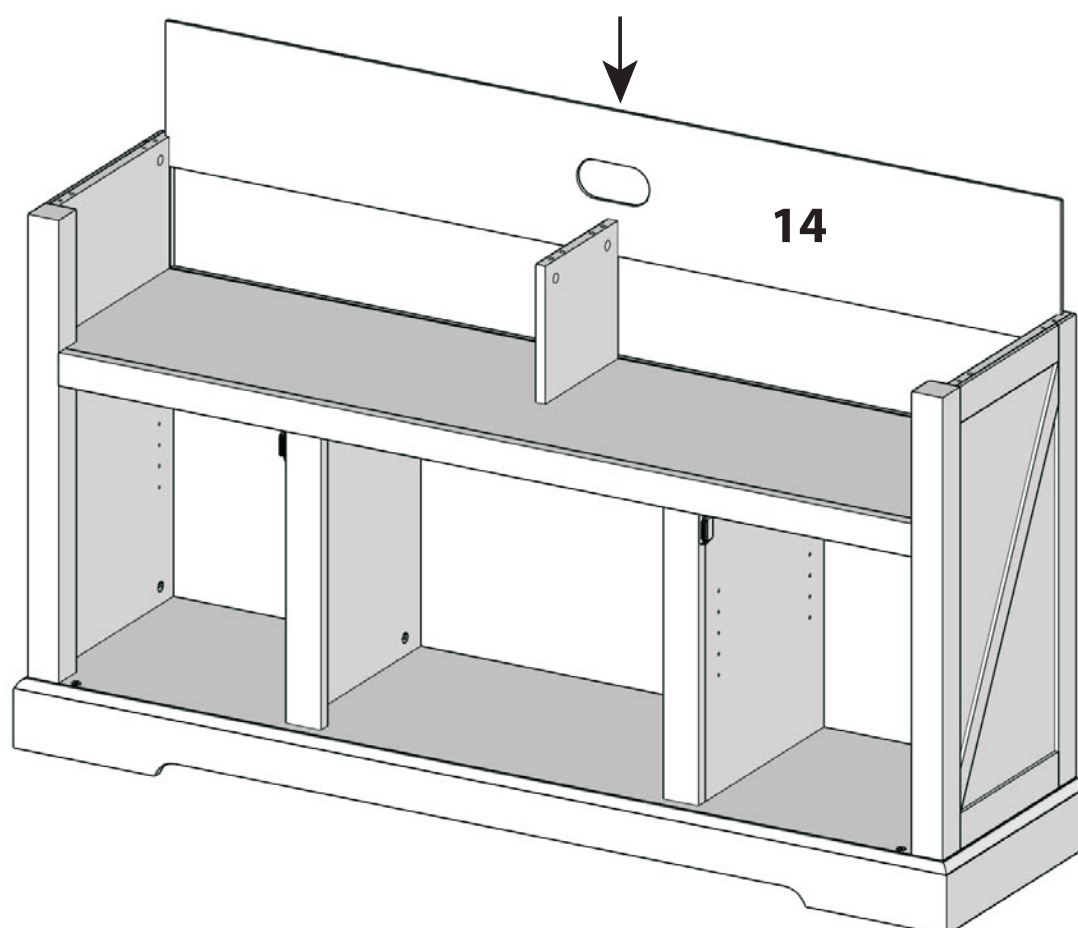

STEP 6:

Join the panel (10) to panel (11) by inserting bolts (A). Lock it by inserting and securing excenter fittings (B).



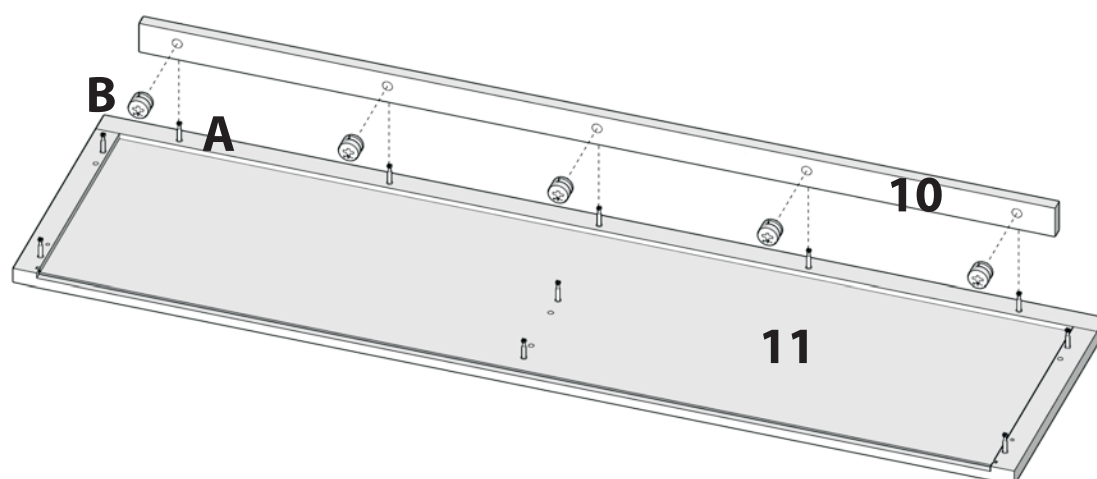
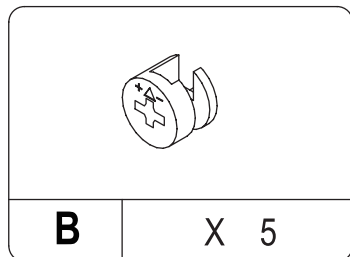





STEP 7:


Attach door stoppers (F2) to doors (6)+(7) by securing screws (E).

Attach lower hinge (H1) to door (6) by securing screws (G). Attach lower hinge (H2) to door (7) by securing screws (G).

Attach handles (J) to doors (6)+(7) by securing screws (I).




			
E	F2	G	H1
X 4	X 2	X 4	X 1

		
H2	I	J
X 1	X 4	X 2

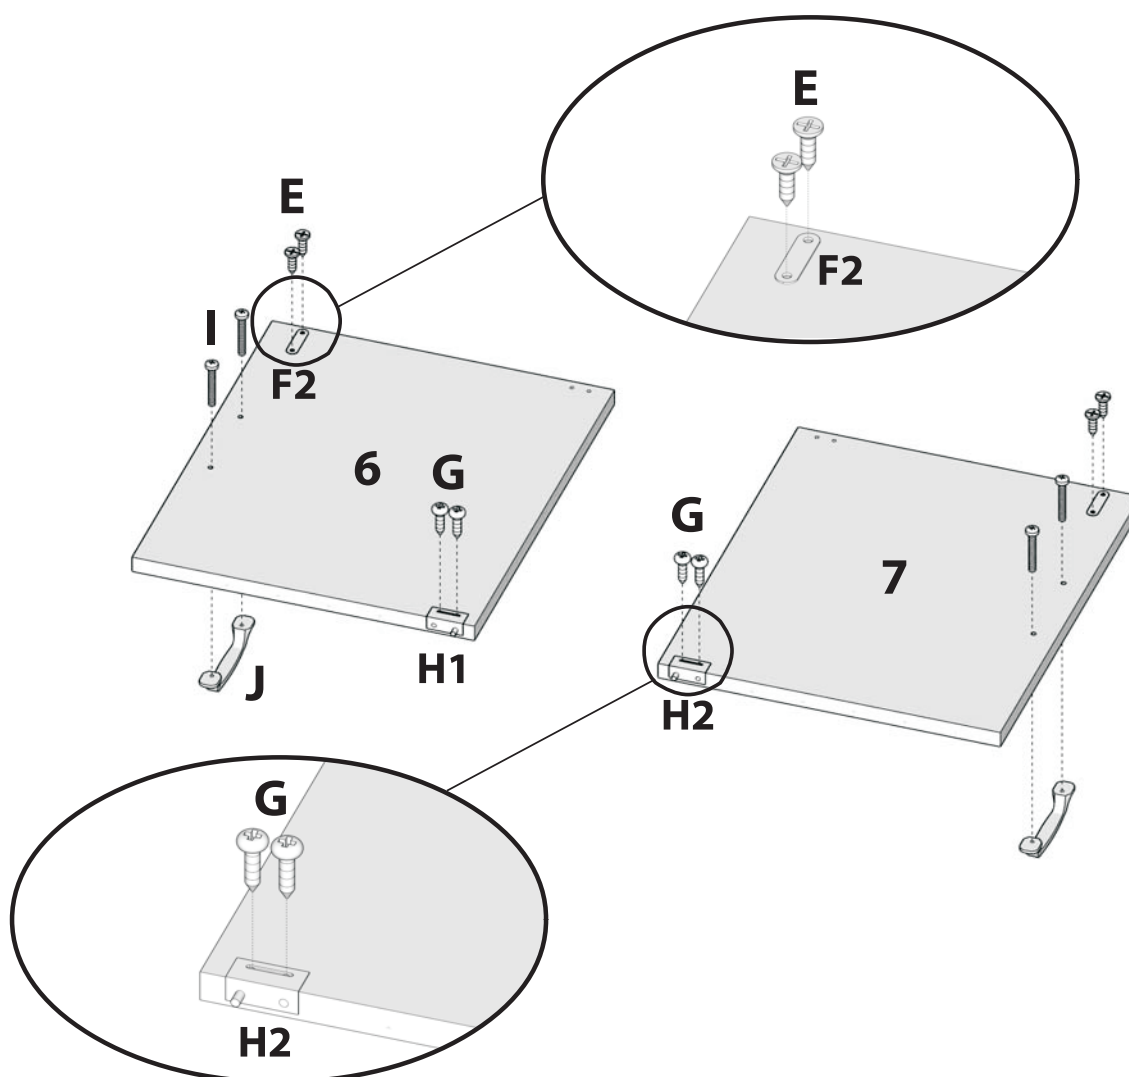

STEP 8:

Join panels (10)+(11) by inserting bolts (A) and dowels (C). Lock it by inserting and securing excenter fittings (B).

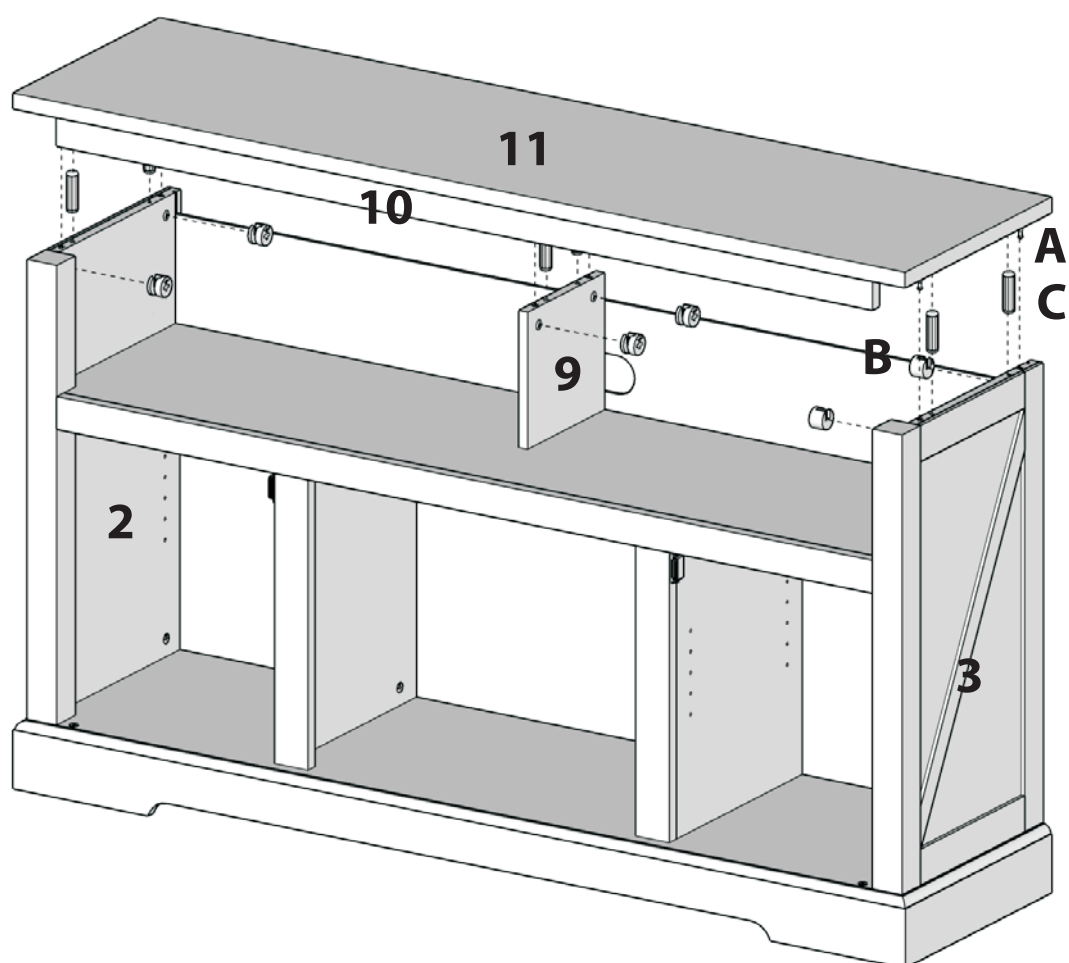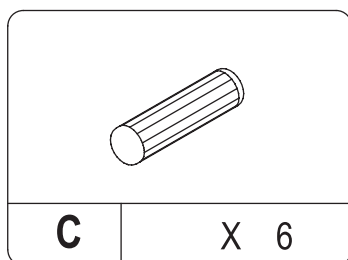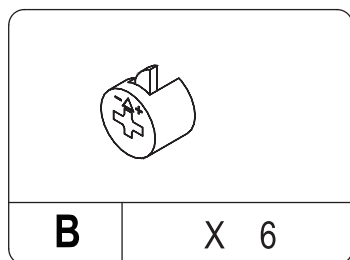



STEP 9:

Insert upper hinge (H2) to left plug of panel (8). Join door (6) by inserting lower plug on panel (1).

Go with STEP 9.



Insert upper hinge (H1) to right plug of panel (8). Join door (7) by inserting lower plug on panel (1).

Go with STEP 9.

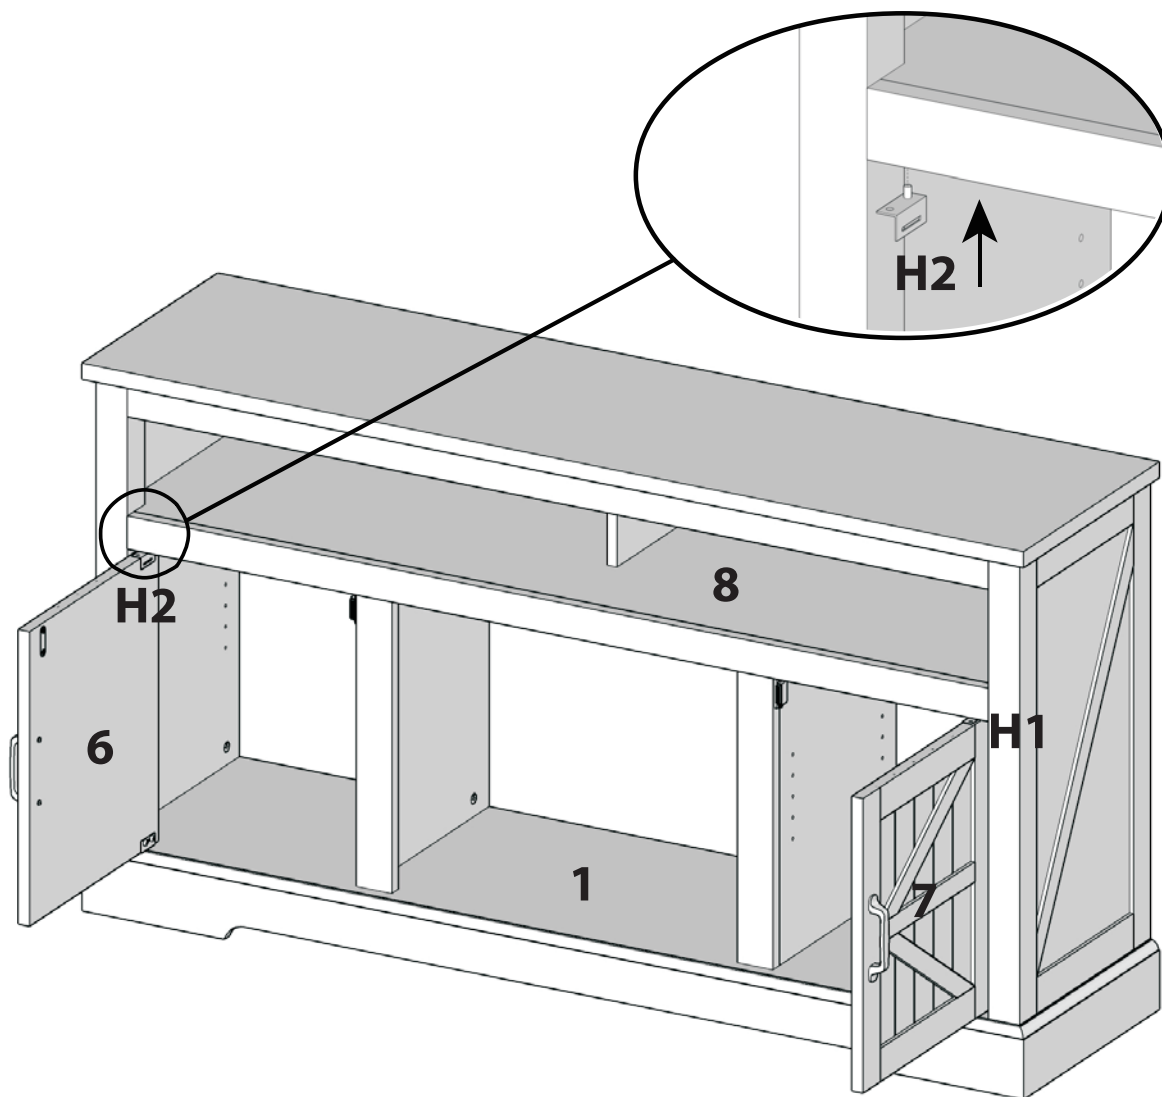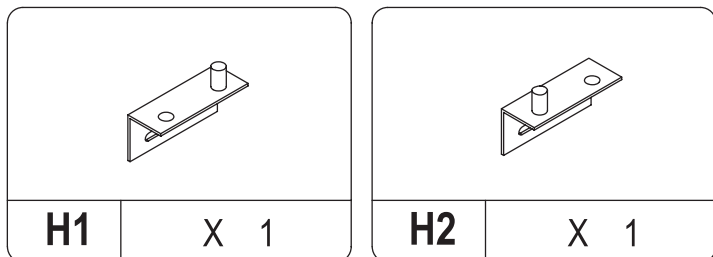


STEP 10:

Attach upper hinges by securing screws (G).

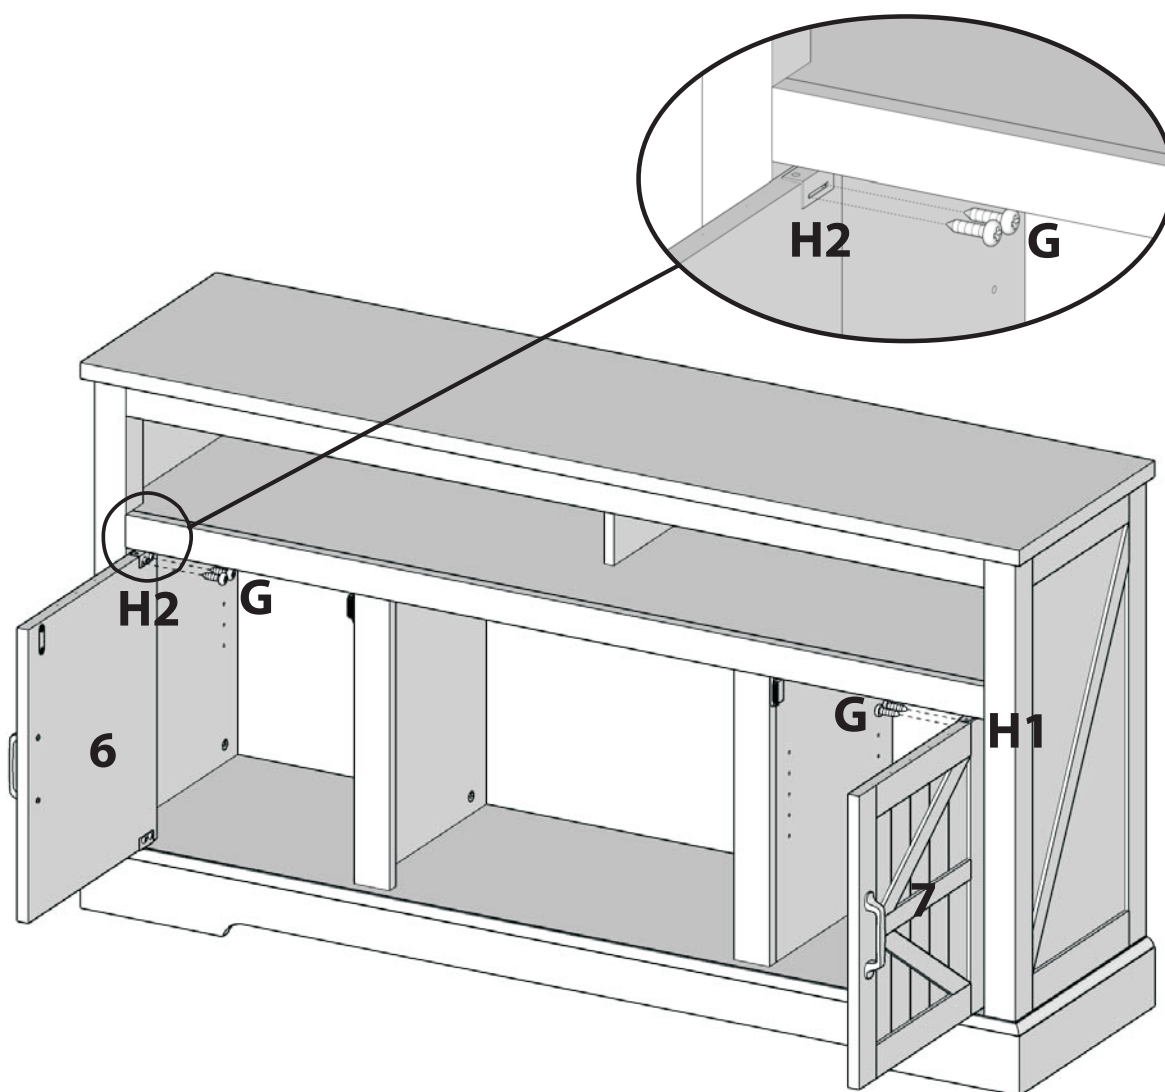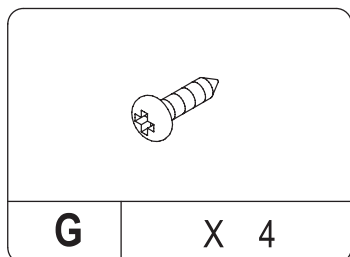



STEP 11:

Adjust the doors' position by loosening, moving, and tightening hinges.

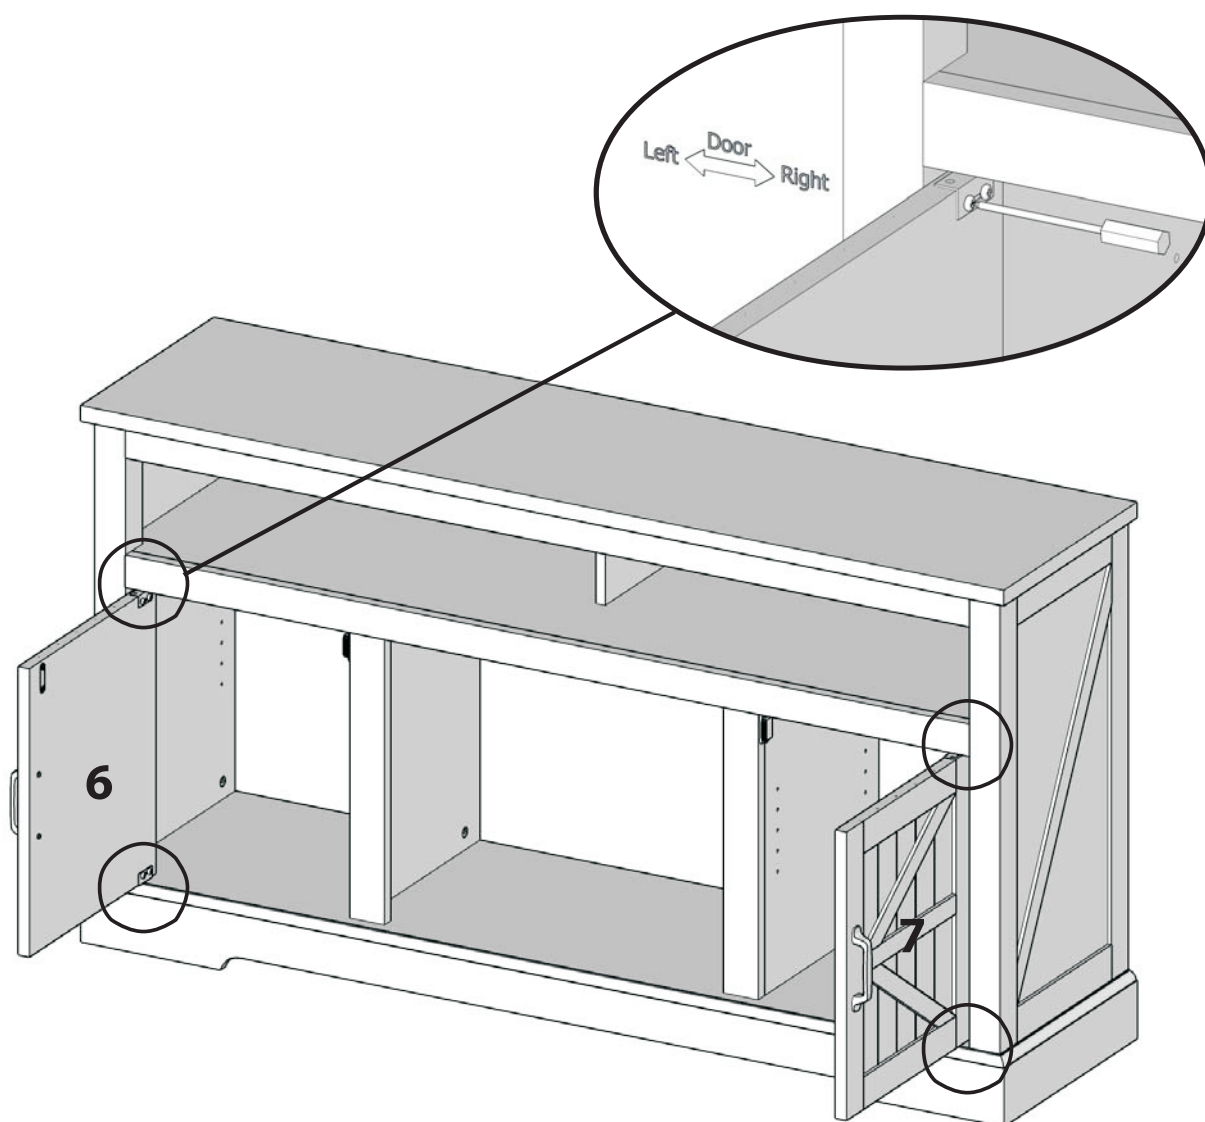



STEP 12:

Insert shelf supports (K). Put on shelves (12).

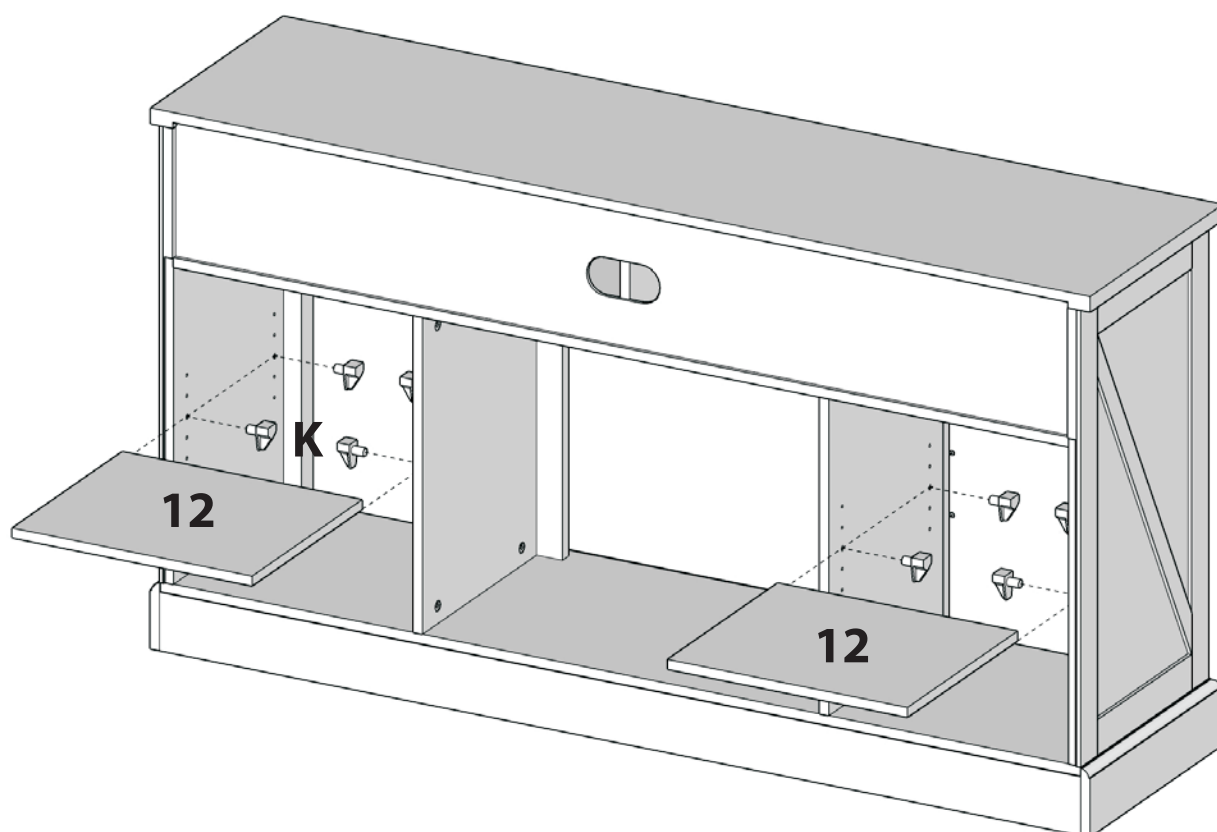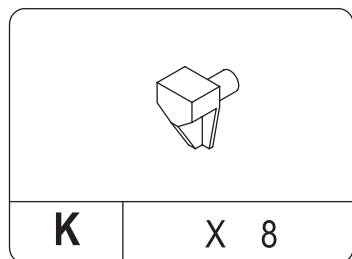



STEP 13:

Join panels (13) by securing screws (G).

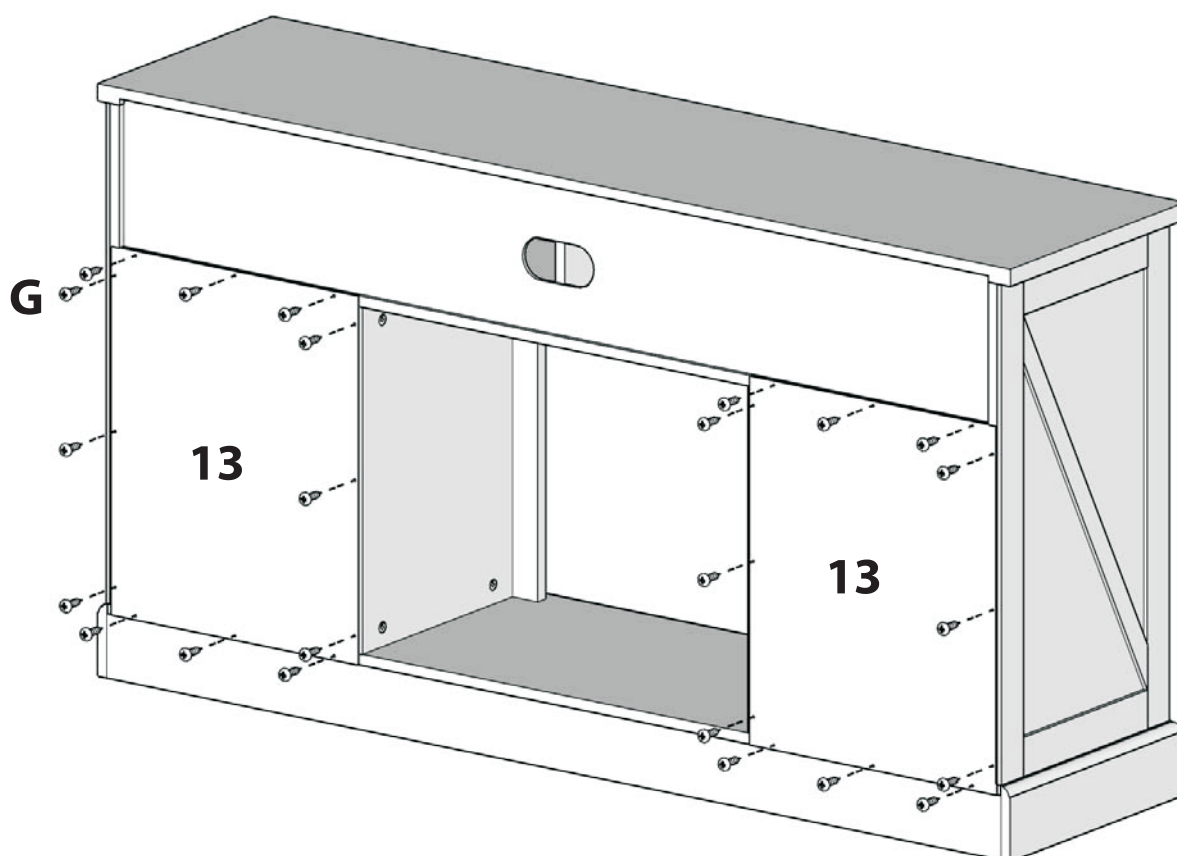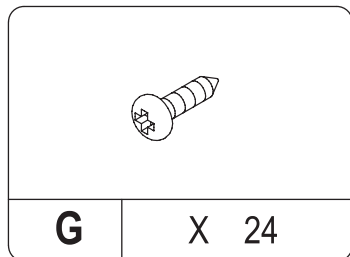

STEP 14:

Install firebox by securing screws (M).

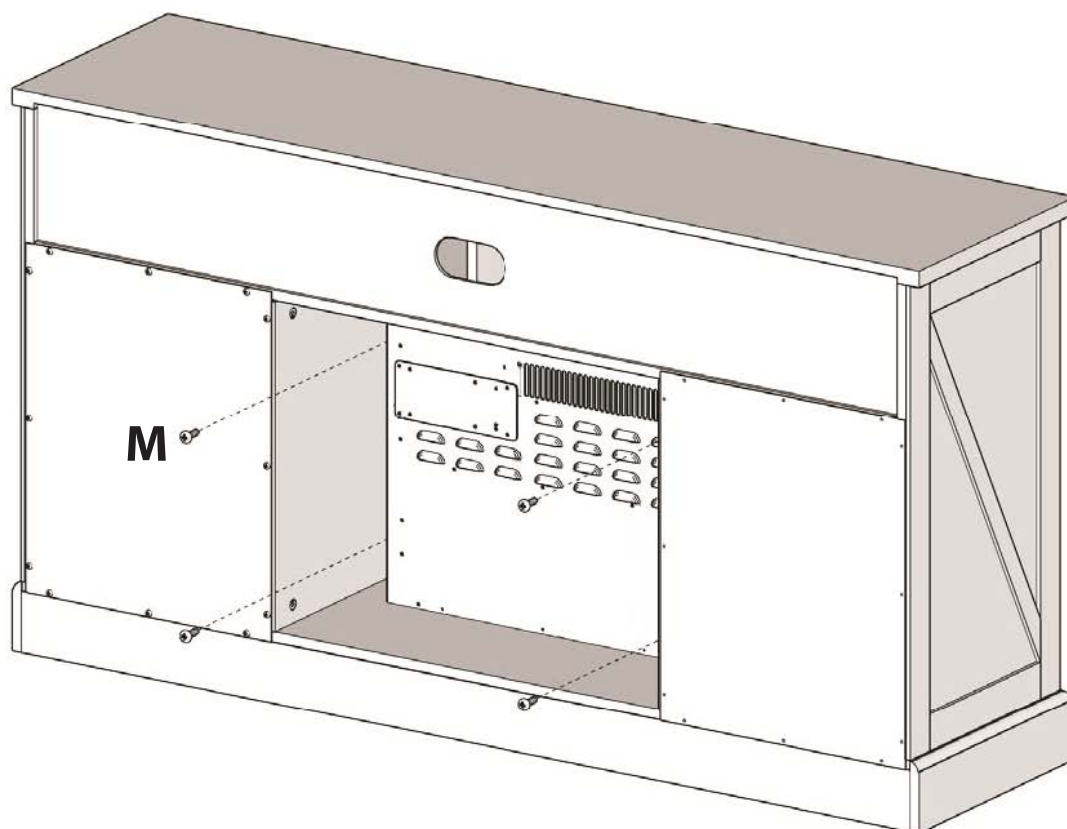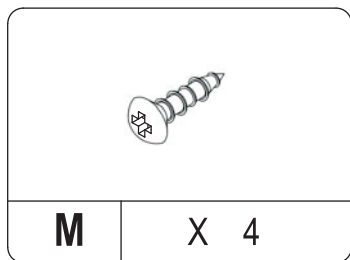

Thank you for purchasing this product! If you have any questions about the product, such as the missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY
SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE
GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio
al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO
BAJO GARANTÍA.

Add: ROWAN ELECTRIC APPLIANCE LLC 28407 Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826