


ASSEMBLY INSTRUCTIONS

EEI-4342

V3.12.23.24

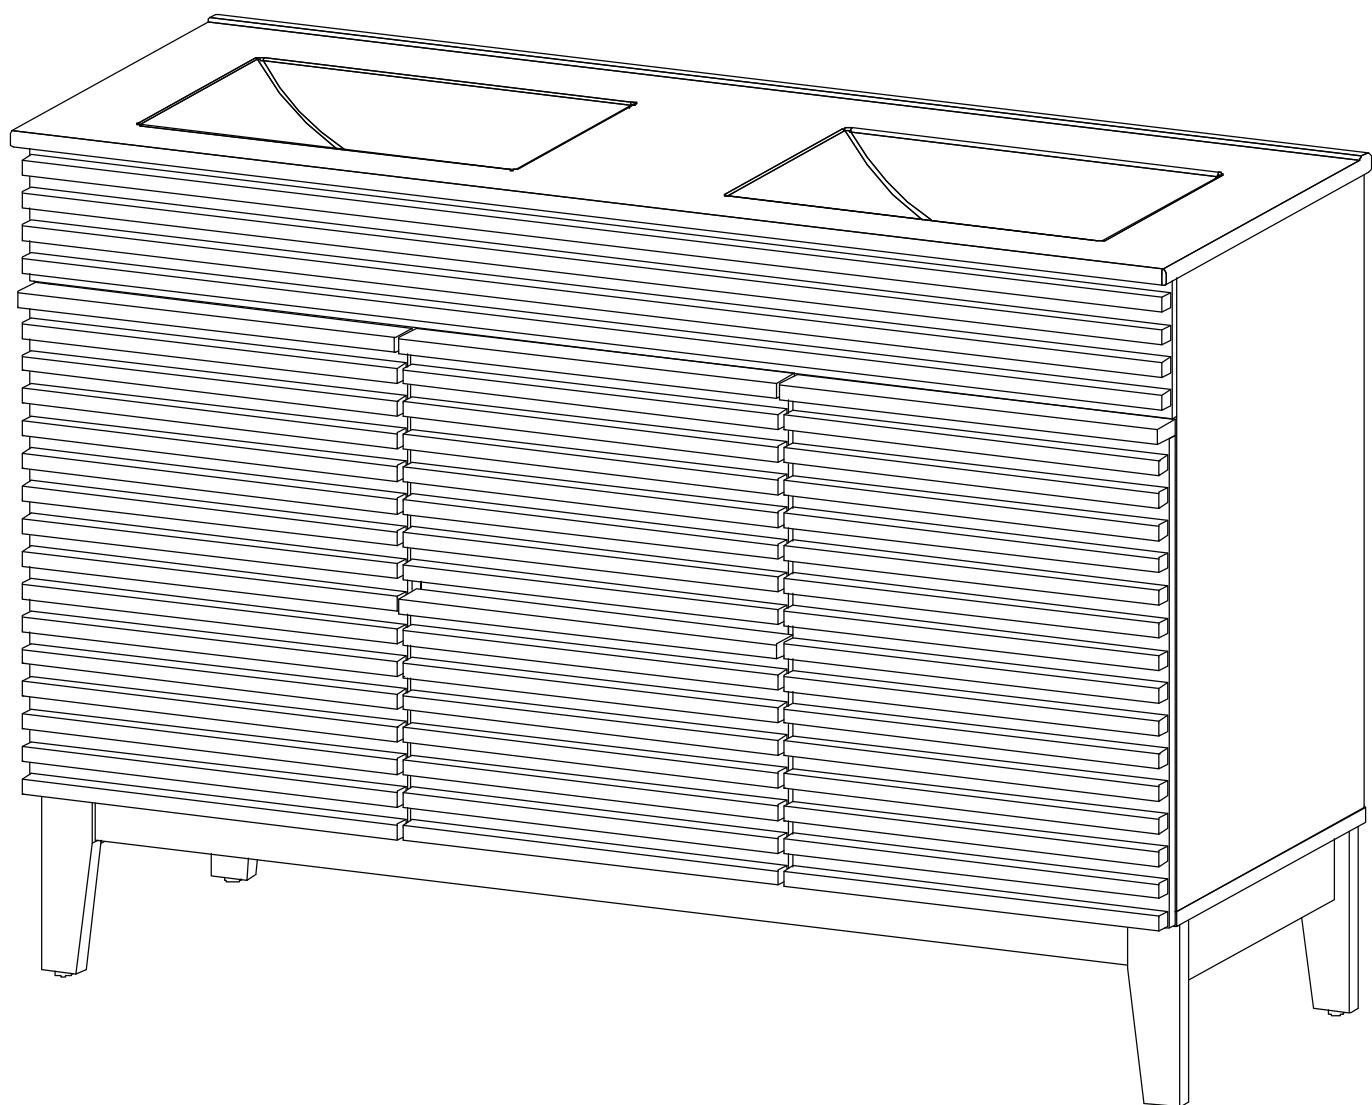

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.


For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Bottom Board	x1	11	Front Drawer	x2	21	Back Skirt 2	x1
2	Side Board Left	x1	12	Back Drawer	x2			
3	Side Board Right	x1	13	Bottom Drawer	x2			
4	Center Board Left	x1	14	Front Skirt 1	x1			
5	Center Board Right	x1	15	Assembly Leg	x2			
6	Adjustable Shelf	x2	16	Support Board 2	x1			
7	Support Board 1	x2	17	Frame Door Left	x1			
8	Side Drawer Left	x2	18	Frame Door Right	x1			
9	Side Drawer Right	x2	19	Front Skirt 2	x1			
10	Support Leg	x2	20	Back Skirt 1	x1			

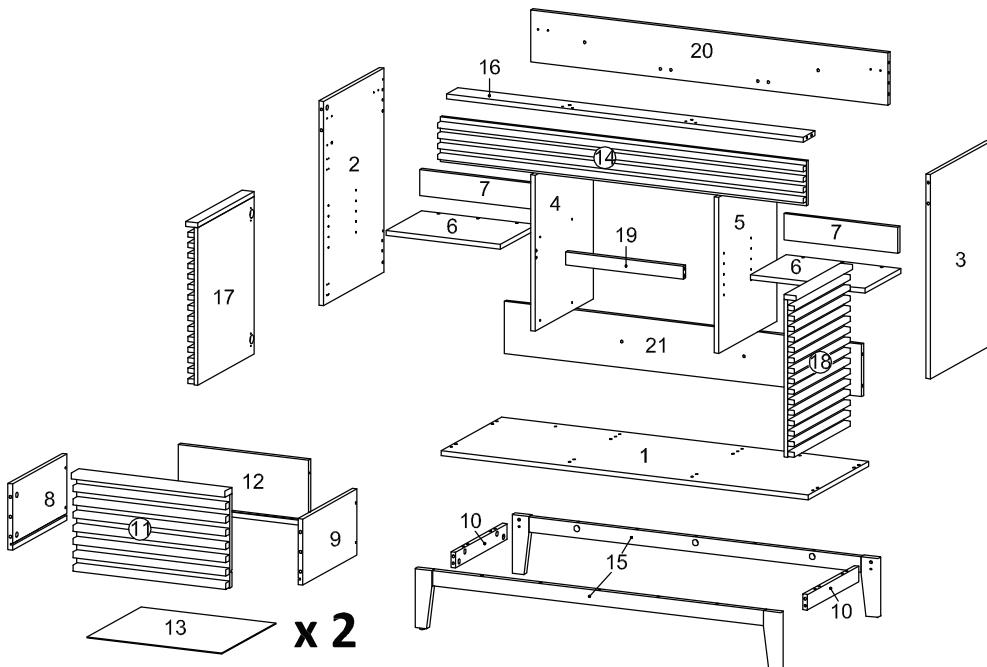

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x24	J		Bracket	x2	BO45		Bracket	x2
B		Cam Lock Ø15 mm	x26	K		Screw M 6 x 10.5 mm	x22	BC67		Bracket	x4
C		Wood Dowel Ø8 x 30 mm	x40	L		Foam/Rubber Pad	x10	HS26A		Hinge	x4
D		Screw M 7 x 50 mm	x19	M		Cam Bolt Ø6 x 32 mm	x10	US11		Anti Deflection Bar	x1
E		Allen Key	x2	N		Cam Lock Ø12 mm	x8				
F		Screw M 6 x 15 mm	x2	O		Wood Dowel Ø6 x 30 mm	x4				
G		Screw M 4.5 x 12.5 mm	x52	P		Screw M 3.5 x 13 mm	x12				
H		Shelf Support	x8	Q		Screw M 8 x 39 mm	x8				
I		JCN Nut	x2	RM30A		Drawer Runner	x2				

What you need:



You may also need:

- + Power Drill
- + Level
- + Silicone Adhesive or Caulk
- + Drywall Anchors and Screws
- + Other Wall-Mounting Hardware

Components Carton Placement

Carton 1 of 2

Label	Description	Qty
1	Bottom Board	x1
7	Support Board 1	x2
8	Side Drawer Left	x2
9	Side Drawer Right	x2
10	Support Leg	x2
12	Back Drawer	x2
13	Bottom Drawer	x2
14	Front Skirt 1	x1
15	Assembly Leg	x2
16	Support Board 2	x1
19	Front Skirt 2	x1
20	Back Skirt 1	x1

Carton 2 of 2

Label	Description	Qty
21	Back Skirt 2	x1
	Hardware Pack	x1
2	Side Board Left	x1
3	Side Board Right	x1
4	Center Board Left	x1
5	Center Board Right	x1
6	Adjustable Shelf	x2
11	Front Drawer	x2
17	Frame Door Left	x1
18	Frame Door Right	x1
	Hardware Pack	x1

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- (M) Cam Bolt Ø6 x 32 mm x8
- (N) Cam Lock Ø12 mm x8
- (O) Wood Dowel Ø6 x 30 mm x4

COMPONENTS

- (8) Side Drawer left x2
- (9) Side Drawer Right x2
- (11) Front Drawer x2
- (13) Bottom Drawer x2

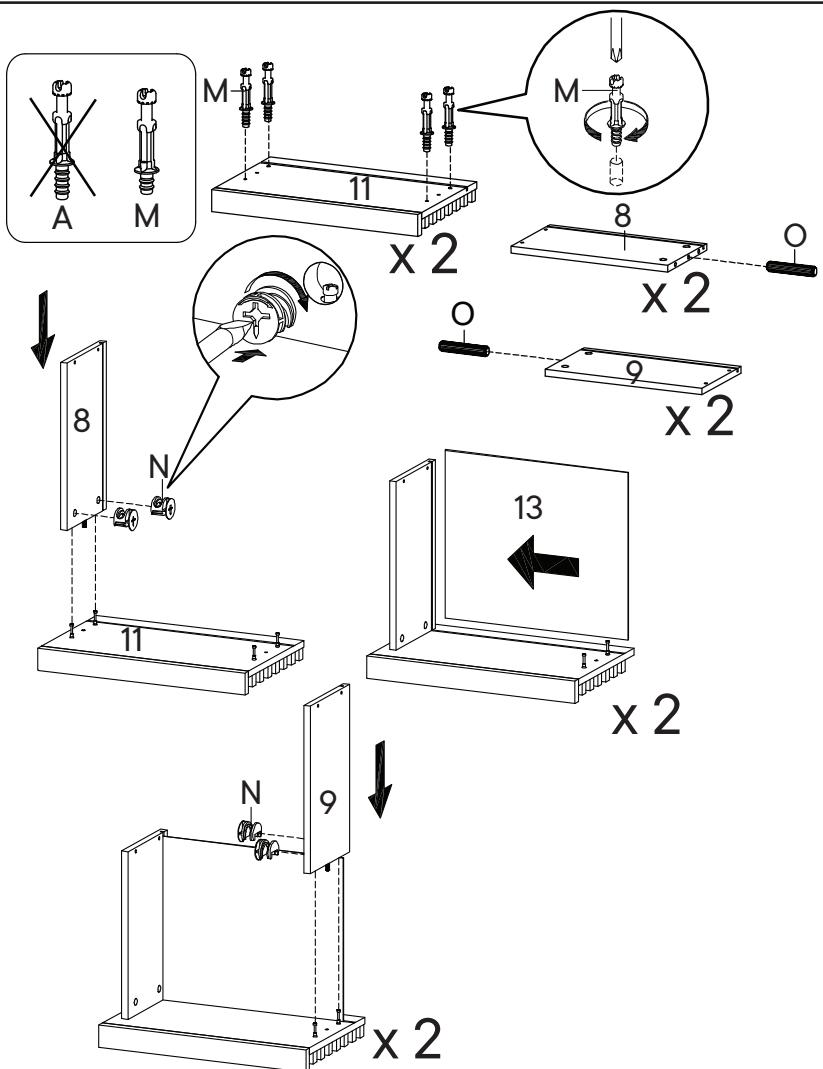


Step 2

HARDWARE

- (P) Screw M 3.5 x 13 mm x12
- (Q) Screw M 8 x 39 mm x8
- RM30A Drawer Runner x2

COMPONENTS

- (12) Back Drawer x2

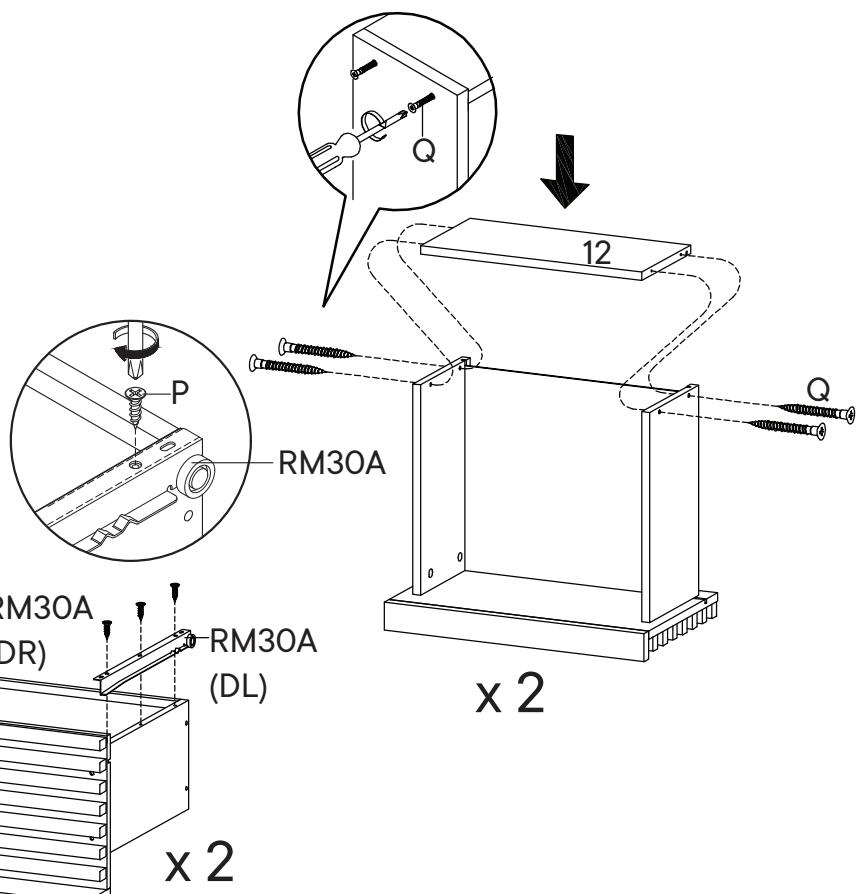


Step 3

HARDWARE

- (A) Cam Bolt Ø6 x 35 mm x10
- (C) Wood Dowel Ø8 x 30 mm x10
- (G) Screw M 4.5 x 12.5 mm x8

COMPONENTS

- (2) Side Drawer left x1
- (3) Side Drawer Right x1
- (16) Support Board 2 x1
- (19) Front Skirt 2 x1

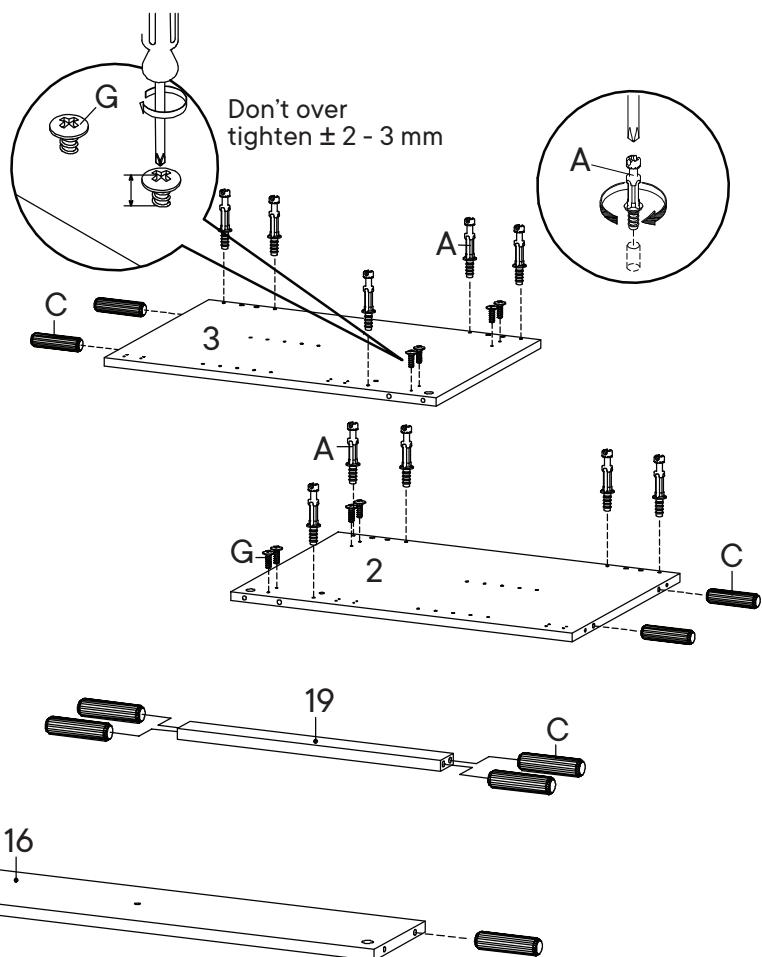


Step 4

HARDWARE

- (C) Wood Dowel Ø8 x 30 mm x10
- (G) Screw M 4.5 x 12.5 mm x4

COMPONENTS

- (20) Back Skirt 1 x1
- (21) Back Skirt 2 x1

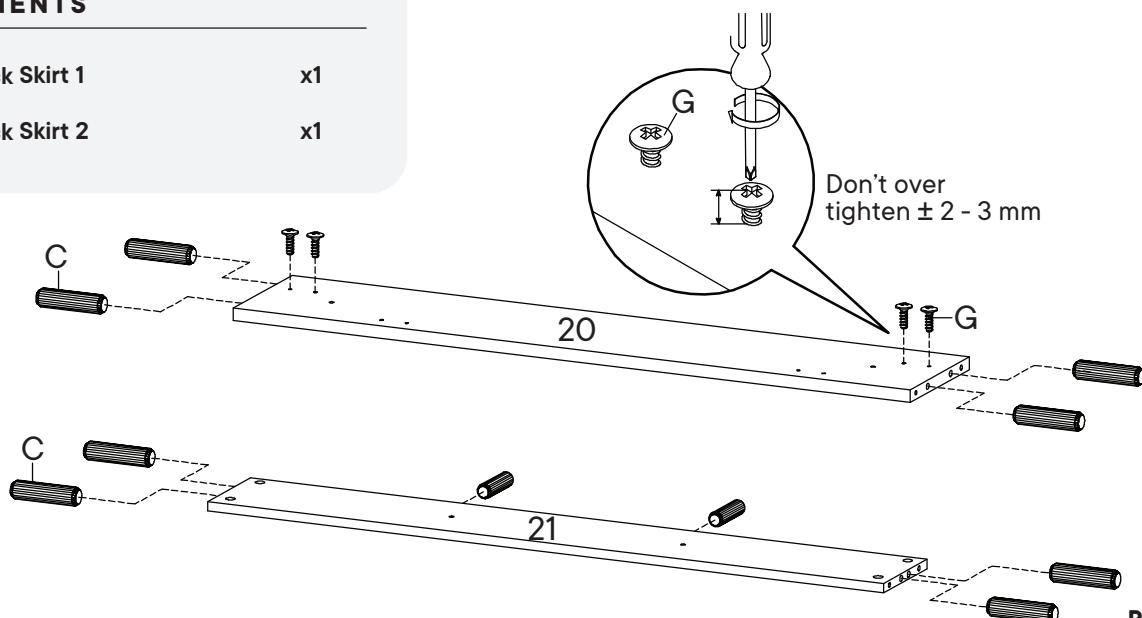



Step 5

HARDWARE

● C	Wood Dowel Ø8 x 30 mm	x6
● K	Screw M 6 x 10.5 mm	x8
RM30A	Drawer Runner	x2

COMPONENTS


● 4	Center Board Left	x1
● 5	Center Board Right	x1
● 7	Support Board 1	x2

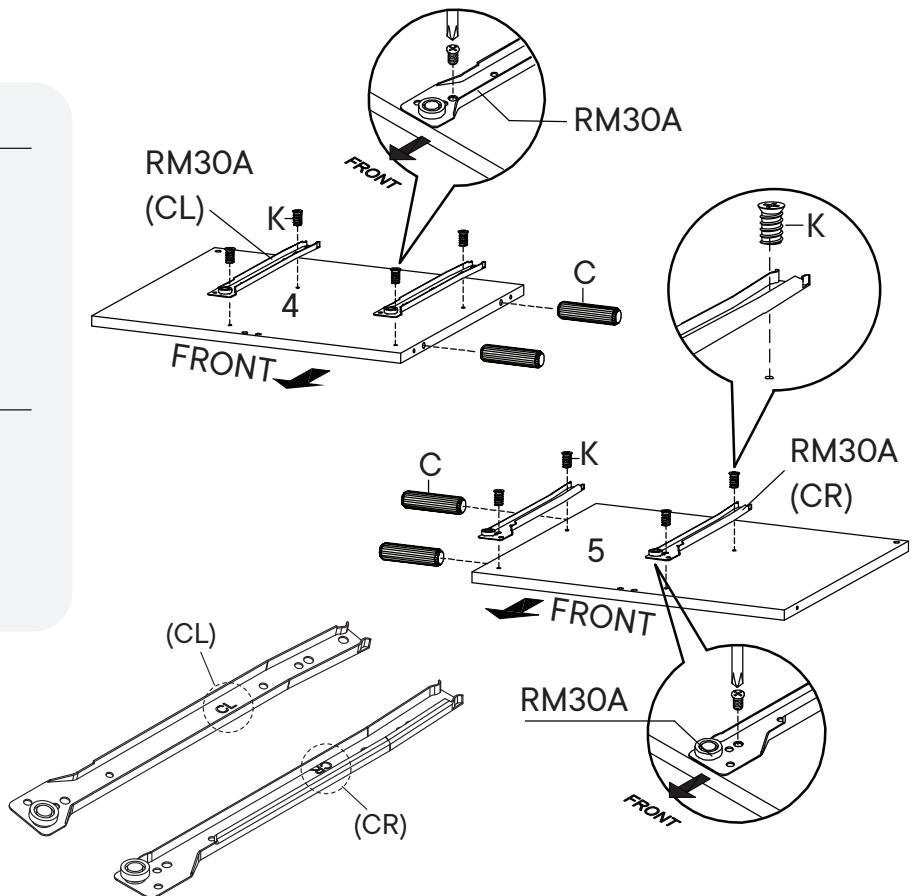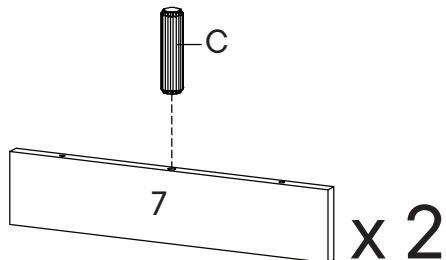

Step 6

COMPONENTS

● 4	Center Board Left	x1
● 5	Center Board Right	x1
● 19	Front Skirt 2	x1

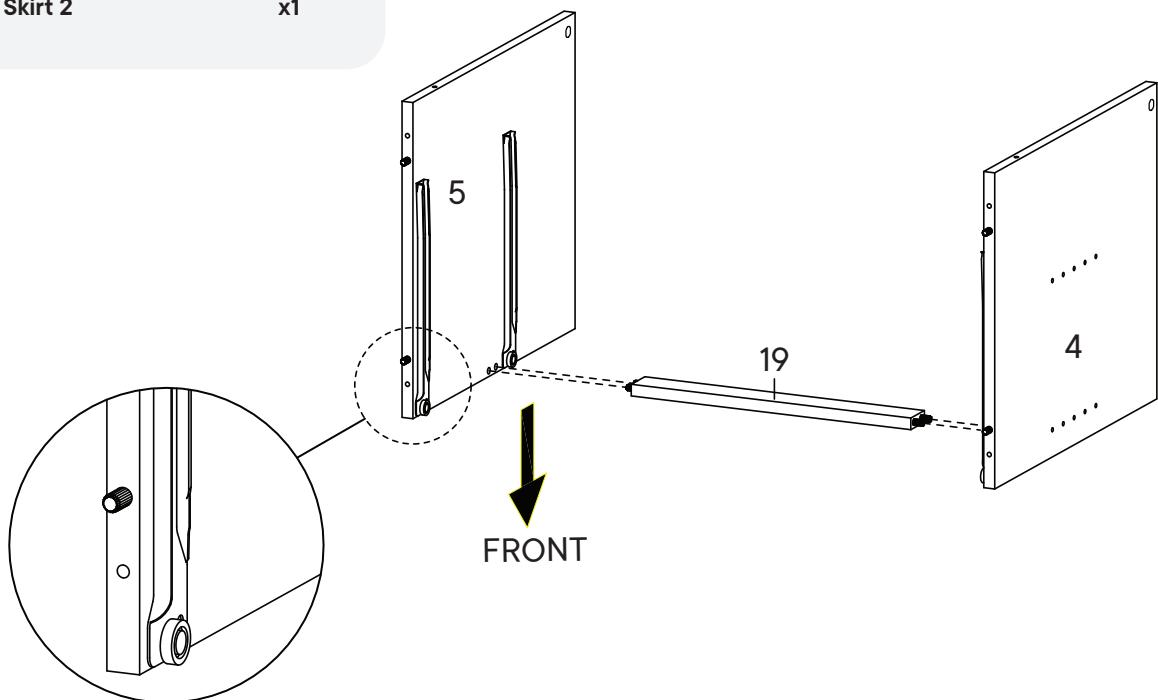

Step 7


HARDWARE

D Screw M 7 x 50 mm x2

E Allen Key x1

COMPONENTS

21 Back Skirt 2 x1

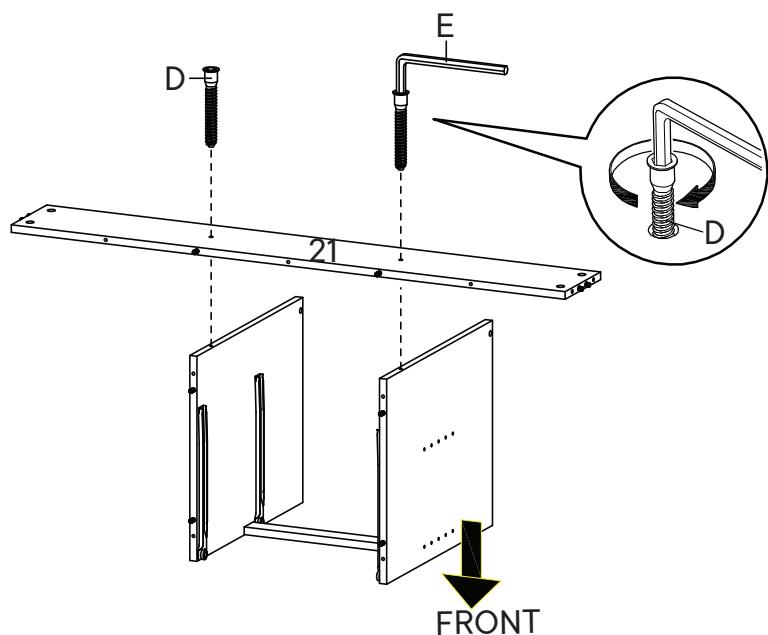

Step 8

HARDWARE


D Screw M 7 x 50 mm x2

E Allen Key x1

COMPONENTS

16 Support Board 2 x1

21 Back Skirt 2 x1

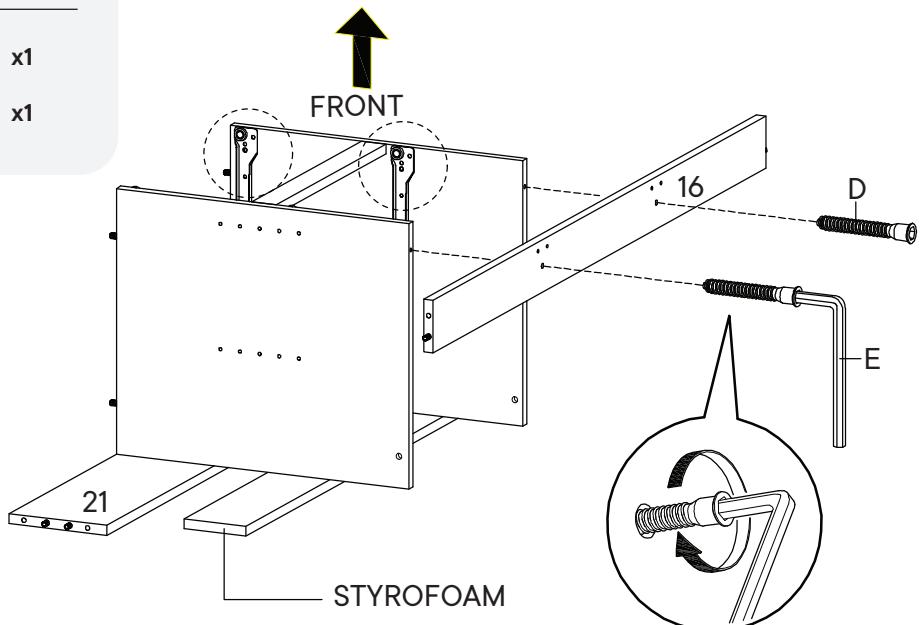



Step 9

HARDWARE

B Cam Lock Ø15 mm x2

COMPONENTS

2 Side Board left x1
3 Side Board Right x1
20 Back Skirt x1

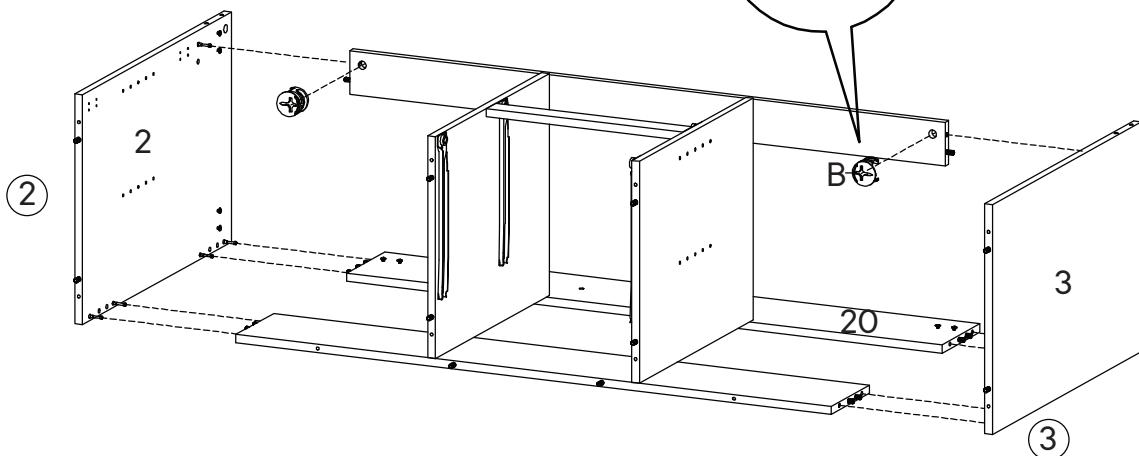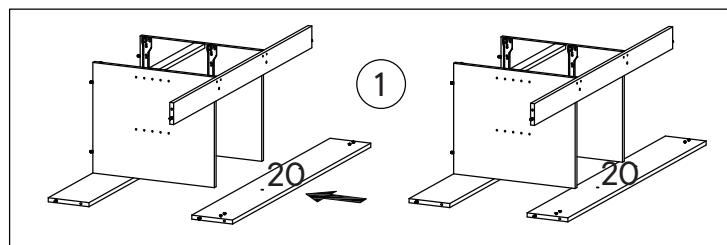



Step 10

HARDWARE

K Screw M 6 x 10.5 mm x14
US11 Anti Deflection Bar x1

COMPONENTS

1 Bottom Board x1

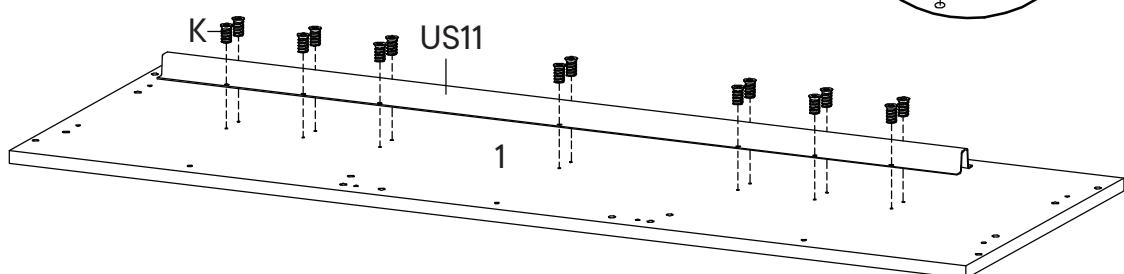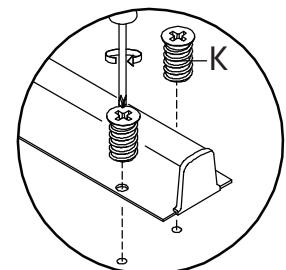


Step 11

HARDWARE

- (D) Screw M 7 x 50 mm x11
- (E) Allen Key x1

COMPONENTS

- (1) Bottom Board x1

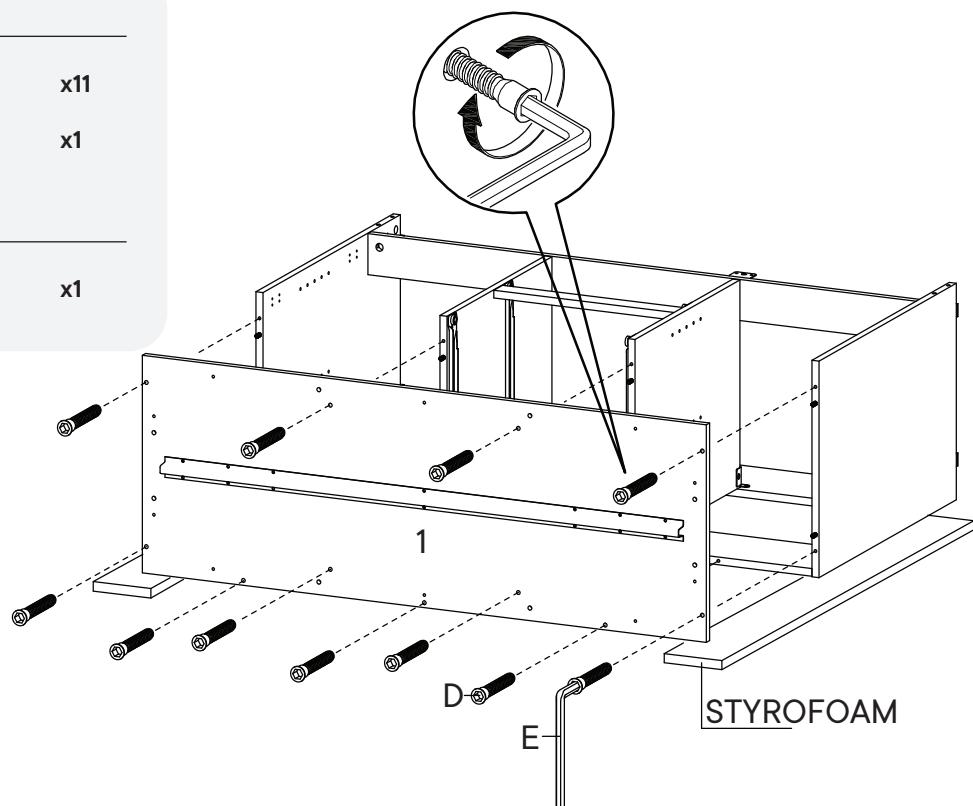



Step 12

HARDWARE

- (A) Cam Bolt Ø6 x 35 mm x4
- (C) Wood Dowel Ø8x 30 mm x4

COMPONENTS

- (10) Support Leg x2
- (15) Assembly Leg x2

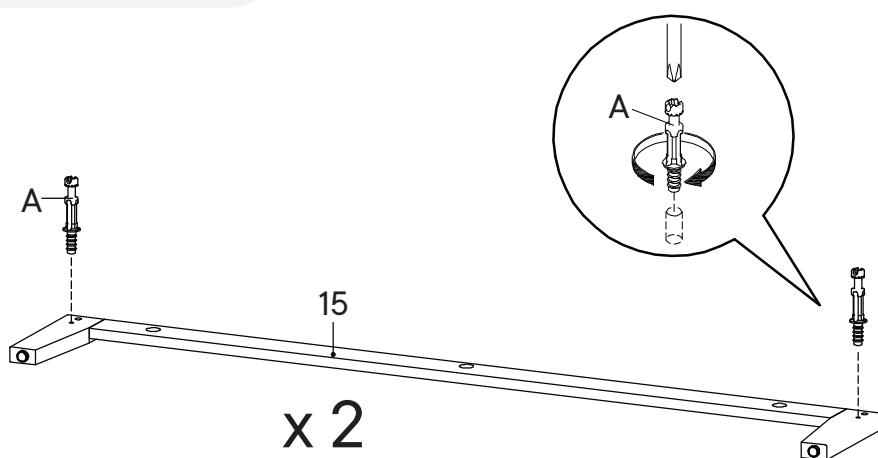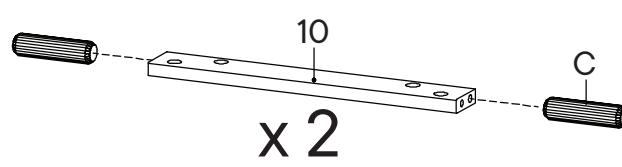

Step 13


HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

10 Support Leg x2


15 Assembly Leg x2

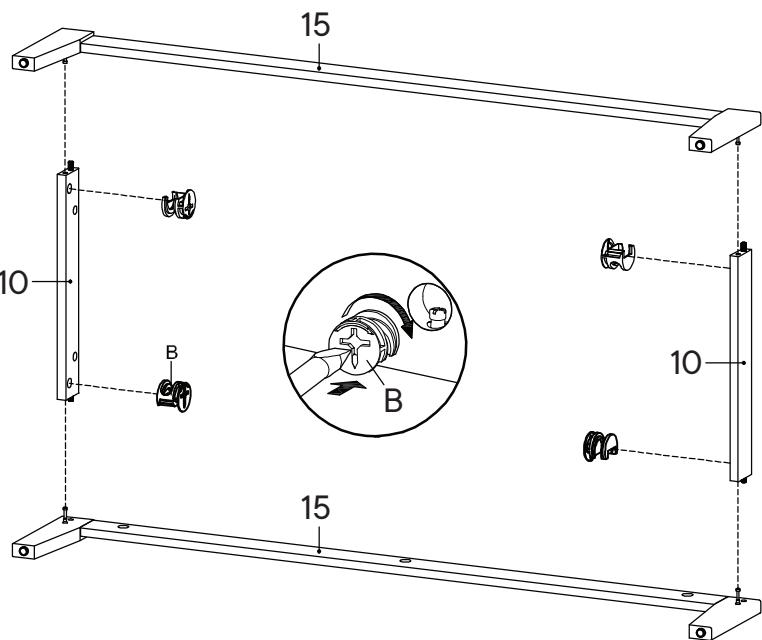

Step 14

HARDWARE


C Wood Dowel Ø8 x 30 mm x8

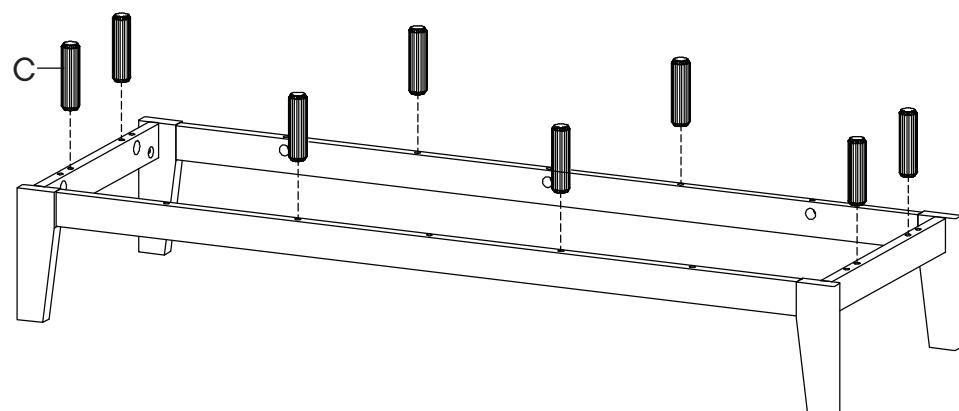

Step 15

HARDWARE


(A) Cam Bolt Ø6 x 35 mm x10

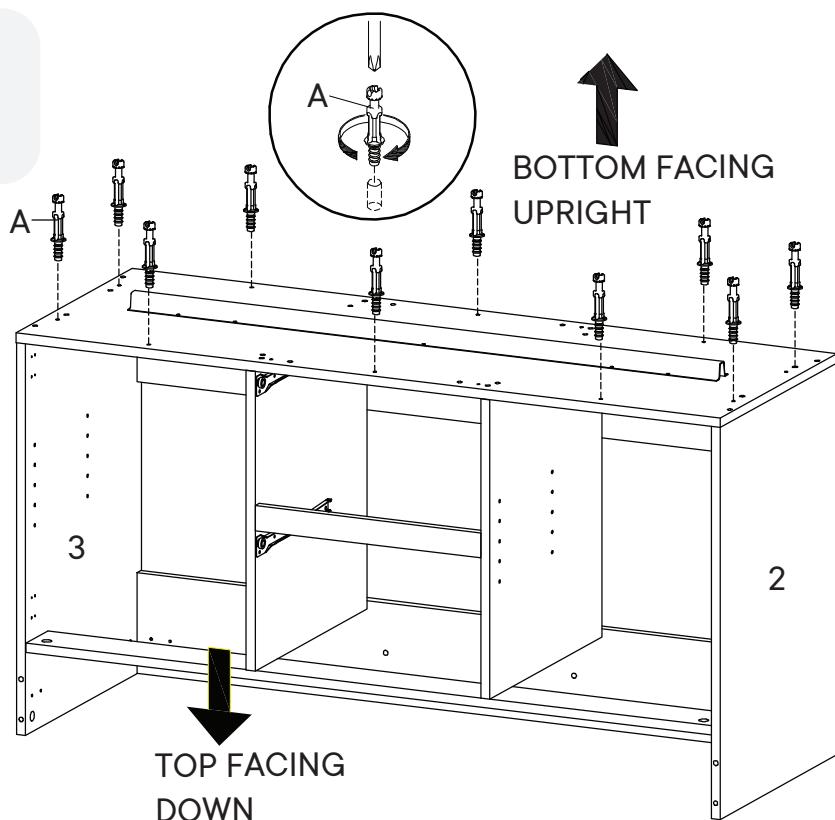

Step 16

HARDWARE

(B) Cam Lock Ø15 mm x10

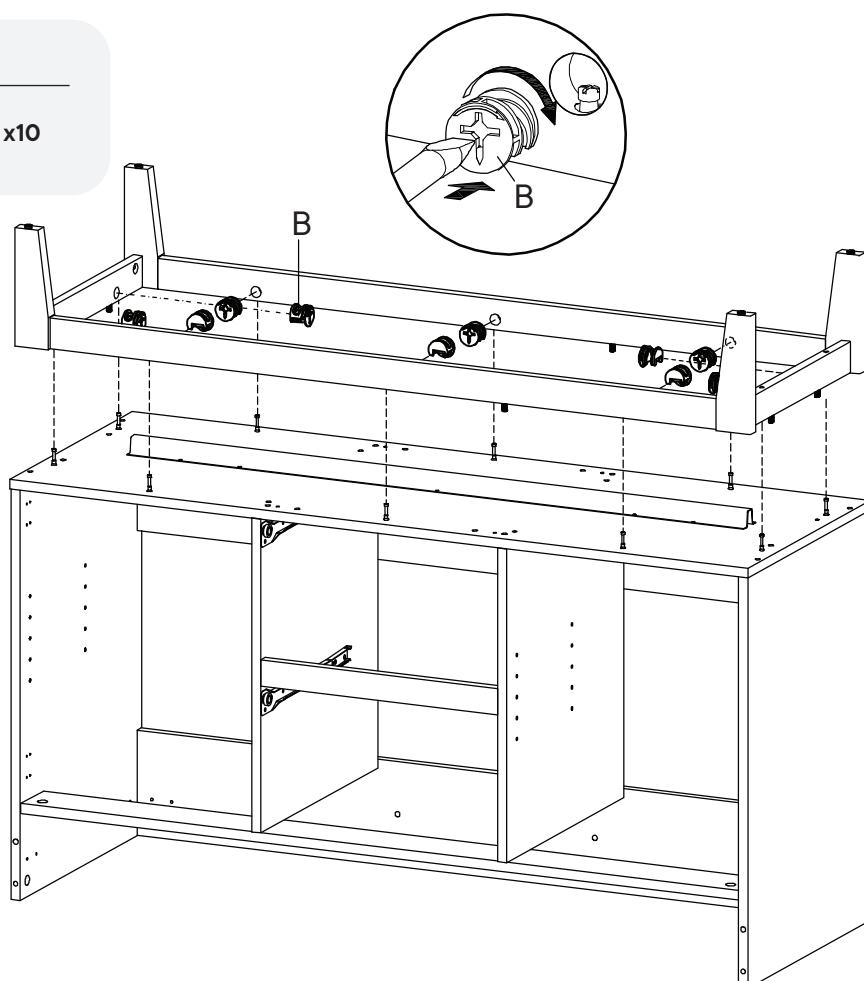


Step 17

HARDWARE

- C Wood Dowel Ø8x 30 mm x2
- M Cam Bolt Ø6 x 32 mm x2
- G Screw M 4.5 x 12.5 mm x4

COMPONENTS

- 14 Front Skirt x1

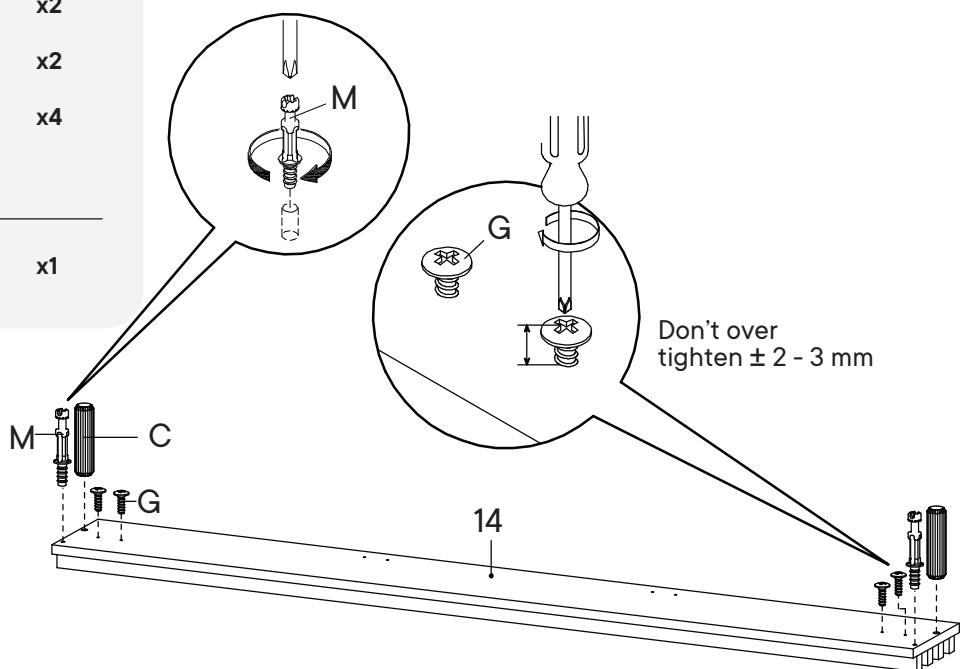


Step 18

HARDWARE

- D Screw M 7 x 50 mm x4
- E Allen Key x1

COMPONENTS

- 6 Adjustable Shelf x2
- 7 Support Board 1 x2

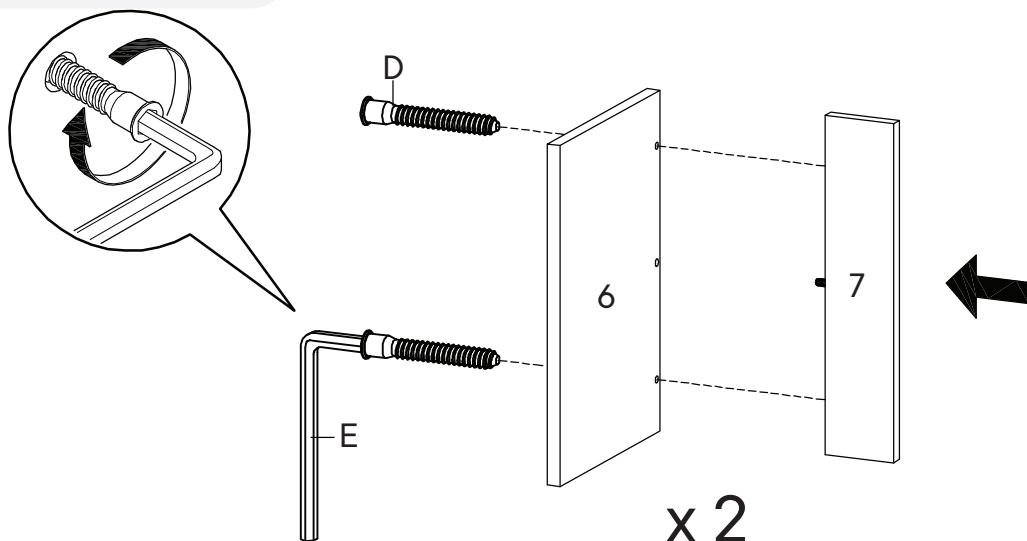


Step 19

HARDWARE

- (B) Cam Lock Ø15 mm x2
- (H) Shelf Support x8

COMPONENTS


- (6) Adjustable Shelf x2
- (14) Front Skirt 1 x1

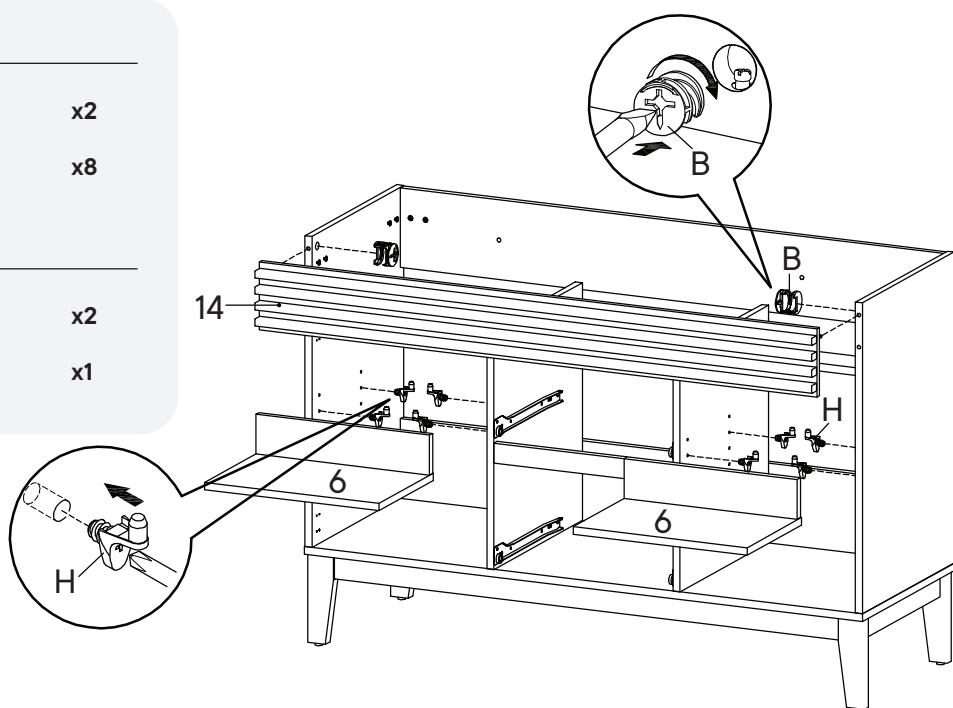

Step 20

HARDWARE


- (B) Cam Lock Ø15 mm x8
- (J) Bracket x2
- (G) Screw M 4.5 x 12.5 mm x8

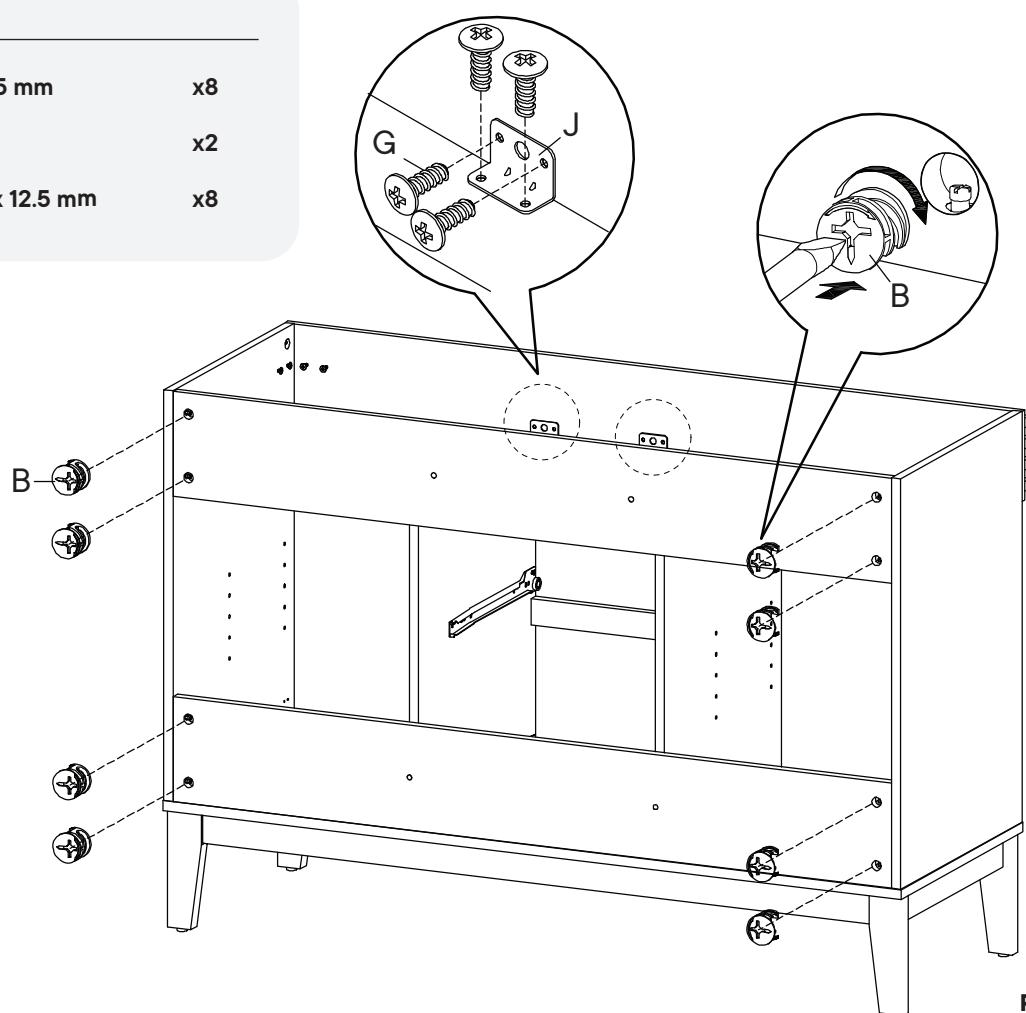


Step 21

HARDWARE

E	Allen Key	x2
F	Screw M 6 x 15 mm	x2
G	Screw M 4.5 x 12.5 mm	x4
I	JCN Nut	x2
BC67	Bracket	x4
BO45	Bracket	x2

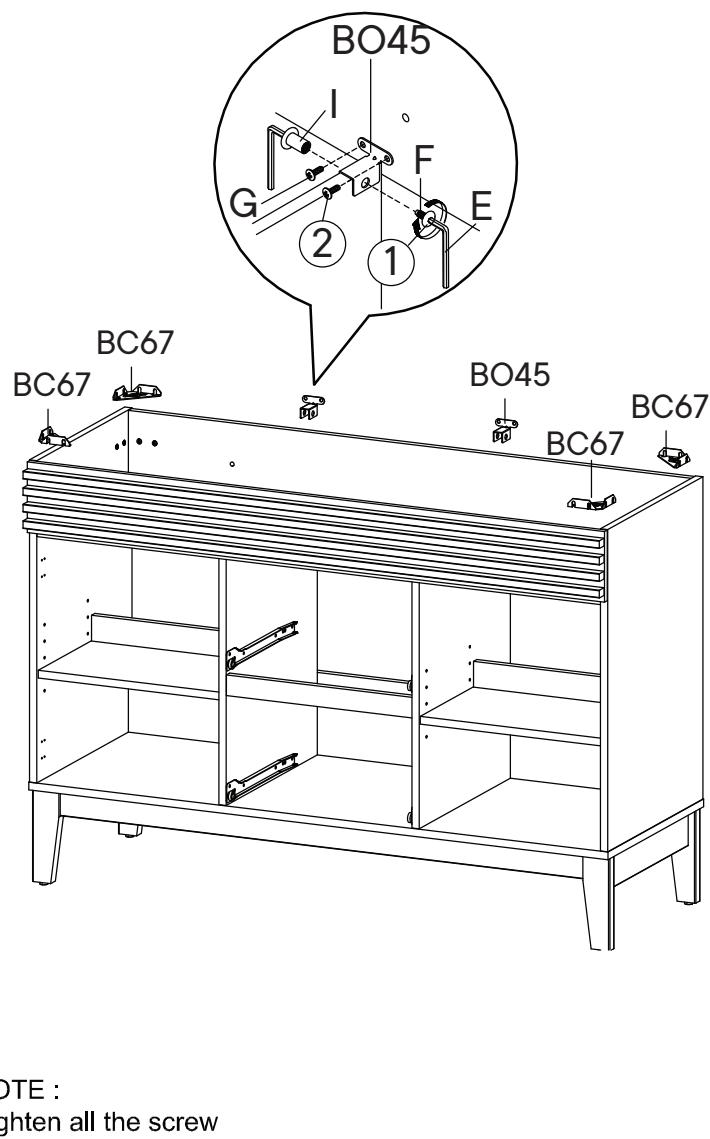



Step 22

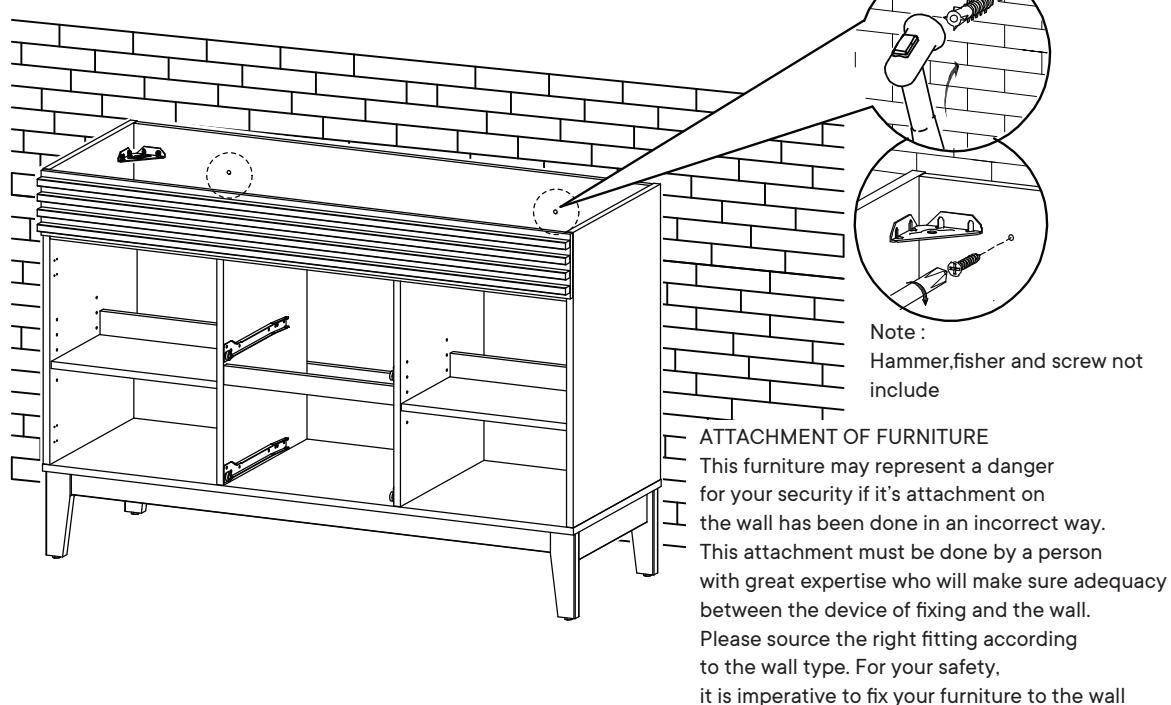

Step 23


HARDWARE

 **Foam/Rubber Pad** x10

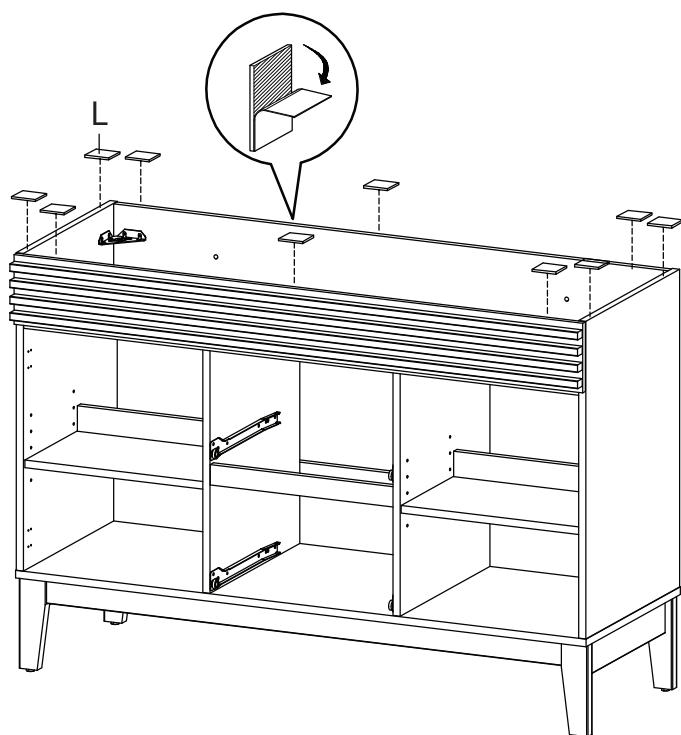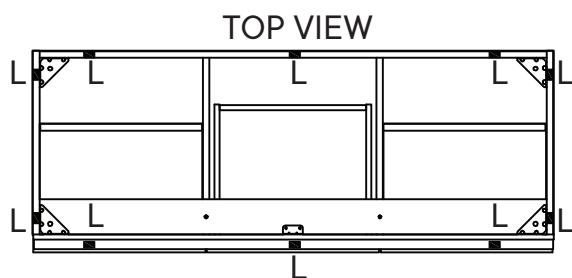

Step 24

Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag

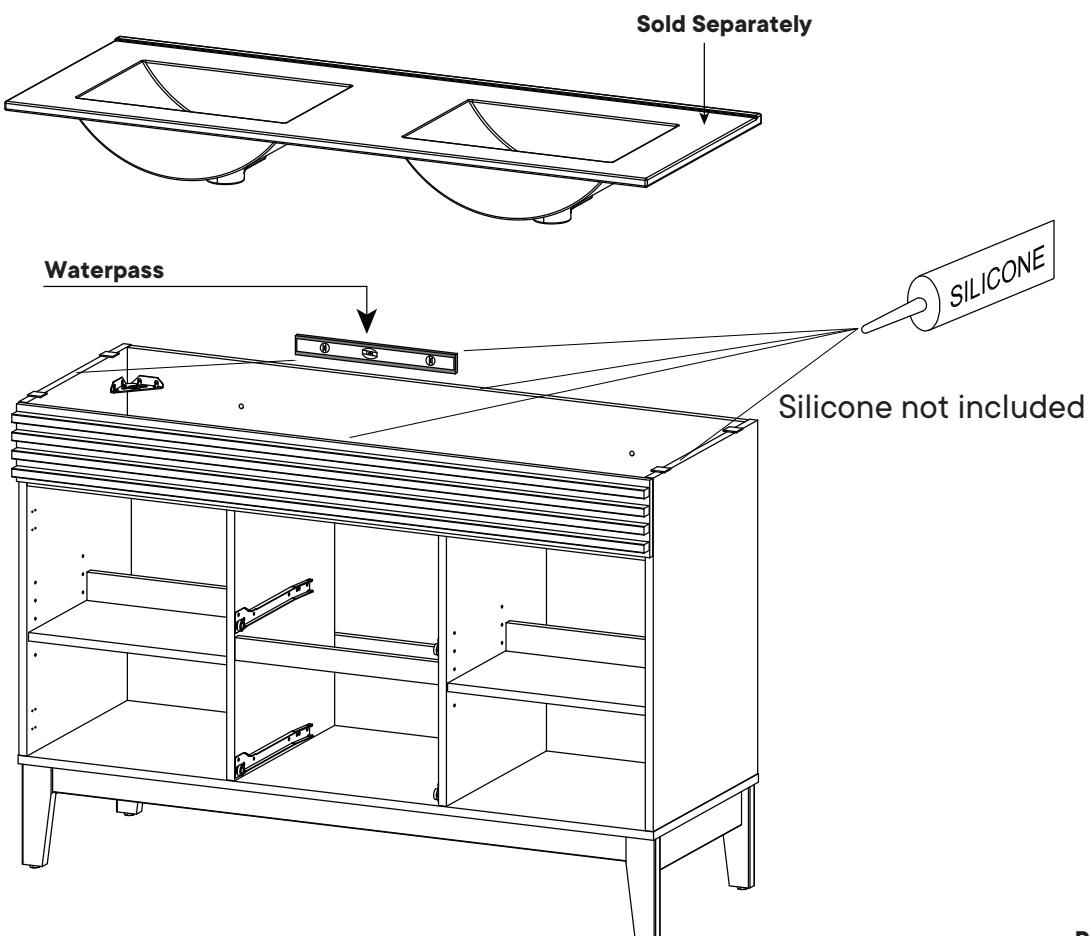


Step 25

HARDWARE

 Screw M 4.5 x 12.5 mm	x8
 Hinge	x4

COMPONENTS

 Frame Door Left	x1
 Frame Door Right	x1

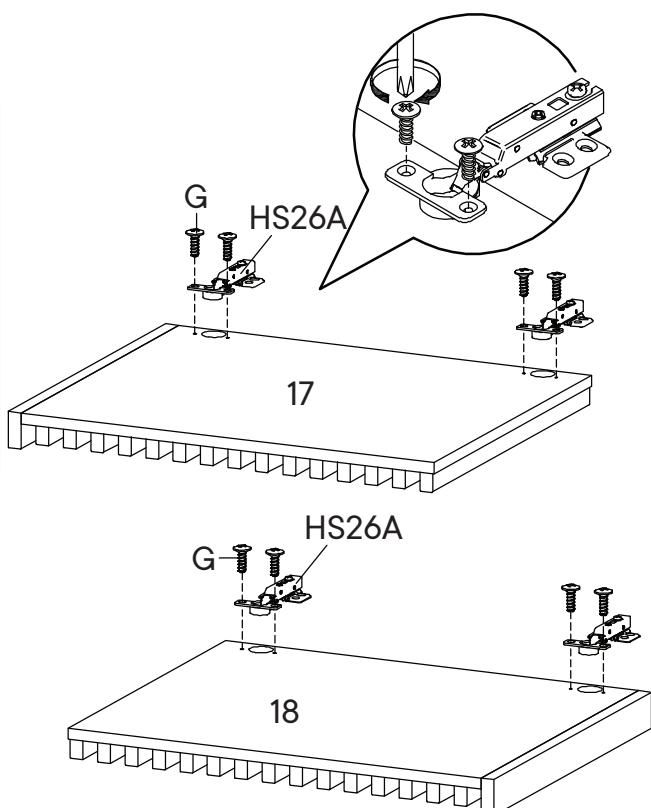



Step 26

HARDWARE



 Screw M 4.5 x 12.5 mm	x16
---	-----

COMPONENTS


 Frame Door Left	x1
 Frame Door Right	x1

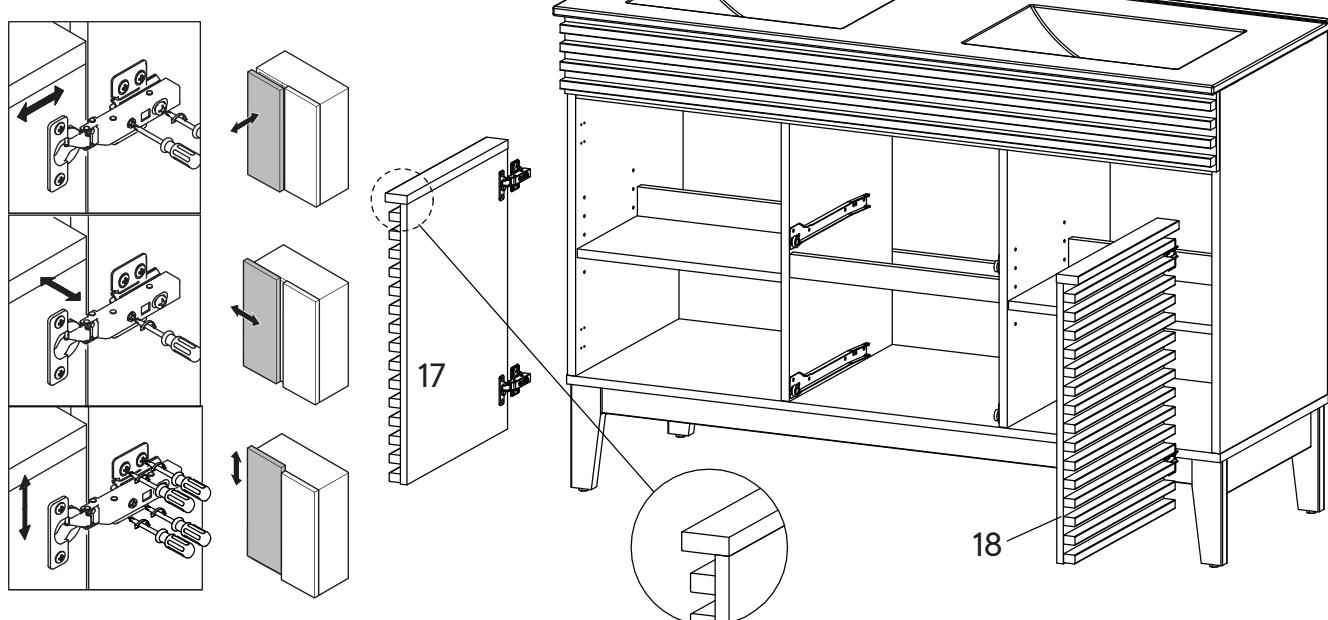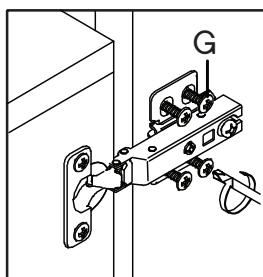

Step 27

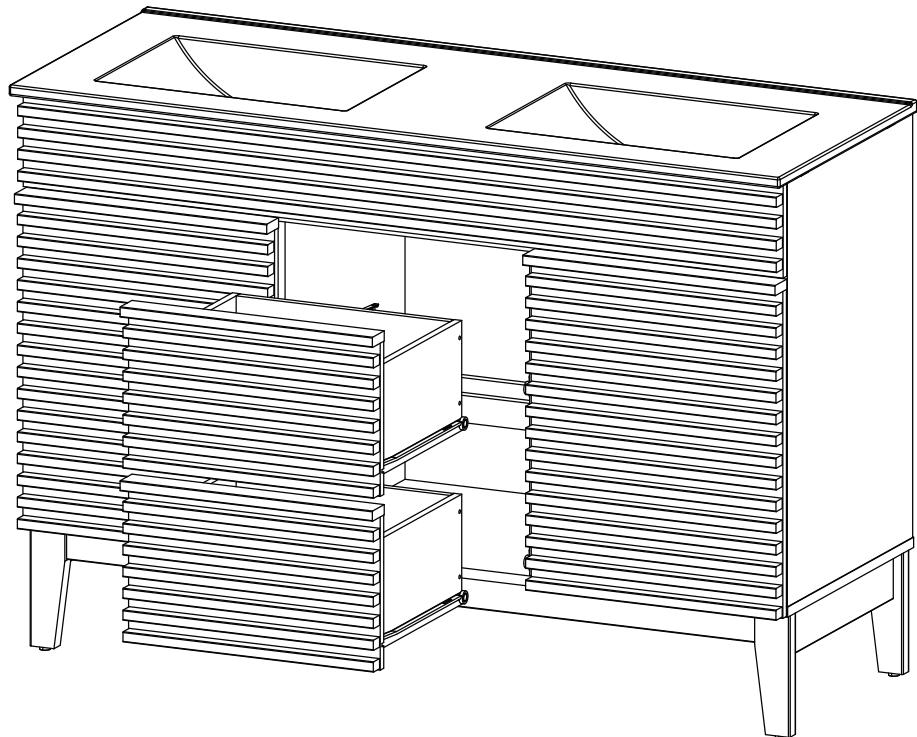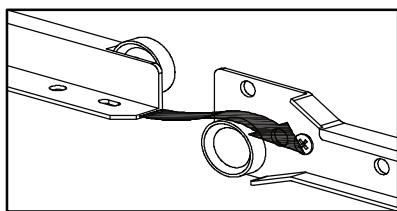


Step 28

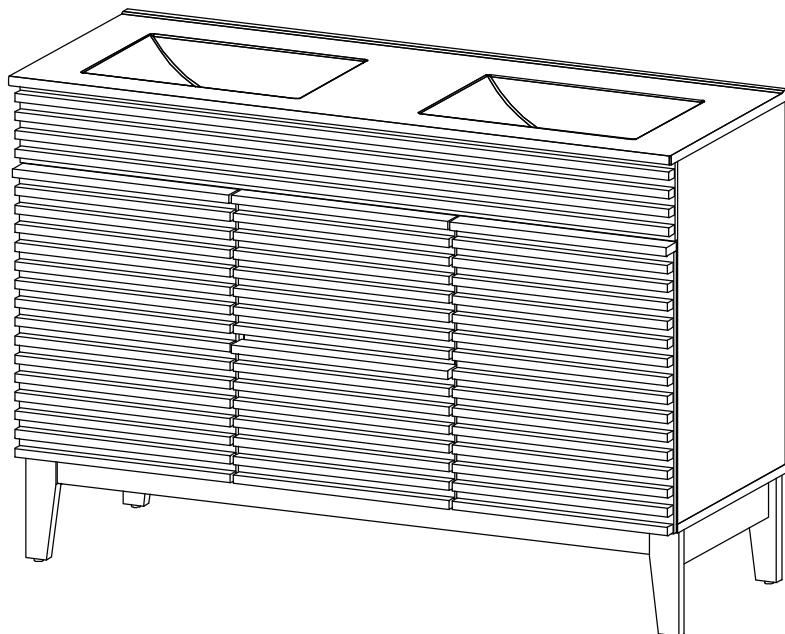

A quick note...

*modway

Your sink basin comes complete with a silver overflow ring. If you'd like to remove this overflow ring, you can do so by hand.

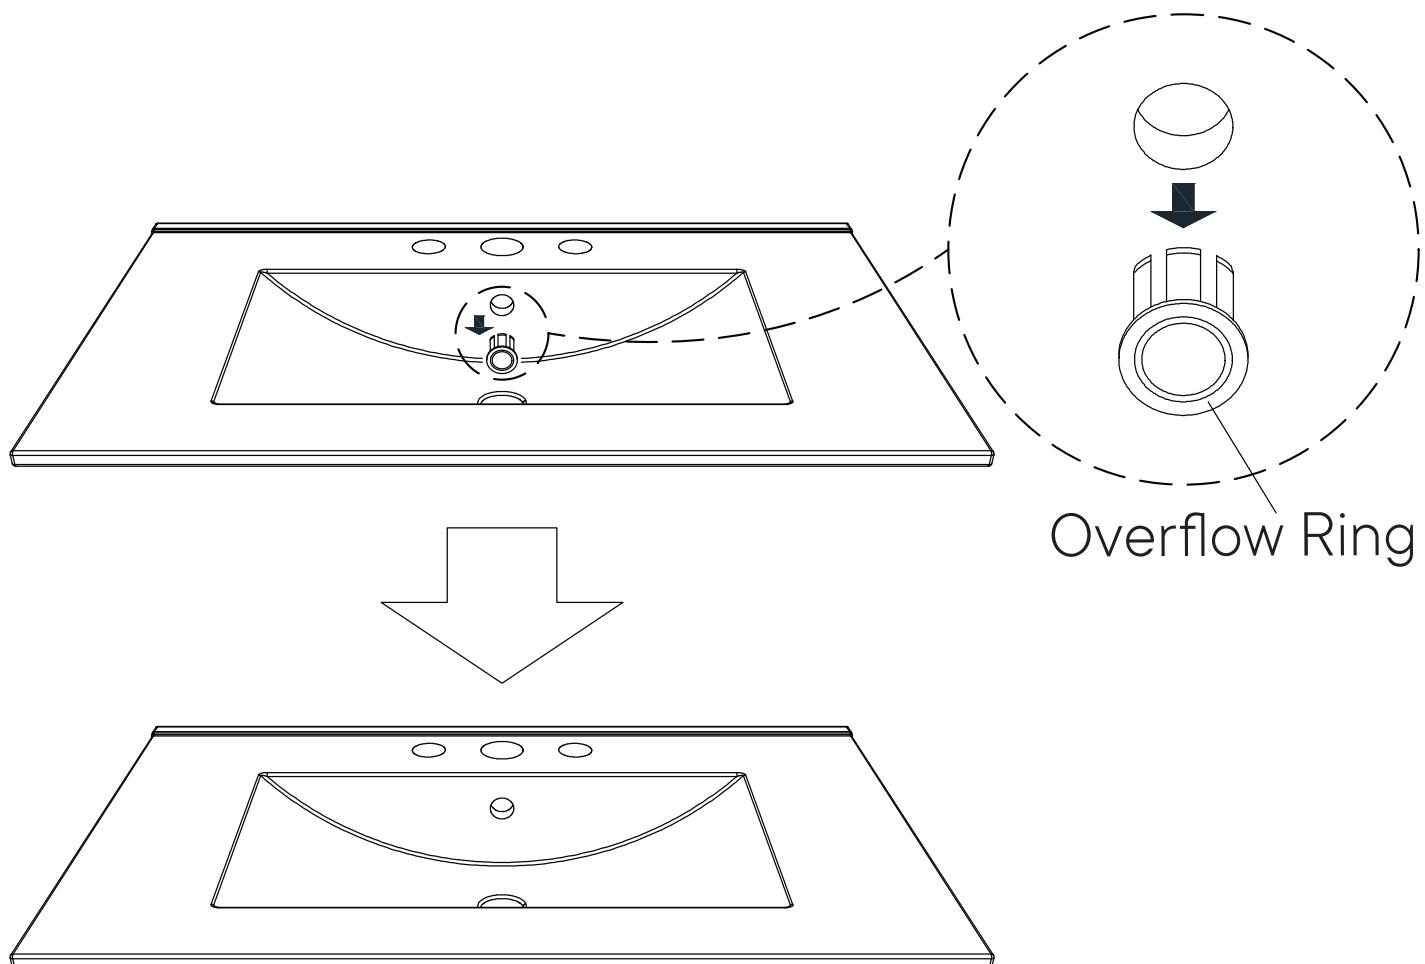

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Great job!

Vanity Cabinet assembly is complete.




CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

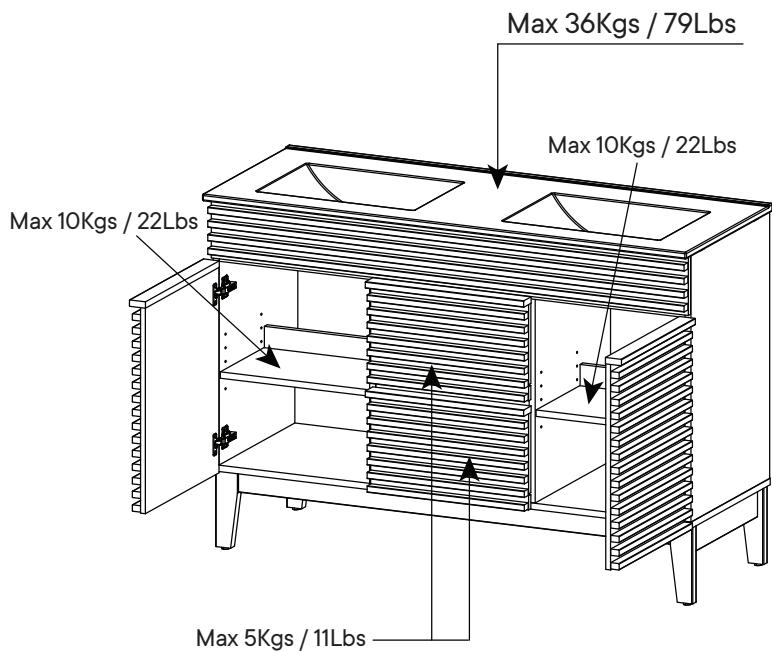

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.