
88 5002 941 Kitchen Island Combo (White Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



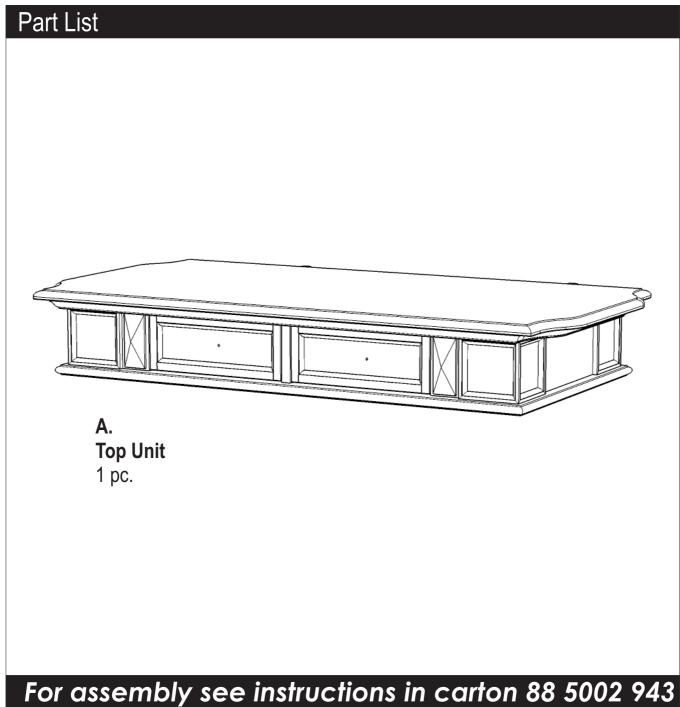

Tools required for assembly: Phillips screwdriver


88 5002 942 Kitchen Island Combo (White Finish)

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



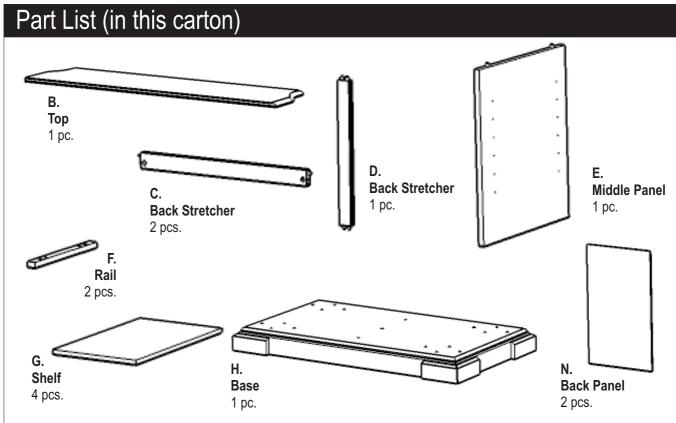



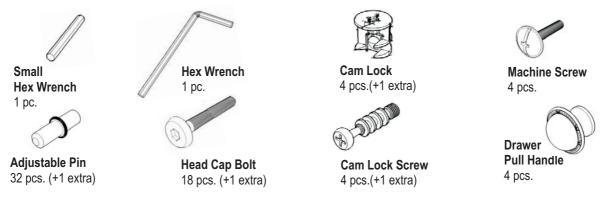

For assembly see instructions in carton 88 5002 943

Tools required for assembly: Phillips screwdriver

88 5002 943 Kitchen Island Combo


(White Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



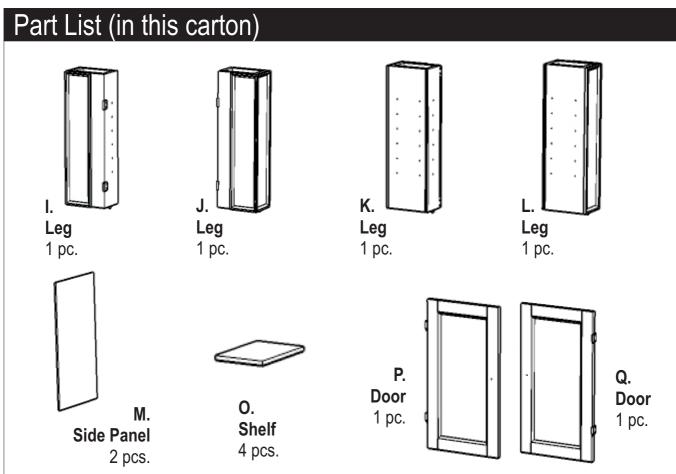

Also need the following from carton 88 5002 941, 88 5002 942

Γορ Unit (A)	1 pc.	Hex Wrench	1 pc.
Part List in carton 88 5002 942		Small Hex Wrench	1 pc.
Top (B)	1 pc.	Cam Lock	5 pcs.
Back Stretcher (C)	2 pcs.	Cam Lock Screw	5 pcs.
Back Stretcher (D)	1 pc.	Head Cap Bolt	19 pcs.
Middle Panel (E)	1 pc.	Adjustable Pin	33 pcs.
Rail (F)	2 pcs.	Machine Screw	4 pcs.
Shelf (G)	4 pcs.	Drawer Pull Handle	4 pcs.
Base (H)	1 pc.		
Back Panel (N)	2 pcs.		


Tools Required For Assembly: Phillips screwdriver

Assembly Instructions 2/4


IMPORTANT

Do not tighten up all the screws until each part is properly assembled.

You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

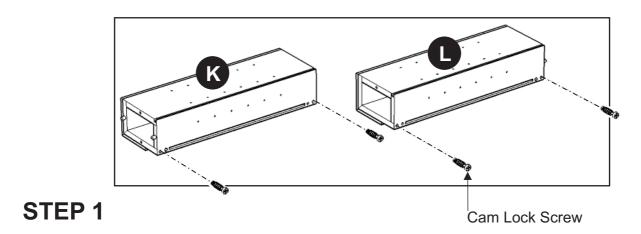


Put Cam Lock Screws into the pre-drilled holes of Leg (K),(L) and tighten.

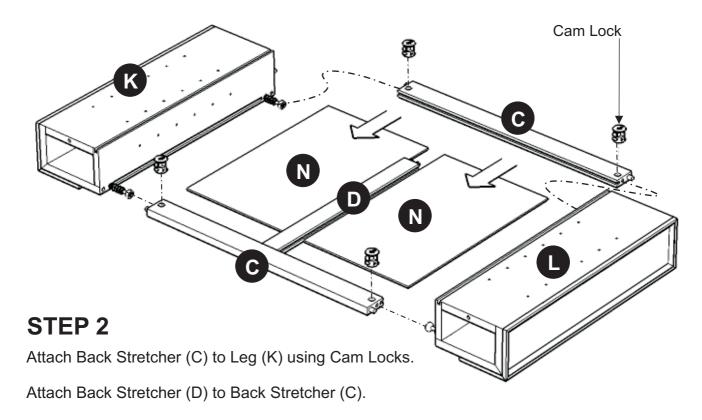

Slide Back Panel (N) to unit, then attach Back Stretcher (C) to unit using Cam Locks.


Attach Leg (L) to the unit using Cam Locks.

Assembly Instructions 3/4

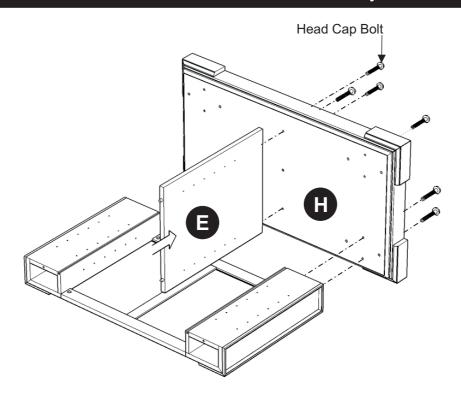

STEP 3

Attach unit from Step 2 and Middle Panel (E) to Base (H) with Head Cap Bolts.

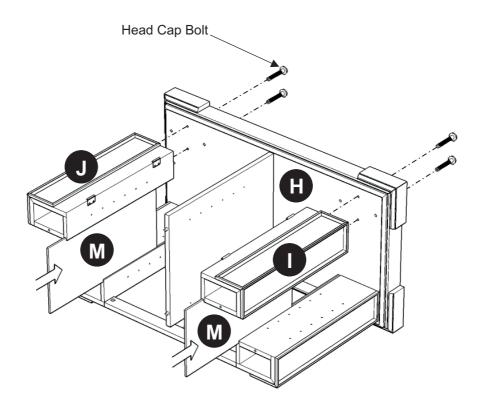

STEP 4

Attach Leg (I) and (J) to Base (H) with Head Cap Bolts.

Slide Side Panels (M) into position.

Assembly Instructions 4/4

STEP 5


Attach Rail (F) to unit with Head Cap Bolts.


Insert Adjustable Pins
Into both side panels and
Middle Panels at the desired level.


Slide Shelf (G) into place.

Assemble Pull Handle to Door (P) and (Q) with Machine Screws. (see Figure 1)


Attach Door (P) and (Q) to the side panels by sliding the door lift hinges into the side panel lift hinges. (see Figure 2)

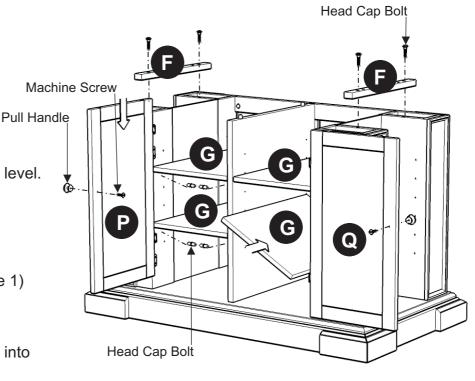

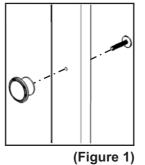

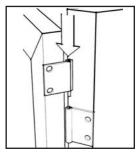

(Figure 2)

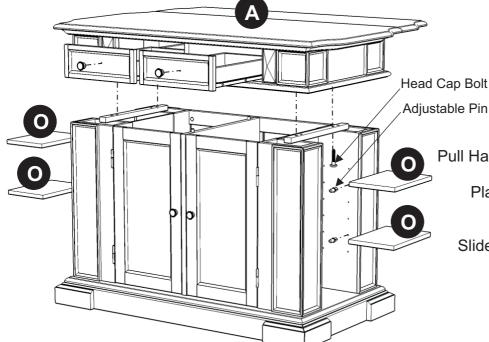

STEP 6

Remove the drawers in Top Unit (A) and assemble Pull Handle with Machine Screws.

Place Top (A) on the unit with Head Cap Bolts.

Slide the Drawers into position.

Insert Adjustable Pins Into both side panels at the desired level.

Slide Shelf (O) into Place.