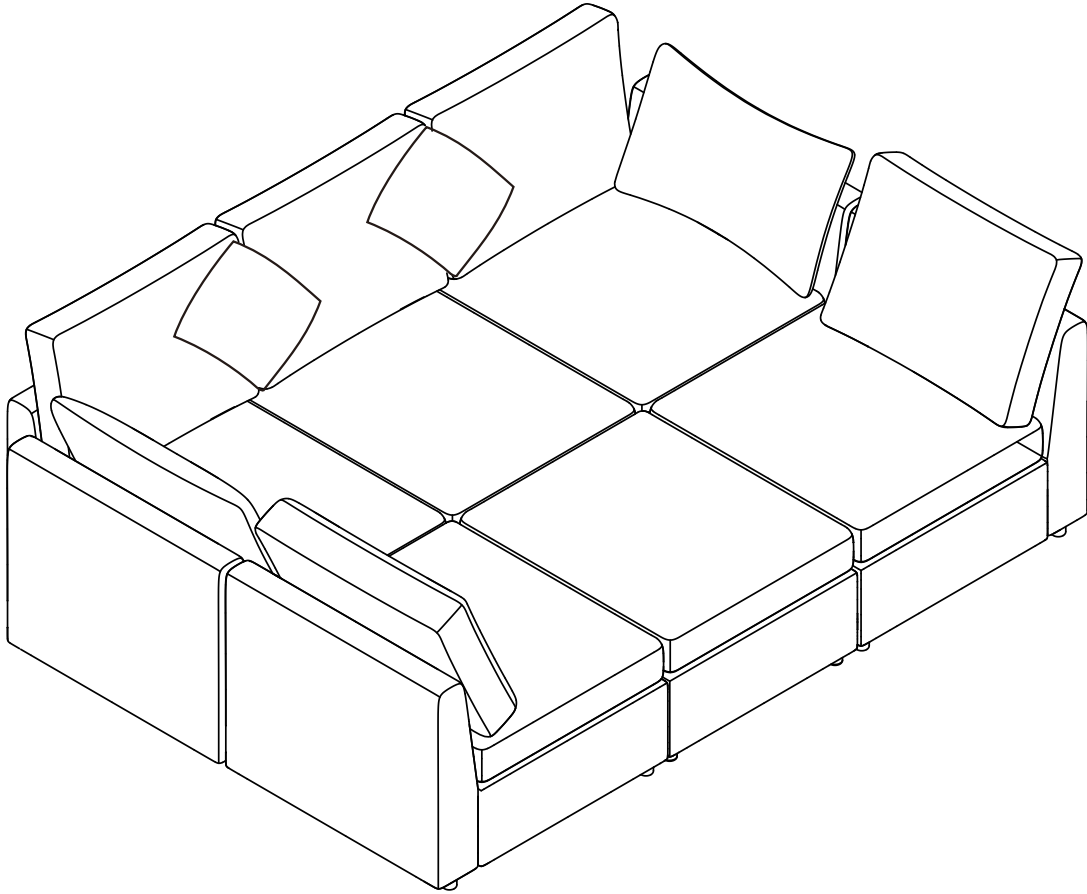


If you have any questions, please feel free to contact us.  
Email: lowes.team@qualfurn.net

# ASSEMBLY INSTRUCTIONS

**ITEM#N719P208858/N719P208860/N719P208862**



## IMPORTANT NOTE

**\*\*Place all parts on a lean and smooth surface such as a rug or carpet to avoid the parts from being scratched.**

**\*\*Before you begin, please review the assembly instruction step by step.**

**\*\*Return & Warranty Policy:**

-We strive to offer the highest quality products. We also provide positive solutions with replacements or refund if needed.

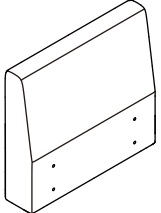
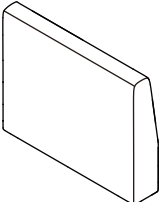
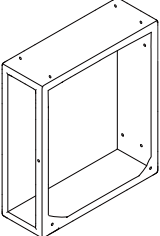
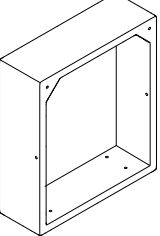
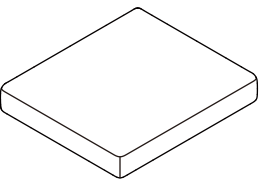
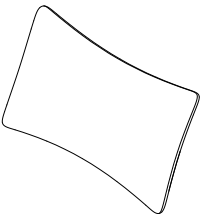
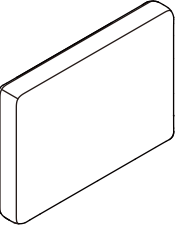
-If the item is damaged or defective, please take photos to show the problem and email to the seller.

-Please do not return back the product before contact the seller.














# ASSEMBLY INSTRUCTIONS

ITEM#N719P208858/N719P208860/N719P208862






## PART LISTS BOX 1: N719P208858

<b>A</b> x1 	<b>C</b> x2 	<b>D-L</b> x1 	<b>B</b> x1 
<b>H</b> x1 	<b>I</b> x1 	<b>J</b> x2 	


## PART LISTS BOX 2: N719P208860
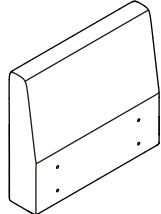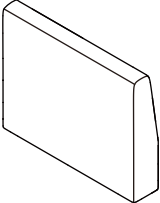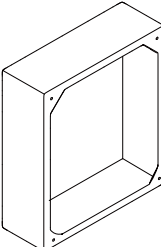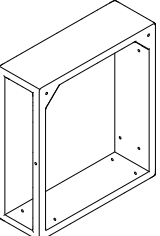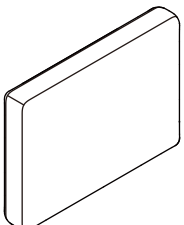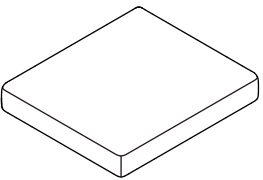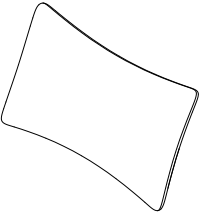
<b>A</b> x1 	<b>C</b> x1 	<b>G</b> x1 	<b>F-R</b> x1 
<b>J</b> x1 	<b>H</b> x3 	<b>I</b> x1 	<b>①</b> x28  M8×50mm
<b>②</b> x32 	<b>③</b> x2  M8×90mm	<b>④</b> x2 	<b>⑤</b> x1 
			<b>⑥</b> x24 

## PART LISTS BOX 3:N719P208862

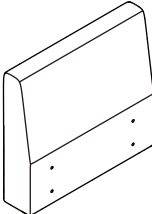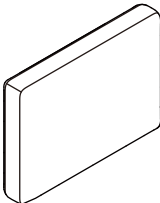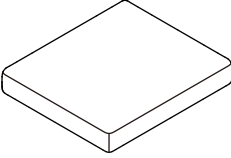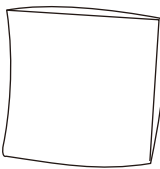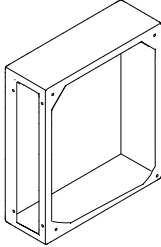
<b>A</b> x 2	<b>J</b> x 2	<b>H</b> x 2	<b>K</b> x 2
			
<b>E</b> x 2			
			

### Step 1

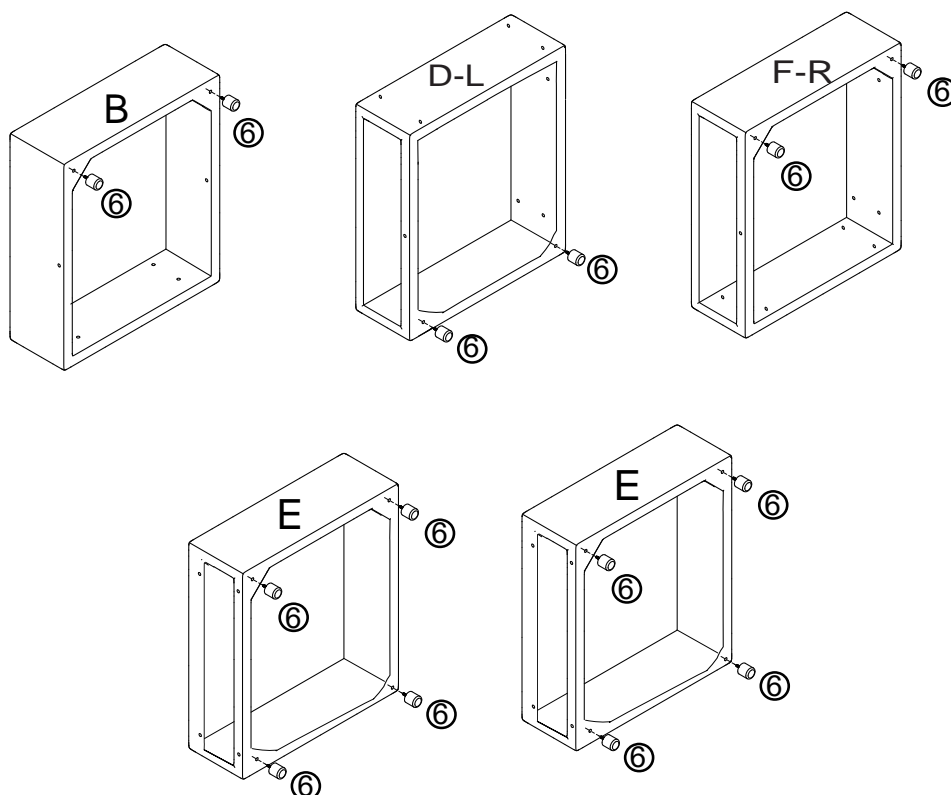


Install      on the B, D-L,F-R, and E frames.

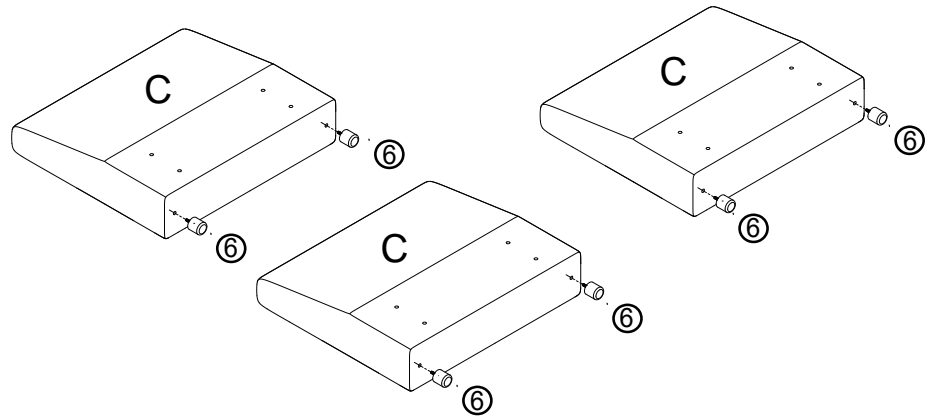Step 2




Install      on each of the three C backrests.

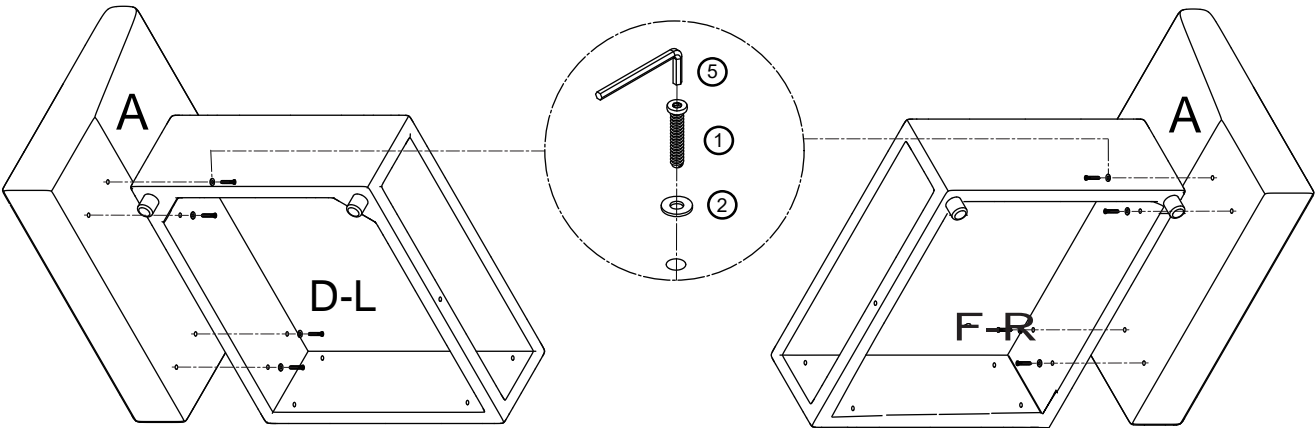Step 3



Slip      over      using      to connect A to D-L and A to F-R.

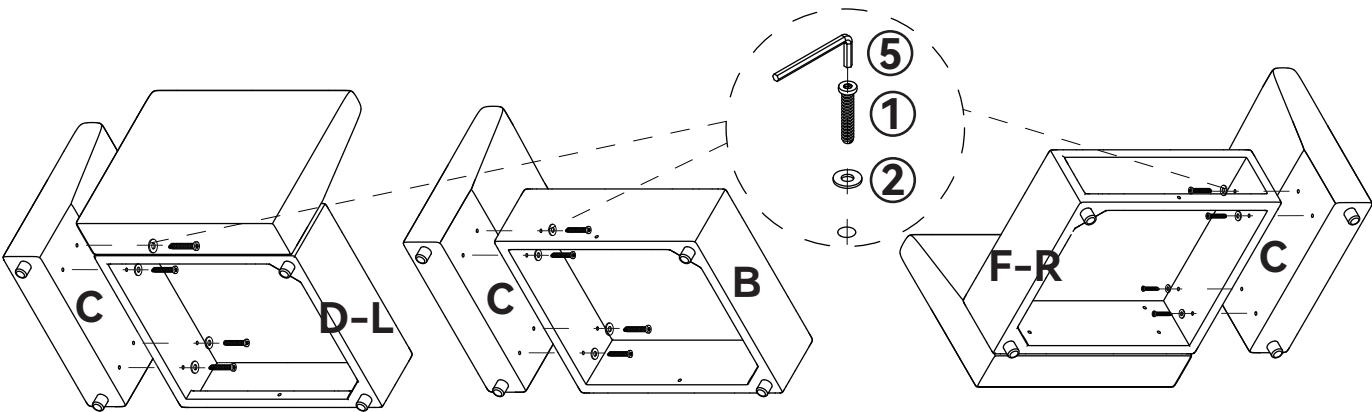
Step 4



Slip      over      using      to connect C to D-L and B to F-R.




## Step 5

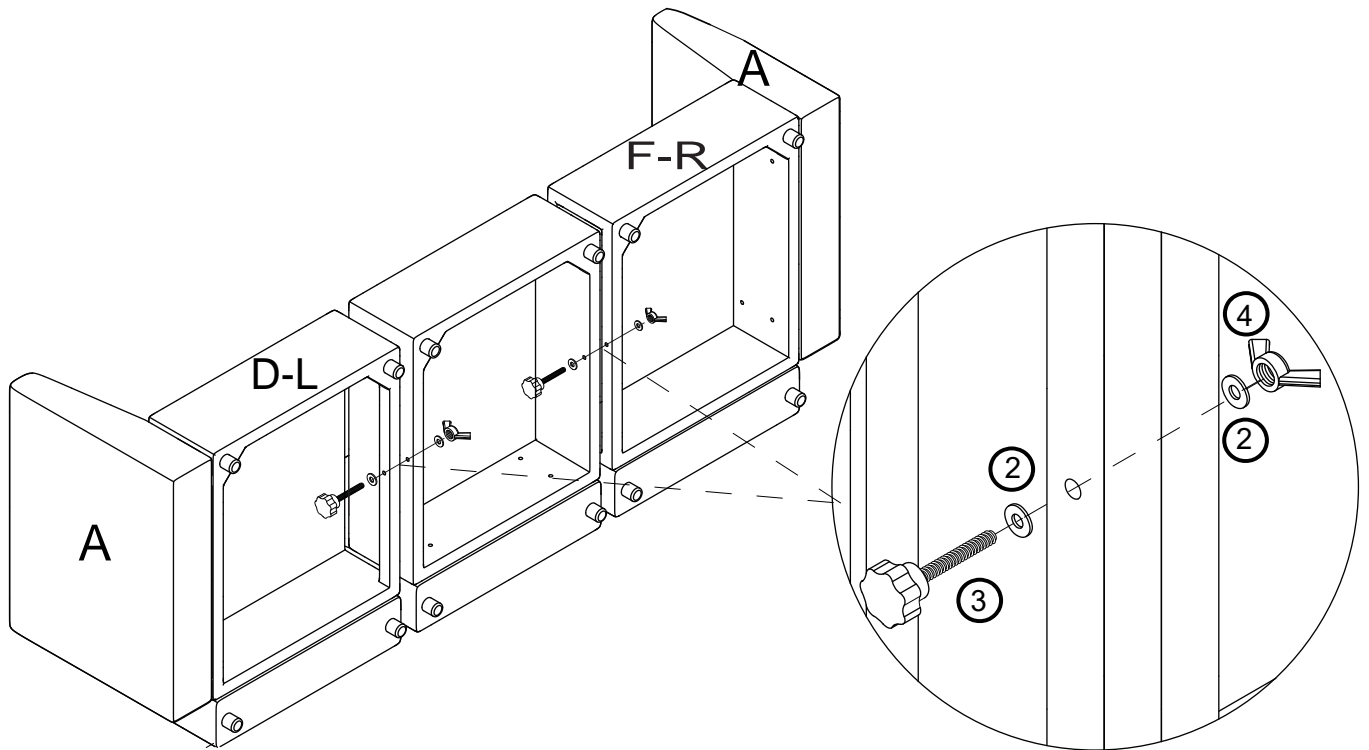


Slip over through the connection holes of the two frames, then slip another over it, and secure it with hardware.

## Step 6

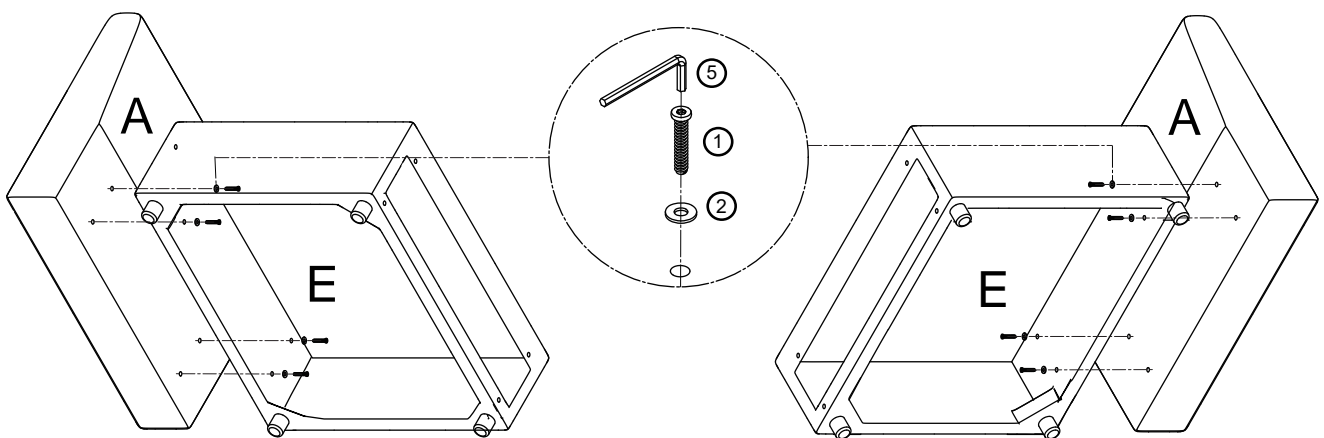


Slip over using to connect A to E and A to E.

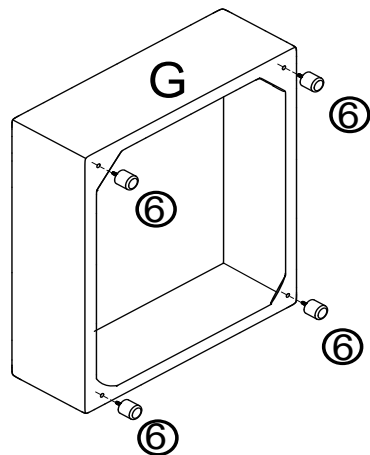Step 8




Install      on G.

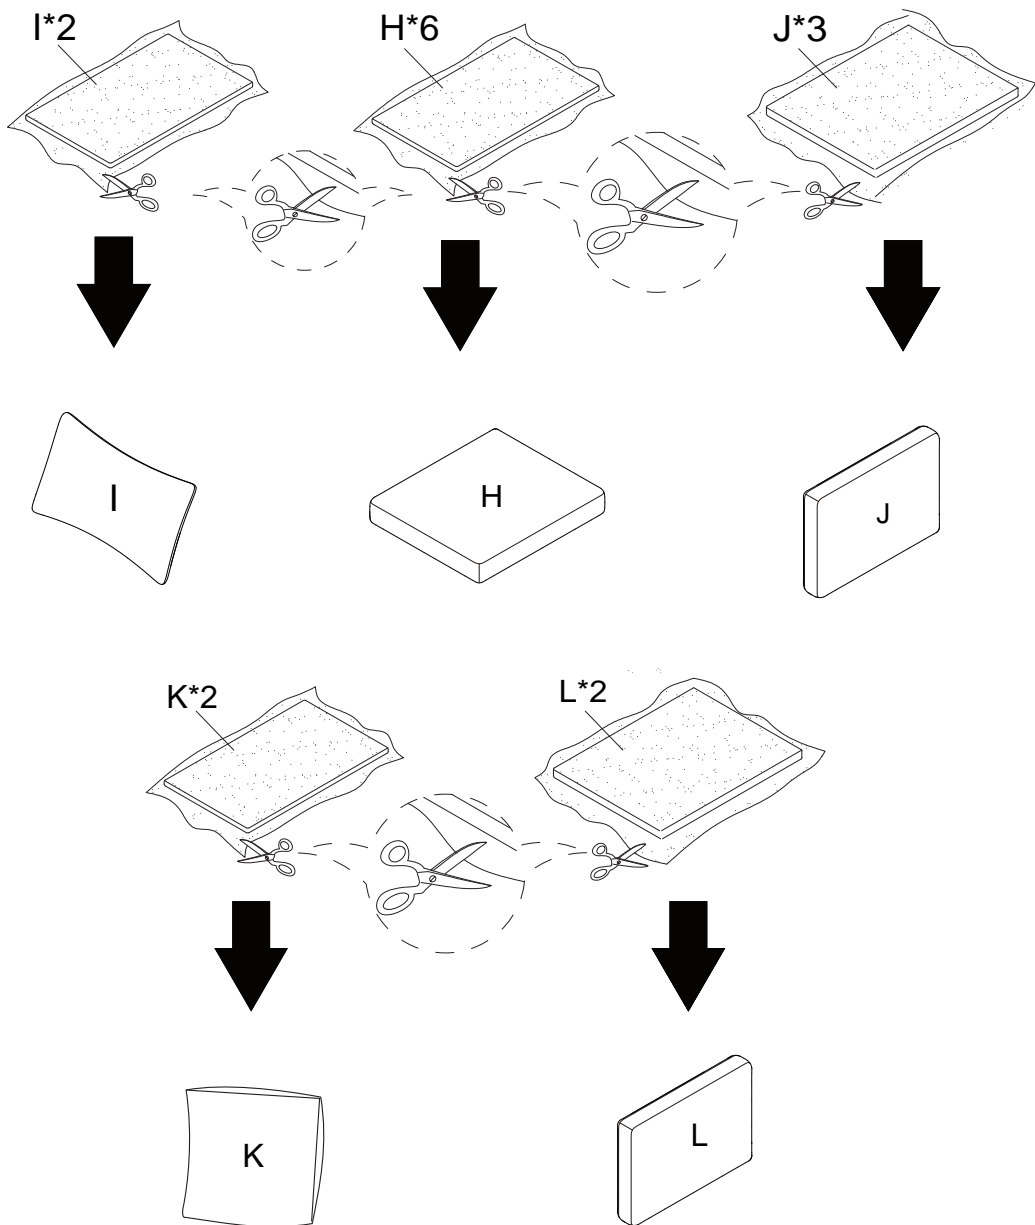Step 9



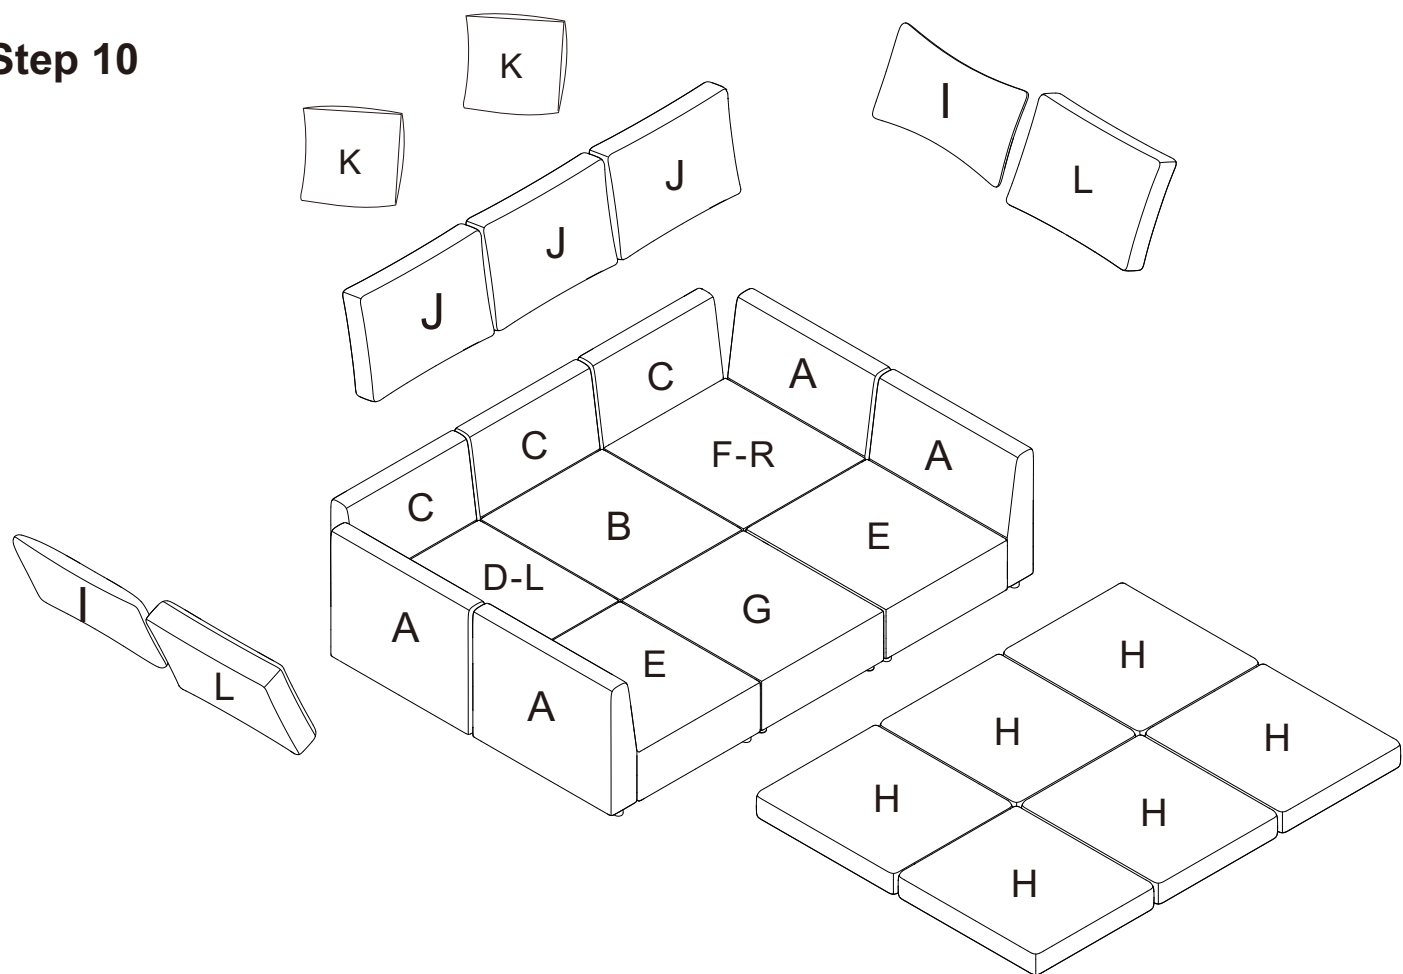Step 10



TIPS:As the cushions are all vacuum compressed for better shipment, there will be some wrinkles.  
Please give your cushions up to 72 hours to reach their original size and the wrinkles will basically disappear.

Step 11

