


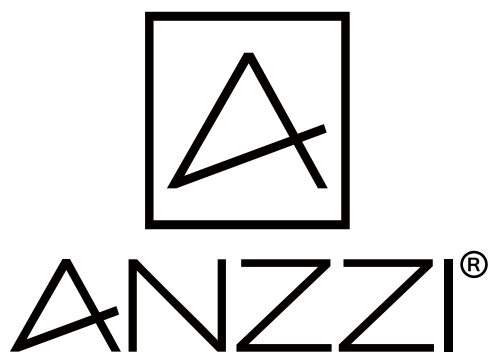

ITEM : SD-AZ055-01**
ANZZI GLASS SHOWER DOOR
INSTALLATION & OPERATION MANUAL
V2.4
06/26/2025



DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure it is recognized as a purchase and covered under warranty.

Register online at <https://anzzi.com/pages/register> or scan the QR code on PG. 2.



PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at <https://anzzi.com/pages/register> or Scan the QR code below.

Registering your product maximizes your warranty benefits and ensures prompt service and support.

1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE



2

FILL IN A QUICK
REGISTRATION FORM

Thank you for your purchase!

Registering your products ensures you maximize your warranty benefits and receive prompt service and support.

Name*

Email*

City*

Order #*

Installer Name

...

Model Purchased*


Installer Phone Number

Customer Age Range


Submit

3

CLICK SUBMIT AND
ENJOY PEACE OF MIND

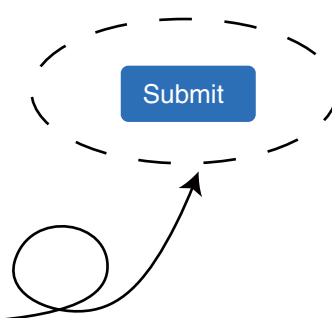

Need help? For technical support call **305-614-4070** or visit us at www.ANZZI.com

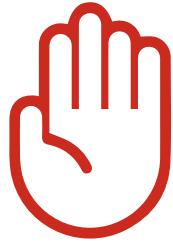

STOP!

READ BEFORE YOU PROCEED!

TO KEEP GLASS FROM BREAKING, MAKE SURE:

- 1. Due to the weight of this product, at least two people are needed for a safe installation.**
- 2. Glass corner protectors remain on during installation.**
- 3. Glass protective seals are mounted to the door before opening/closing.**
- 4. Glass panels are aligned & level with wall/floor.**
- 5. Slider must be installed correctly for smooth sliding.**
- 6. This model requires a minimum 1.8" (46 mm) flat level threshold space for installation.**
- 7. This manual shows right side installation. For left side installation, follow the instructions in page 10.**

SAFETY PRECAUTIONS

General Safety Warnings

1. **Read Instructions First** – Carefully read the entire installation manual before beginning. Improper installation may result in product failure or injury.
2. **Use Proper Tools** – Always use the recommended tools and hardware to ensure safe and correct installation.
3. **Work with a Partner** – Due to the weight and fragility of glass panels, never attempt to install them alone. A minimum of two people is required.

Handling Tempered Glass Panels

4. **Do Not Strike or Edge-Load the Glass** – Tempered glass is strong but can shatter if struck on its edges or corners.
5. **Always Carry Glass Vertically** – Transport and handle glass panels in an upright position to reduce the risk of breakage.
6. **Wear Protective Gear** – Use safety gloves, closed-toe shoes, and eye protection when handling glass.
7. **Inspect Before Installation** – Check for cracks, chips, or defects before installation. Do not install damaged glass panels.
8. **Do Not Drill or Modify the Glass** – Altering the glass in any way can compromise its integrity and cause it to shatter.
9. **Keep the Glass in a Secure Area Until Installation** – Store glass panels upright on a non-slip surface, away from heavy traffic areas.
10. **Avoid Sudden Temperature Changes** – Do not expose tempered glass to extreme temperature shifts, as this can cause it to shatter.

Installation Precautions


11. **Secure the Work Area** – Ensure the installation site is free of obstacles, water, or debris to prevent slipping or dropping the glass.
12. **Check Wall and Floor Strength** – Ensure mounting surfaces are sturdy enough to support the shower door assembly.
13. **Tighten Fasteners Securely but Cautiously** – Over-tightening hardware can stress and damage glass components.
14. **Follow Manufacturer's Weight Limits** – Ensure that the structure can support the weight of the installed shower doors.

Post-Installation Warnings

15. **Do Not Slam the Doors** – Forcefully closing shower doors can cause damage or breakage over time.
16. **Regularly Check for Loose Hardware** – Periodically inspect hinges, rollers, and handles for stability.
17. **Do Not Hang Items on Glass Doors** – Hanging towels or objects on the doors may stress the hardware or glass, leading to breakage.

WARNING

PROTECTIVE EQUIPMENT MUST BE WORN WHEN HANDLING GLASS



INSTALLATION GUIDE

BEFORE YOU BEGIN

- Please check the product for damage and missing parts immediately upon delivery. Damage reported after installation will not be covered under our warranty. Please handle the product with care. Avoid impacting the sides and edges of the glass.
- Consult your local building codes before installation.
- To reduce the risk of breakage, keep the corner protectors on the glass during installation.
- If this unit is being installed in new construction, please install all required plumbing and drainage before installing the shower. Use a licensed plumber or contractor for all plumbing installations if required by local code.
- Before beginning installation, make sure all surfaces are level, solid and will support the total weight of the unit. Also, make sure the walls are at right angles. An uneven installation surface, rounded corners, or improperly angled side walls can cause serious installation problems. Please note that some adjustments and drilling might be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never place the glass directly on a tile floor. Keep the corner protectors in place until they need to be removed. Always use wood or cardboard to protect the bottom edge and corners of the glass before and during installation.



WARNING

- Install this unit on a finished threshold and against finished walls.
- Avoid drilling into hidden pipes or electrical cables when making holes in the walls.
- Due to the weight of this product, at least two people are needed for a safe installation.
- When cutting or drilling metal components or handling glass, wear protective eyewear, gloves, and closed-toe shoes to minimize the risk of personal injury.
- Failure to follow these instructions may result in personal injury, property damage, or product failure, and could void the warranty.
- To prevent corrosion, installers must use only the provided rust-resistant stainless steel screws. Using any other hardware may compromise the product's corrosion resistance, leading to visible rust and oxidation. Damage caused by improper installation will not be covered under warranty.

INSTALLATION GUIDE

BEFORE YOU BEGIN




ATTENTION

- Surface of the threshold must be level for proper installation.
- This model requires a minimum 1.8" (46 mm) flat level threshold space for installation.


Tools Required




- This product is heavy and requires two people to install.

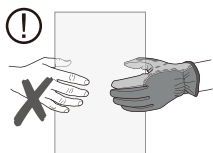

- Use cut-resistant, non-slip gloves to reduce the risk of personal injury and to hold the glass firmly.



Phillips
Screwdriver



Tape
Measure



1/8"
(3mm)
Drill Bit




9/64"
(3.5mm)
Drill Bit



7/32"
(5.5mm)
Drill Bit



5/16"
(8mm)
Drill Bit

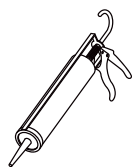

100%
Silicone
Sealant




Pencil




Rubber
Mallet



Safety
Glasses

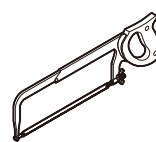

Hack
Saw

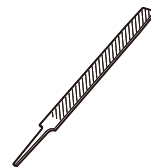


Metal File



Tin Snips




Stud Finder



Knife



Level

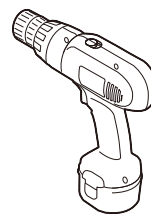

Drill



This product is heavy and requires two people to install.






WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

PARTS



[01]X1



[02]X2




[03A]X1




[03B]X1




[04]X1

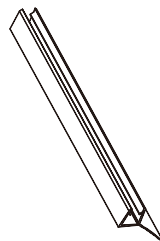

[05A]X1

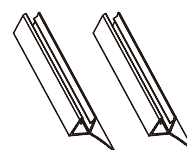


[05B]X2




[06]X1




[07]X1

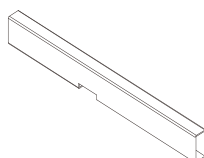


[08]X1

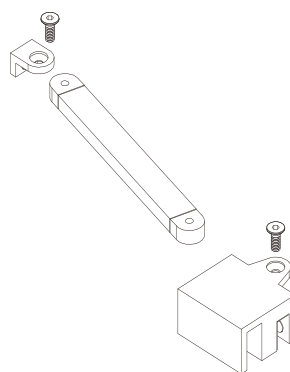


[09]X1



[10]X2



[11]X7



[12]X7




[13]X1




[14]X7




[15]X1



[16]X1

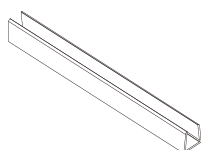

[17]X1



[18]X1



[19]x5



[20]x1




[21]x1



WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

ASSEMBLY

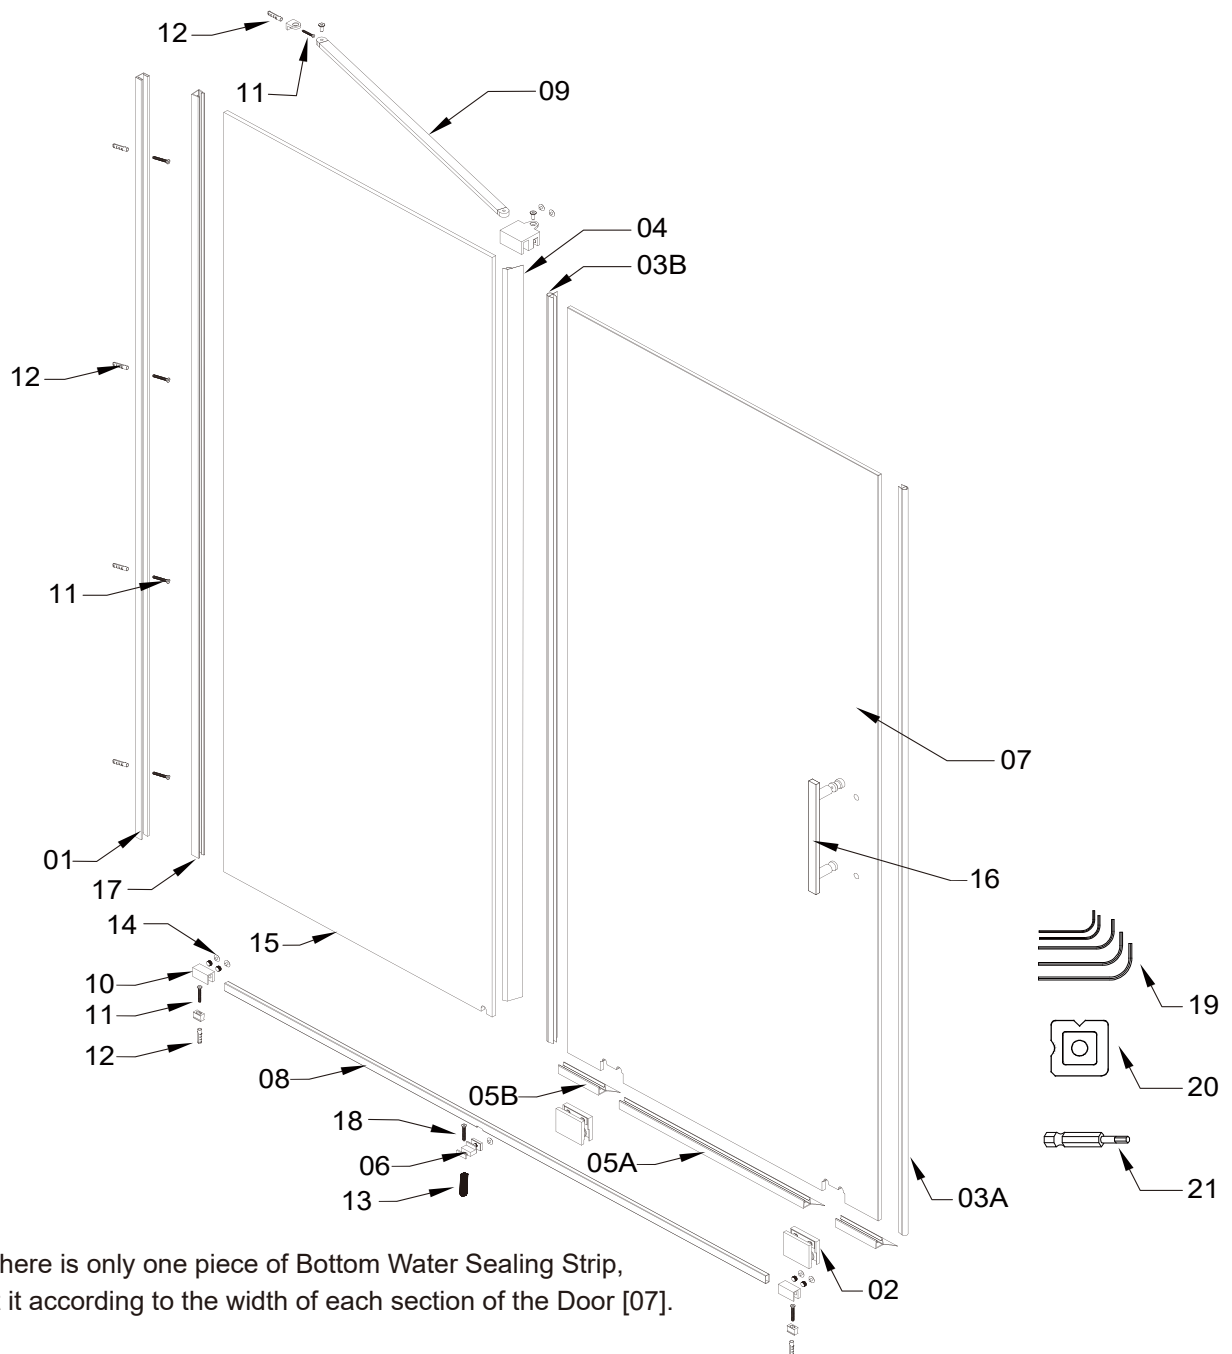


Notice: If there is only one piece of Bottom Water Sealing Strip, please cut it according to the width of each section of the Door [07].

Part	Description	Qty.	Part	Description	Qty.
[01]	Wall Profile	1	[10]	Anchor Assembly	2
[02]	Roller	2	[11]	Screw #10x1.57" [ST5x40mm]	7
[03A]	Side Water Sealing Strip A	1	[12]	Plug #1	7
[03B]	Side Water Sealing Strip B	1	[13]	Plug #2	1
[04]	Side Water Sealing Strip	1	[14]	Cover	7
[05A]	Bottom Water Sealing Strip A	1	[15]	Fixed Panel	1
[05B]	Bottom Water Sealing Strip B	2	[16]	Handle	1
[06]	Guide Block	1	[17]	Glass Protection Seal	1
[07]	Door	1	[18]	Screw #8x0.79" [ST4x20mm]	1
[08]	Bottom Rail	1	[19]	Allen Key	5
[09]	Support Bar	1	[20]	Silicone Cleaner	1
			[21]	Screw Driver Bit	1

SD-AZ055-01**

60" x 76"

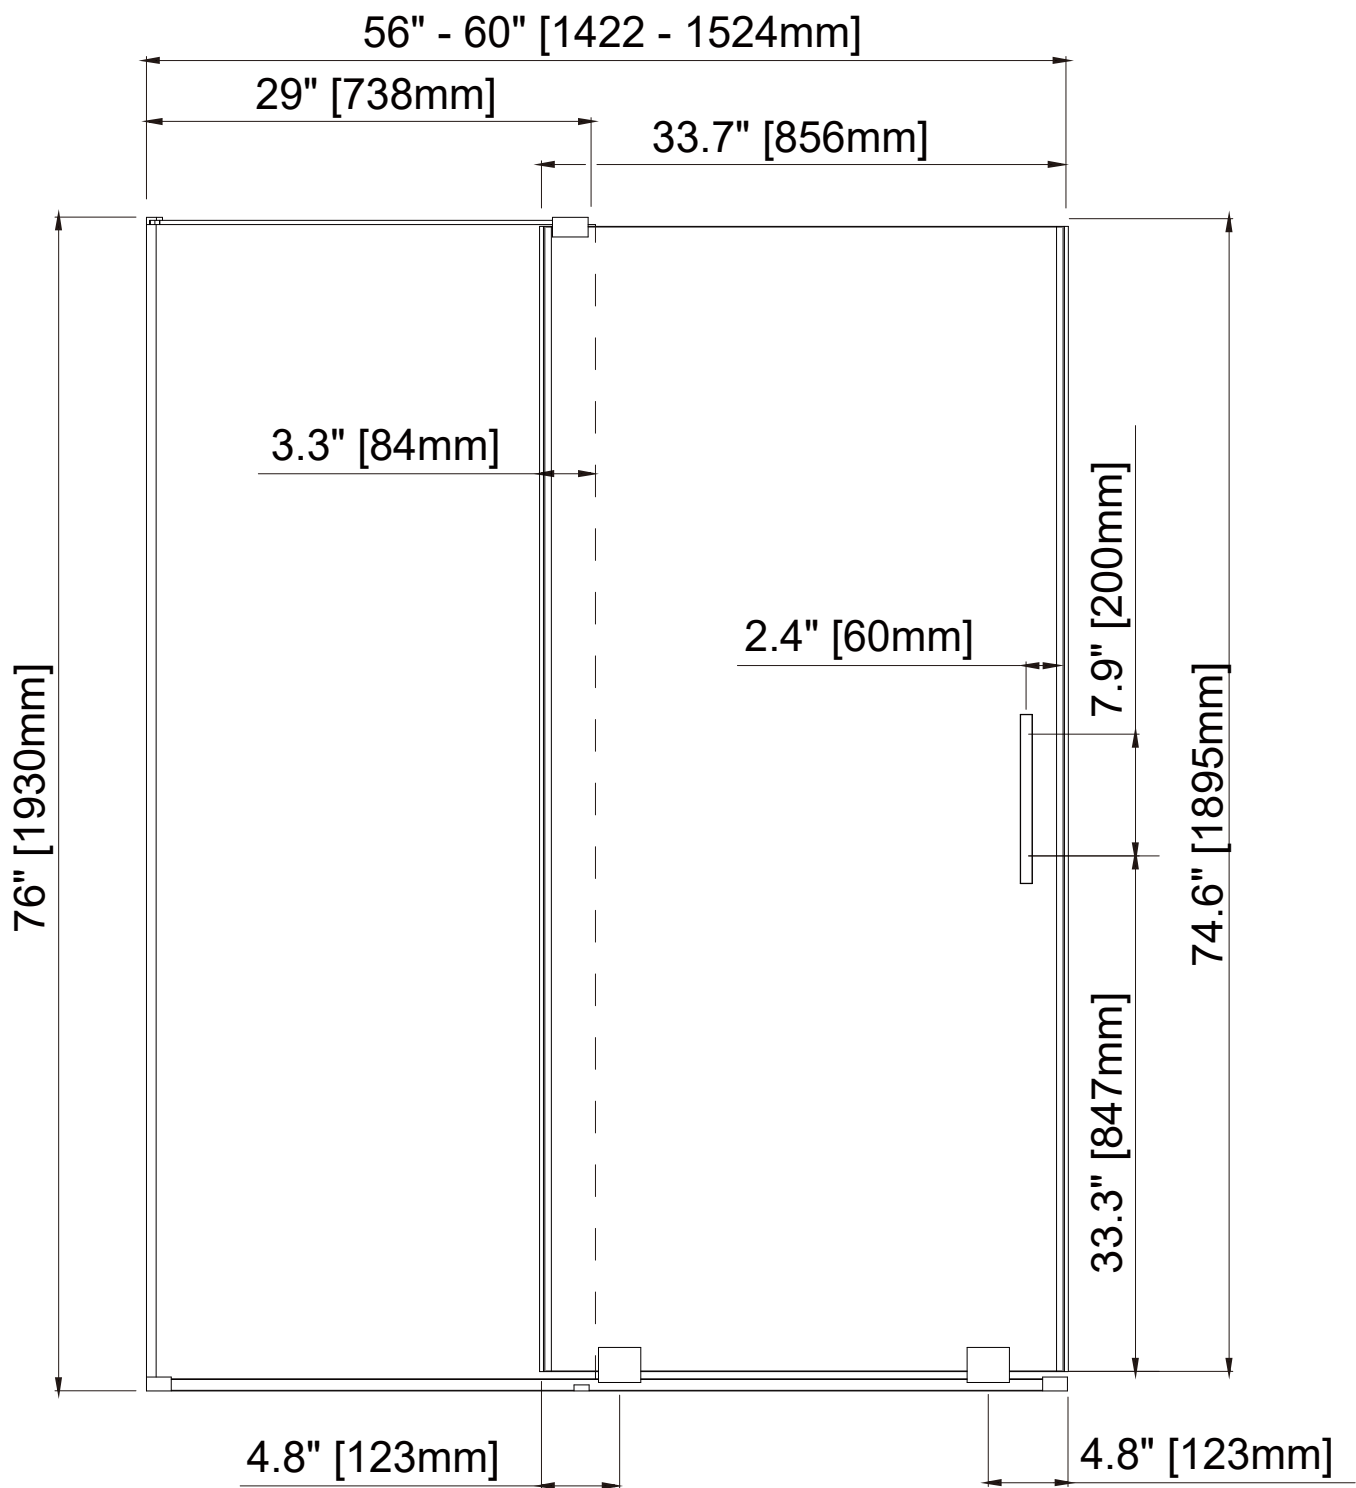



ATTENTION

- To avoid personal injury or property damage, identify components and read all instructions before installing.
- This model requires a minimum 1.8" (46mm) of flat level threshold space for installation.
- This manual shows right side installation. For left side installation, switch the sides of **Bottom Rail [08]** in Step 1, install the **Wall Profile [01]** to the right side in Step 2, switch the sides of **Fixed Panel [15]** and install in Step 3, install **Support Bar [09]** to the counter side in Step 4, switch the **Door [07]** in Step 5, then install the shower door by following the rest steps.

INSTALLATION INSTRUCTIONS

Step 1

1. Measure the finished opening width at the bottom ("W"). (Fig 1.1)

IMPORTANT: If the Bottom Rail [08] match the width of W minus 0.9", there's no need to cut them.

If they don't, please cut it by following steps below.

2. Measure from both side of **Bottom Rail [08]** to the slot. Measure **W minus 0.9"** from the short side and cut the rest. (Fig 1.2)
3. Remove the **bases** from the **Anchors Assembly [10]** and position one **base** to right side of threshold and another one to the left side of threshold. Make sure the distance between the **bases** and the edge of threshold are the same. Mark on the threshold through the screw holes of **bases**. Remove the **bases**. (Fig 1.3)
4. Drill a **9/64"** hole at each marked location if drilling into acrylic or wood material. Drill a **5/16"** hole if drilling into tile material and insert the **Plug #1 [12]**. (Fig 1.4, Fig 1.5)
5. Slightly push the **bases** to the walls and secure them with **Screws [11]**. (Fig 1.6)

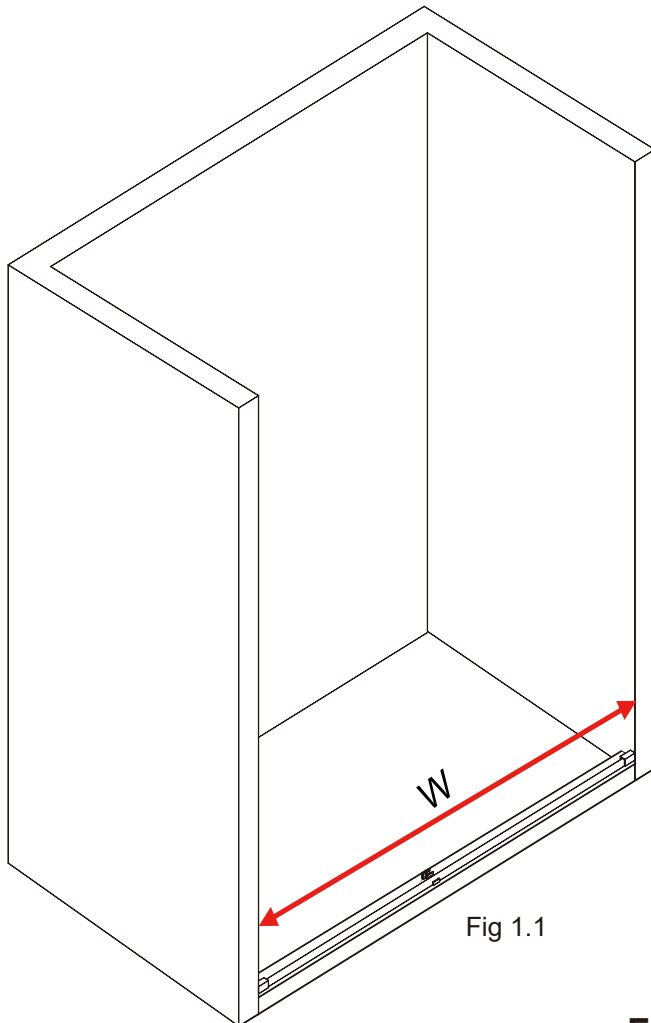


Fig 1.1

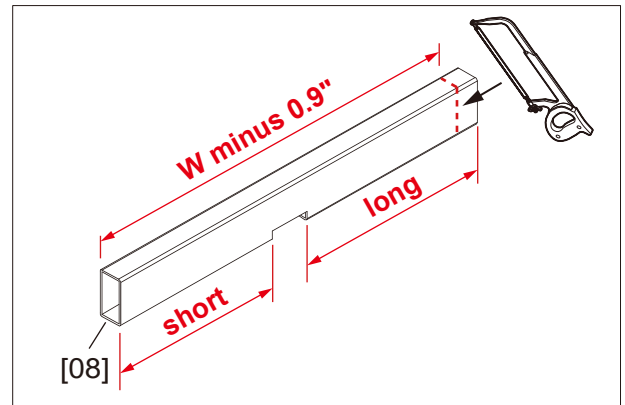


Fig 1.2

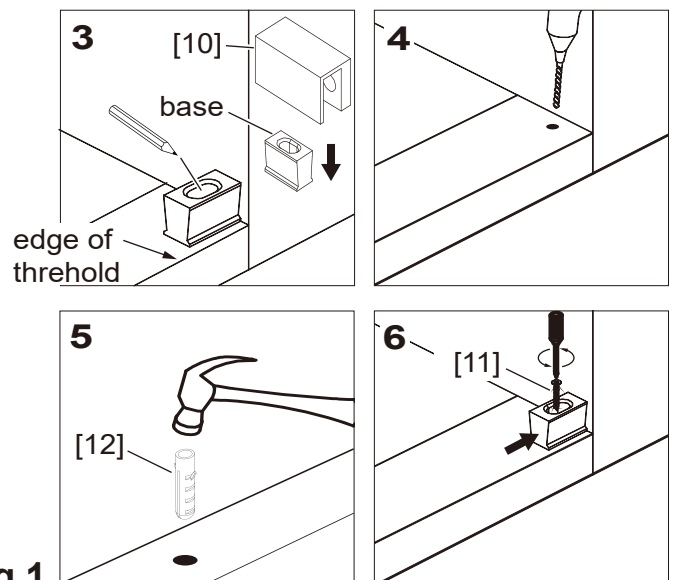


Fig 1

Step 1

6. Remove **screw**, **clip** and one **gasket** from the **Guide Block [06]**. Keep one **gasket** and **sleeve** on the **anchor**. (Fig 1.7)
7. Position the **Guide Block [06]** and **Bottom Rail [08]** on the threshold. The **clip** side of **Guide Block [06]** faces inside. For the right side installation, if the **Bottom Rail [08]** has been cut, the cut side of it should be on the right. Otherwise, the short side of **Bottom Rail [08]** should be on the left. Adjust the **Guide Block [06]** and **Bottom Rail [08]**. Install the **anchor** of **Anchor Assembly [10]** to the **Bottom Rail [08]** and the **bases**. (Fig 1.8)
8. Hold the **Guide Block [06]** on the threshold and remove the **Bottom Rail [08]** and **anchors**. Mark on the threshold through the screw hole of **Guide Block [06]**. (Fig 1.9)
9. Remove **Guide Block [06]** and drill a **1/8"** hole at marked location if drilling into acrylic or wood material. Drill a **7/32"** hole if drilling into tile material and insert the **Plugs #2 [13]**. (Fig 1.10, Fig 1.11).
10. Position the **Guide Block [06]** as figure shows and secure it with **Screws [18]**. (Fig 1.12)
11. Install the **Bottom Rail [08]** to the **Guide Block [06]**. The **Bottom Rail [08]** should fully touch to the threshold. If it doesn't, switch two ends of it. Then install the **anchors**. The screw holes of **anchors** face inside. (Fig 1.13)
12. Secure the **anchors** by tighten the screws. (Fig 1.14)
13. Install the **Covers [14]** to the screws. (Fig 1.15)

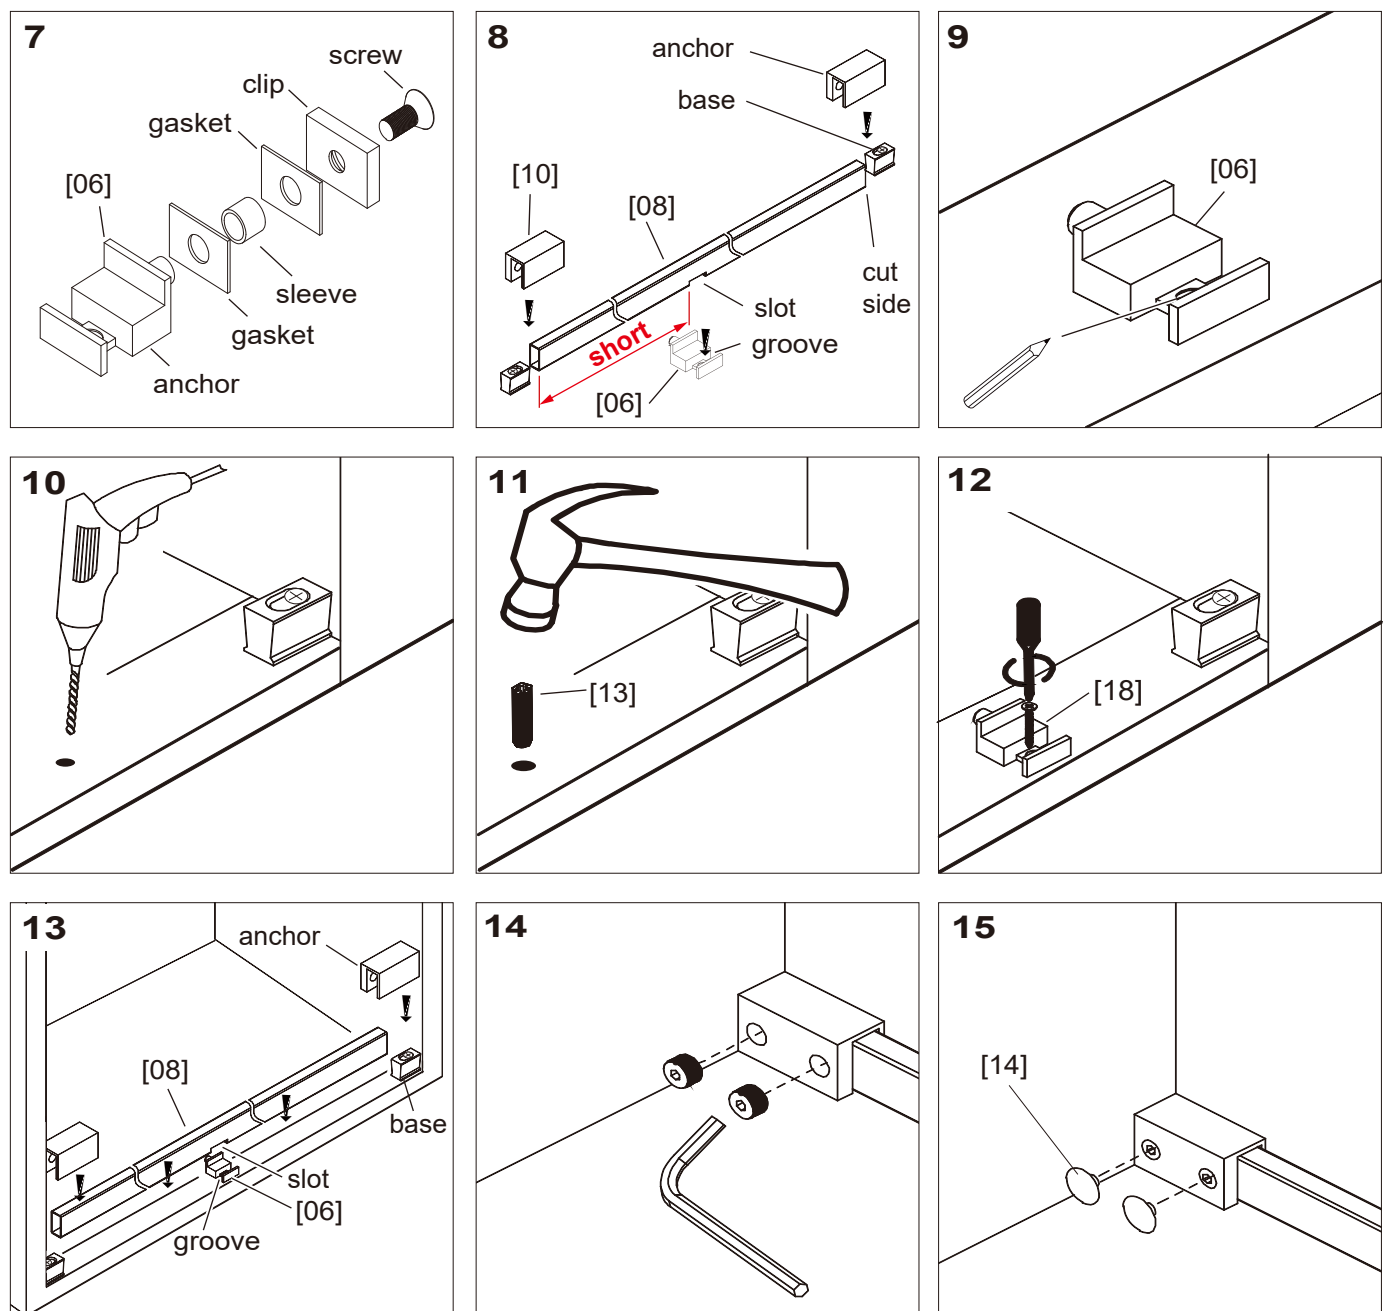


Fig 1

- This shower door must be mounted to a stud. Minimum threshold space is required.

IMPORTANT: Using a stud finder, ensure the wall intended to hold the door has a stud at the installation point. A stud in this location must be identified to support the support bar in order to proceed with the installation. If there is no stud in the shown area, we recommend employing a qualified contractor to install one.

Step 2

1. Position **Wall Profile [01]** on the left side wall closed to the **Anchor Assembly [10]**. (Fig 2.1)

Notice: Make sure the distance between **surface #1** and **surface #2** is **1"(26mm)**.

2. Adjust **Wall Profile [01]** to vertical position and mark on the wall through the screw holes of it. (Fig 2.1)
3. Remove **Wall Profile [01]** and drill 5/16" screw holes on the wall. (Fig 2.2)
4. Install the **Plugs #1 [12]** and secure the **Wall Profile [01]** with **Screws [11]**. (Fig 2.3, Fig 2.4)

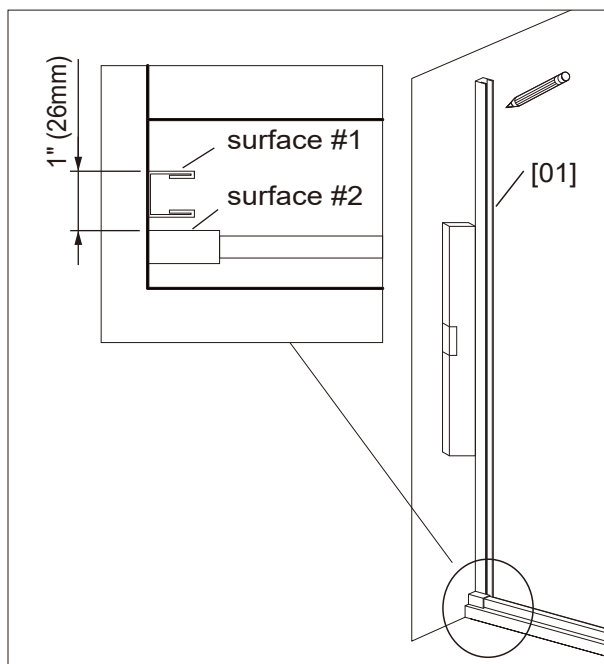


Fig 2.1

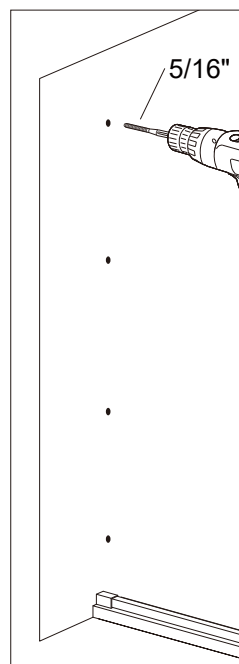


Fig 2.2

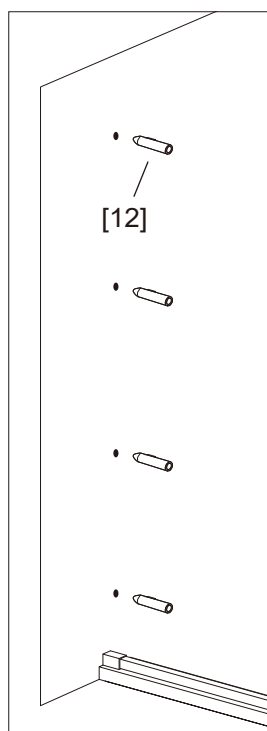


Fig 2.3

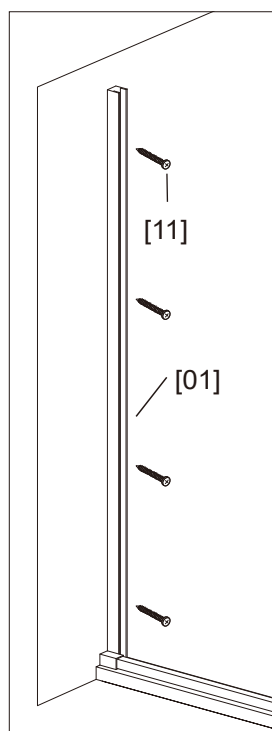





Fig 2.4

WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

Step 3

1. Remove the **Corner Protectors** except the one at the top right corner of **Fixed Panel [15]**.
2. Install **Glass Protection Seal [17]** to the side away from the **gap** of **Fixed Panel [15]**. (Fig 3.1)
3. Apply a good quality Silicone Sealant on the bottom of **Fixed Panel [15]**. (Fig 3.2)
4. Slightly place the **Fixed Panel [15]** on the threshold closed to the **Wall Profile [01]** and push it into the **groove** of **Wall Profile [01]** and to the **gasket** of **Guide Block [06]**. (Fig 3.1)
5. Install **gasket** and **clip** of **Guide Block [06]** from the back of **Fixed Panel [15]** and secure it by **screw** of **Guide Block [06]**. (Fig 3.3)
6. Install a **Cover [14]** to the screw of **Guide Block [06]**. (Fig 3.3)

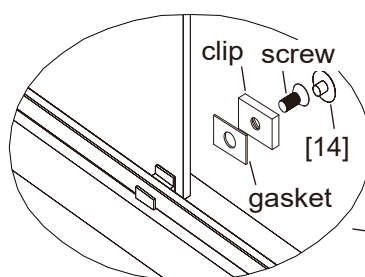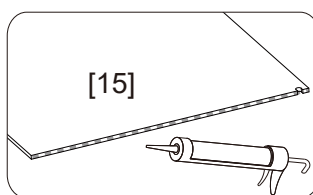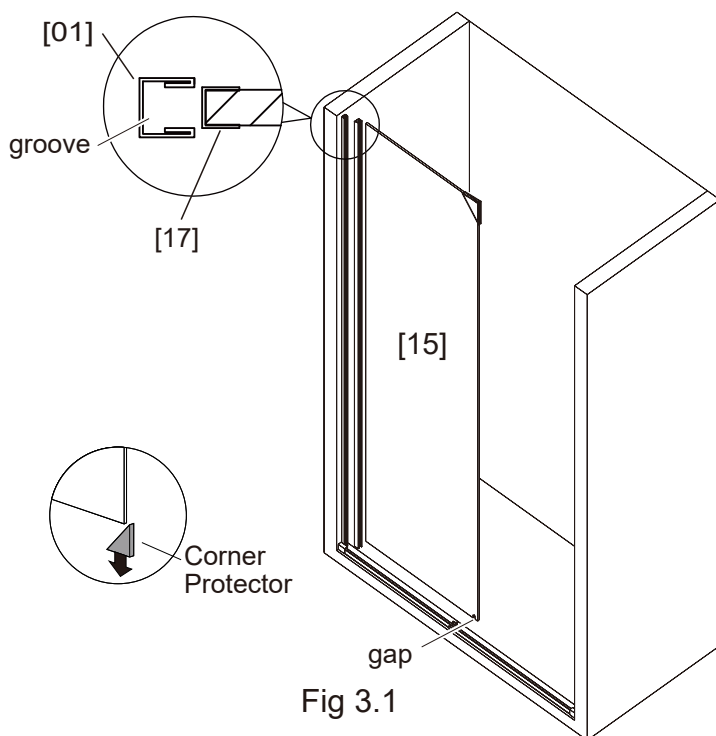



WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

Step 4

1. Remove the **Corner Protectors of Fixed Panel [15]** and install **Support Bar [09]** to the top of **Fixed Panel [15]**. (Fig 4.1)
2. Adjust the clip 0.47" away from the side of **Fixed Panel [15]** and tighten the **screws** to secure. (Fig 4.1)
3. Hold the **clip** and slightly push the **anchor** of **Support Bar [09]** to the wall. Mark the contour of **anchor** on the wall. Remove **Support Bar [09]** and remove the **anchor** from it. (Fig 4.1)
4. Hold the **anchor** on the wall at the marked place and mark on the wall through the screw hole of it. (Fig 4.2)
5. Drill a 5/16" hole on the wall at the marked place. (Fig 4.3)
6. Intall **Plug #1 [12]** to the hole and secure the **anchor** with **Screw [11]**. (Fig 4.4, Fig 4.5)

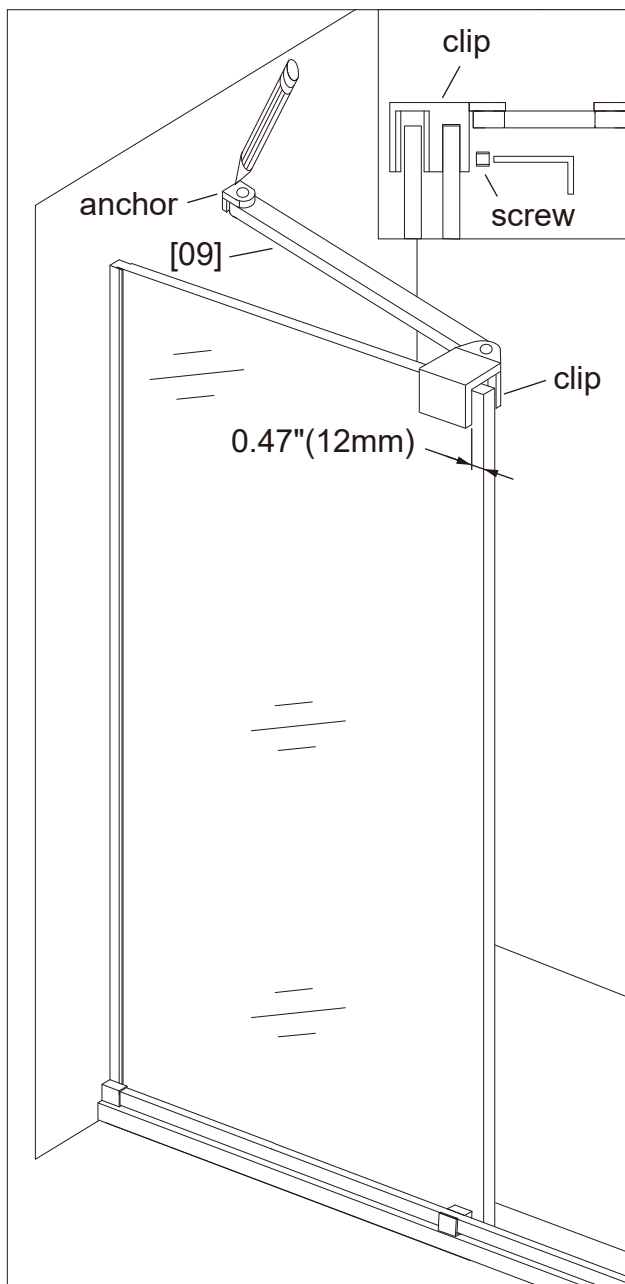


Fig 4.1

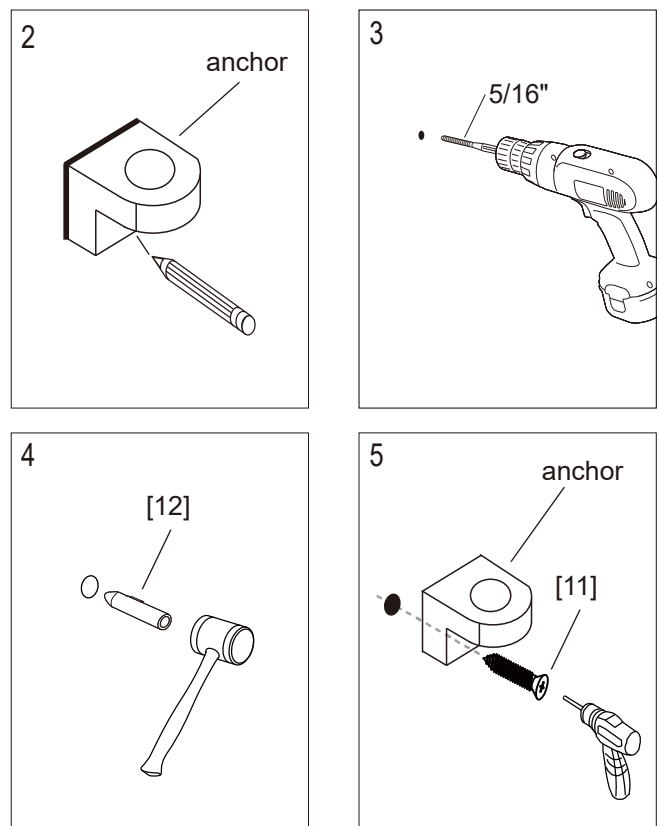


Fig 4



WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

Step 5

1. Remove **covers, screws, clips** and **gaskets** from the **Rollers [02]**. (Fig 5.1)
 2. Install the **Rollers [02]** from the back of the **Door [07]**. (Fig 5.2, Fig 5.3)
- Notice: When facing the front of **Door [07]** during right side installation, the holes for handle should be at the right. When facing the front of **Door [07]** during left side installation, the holes for handle should be at the left.
3. Install **gaskets** and **clips** to the **Rollers [02]** from the front of **Door [07]**. Secure the **Rollers [02]** with **screws**. (Fig 5.2)
 4. Remove the **Corner Protector** at the bottom of the **Door [07]**. Install **Bottom Water Sealing Strip A [05A]** and **Bottom Water Sealing Strip B [05B]** to the bottom of the **Door [07]**. (Fig 5.3)

Notice: The flanges of bottom water sealing strips face inside.

Bottom Water Sealing Strip B [05B] should be closed to the side of **Rollers [02]**.

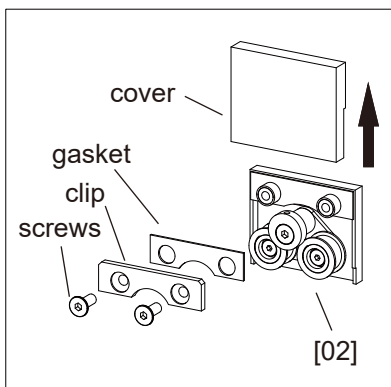


Fig 5.1

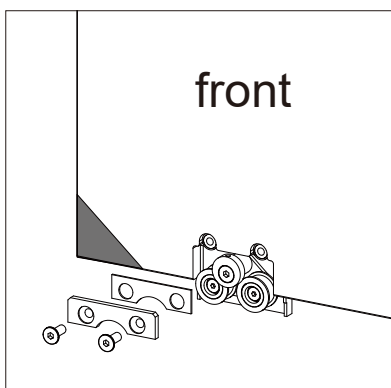


Fig 5.2

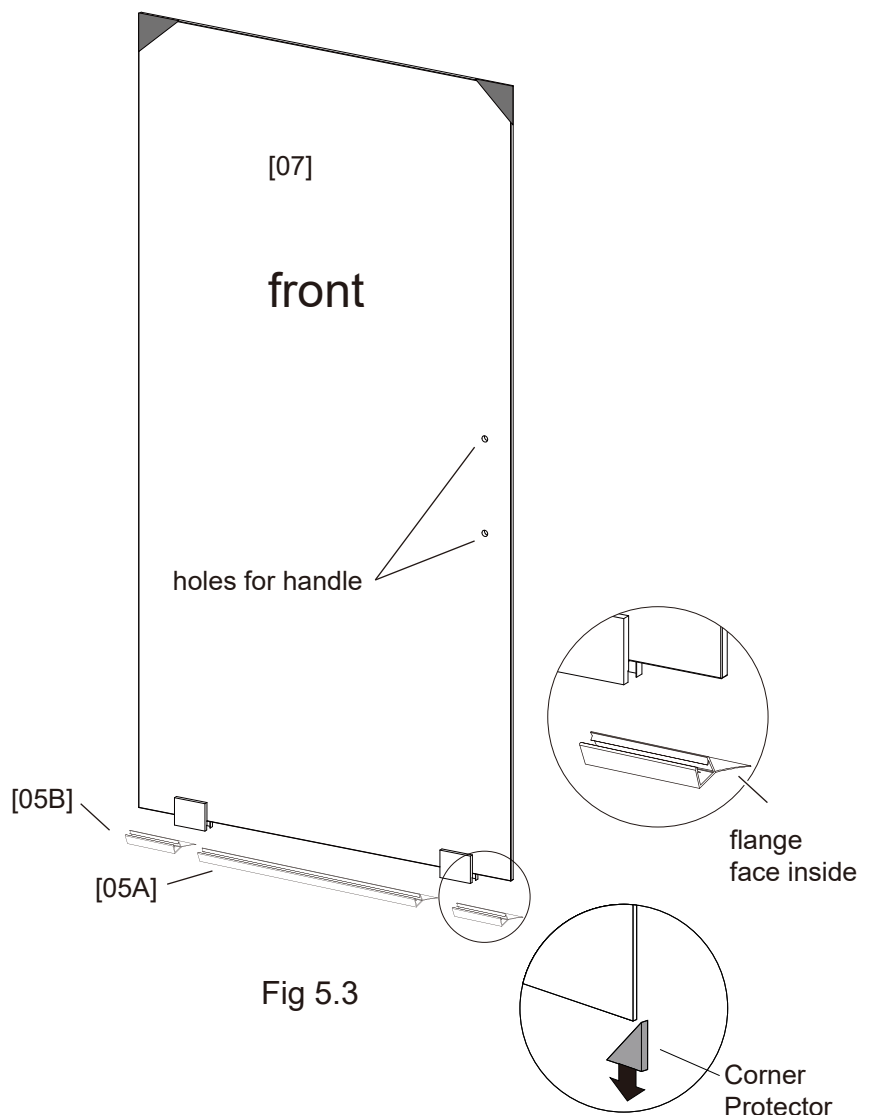


Fig 5.3

! WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

Step 6

1. Remove the **Corner Protector** at the top right of the **Door [07]**. Slightly place the **Door [07]** assembly onto the **Bottom Rail [08]** as figure shows. (Fig 6.1)
2. Hold the **Door [07]** and install the **Support Bar [09]** to the **Fixed Panel [15]** and the **Door [07]**. (Fig 6.2)
3. Adjust the **Support Bar [09]** until the hole of **rod** aligns with the screw hole of **anchor**. Then secure the **rod** to the **anchor** with **screw**. (Fig 6.3)
4. Secure the **clip** to **Fixed Panel [15]** by tighten the **screws** on it. (Fig 6.4)
5. Install the **Cover [14]** to the **screws** of the **clip**. (Fig 6.4)

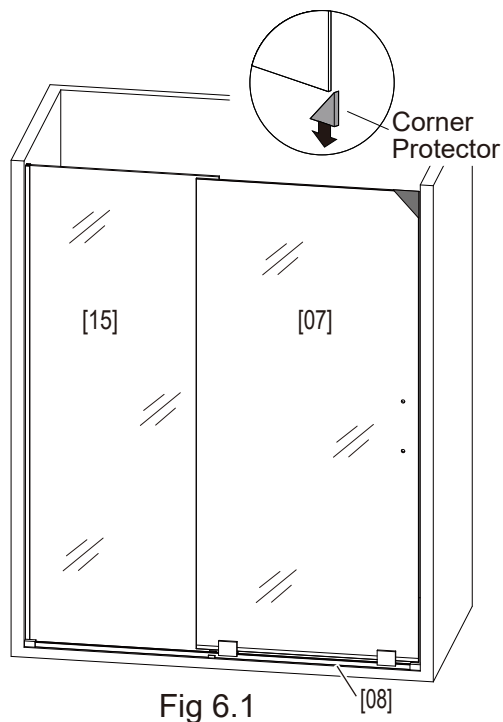


Fig 6.1

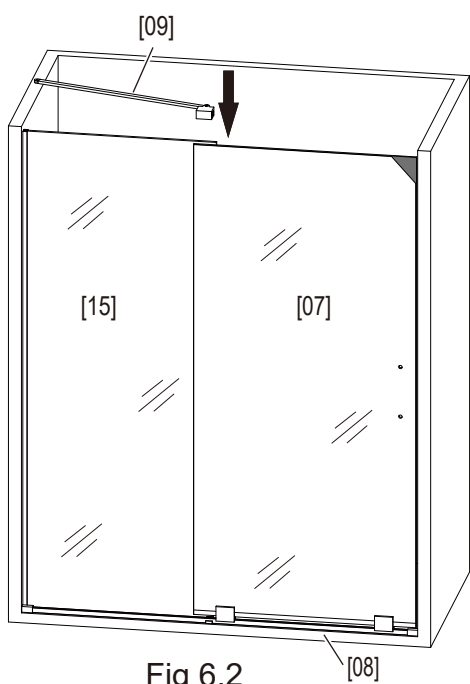
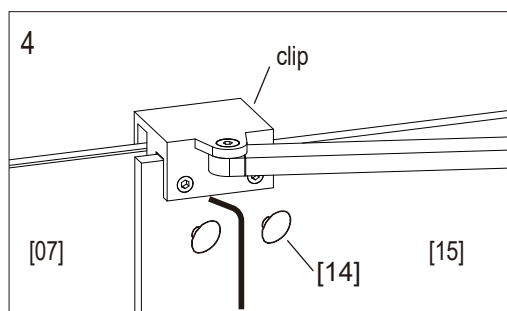
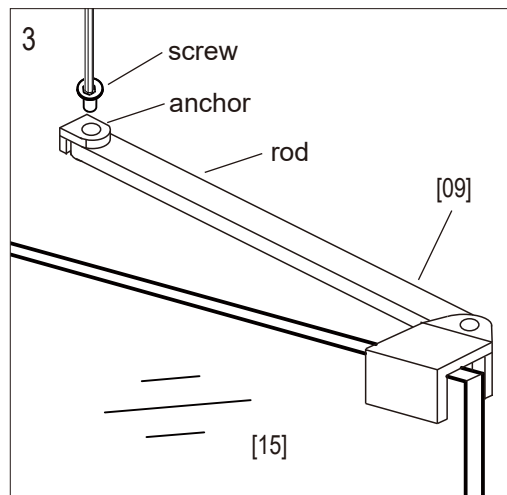


Fig 6.2

Fig 6

! WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

Step 7

1. Disassemble the **Handle [16]** and install to the **Door [07]**. Install **handle** and **washers** from the front of **Door [07]**. Install **sleeves, washers, lever** and **fixed block** from the back of **Door [07]**. (Fig 7)

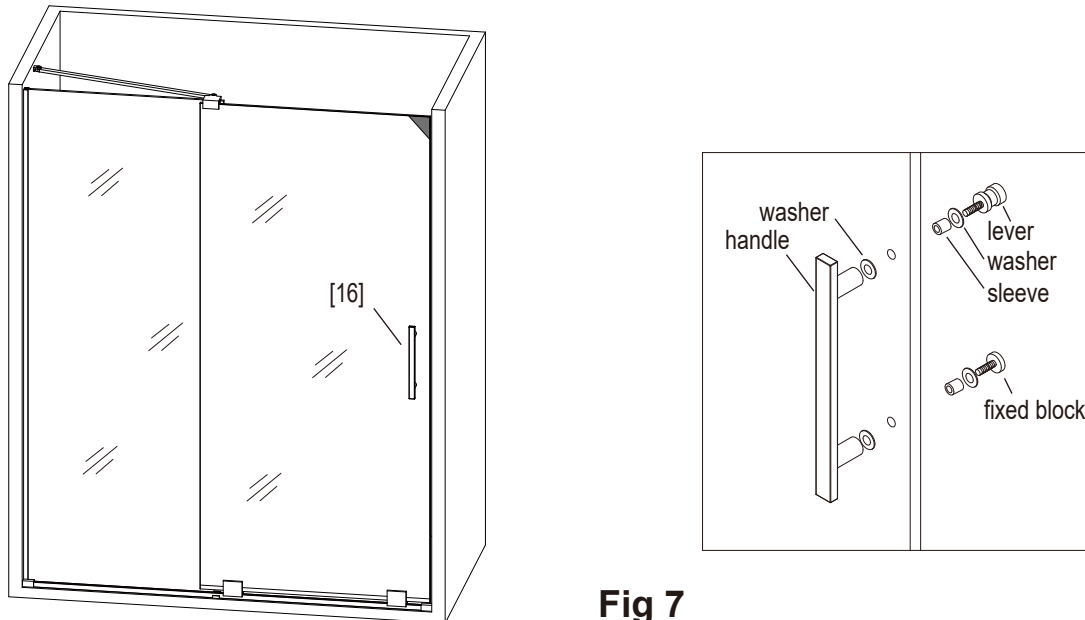


Fig 7

Step 8

1. Remove the **Corner Protectors** from the **Door [07]**. (Fig 8)
2. Install **Side Water Sealing Strip A [03A]** to the side of the **Door [07]** closed to the wall. Install **Side Water Sealing Strip B [03B]** to the other side of the **Door [07]**.
Note: Make sure the flange of **Side Water Sealing Strip B [03B]** faces inside. (Fig 8.1, Fig 8.2)
3. Cut 3" flange at the lower end of **Side Water Sealing Strip [04]** and install it to the side of the **Fixed Panel [15]**.
Make sure the **flange** of **Side Water Sealing Strip [04]** faces towards the **Door [07]**. (Fig 8.1, Fig 8.3)

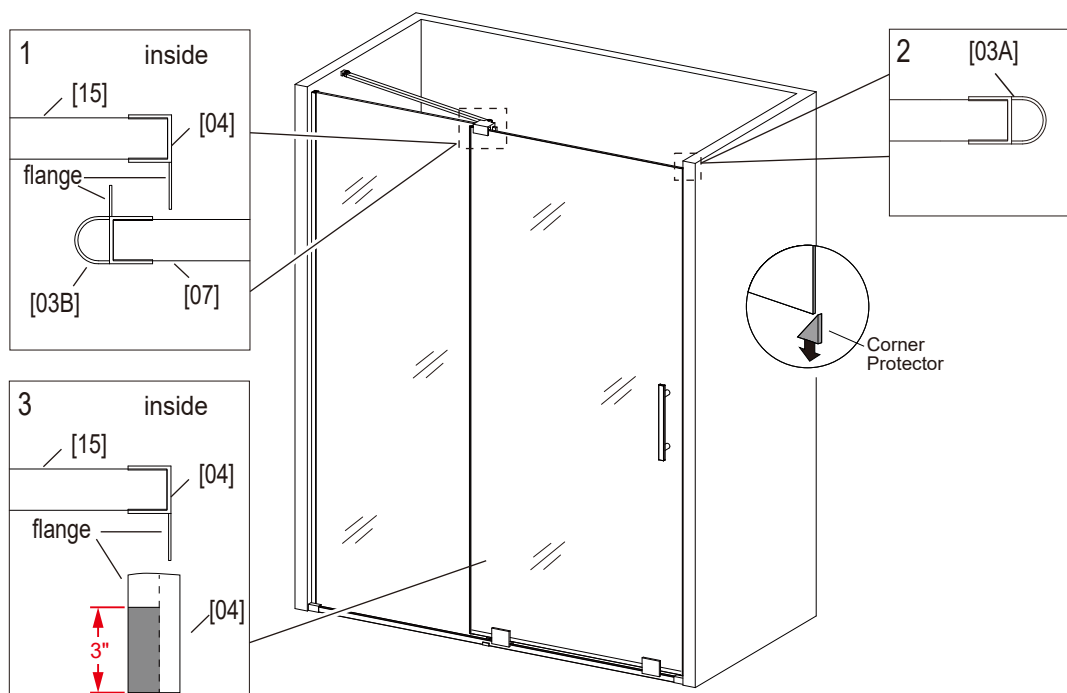


Fig 8

! WARNING

To prevent damage to glass and potential injury, carefully follow the instructions on **page 4**.

Step 9

1. If there is gap between the **Door [07]** and the wall, loose the center screw of one **Roller [02]**. Use appropriate **allen key #1** to hold the **nut**, then use **allen key #2** to loose the **screw** by turning it **anticlockwise** as figure shows. Adjust the **Door [07]** by turning the nut. (Fig 9.1)
2. Hold the **nut** in position after adjustment and tighten the **screw** to secure. (Fig 9.1)
3. Slide the **covers** down to the **clip** to finish adjustment. (Fig 9.2)



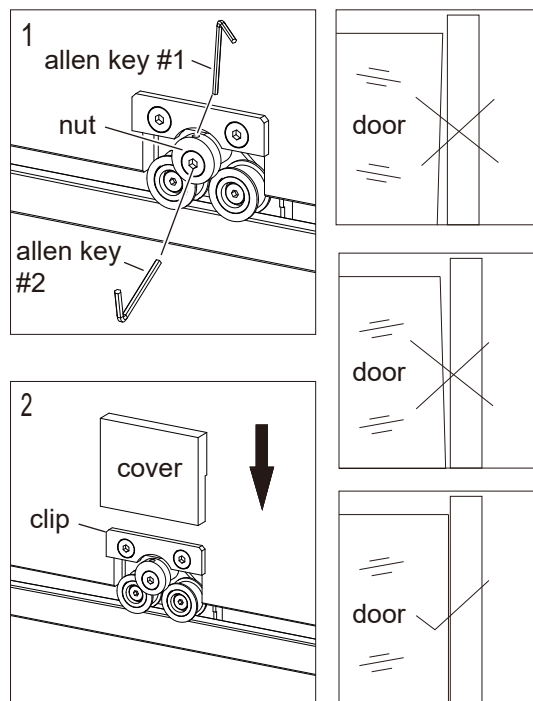


Fig 9

Step 10

Apply a good quality Silicone Sealant at the corners form by the **Bottom Rail [08]** and threshold, corners form by the **wall** and **Fixed Panel [15]**. (Fig 10)

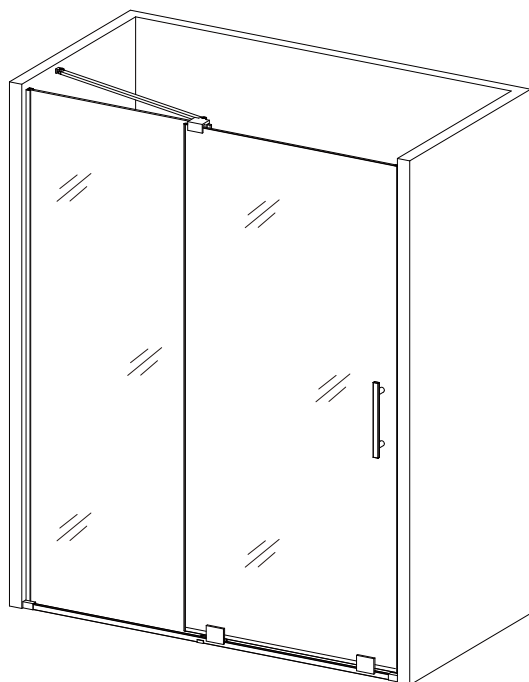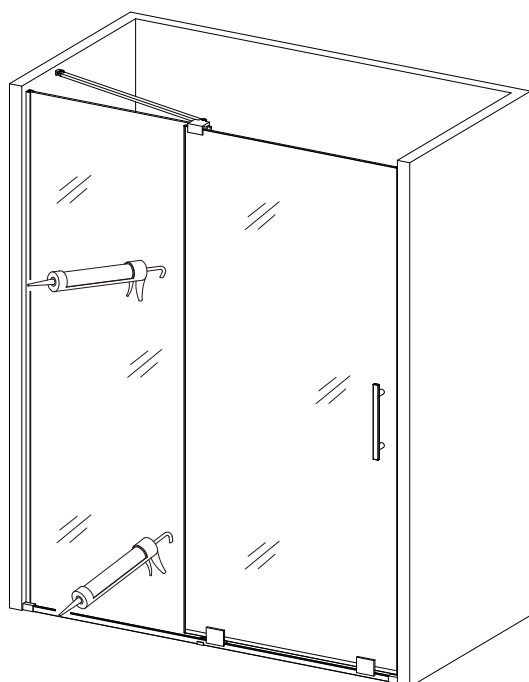

Allow 24 hours for the silicone to fully cure before using the shower.



Use **Silicone cleaner [20]** to smooth and clean up the silicone.

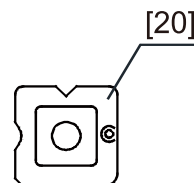


Fig 10


Care & Maintenance

BASES/TUBS and BACK WALLS: Wipe them off after each use with a soft cloth. To clean the acrylic surface, use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes, or scrapers, as they can scratch or dull the surface.

GLASS: Wipe off the glass after each use with either a soft cloth or a squeegee to prevent soap buildup and water spots (hard water can etch the surface of the glass over time if left to dry). To avoid damaging the surface, never use abrasive cleaners or cleaning products that contain scouring agents. Likewise, never use bristle brushes or abrasive sponges that can scratch the surface.

HARDWARE: To ensure a long-lasting finish, wipe off the metal parts after using with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach, or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft cloth. Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with (not across) the grain. Never use an abrasive sponge or cloth, steel wool, or wire brush, which may permanently scratch the surfaces.

NOTE: Regularly inspect the glass and all hardware for misalignment, proper attachment, and damage. Contact ANZZI with any questions or concerns.

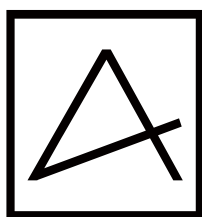

ANZZI®