

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.





Tip #3: Read manual before assembling, it helps!

ITEM#: 2409



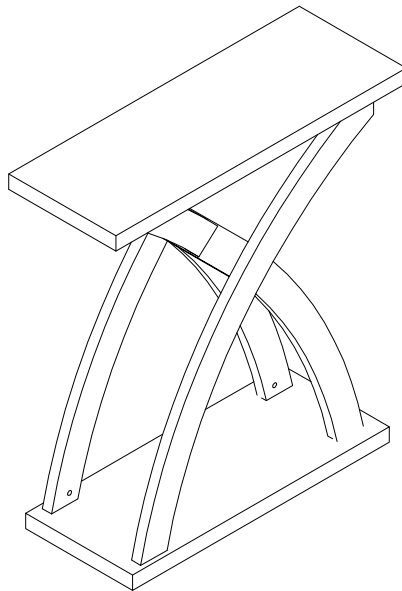


2409

IDENTIFICATION DES PIÈCES PARTS IDENTIFICATION

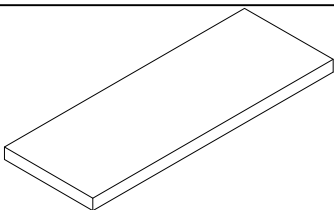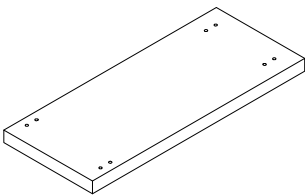
1		PANNEAU DU DESSUS/PANNEAU DU DESSUS	1MC 1PC
2		PANNEAU DU BAS/BOTTOM PANEL	1MC 1PC
3		PATTE AUCHE/LEFT LEG	1MC 1PC
4		PATTE DROITE/RIGHT LEG	1MC 1PC
5		PATTE AUCHE/LEFT LEG	1MC 1PC
6		PATTE DROITE/RIGHT LEG	1MC 1PC
7		PANNEAU DE CONNEXION/CONNECTION PANEL	1MC 1PC
8		BARRE DE SOUTIEN/SUPPORT RAIL	1MC 1PC

IDENTIFICATION DES PIÈCES DE MONTAGE
HARDWARE IDENTIFICATION


A		L29	6MCX/PCS
B		Ø15	6MCX/PCS
C		Ø8x25	8MCX/PCS
D		Ø22	10MCX/PCS
E		M6 × 65mm	5MCX/PCS
F		Ø8xØ16x2	4MCX/PCS
G		M4	1MC/PC
H		Ø13mm	5MCX/PCS
I		Ø10 × 15mm	5MCX/PCS
J		M8 × 65mm	3MCX/PCS
K		Ø16mm	4MCX/PCS
L		M5	1MC/PC
M		Ø8x40	1MC/PC
N		Ø12x12x1	2MCX/PCS
O		Ø5x40	1MC/PC
P		Ø4x25	1MC/PC
Q		197 × 5 × 1	1MC/PC

2409

ÉTAPE / STEP 1

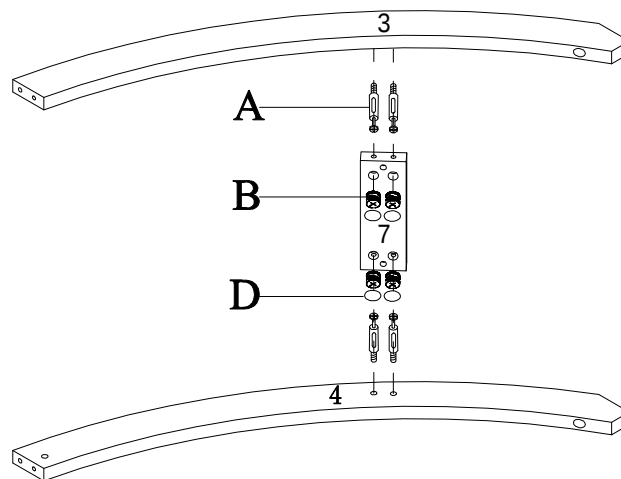


ÉTAPE / STEP 2

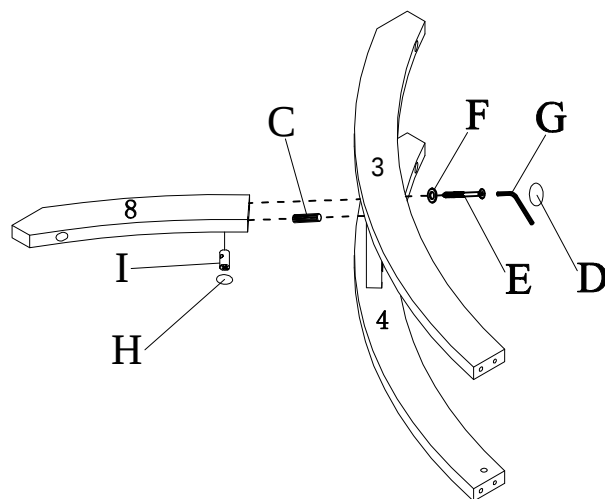


2409

ÉTAPE / STEP 3

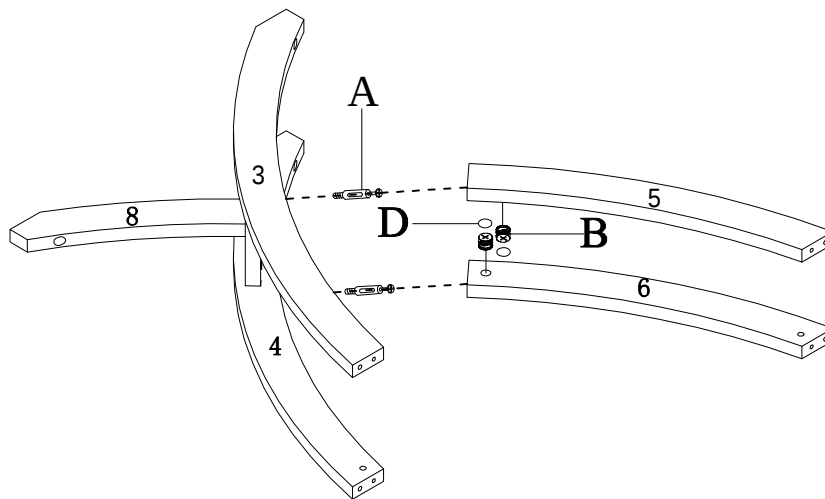


ÉTAPE / STEP 4

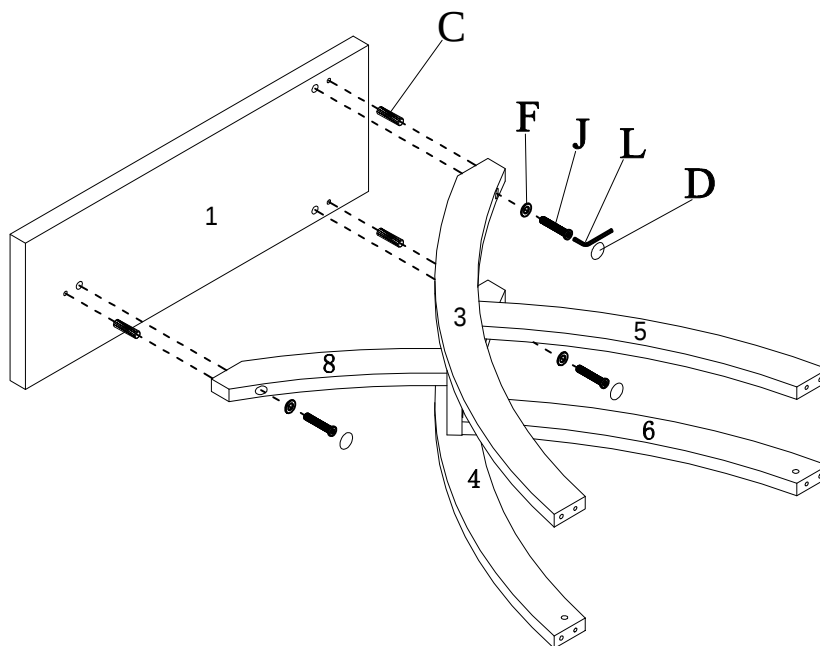


2409

ÉTAPE / STEP 5

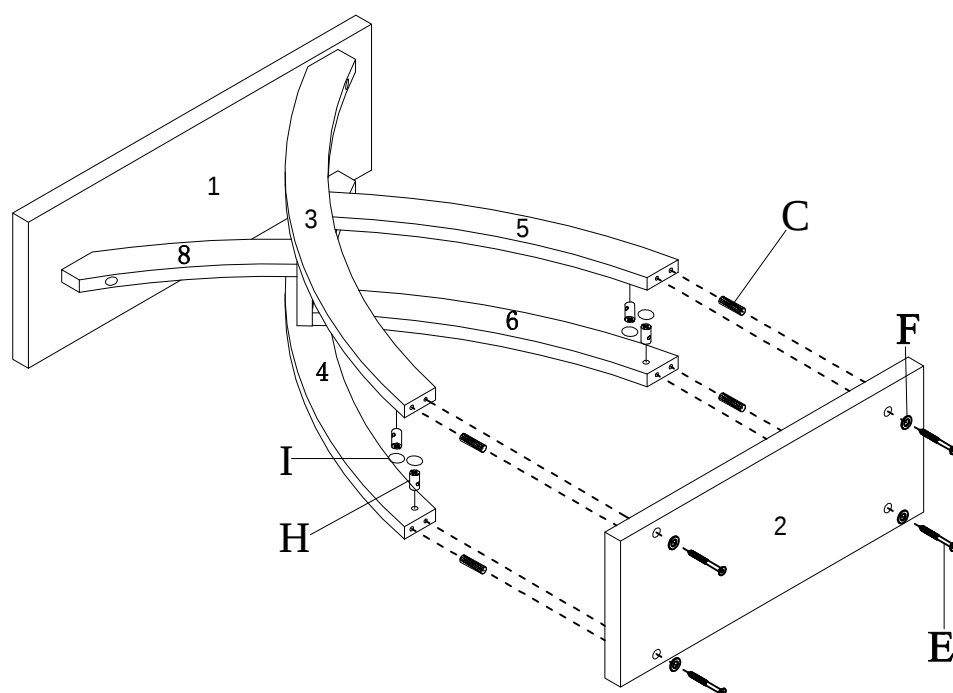

ÉTAPE / STEP 6

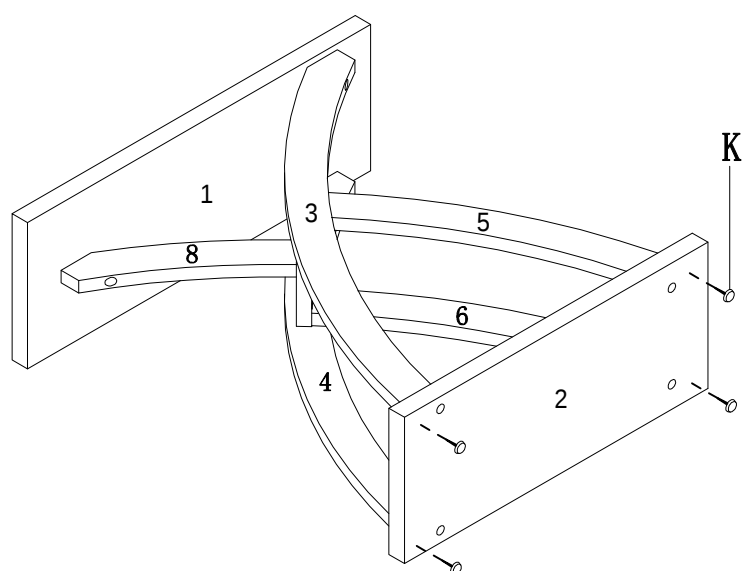


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1 / ETAPE 1

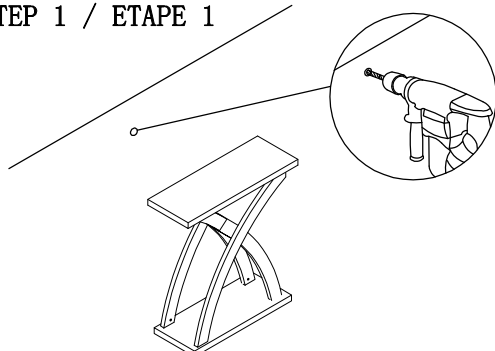


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2 / ETAPE 2

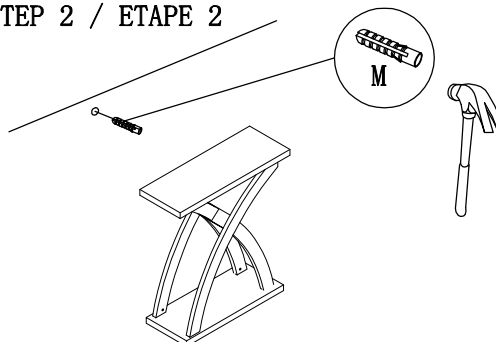


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3 / ETAPE 3

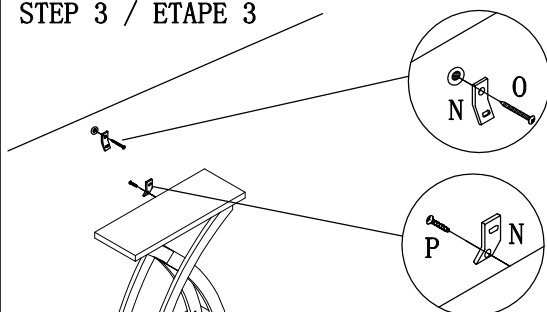

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4 / ETAPE 4

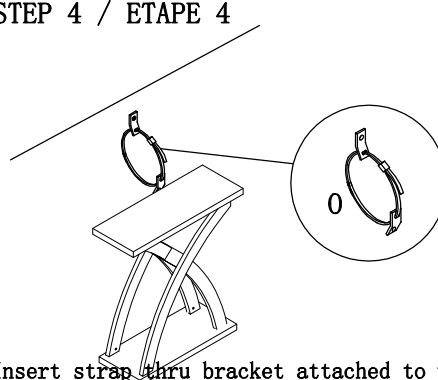

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.