


CAMELOT DAYBED

Model #171-030 Sides & Back Panels Carton B Model #171-040 Wood Posts Carton A

Customer Service Phone Number: 502 562-0000 06-18-03

UNLESS OTHERWISE STATED, PLEASE DO NOT TIGHTEN BOLTS (AND/OR) SCREWS UNTIL UNIT IS COMPLETELY ASSEMBLED. Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required.

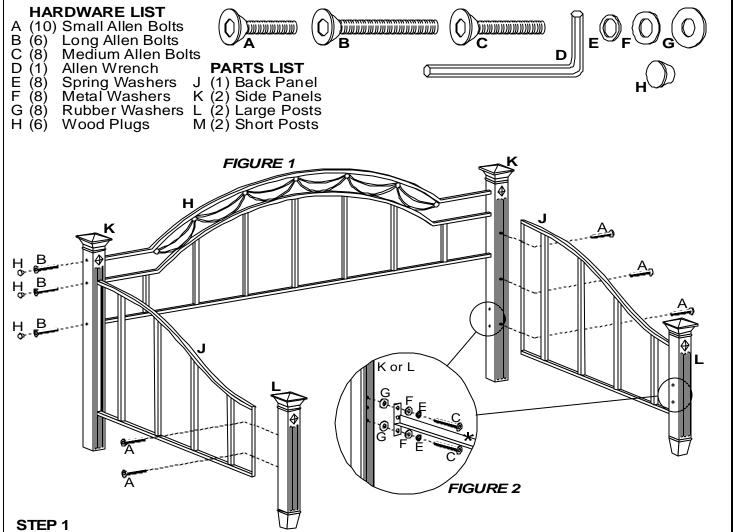

Begin assembly by both Large Posts (K) to Back Panel (H), using 3 Long Allen Bolts (B) per each side. Only tighten bolts by hand for this step. See Figure 1.

STEP 2

Attach both Side Panels (J) to both Large Posts (K), using 3 Small Allen Bolts (A) per each panel. Tighten all bolts from steps 1 & 2 using Allen Wrench (D) provided. Insert Wood Plugs (H) to cover Long Allen Bolt (B) heads on both Large Posts (K) sides. See Figure 1.

STEP 3

Attach both Short Posts (L) to both Side Panels (J), using 2 Small Allen Bolts (A) per each panel. Tighten all bolts using Allen Wrench (D) provided. See Figure 1.

STEP 4

Attach Bed Frame (*Not Included) to both Large & Short Posts (K & L), using 2 Medium Allen Bolts (C), 2 Spring Washers (E), 2 Metal Washers (F) & 2 Rubber Washers (G) per each post. Tighten all bolts. See Figure 2. Assembly is now complete.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish of your new Daybed Set will ever need. Never use harsh or abrasive cleaners for polishing. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.