


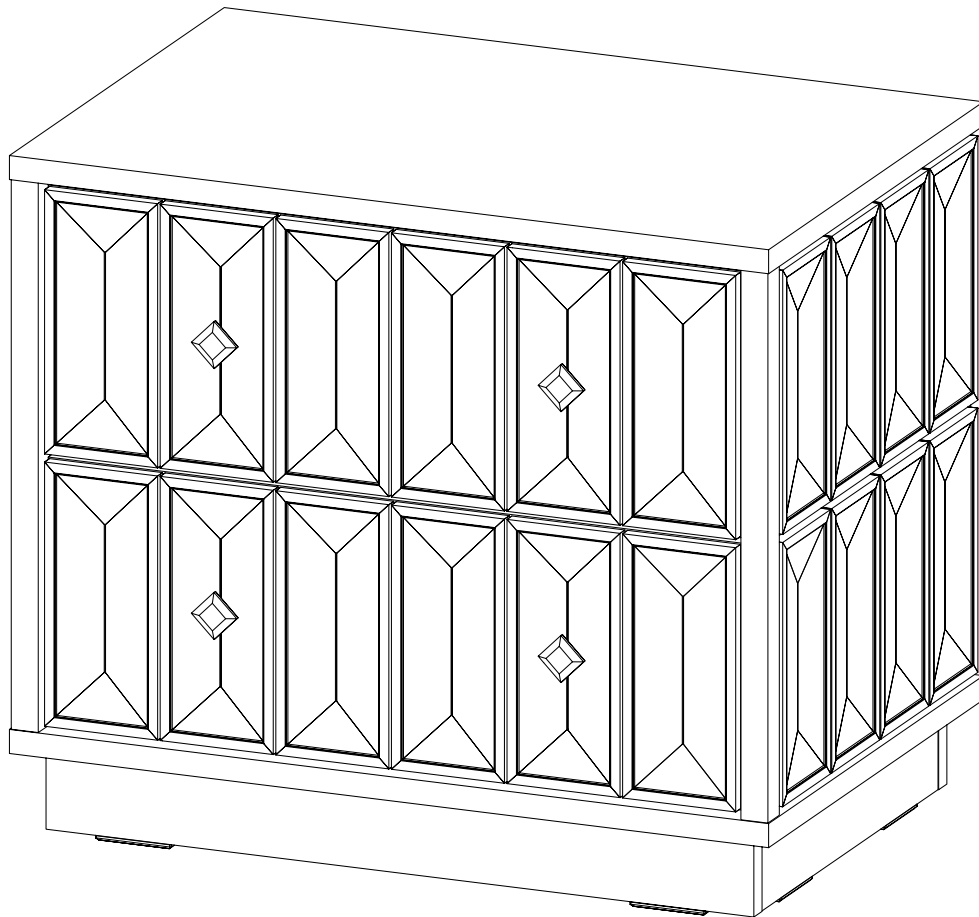

ASSEMBLY INSTRUCTIONS

Nightstand

EEI-7835 / V0.06.02.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 32 mm	x26
B		Cam Lock Ø15 mm	x14
C		Cam Lock Ø12 mm	x12
D		Wood Dowel Ø8 x 30 mm	x12
E		Wood Dowel Ø6 x 30 mm	x12
F		Screw M 5 x 45 mm	x4
G		Screw M 4 x 39 mm	x8
H		Screw M 3.5 x 13 mm	x12
I		Screw M 6 x 10.5 mm	x8
J		Wedge	x12
K		Screw M 3.5 x 15.5 mm	x12
L		Handle	x4
M		Screw M 4 x 20 mm	x4
N		Floor Glide	x8
RM35A		Drawer Runner	x2

WHAT YOU NEED:




Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 15

All parts are numbered with a sticker according to this list.

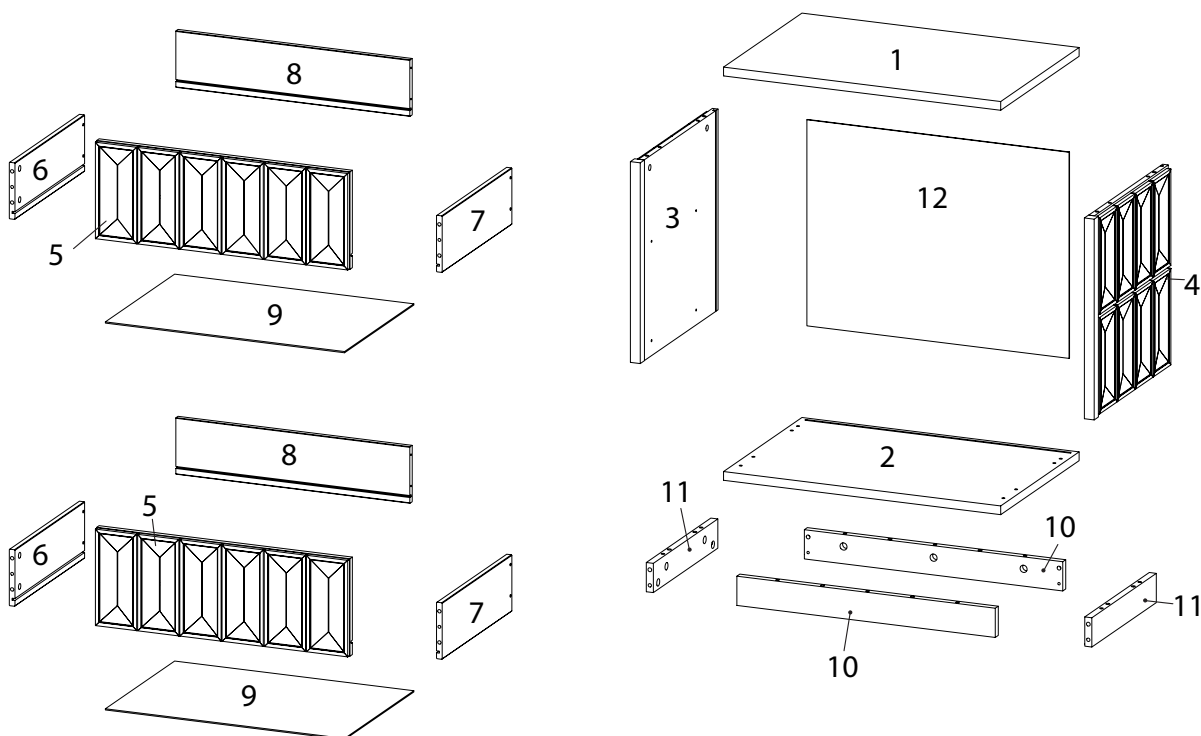

1	Top Board	x1	7	Side Drawer Right	x2
2	Bottom Board	x1	8	Back Drawer	x2
3	Side Board Left	x1	9	Bottom Drawer	x2
4	Side Board Right	x1	10	Bottom Skirt 1	x2
5	Front Drawer	x2	11	Bottom Skirt 2	x2
6	Side Drawer Left	x2	12	Back Board	x1

HARDWARE


- A** Cam Bolt Ø6 x 32 mm x8
E Wood Dowel Ø6 x 30 mm x4

COMPONENTS

- 5** Front Drawer x2
6 Side Drawer Left x2
7 Side Drawer Right x2

1.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Front Drawer (5), then tighten using screwdriver.

1.2 Insert Wood Dowel Ø6 x 30 mm (E) into the Side Drawer Left (6) and Side Drawer Right (7). Position as shown.

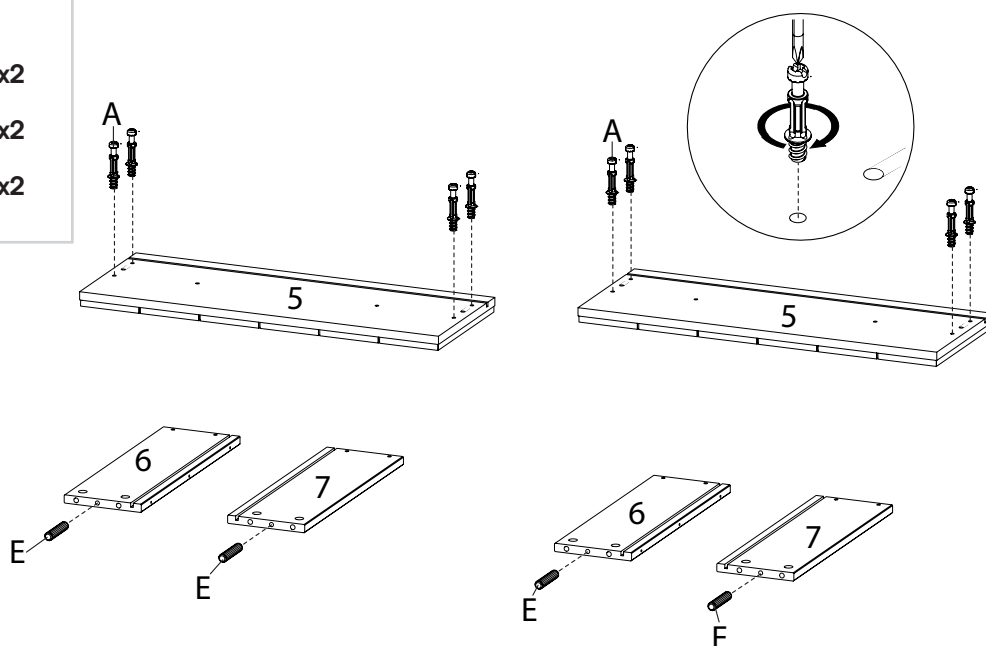

STEP 02


HARDWARE

- C** Cam Lock Ø12 mm x8

COMPONENTS

- 5** Front Drawer x2
6 Side Drawer Left x2
7 Side Drawer Right x2



2.1 Attach Side Drawers Left (6) and Side Drawer Right (7) to Front Drawer (5) secure with Cam Lock Ø12 mm (C), then tighten using screwdriver.

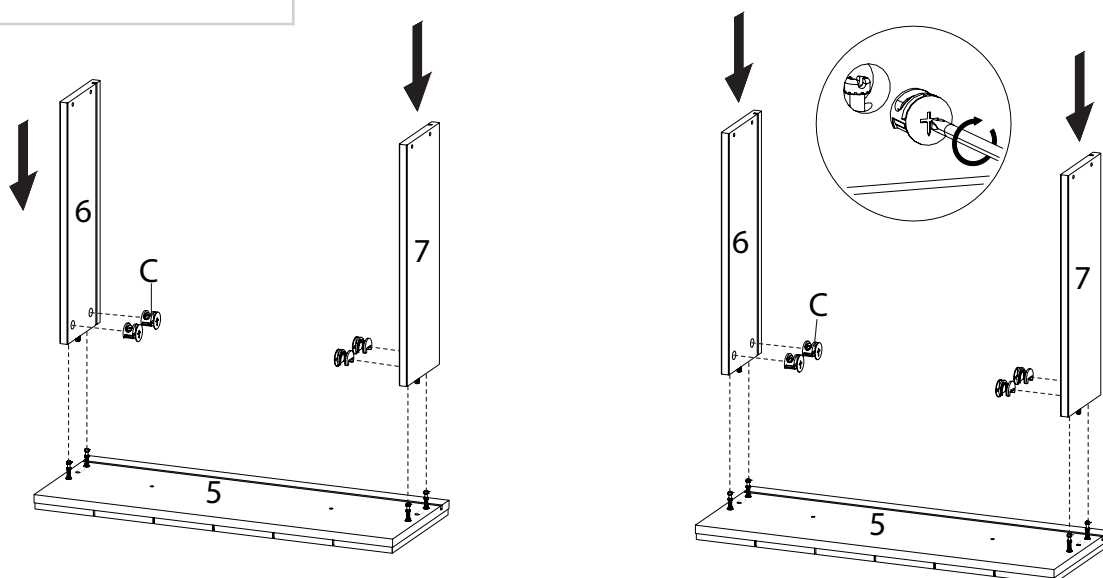

COMPONENTS

9 Bottom Drawer x2

3.1 Insert Bottom Drawer (9), into Front Drawer with laminated face facing upward. Position as shown.

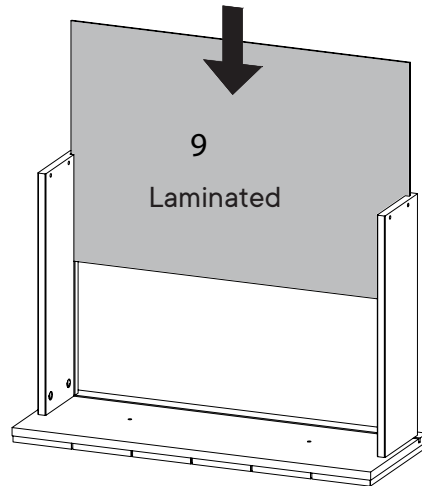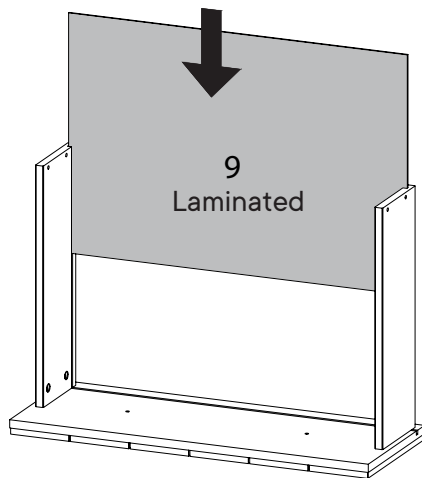

STEP 04



HARDWARE

G Screw M 4 x 39 mm x4

COMPONENTS

8 Back Drawer x1

4.1 Insert Back Drawer (8) secure with Screw M 4 x 39 mm (G) tighten using screwdriver, as shown in the picture.

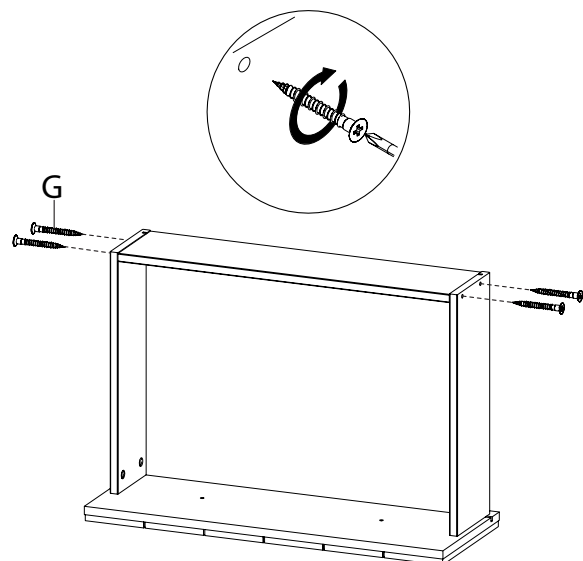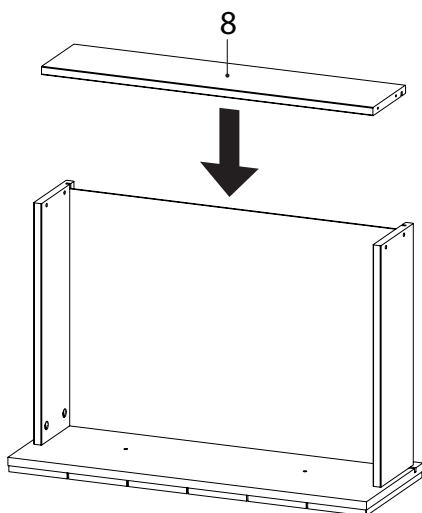


HARDWARE

G Screw M 4 x 39 mm x4

COMPONENTS

8 Back Drawer x1

5.1 Insert Back Drawer (8) secure with Screw M 4 x 39 mm (G) tighten using screwdriver, as shown in the picture.

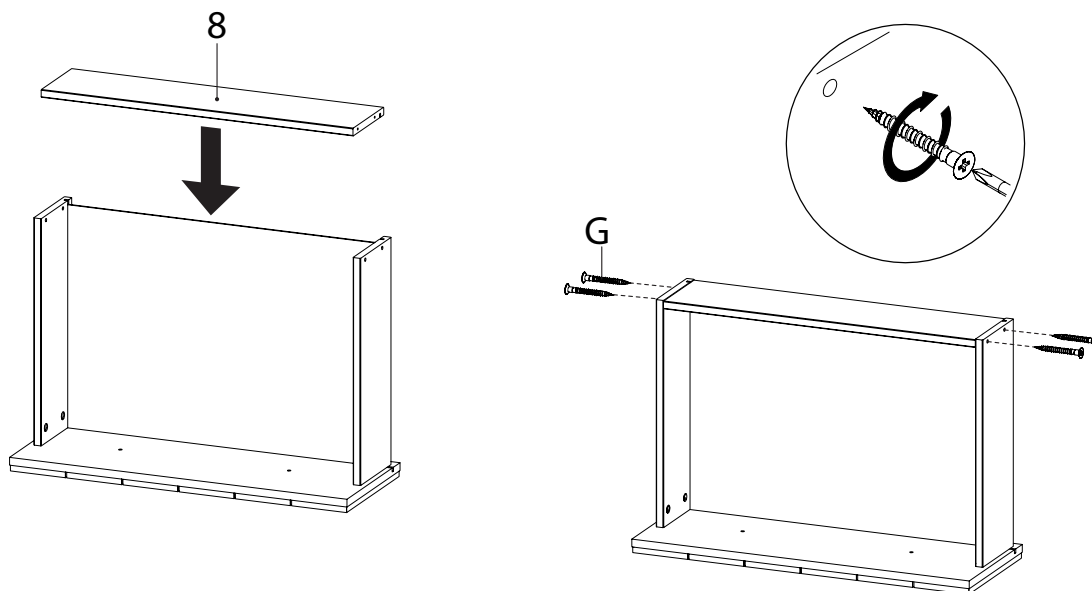


STEP 06

HARDWARE

H Screw M 3.5 x 13 mm x12

RM35A Drawer Runner x2


6.1 Install Part of Drawer Runner RM35A (DL) and RM35A (DR) to Side Drawer, secure with Screw M 3.5 x 13 mm (H), then tighten using screwdriver. Position as shown.

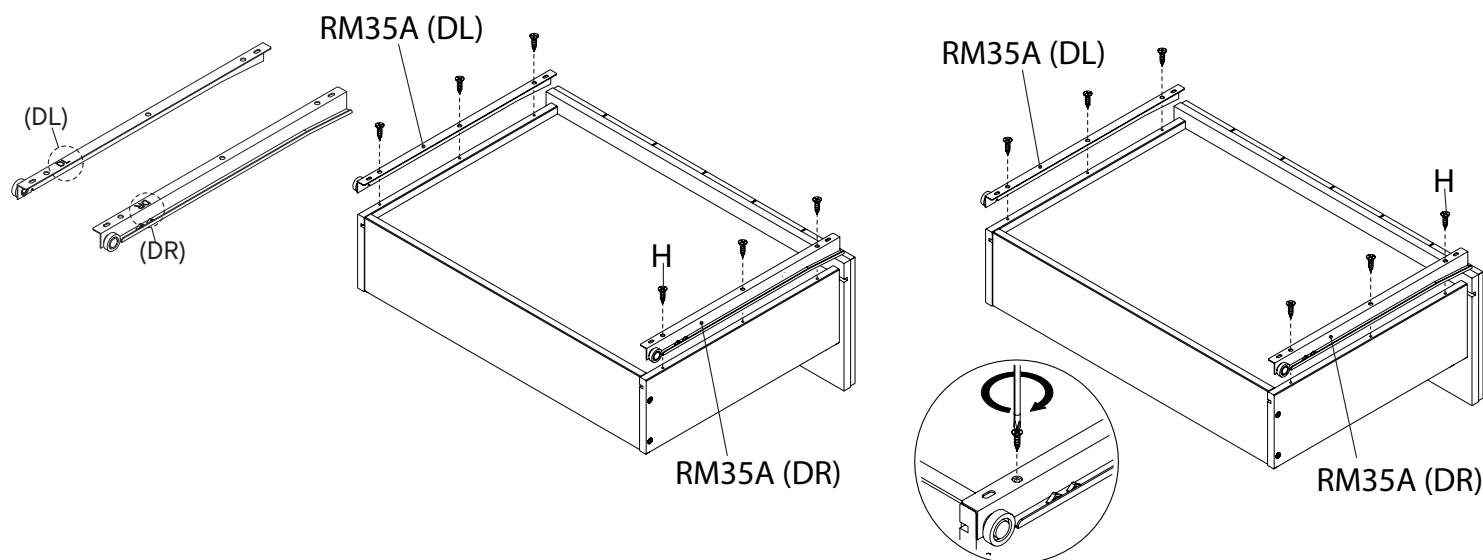

HARDWARE

- J** Wedge x8
K Screw M 3.5 x 15.5 mm x8

7.1 Insert the Wedge (J) and Screw M 3.5 x 15.5 mm (K) into the bottom of the drawer according to the picture.

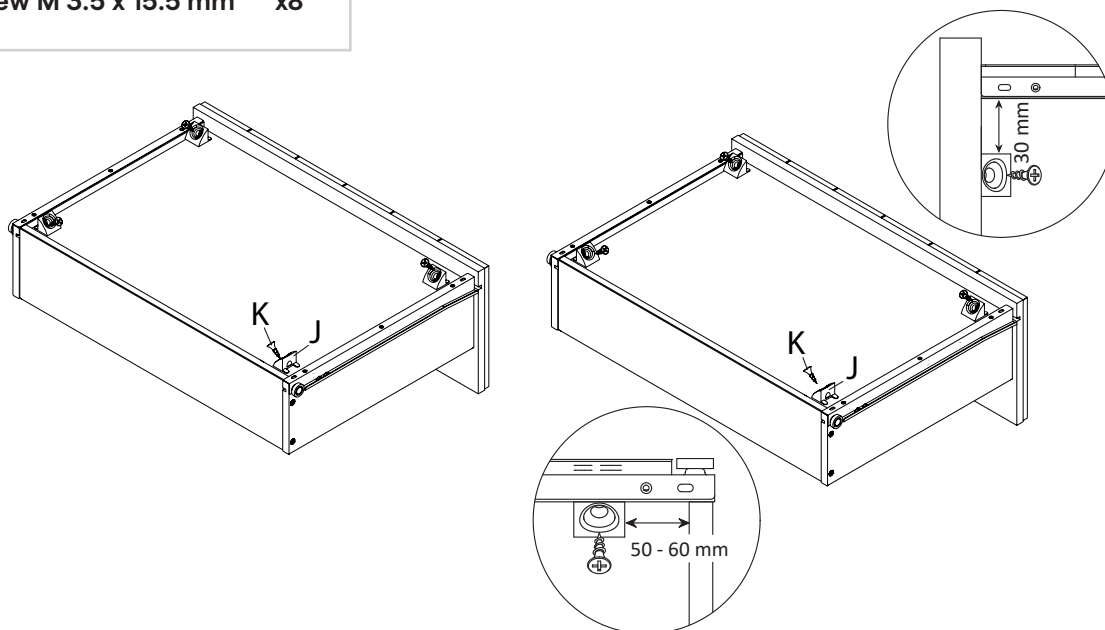


STEP 08

HARDWARE

- L** Handle x4
M Screw M 4 x 20 mm x4

8.1 Install Handle (L) into Front Drawer, secure with Screw M 4 x 20 mm (M). Tighten using a screwdriver and position as shown.

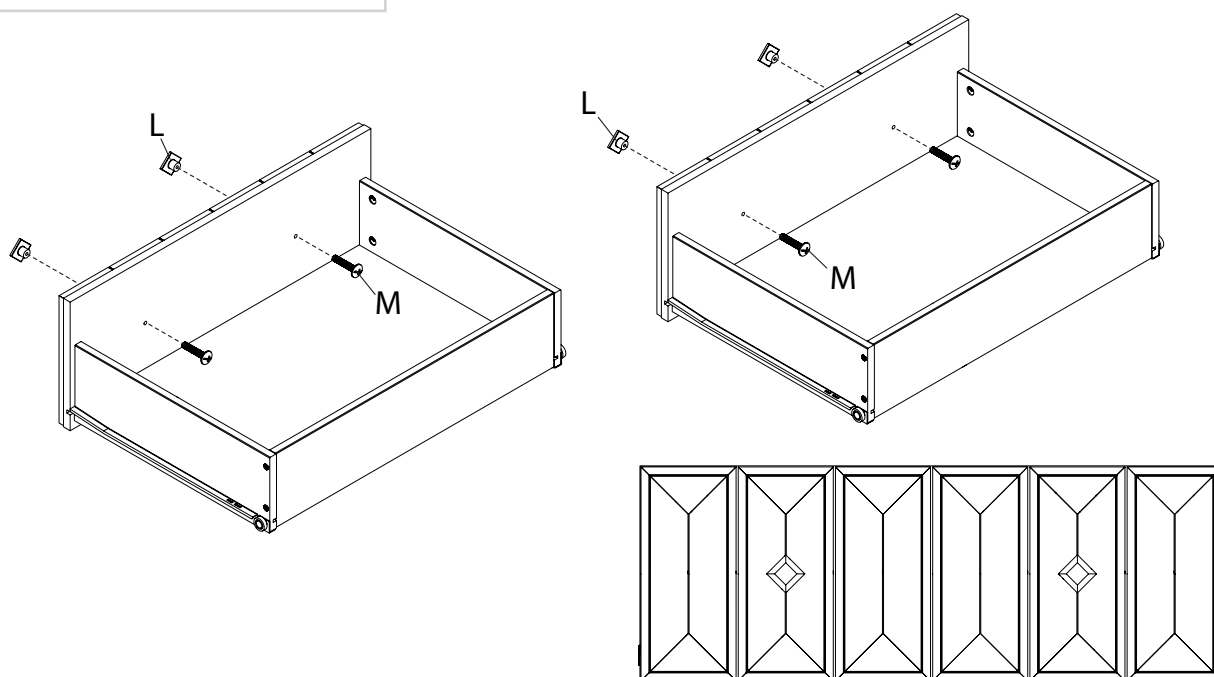

CORRECT HANDLE INSTALLATION POSITION

HARDWARE


- A** Cam Bolt Ø6 x 32 mm x4
E Wood Dowel Ø6 x 30 mm x8

COMPONENTS

- 1** Top Board x1
3 Side Board Left x1
4 Side Board Right x1

9.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Top Board (1), then tighten using screwdriver.

9.2 Insert Wood Dowel Ø6 x 30 mm (E) into the Side Board Left (3) and Side Board Right (4). Position as shown.

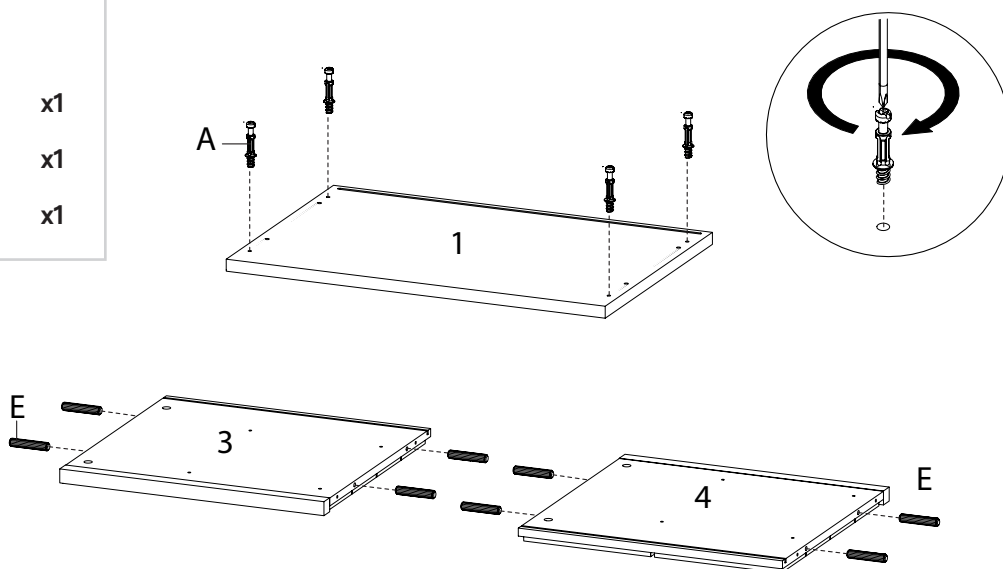

STEP 10


HARDWARE

- I** Screw M 6 x 10.5 mm x8
RM35A Drawer Runner x2

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1

10.1 Install Part of Drawer Runner RM35A (CL) to Side Board Left (3) and Drawer Runner RM35A (CR) to Side Board Right (4), secure with Screw M 6 x 10.5 mm (I), then tighten using screwdriver. Position as shown.

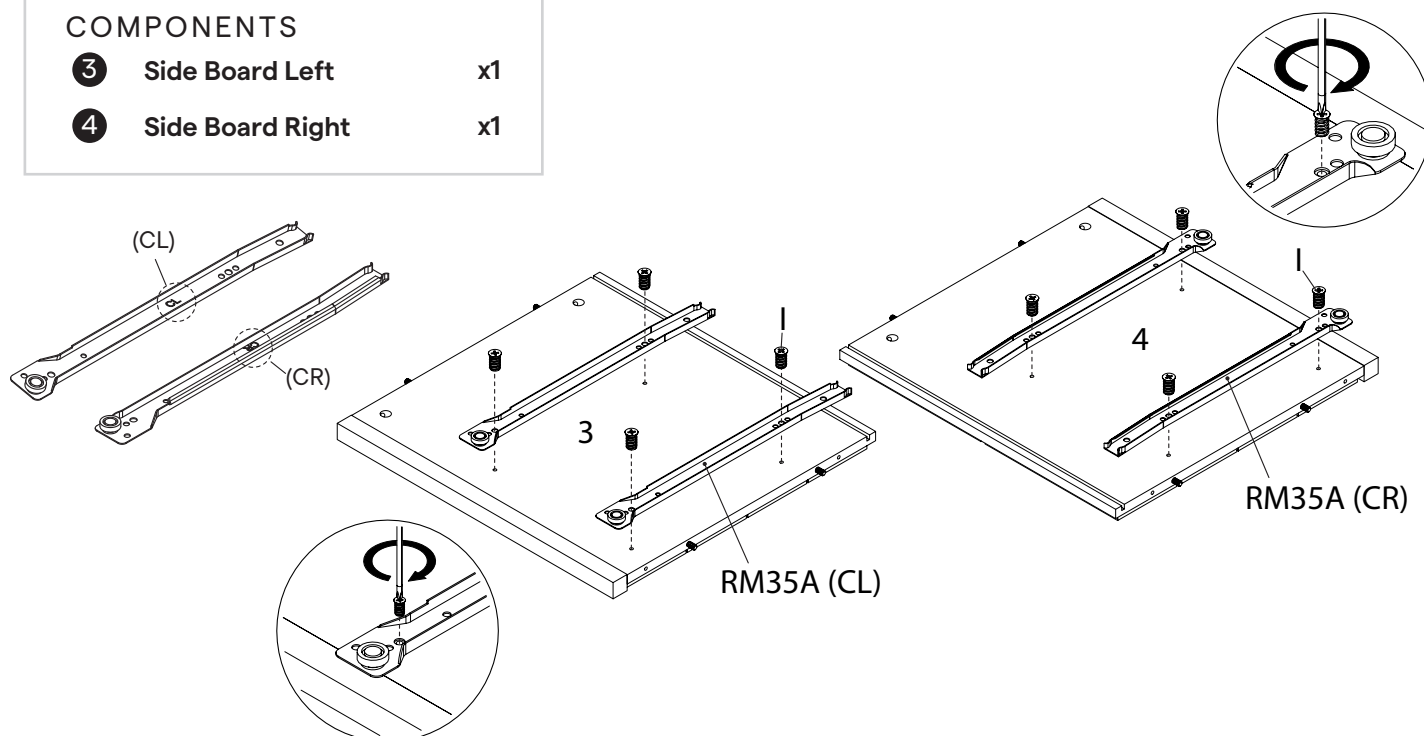

HARDWARE

Ⓒ Cam Lock Ø12 mm x4


COMPONENTS

① Top Board x1

③ Side Board Left x1

④ Side Board Right x1

11.1 Attach component Side Board Left (3) and Side Board Right (4) to Top Board (1), secure with Cam Lock Ø12 mm (C) then tighten using screwdriver. Position as shown.


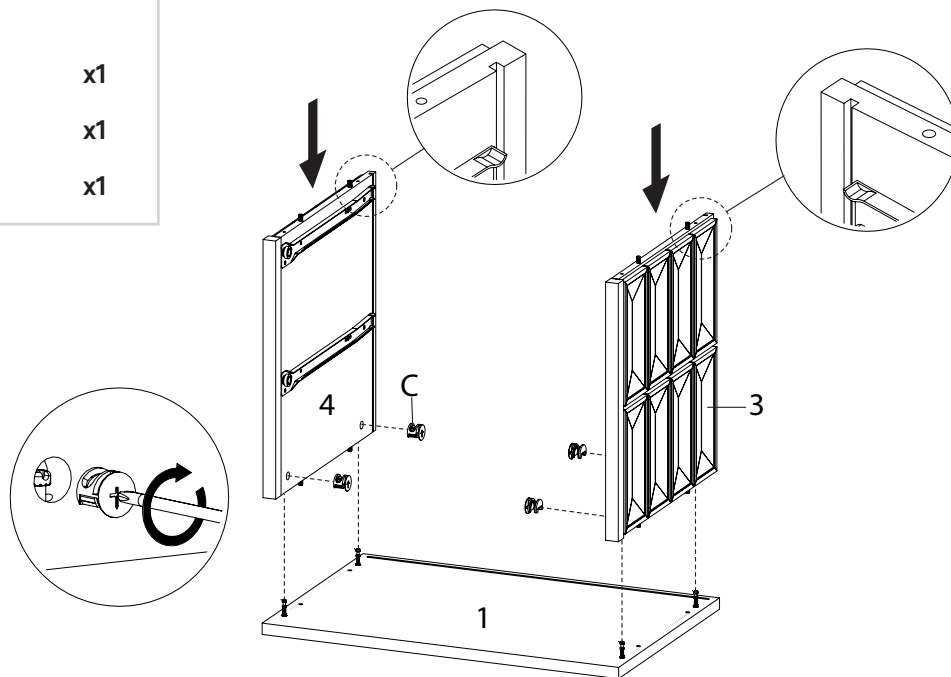


STEP 12

COMPONENTS

⑫ Back Board x1

12.1 Insert Back Board (12) into Top Board. Position as shown.

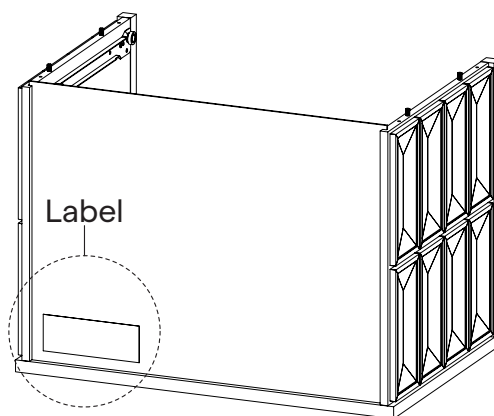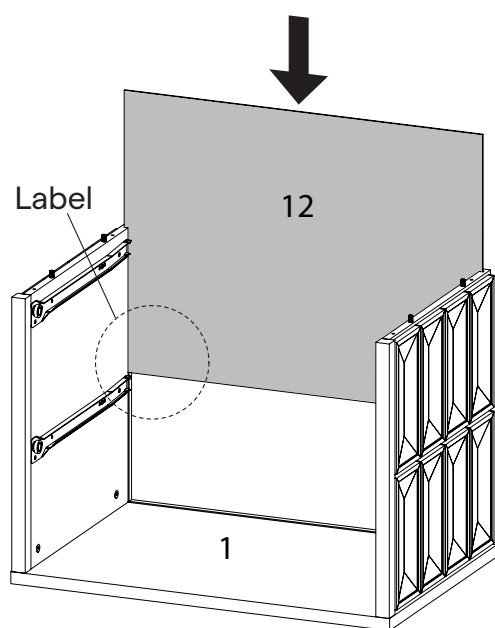

BACK VIEW


HARDWARE

F Screw M 5 x 45 mm x4

COMPONENTS

2 Bottom Board x1

13.1 Attach Bottom Board (2) to Side Boards, secure with Screw M 5 x 45 mm (F), tighten using screwdriver. Position as shown.

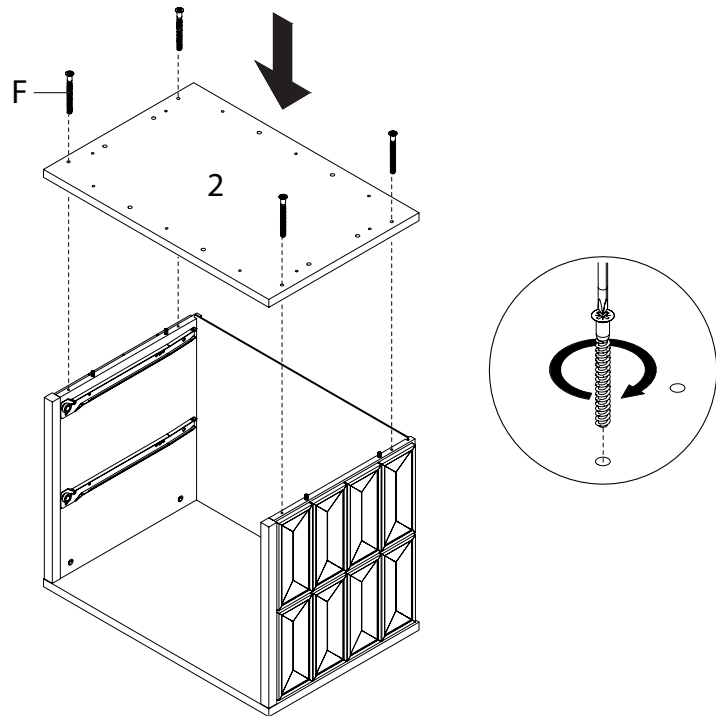

STEP 14

HARDWARE

A Cam Bolt Ø6 x 32 mm x4

D Wood Dowel Ø8 x 30 mm x4


COMPONENTS

10 Bottom Skirt 1 x2

11 Bottom Skirt 2 x2

14.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Bottom Skirt 1 (10), then tighten using screwdriver.

14.2 Insert Wood Dowel Ø8 x 30 mm (D) into the Bottom Skirt 2 (11). Position as shown.

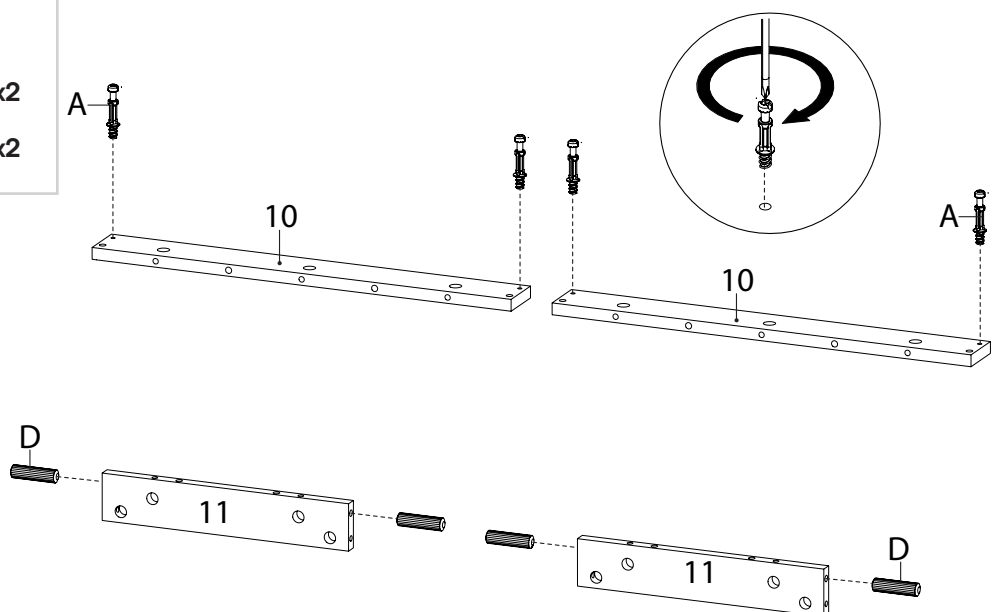

HARDWARE


B Cam Lock Ø15 mm x4

COMPONENTS

10 Bottom Skirt 1 x2

11 Bottom Skirt 2 x2

15.1 Combine Bottom Skirt 1 (10) and Bottom Skirt 2 (11), secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown.

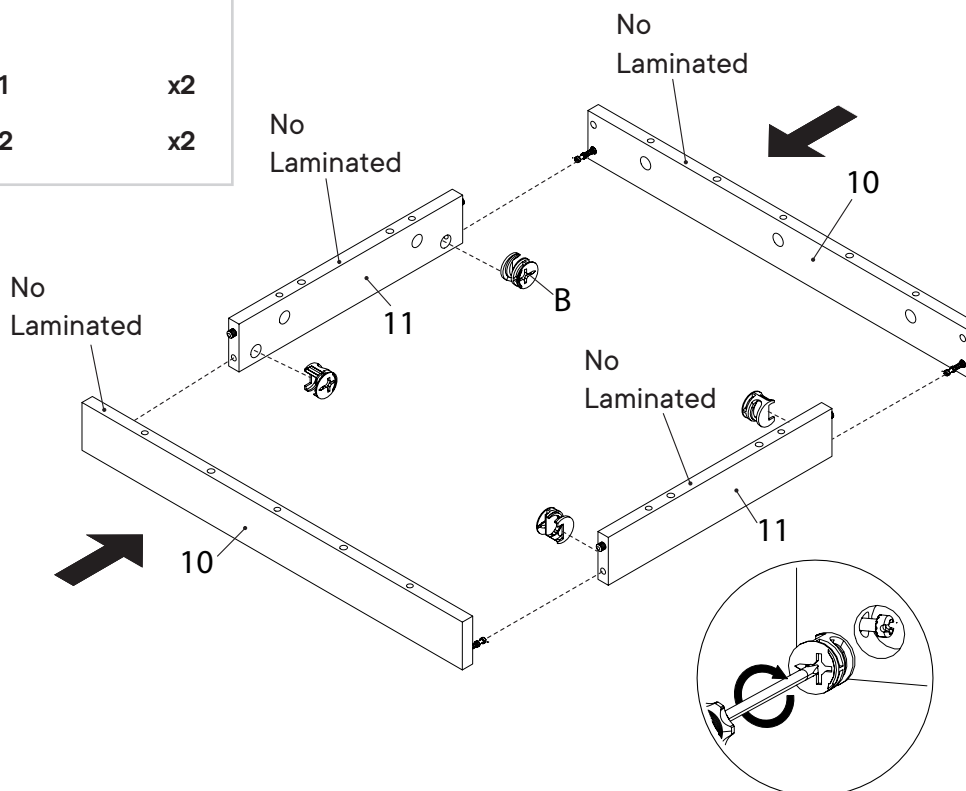


STEP 16

HARDWARE

D Wood Dowel Ø8 x 30 mm x8



16.1 Insert Wood Dowel Ø8 x 30 mm (D) into assembled from previous step.

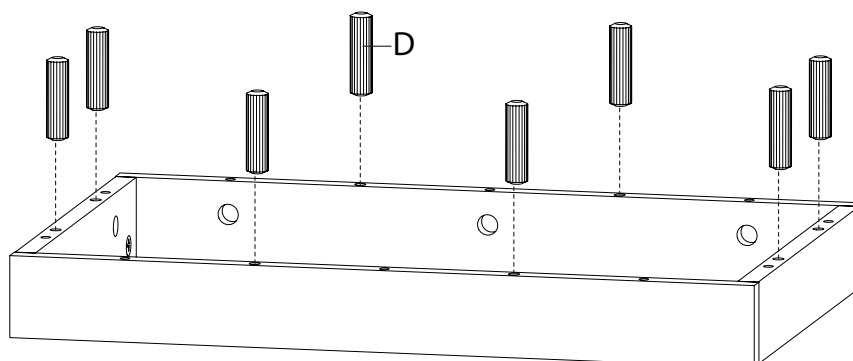

HARDWARE

A Cam Bolt Ø6 x 32 mm x10

17.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Bottom Board (2), then tighten using screwdriver. Position as shown.

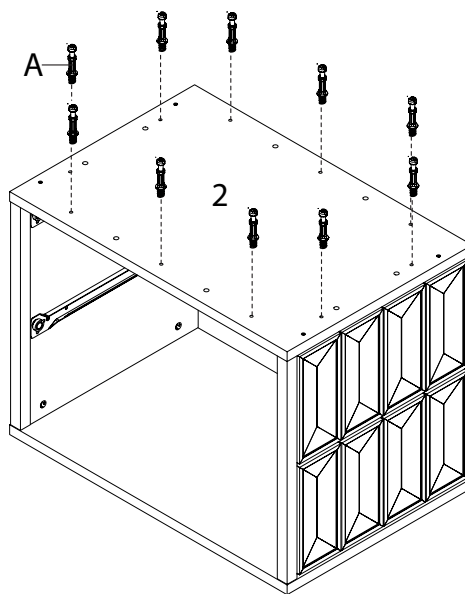
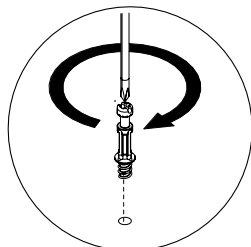


STEP 18

HARDWARE

B Cam Lock Ø15 mm x10

18.1 Attach assembly Bottom Skirt from previous step to Bottom Board, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown.

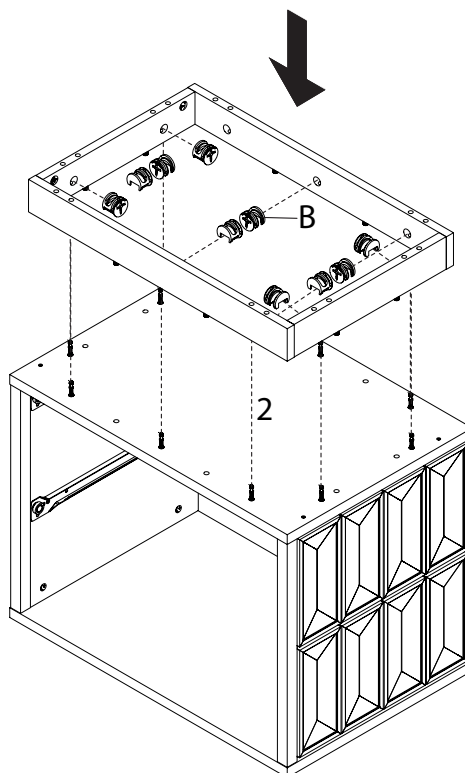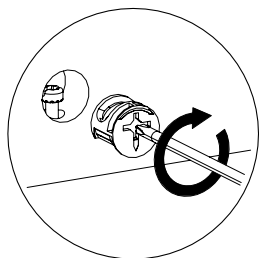


HARDWARE

N Floor Glide



x8

19.1 Insert Floor Glide (N) into Bottom Skirts.
Position as shown.

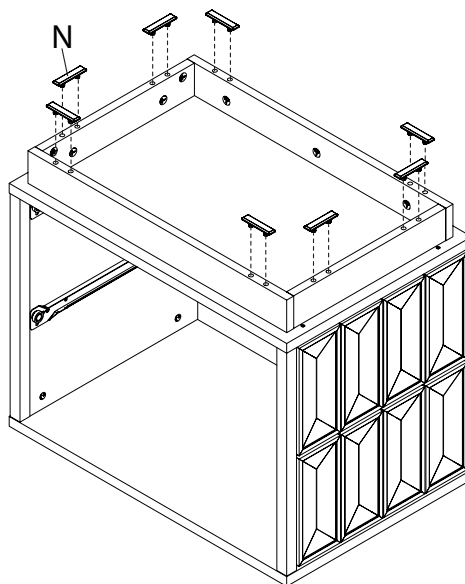

STEP 20



20.1 Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at Side boards, according to the image. Slide in the drawers one by one into the nightstand.

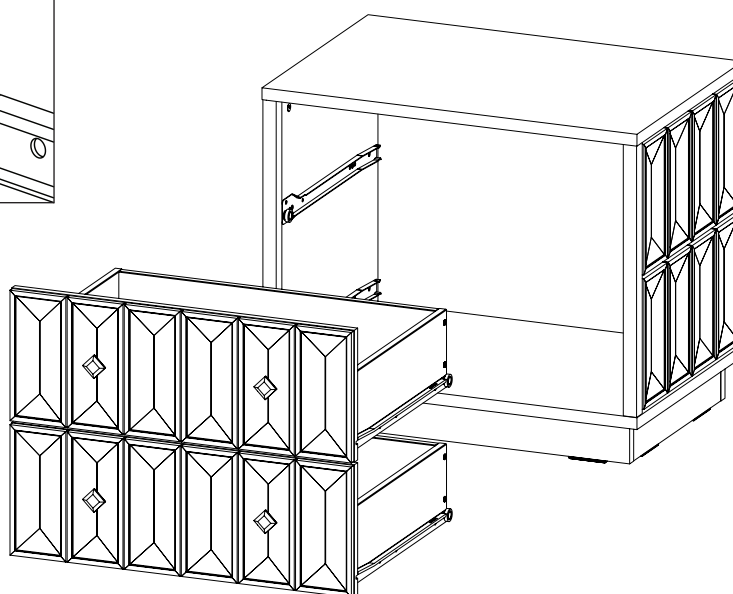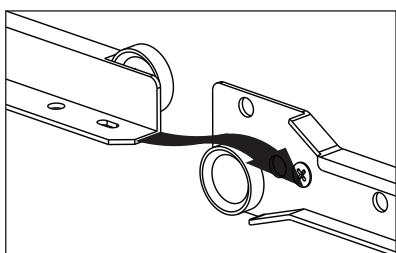

HARDWARE

- | | | |
|----------|-----------------------|----|
| J | Wedge | x4 |
| K | Screw M 3.5 x 15.5 mm | x4 |

21.1 Use the Wedge (J) and Screw M 3.5 x 15.5 mm (K) to back of the nightstand then tighten with screwdriver. Before securing the Wedge (J), ensure that the top board and bottom board are aligned at a 90° angle against the nightstand.

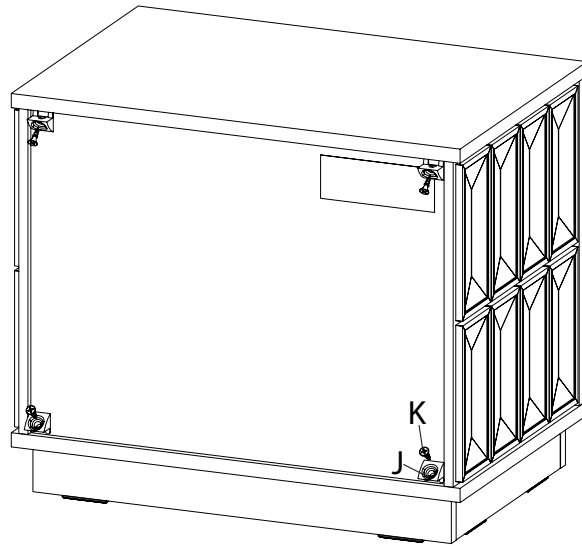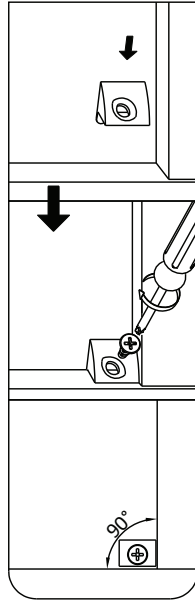


Great job!

Nightstand assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

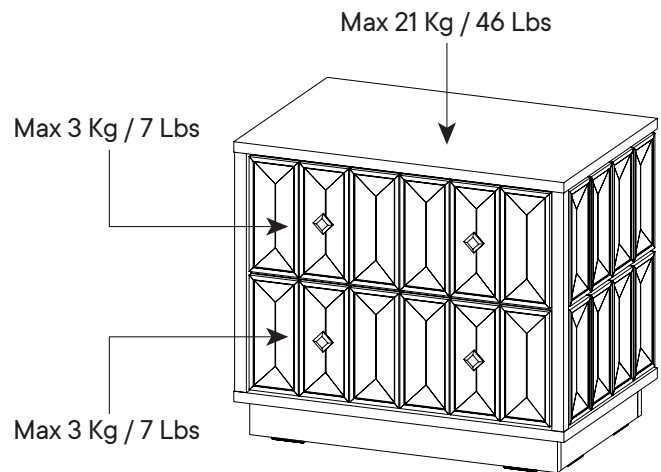

CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com