

TECHNICAL BULLETIN

PROEDGE® AND IMPACTRIDGE® HIP & RIDGE SHINGLE INSTALLATION

SUPERSEDES PREVIOUS BULLETINS

Issue Description:

Fastener location and requirements for installation of ProEdge® & ImpactRidge® hip & ridge shingles.

Recommendations:

ProEdge® and ImpactRidge® hip & ridge shingles may be fastened with 1 fastener on each side, 1 inch from the side edge and 7 1/4 inches from the exposed end (see figure 1 below). Drive all fasteners until they are flush with the surface of the shingle. Special care must be taken when using pneumatic nail guns. Nails are to be driven straight so the entire head is flush against the shingle but does not cut the shingle surface. An improperly adjusted pneumatic gun can result in raised fasteners causing sealing failure, raised tabs, leaks, or blow-off.

These products may also be fastened with 2 fasteners on each side, 1 and 2 inches from the side edge and 6 1/4 inches from the exposed end (see figure 2 below) OR with 2 fasteners on each side, 1 and 2 inches from the side edge and 7 1/4 inches from the exposed end (not pictured).

Figure 1


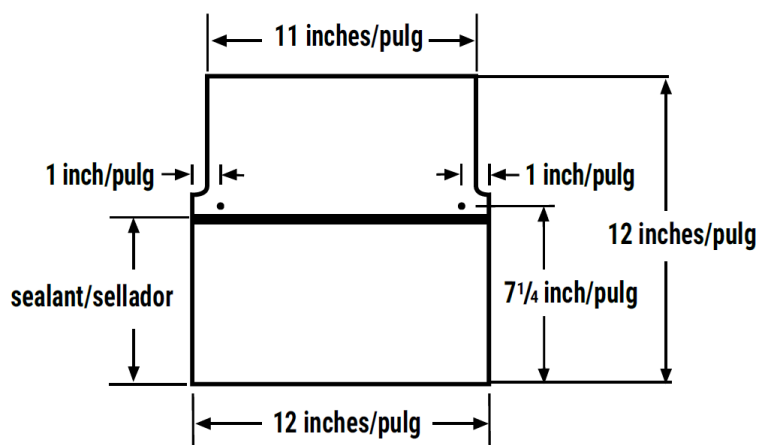


Figure 2

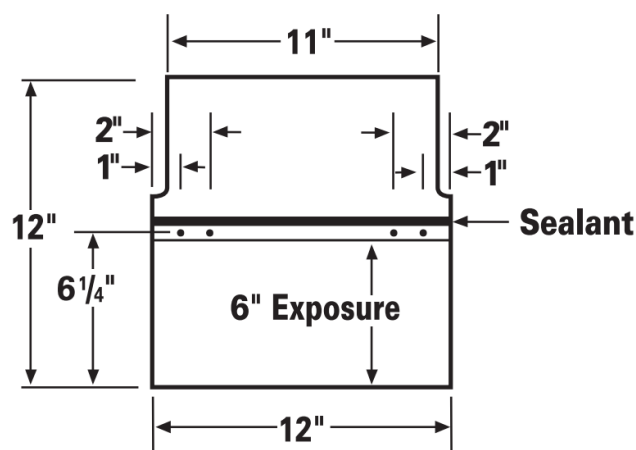

Please contact 419-248-6557 for additional information.
Email: gettech@owenscorning.com

Disclaimer of Liability

Technical information contained herein is furnished without charge or obligation and is given and accepted at recipient's sole risk. Because conditions of use may vary and are beyond our control, Owens Corning makes no representation about, and is not responsible or liable for the accuracy or reliability of data associated with particular uses of any product described herein.



OWENS CORNING SCIENCE AND TECHNOLOGY, LLC
ONE OWENS CORNING PARKWAY
TOLEDO, OHIO 43659
1-800-GET-PINK®
www.owenscorning.com

Pub. No. 10027563. Printed in U.S.A. September 2024. THE PINK PANTHER™ & ©1964-2024 Metro-Goldwyn-Mayer Studios Inc. All Rights Reserved. The color PINK is a registered trademark of Owens Corning. ©2024 Owens Corning. All Rights Reserved.