


ASSEMBLY INSTRUCTION

3PCS RATTAN SOFA SET

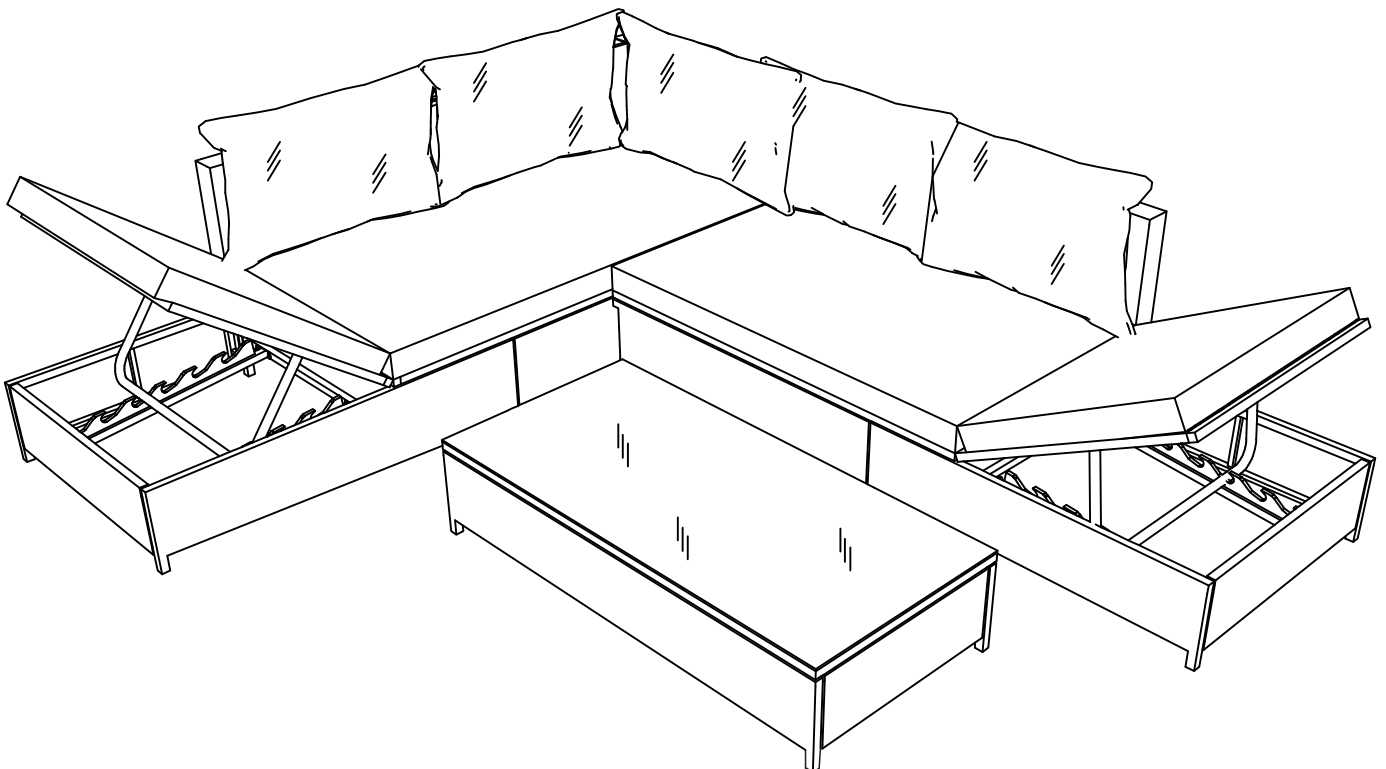

WF317256AAA


WF317257AAA

WF317258AAA

Notice:








1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

Exploded View

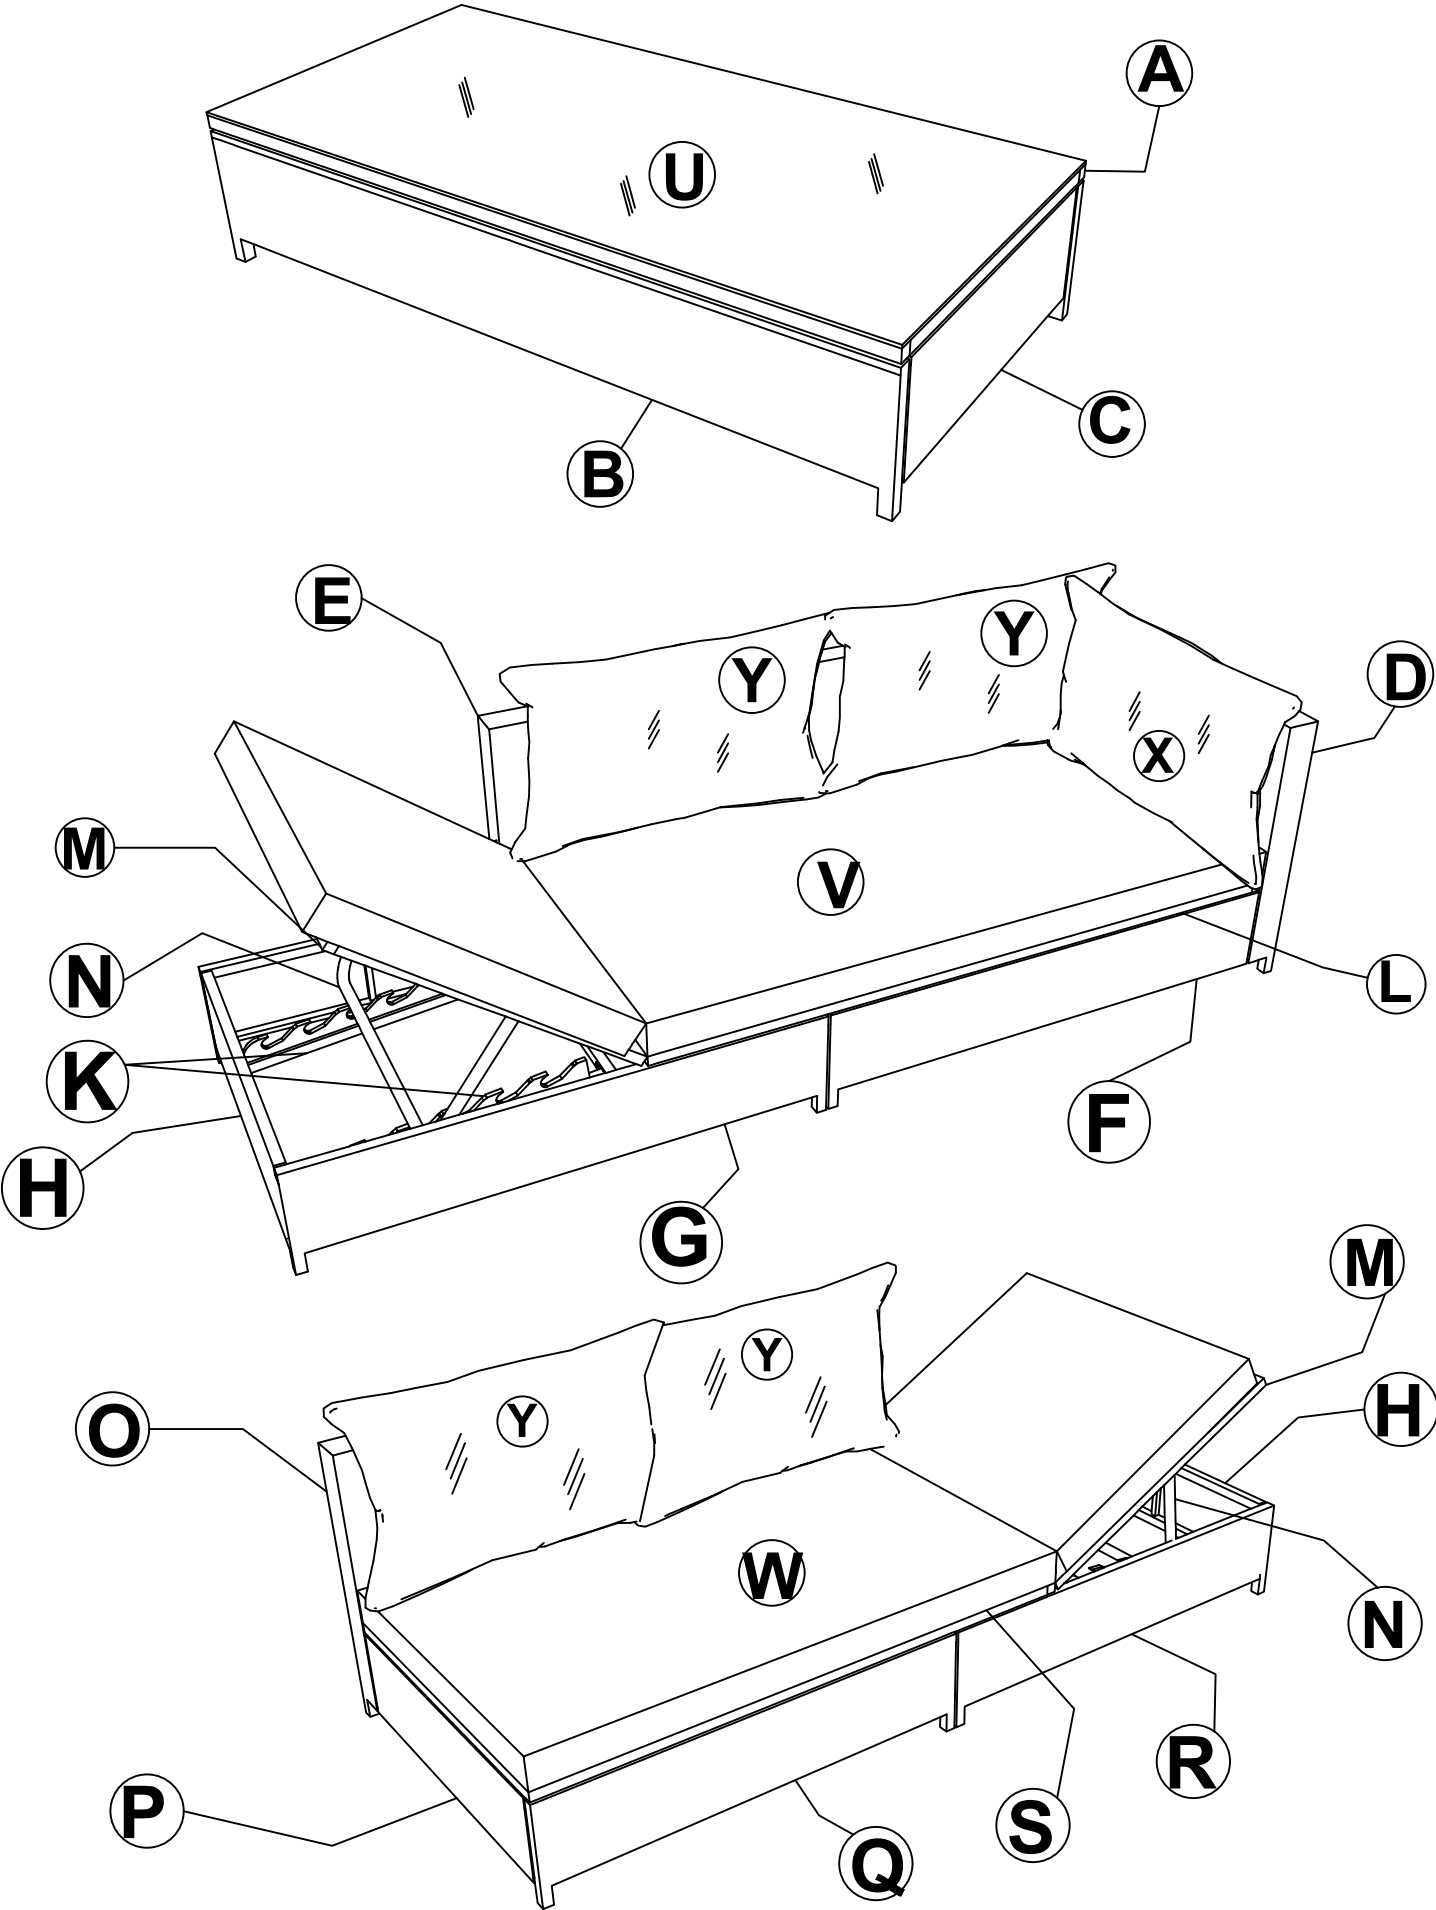

CARTON CONTENT :








WF317256AAA:

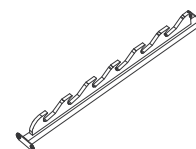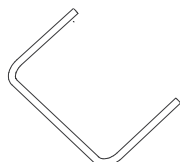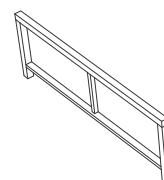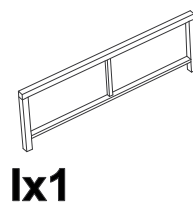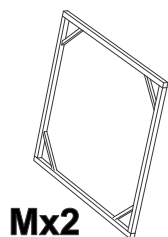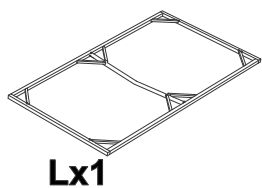







V- Big seatcushion :1













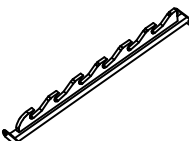
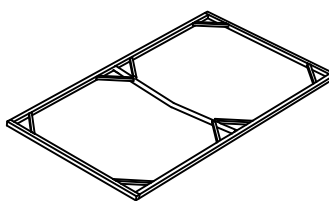
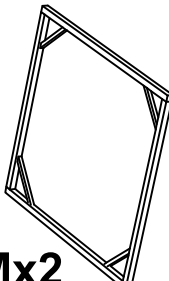
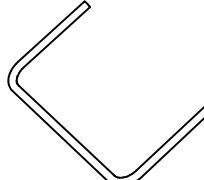
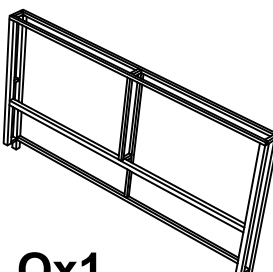

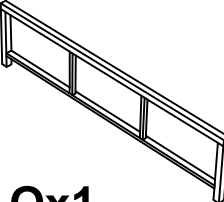
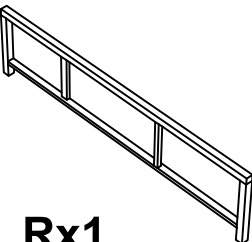
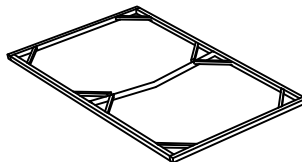
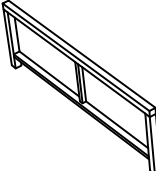
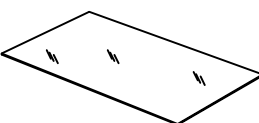




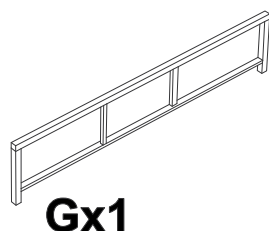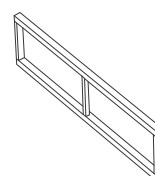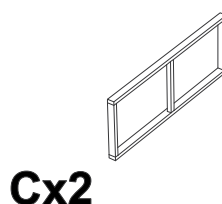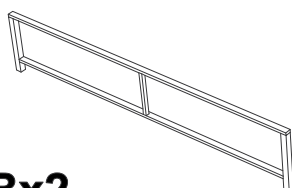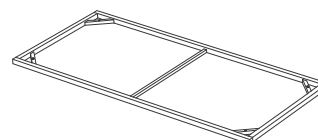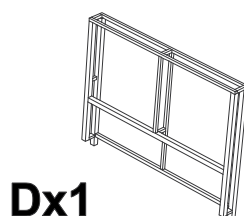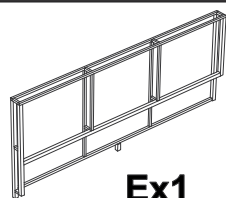







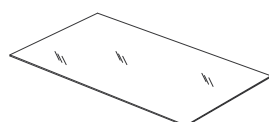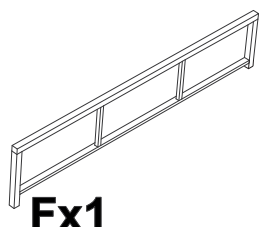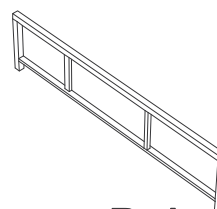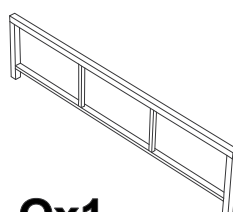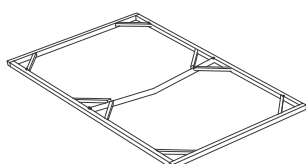
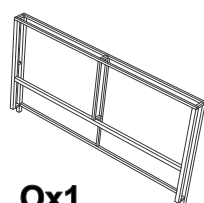
WF317257AAA:

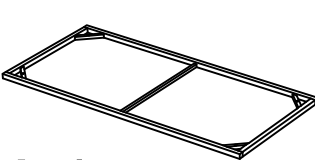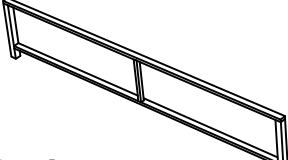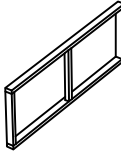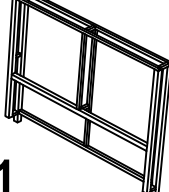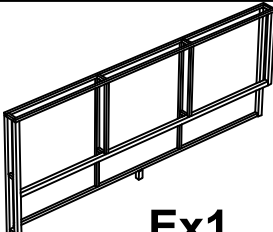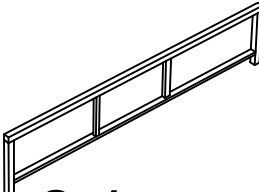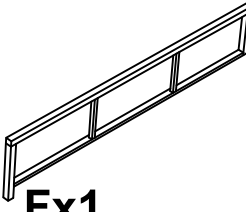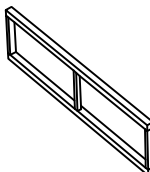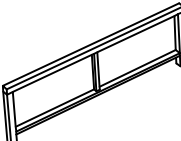



WF317258AAA:



PART LIST AND HARDWARE LIST

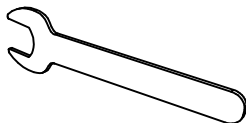
 Ax1	 Bx2	 Cx2	 Dx1	
 Ex1	 Gx1	 Fx1	 Hx2	
 Ix1	 Jx2	 Kx4	 Lx1	
 Mx2	 Nx2	 Ox1	 Px1	
 Qx1	 Rx1	 Sx1	 Tx1	
 U- Glass :1	 V- Big seat cushion :1	 W- Small seat cushion :1	 X- Big backcushion: 1	 Y- Small backcushion: 4
 1- Bolt 6x30: 32	 2-Washer6: 87	 3- Bolt 6x40: 22	 4- Bolt 6x110: 1	 5- Bolt 6x15: 28
 6- Connector: 2	 7- Allen key :2	 8- Plastic washer M8x5mm: 4	 9- Eru m6: 4	 10- Key: 1

Step 1

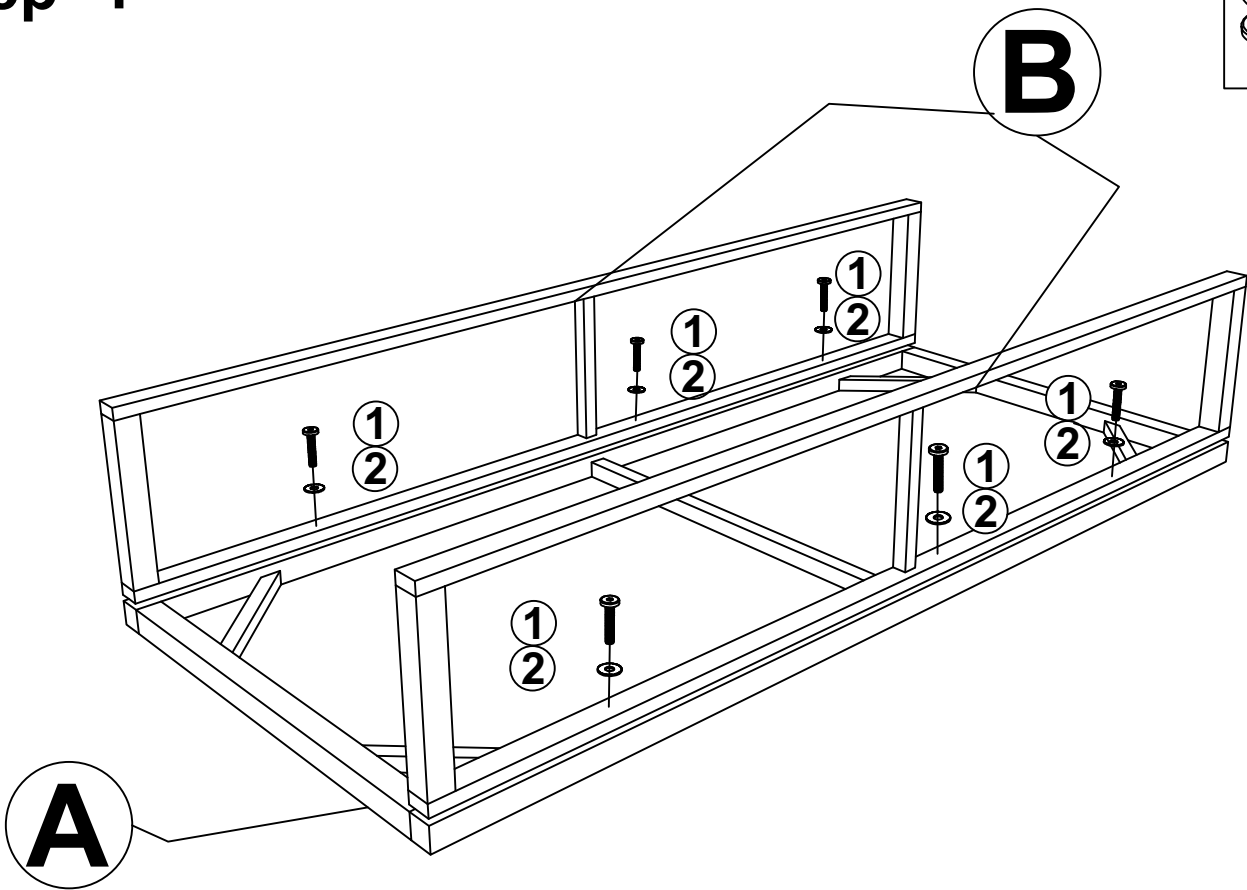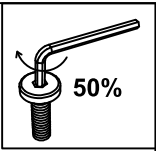



Ax1 Bx2 ①x6 ②x6

Step 2

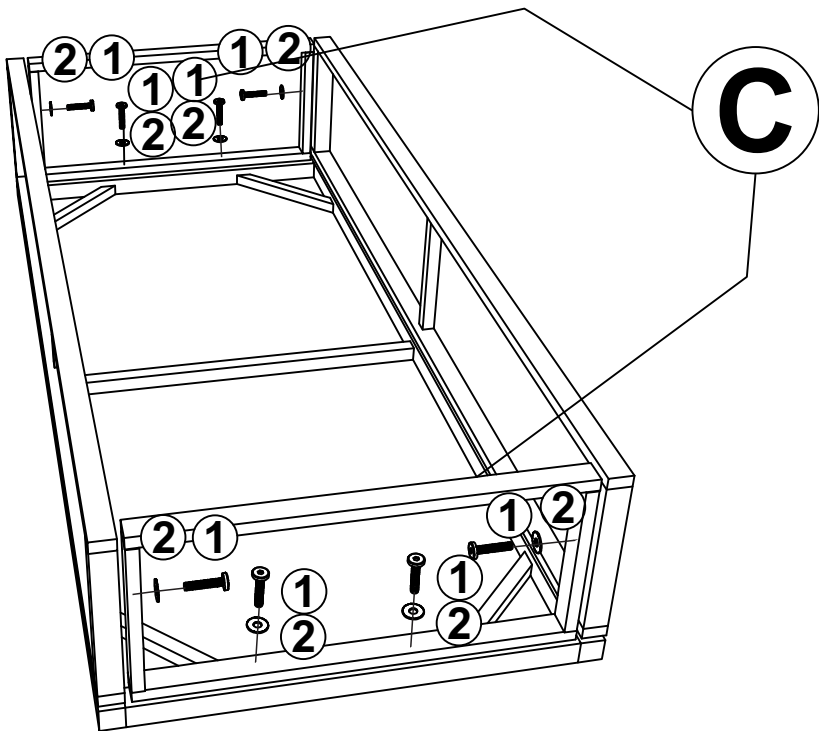



Cx2 ①x8 ②x8

Step 3

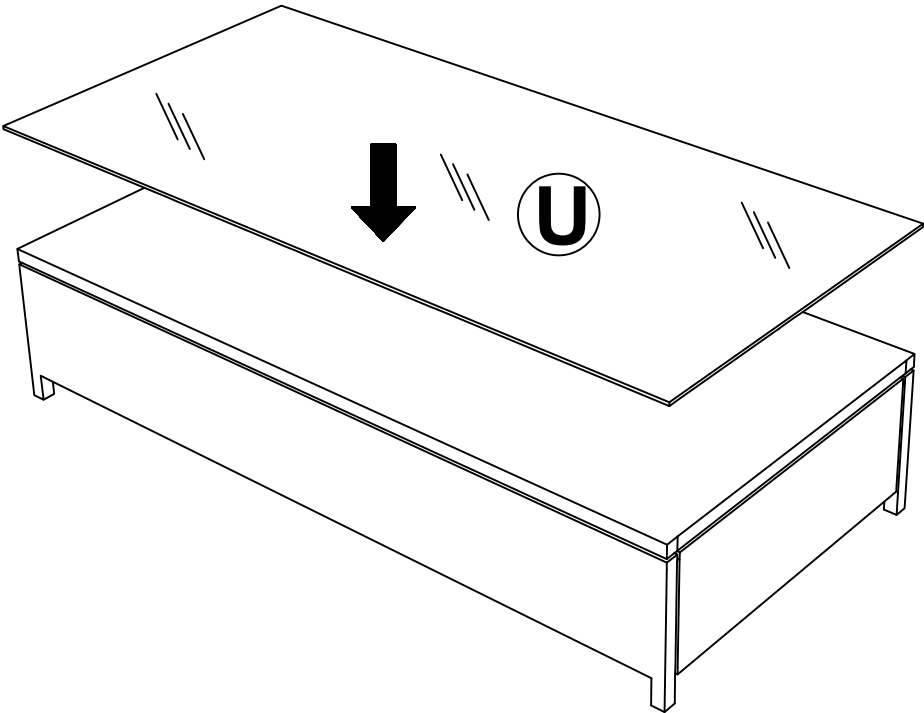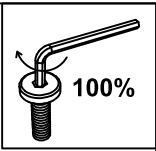



Ux1

Step 4

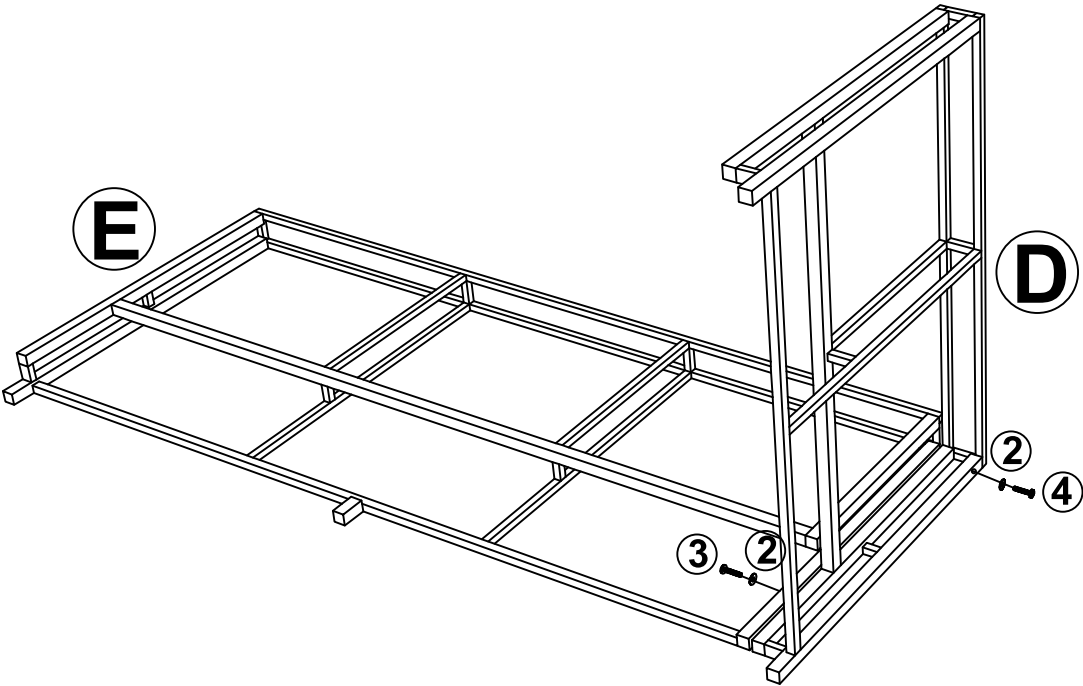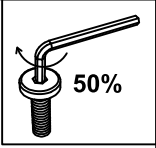



Dx1 Ex1 2x2 3x1 4x1

Step 5

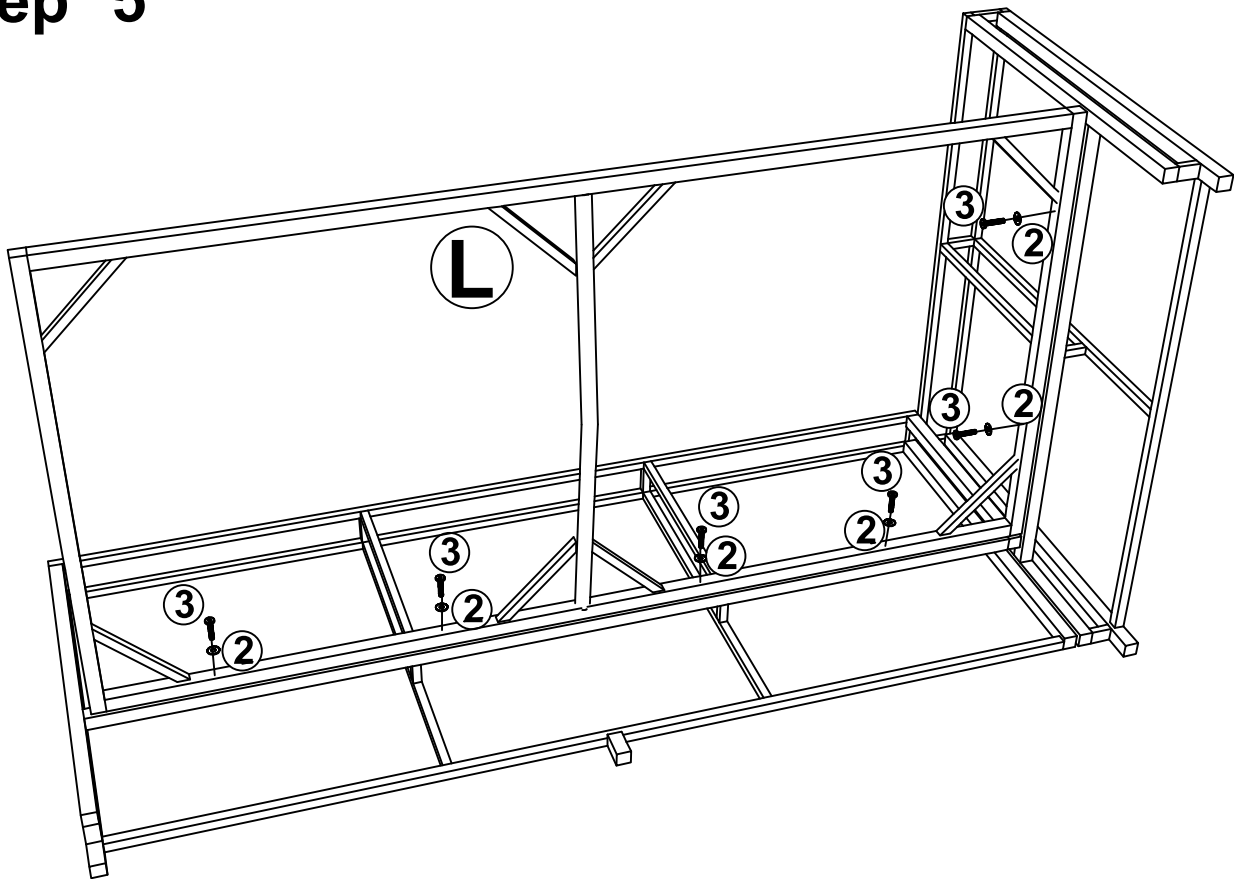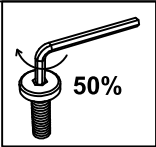



Lx1 2x6 3x6

Step 6

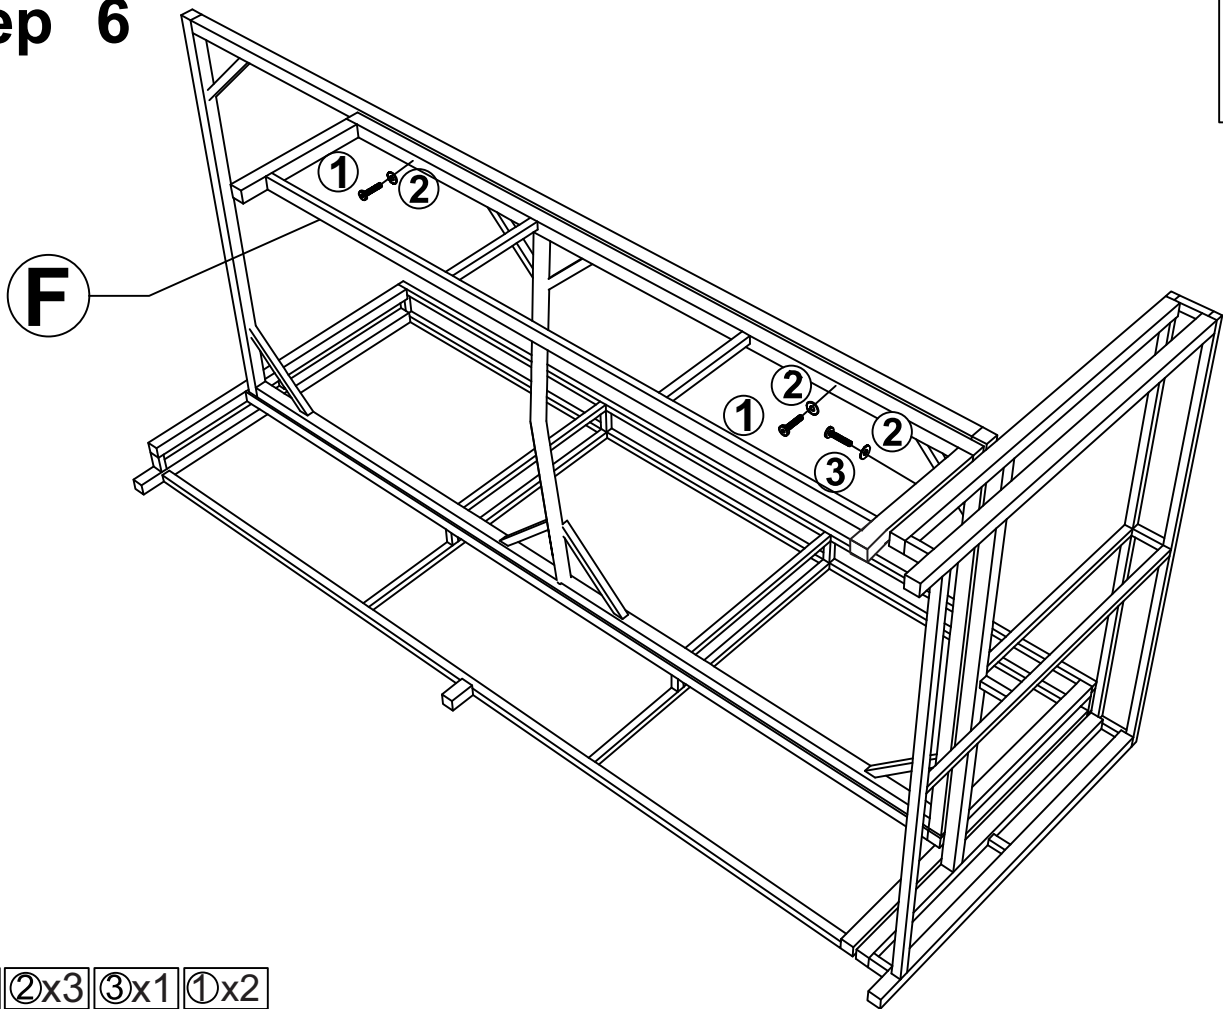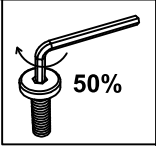



Fx1 2x3 3x1 1x2

Step 7

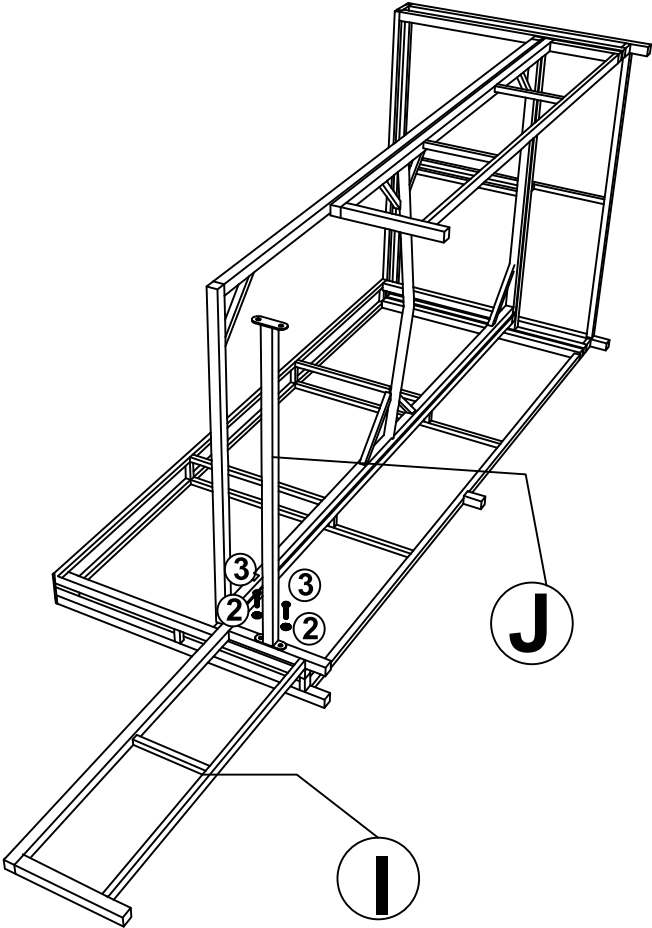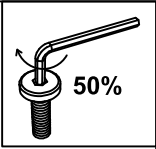



Ix1 Jx1 2x2 3x2

Step 8

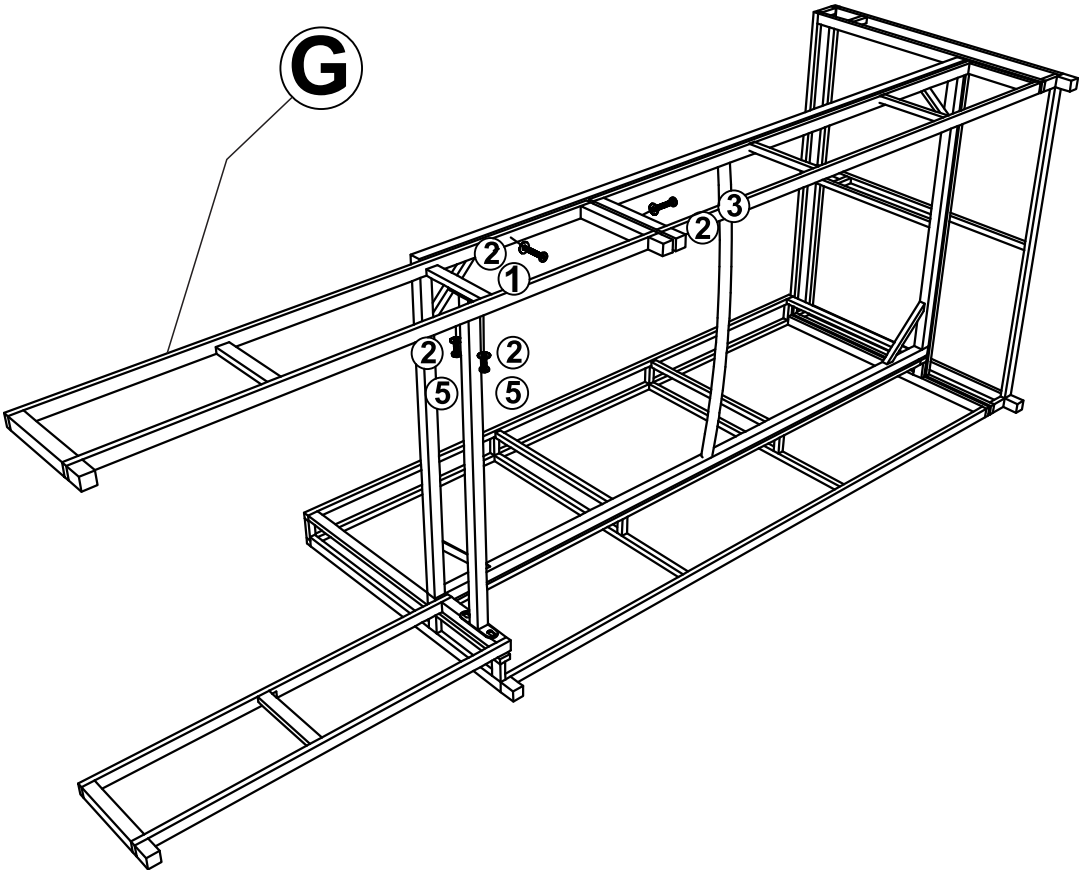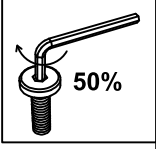


Gx1 2x4 3x1 5x2 1x1

Step 9

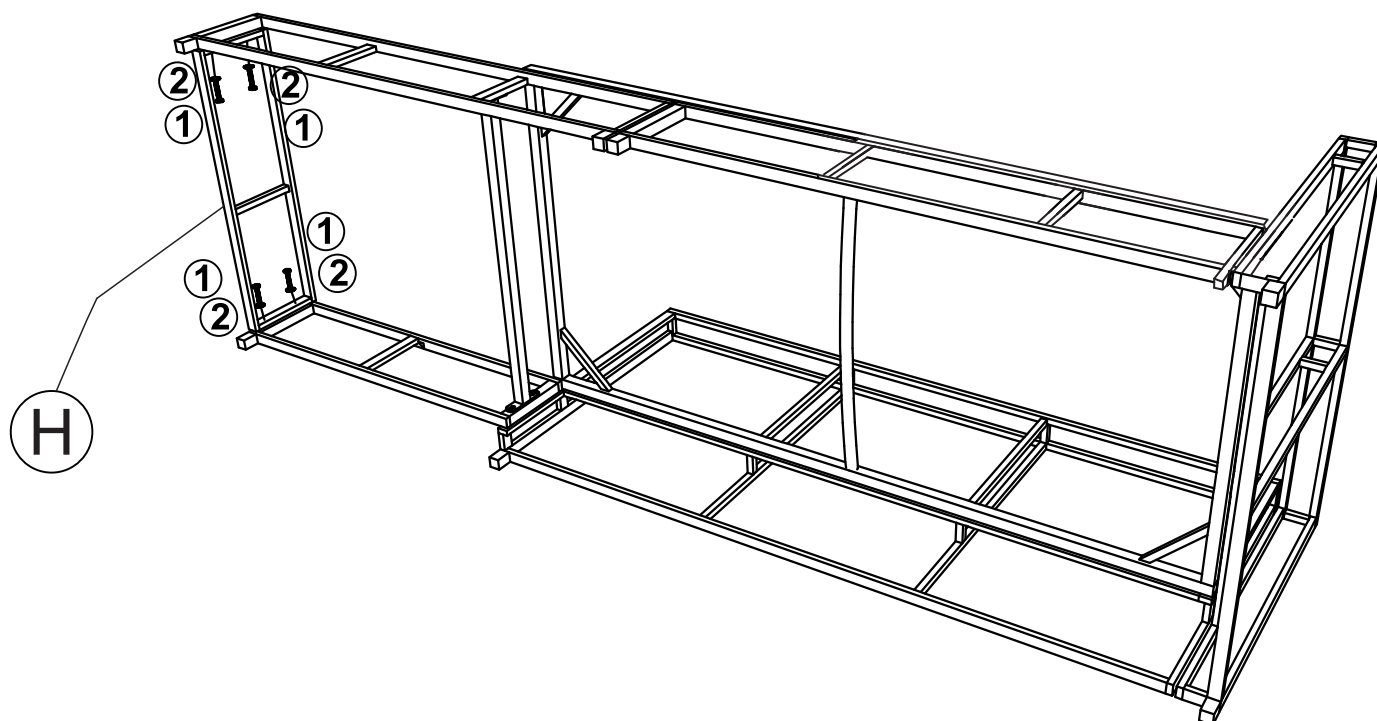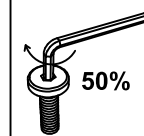


Hx1 2x4 1x4

Step 10



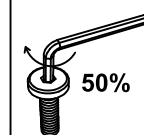


K

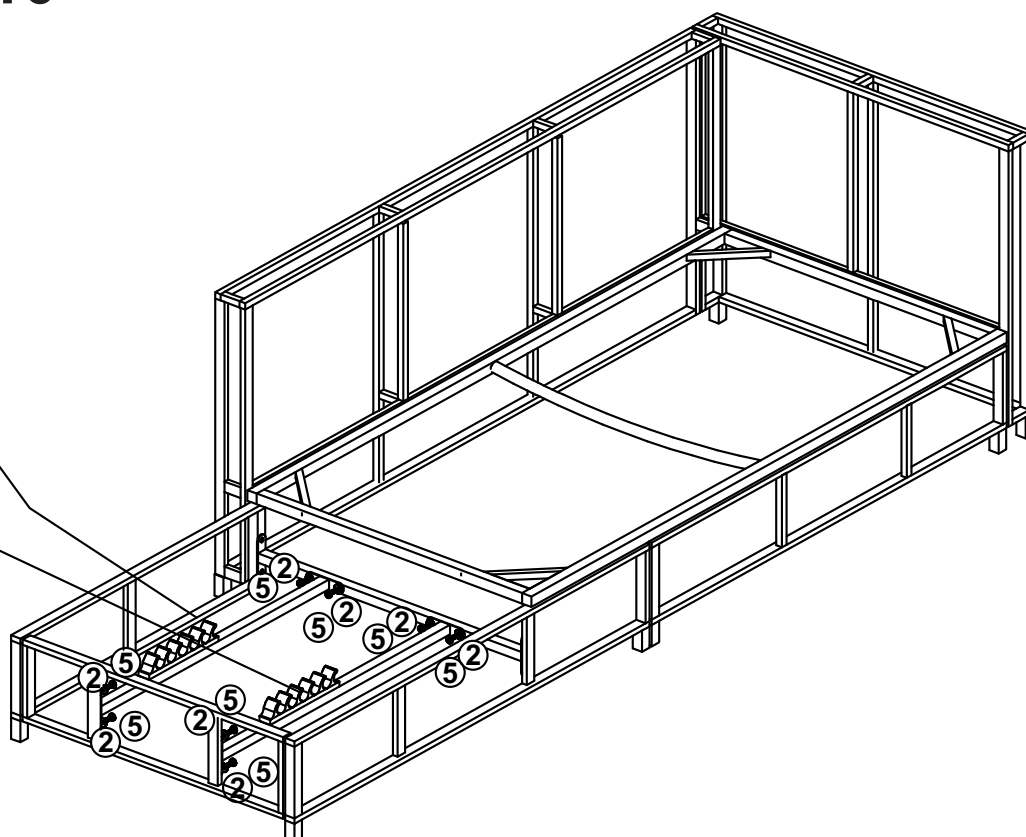




Kx2 2x8 5x8

Step 11

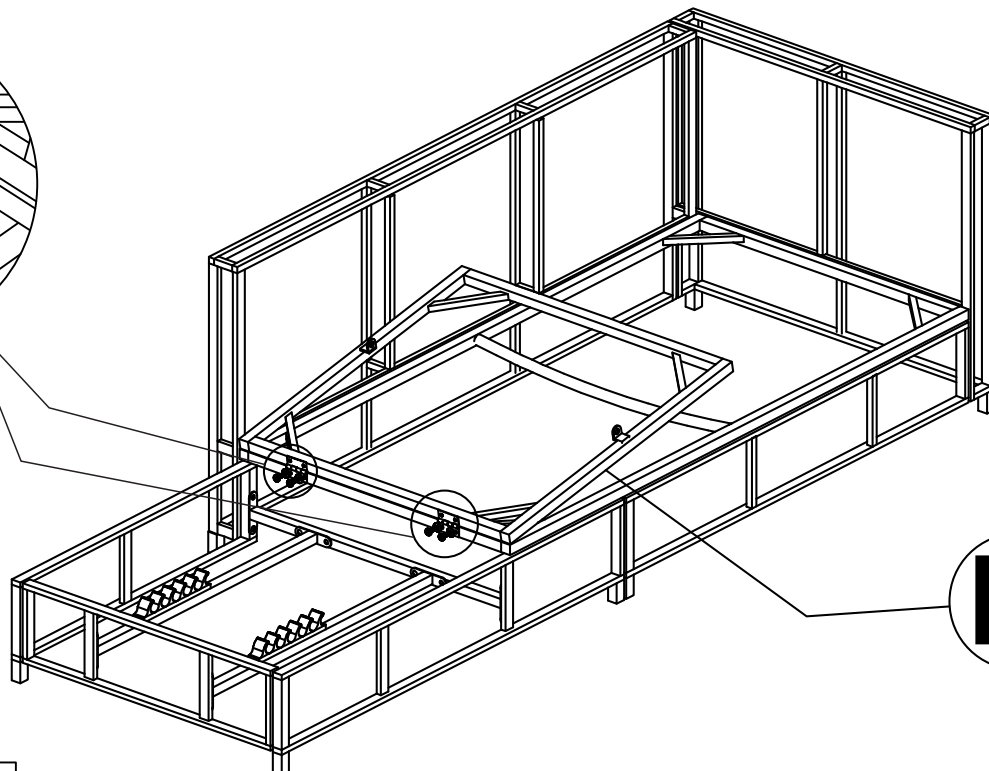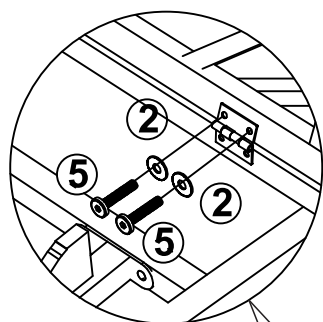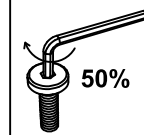

Mx1 ②x4 ⑤x4



Step 12

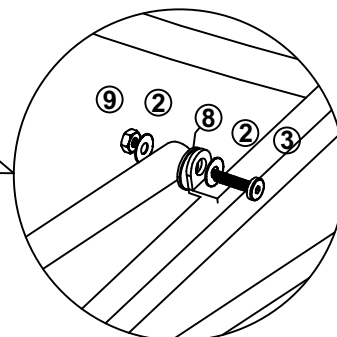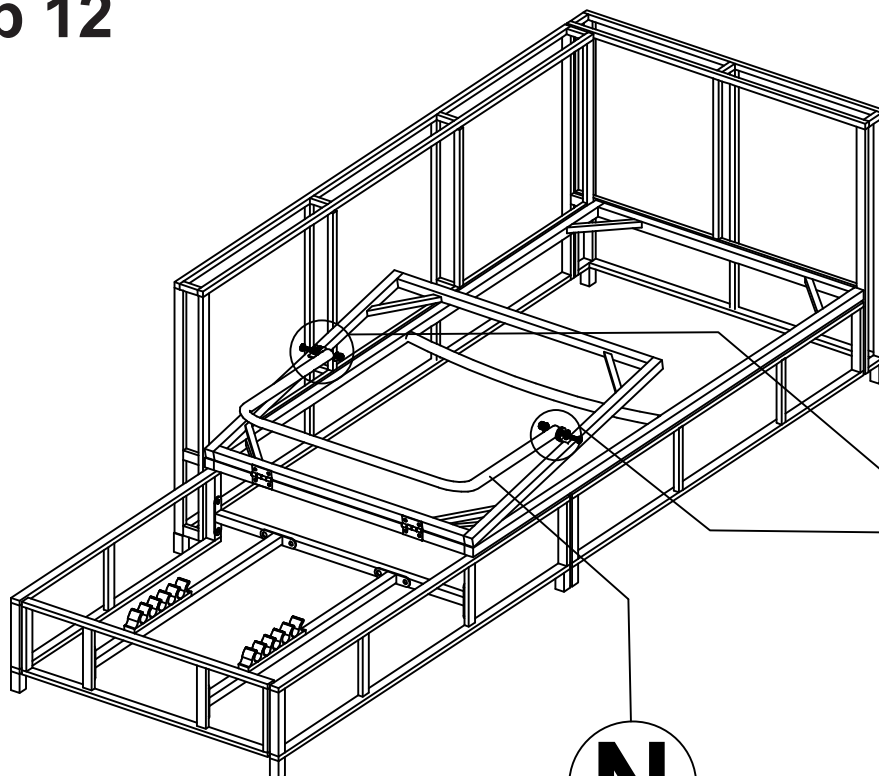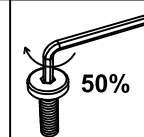

N



Nx1 ②x4 ③x2 ⑧x2 ⑨x2

Step 13

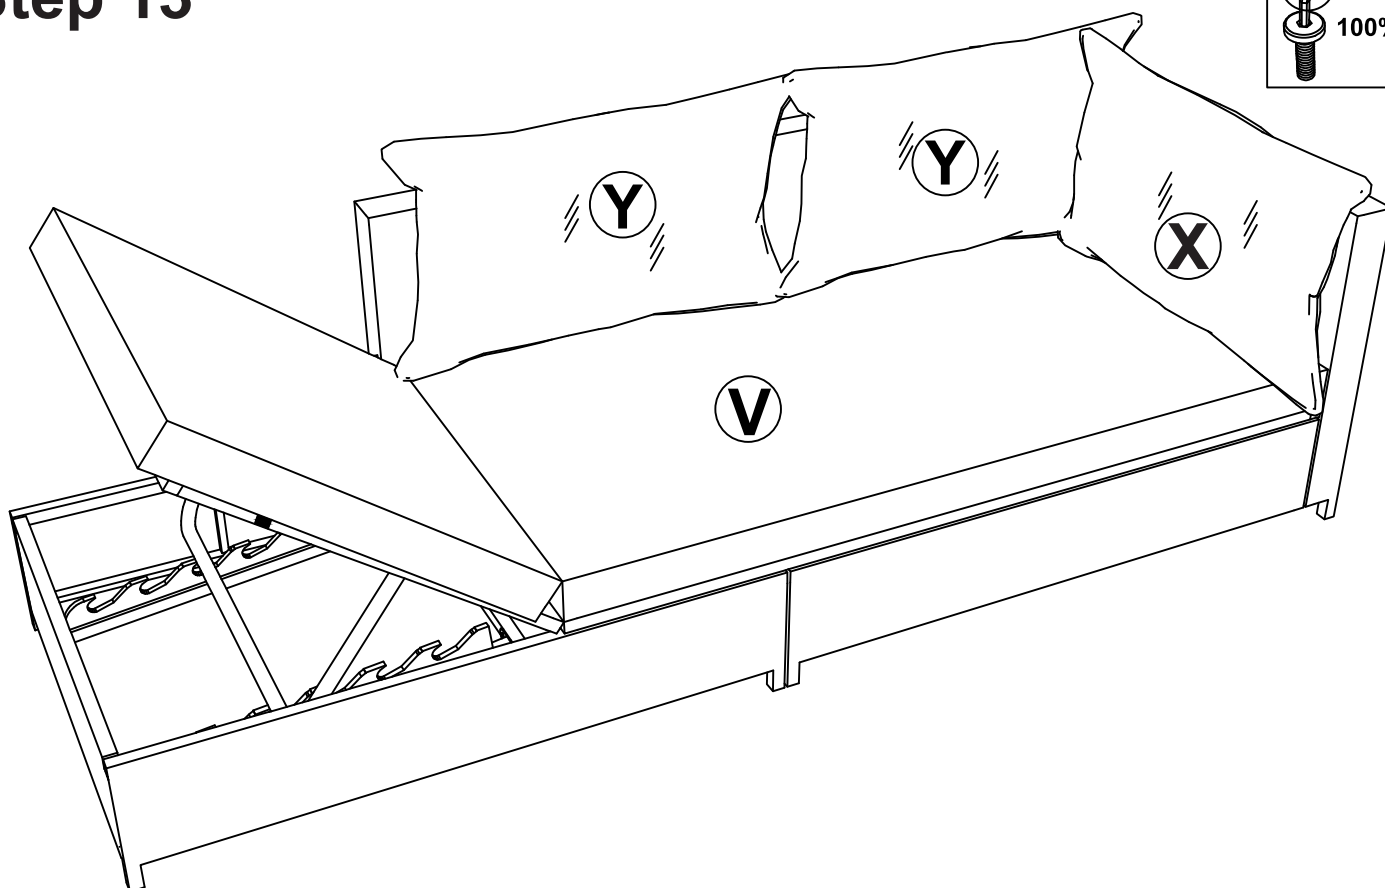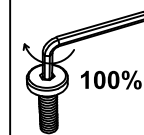


Xx1 Yx2 Vx1

Step 14

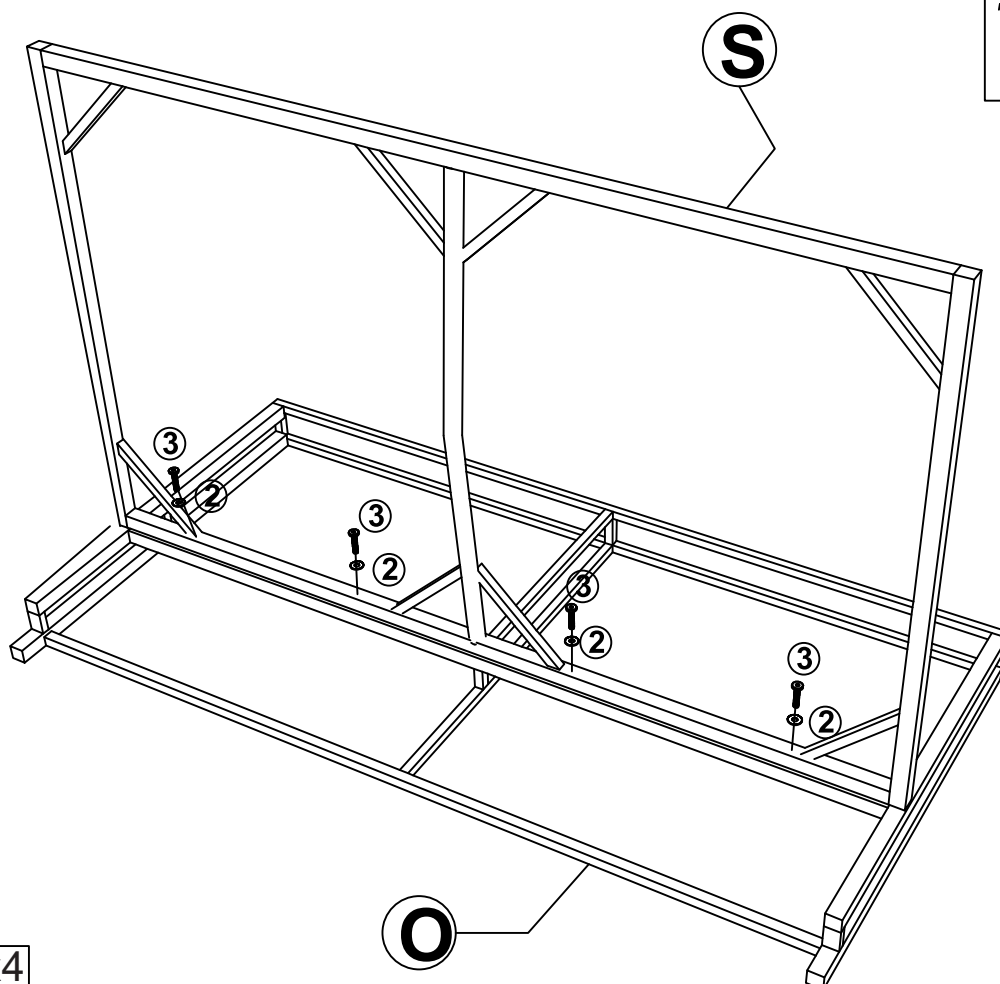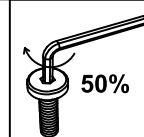


Ox1 Sx1 ②x4 ③x4

Step 15

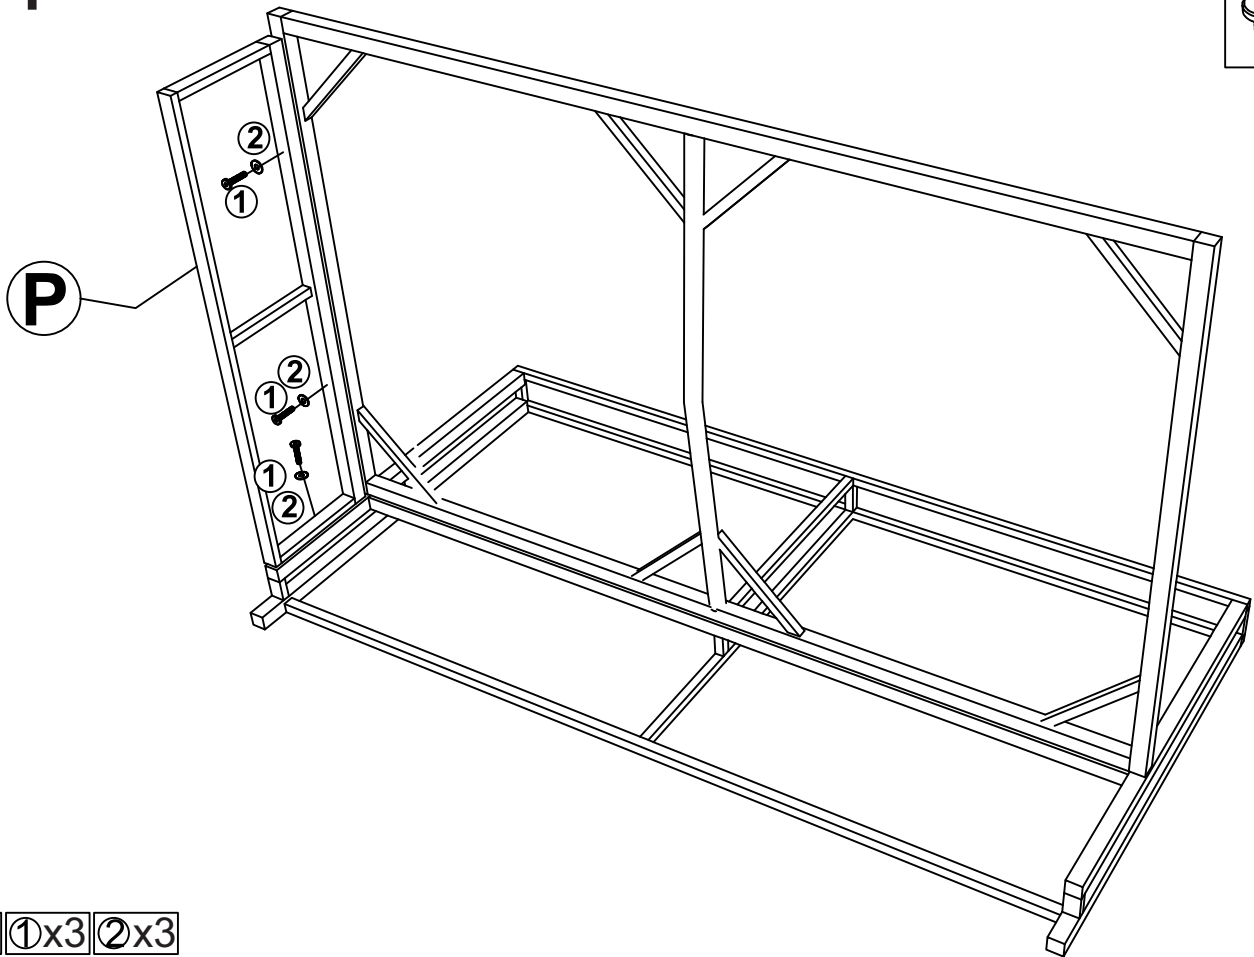


Px1 ①x3 ②x3

Step 16

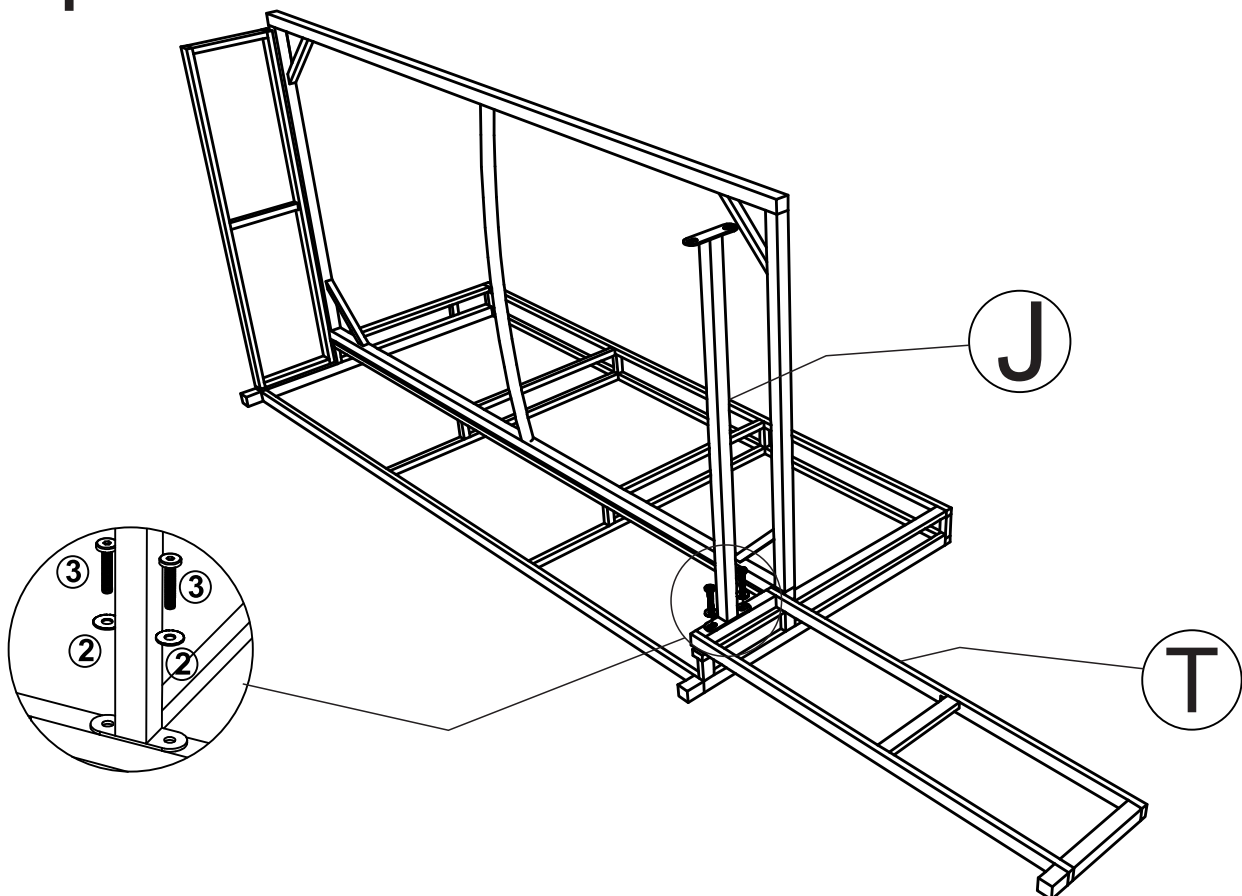


Jx1 Tx1 ②x2 ③x2

Step 17

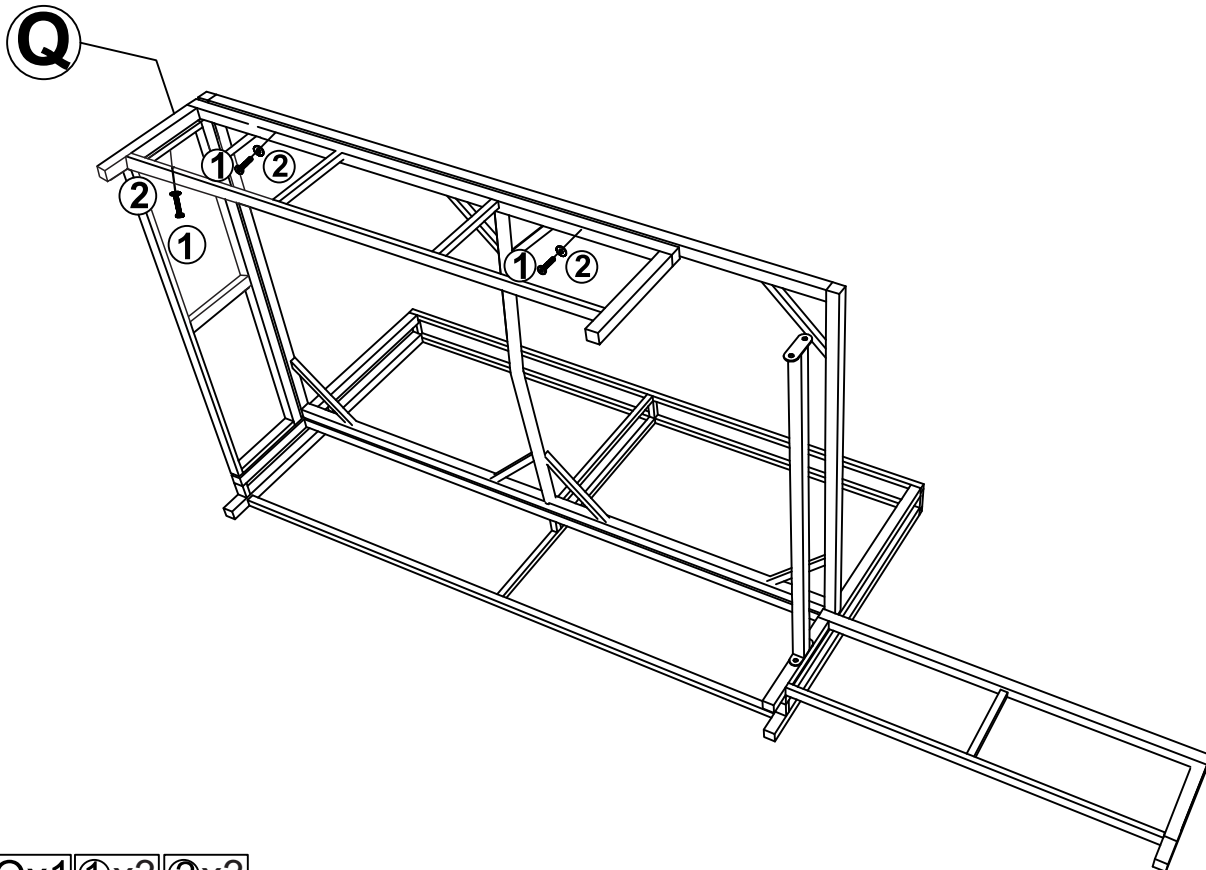



Qx1 ①x3 ②x3

Step 18

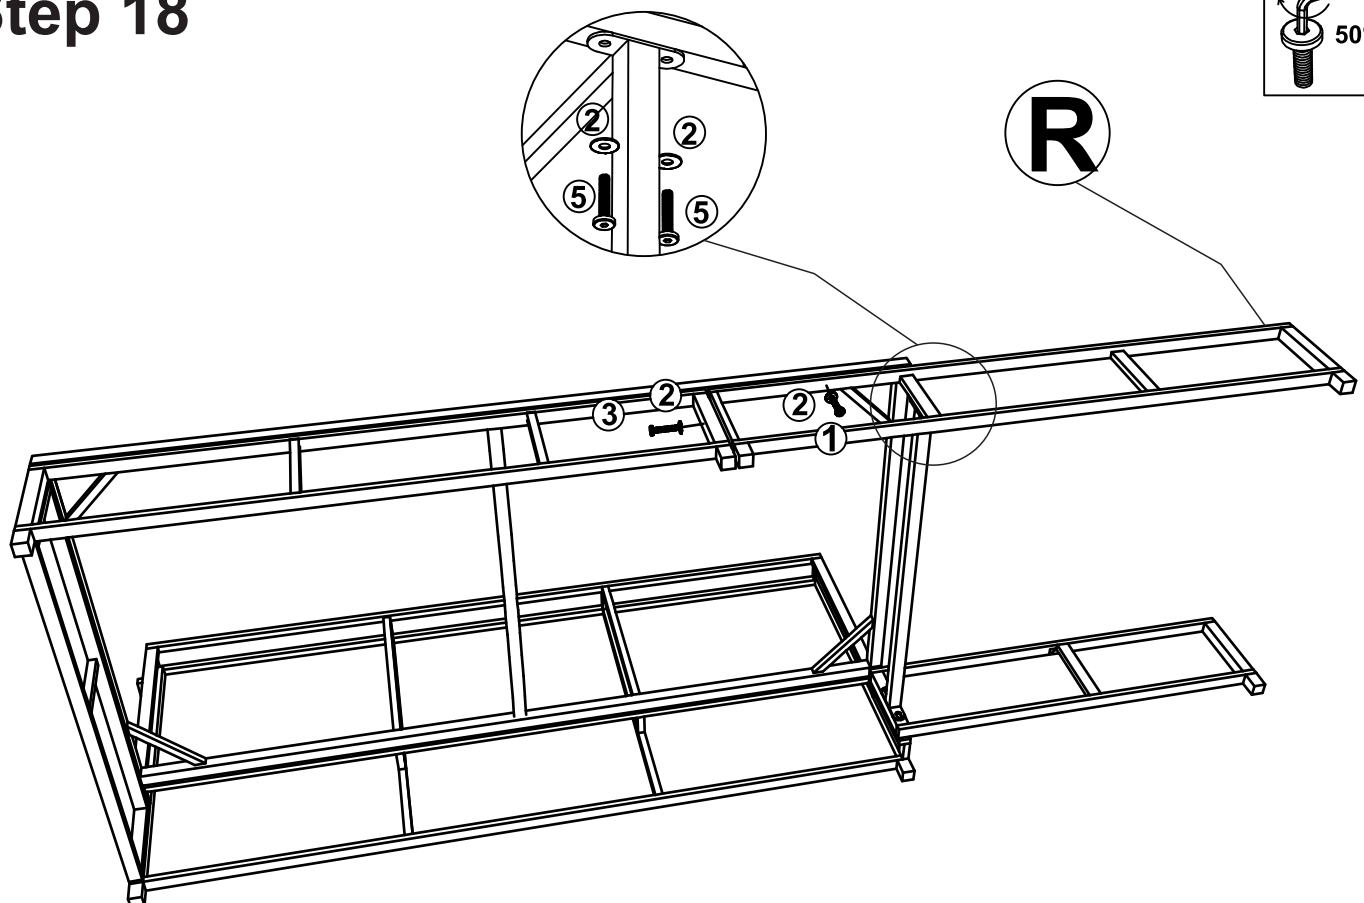



Rx1 ②x4 ③x1 ⑤x2 ①x1

Step 19

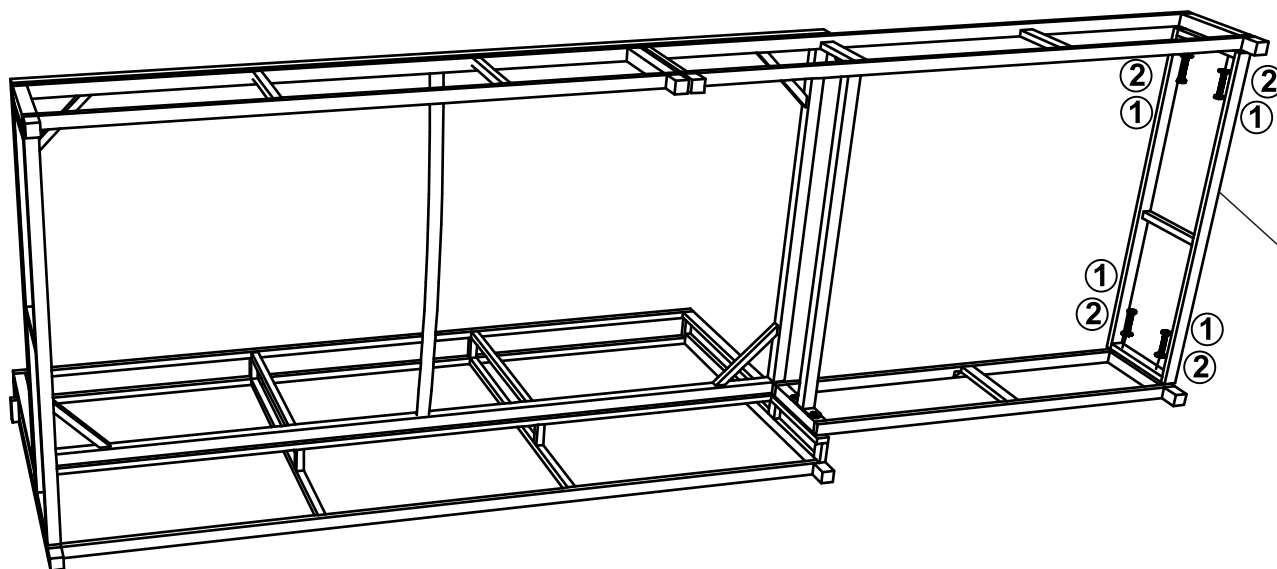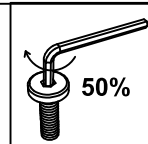

Hx1 2x4 1x4

Step 20

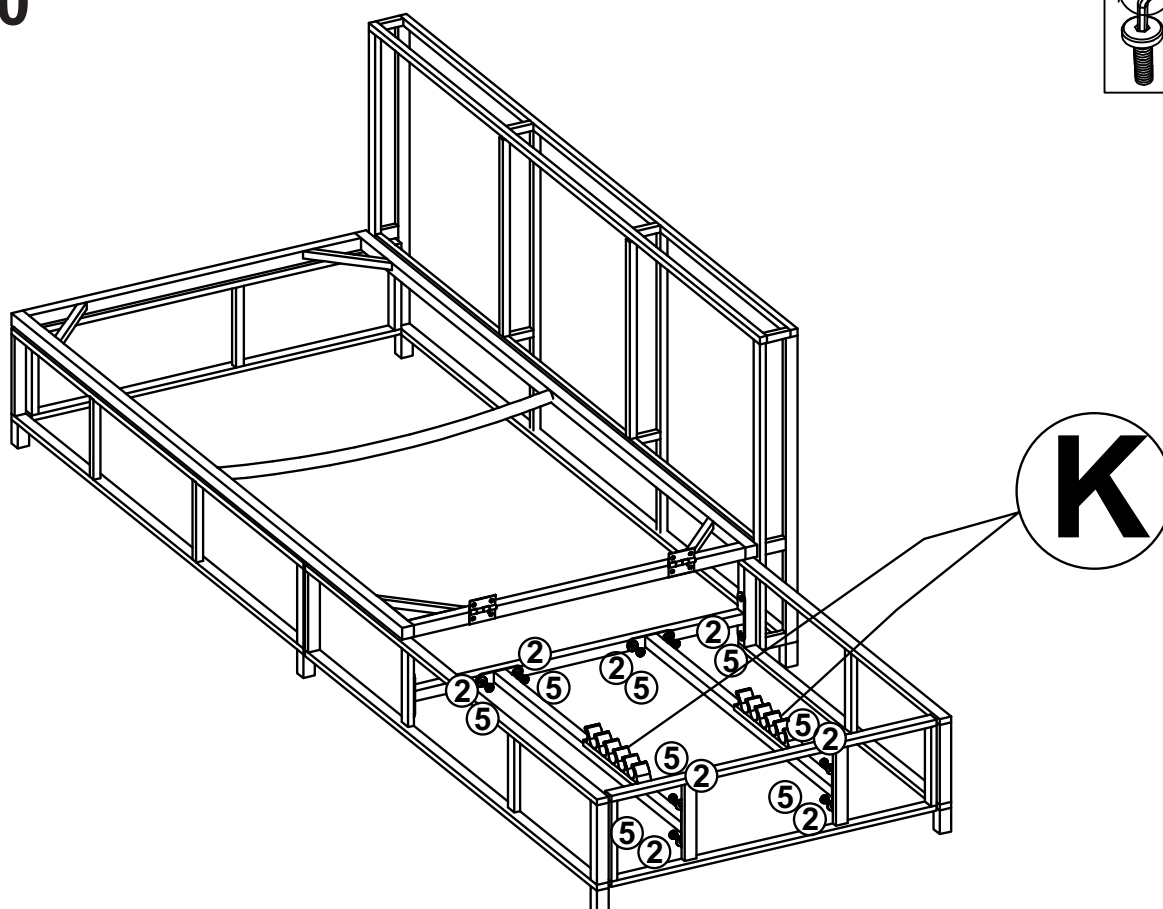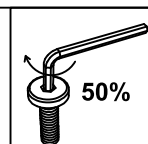


Kx2 2x8 5x8

Step 21




M

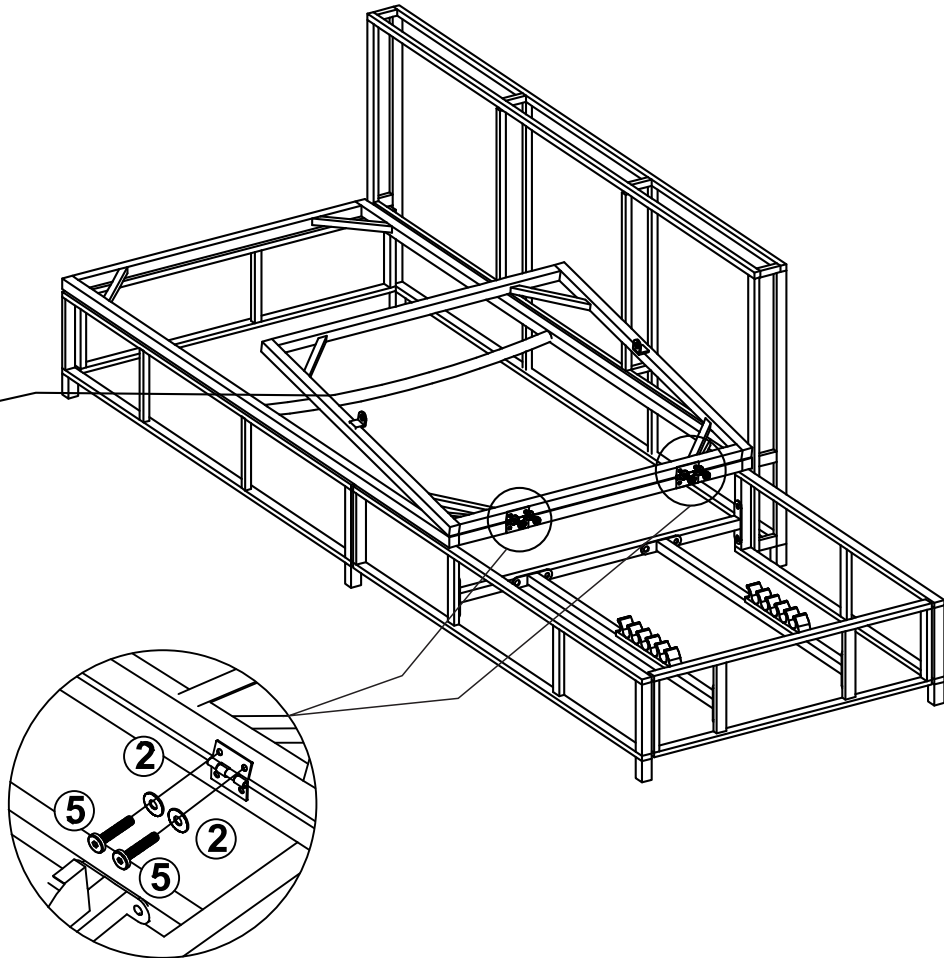


Mx1 2x4 5x4

Step 22


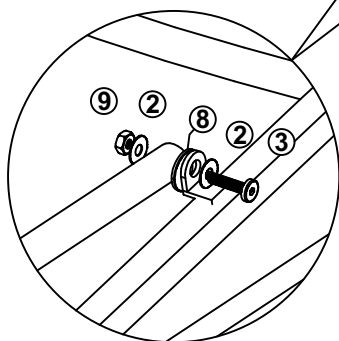


N

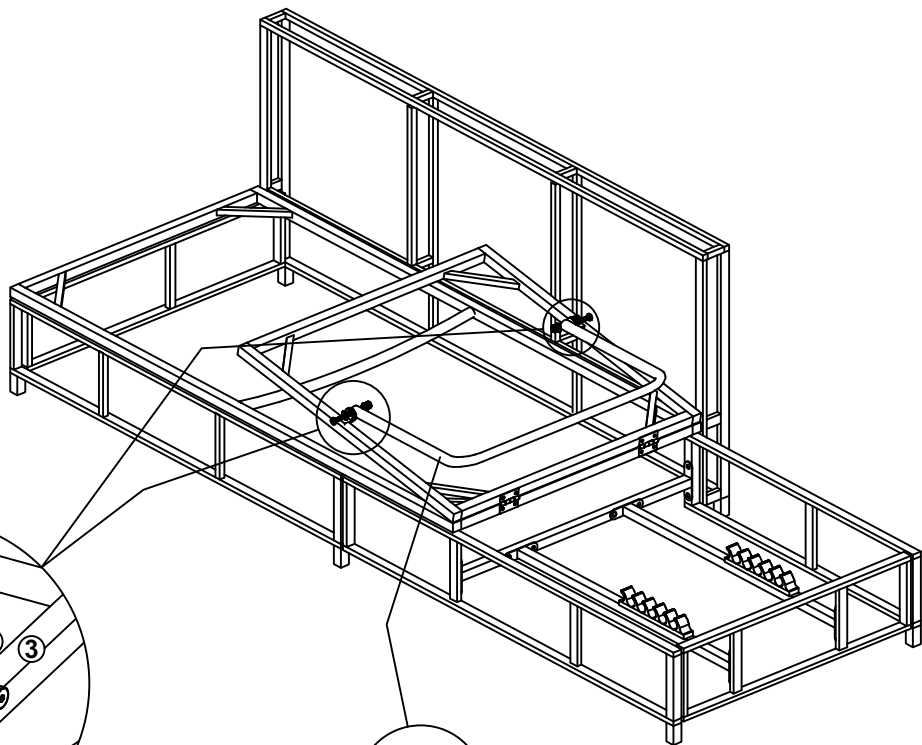




Nx1 2x4 3x2 8x2 9x2

Step 23

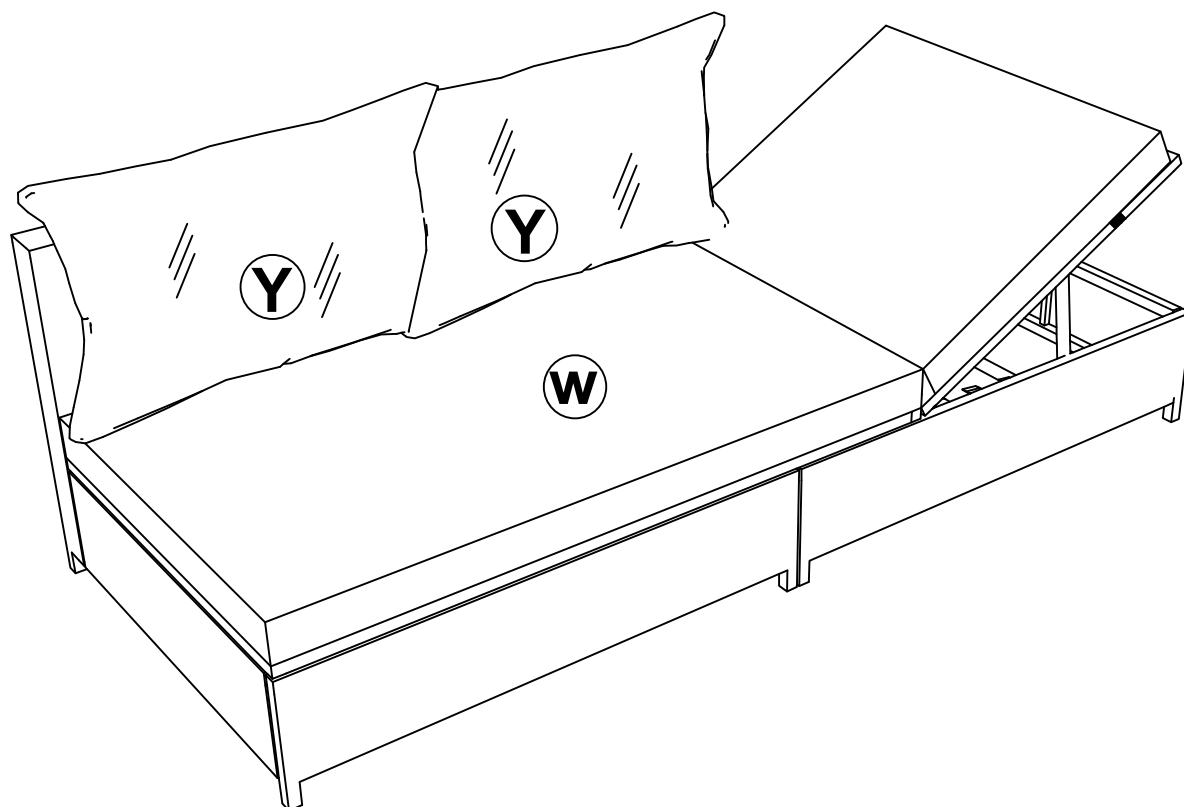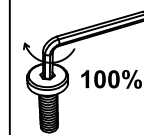

Wx1 Yx2

Step 24

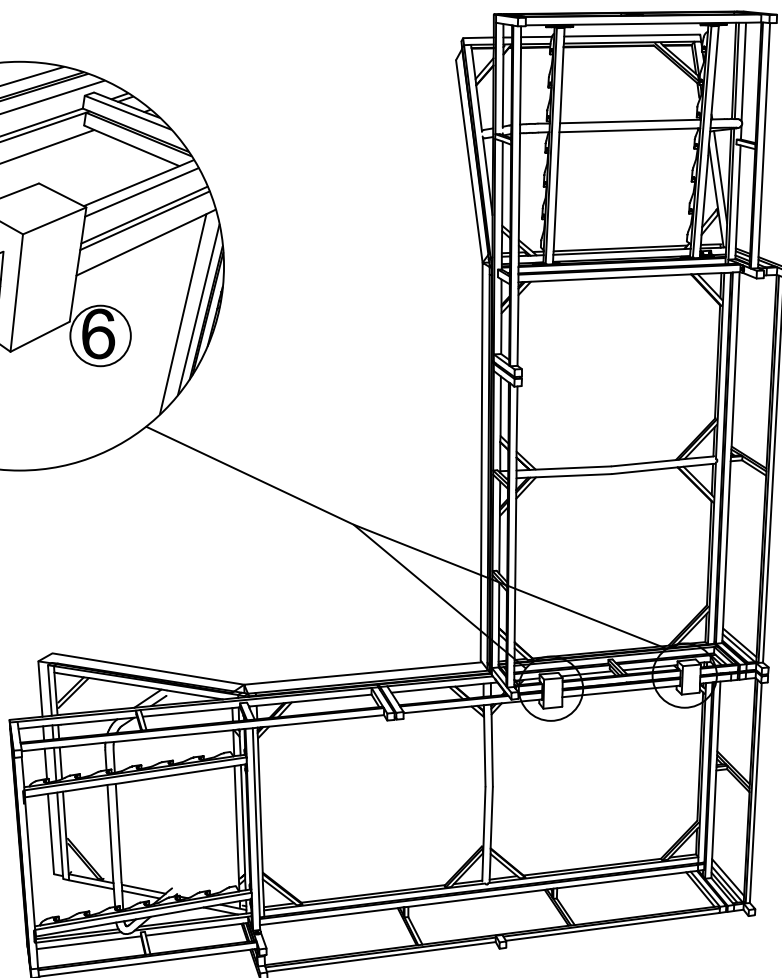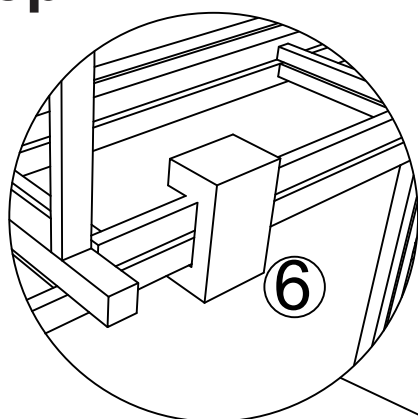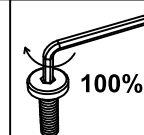

6x2

Step 25

