


ASSEMBLY INSTRUCTIONS

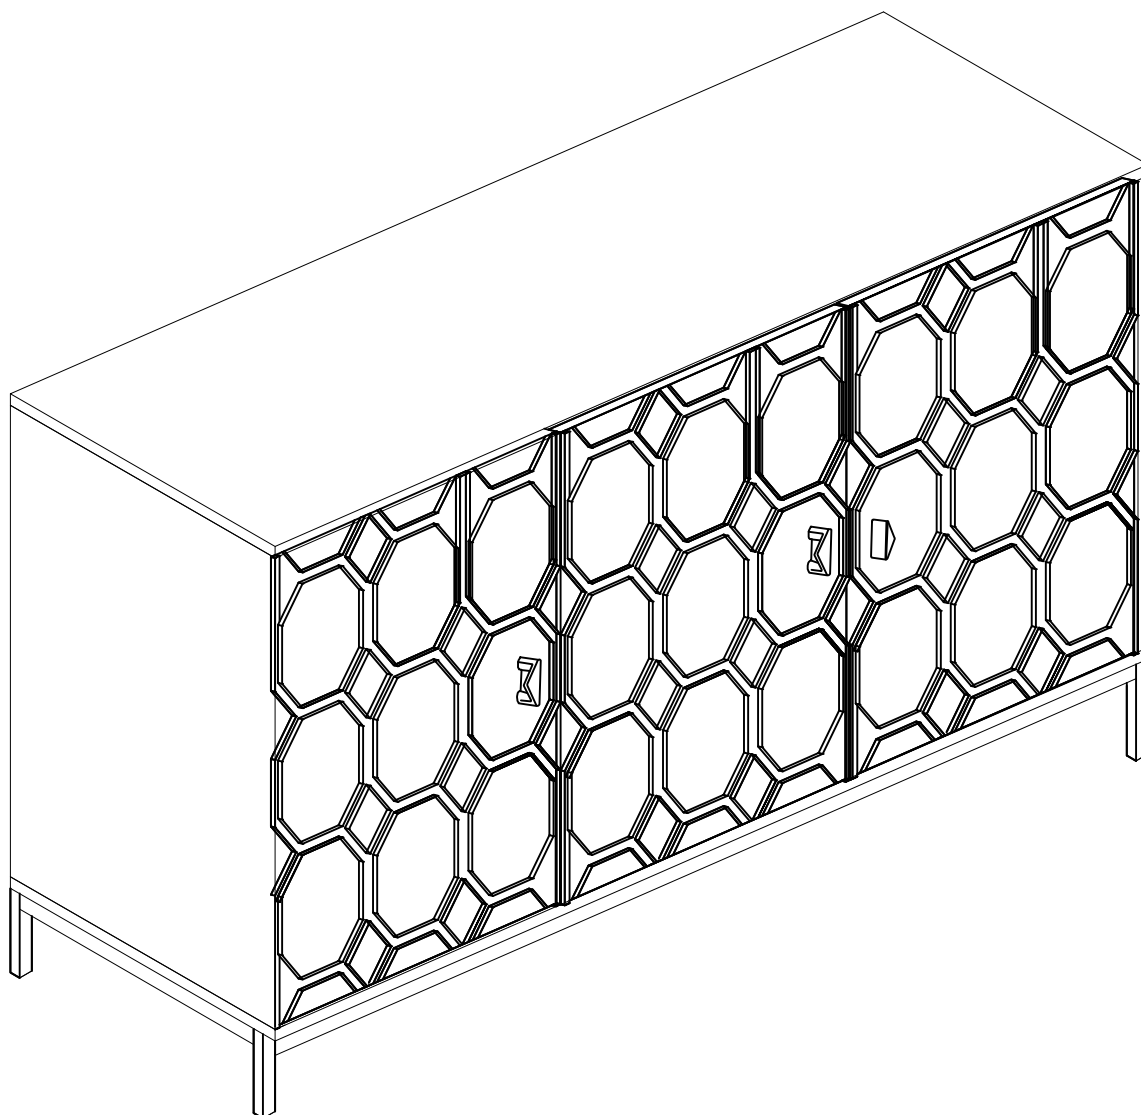

Phone number:303-747-4421







service@alipuinc.com

Web:<https://clihome.net/>







MADE IN CHINA

ASSEMBLY INSTRUCTIONS

Part List:

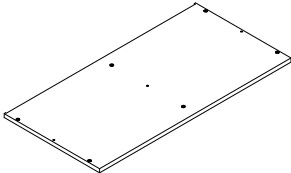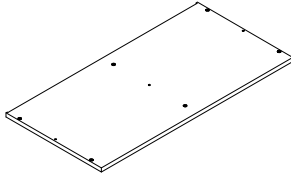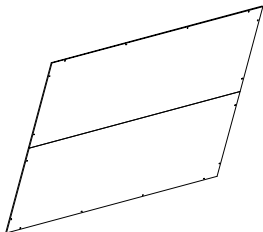ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Middle side plate		1
6	Back panel		1




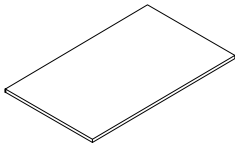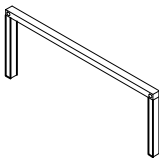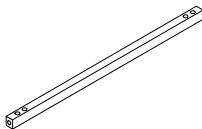





Part List:

ITEM	DESCRIPTION	PART	QTY
7	Left door		2
8	Right door		1
9	Adjustable movable plate (long)		1
10	Adjustable movable plate (short)		1
11	Leg		2
12	Leg		2









ASSEMBLY INSTRUCTION

Page 3 of 10

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		12
B	Camlock		12
C	Wooden dowel	 Φ6*30mm	6
D	Bolt	 Φ1/4"*1-1/5"	10
E	Allen wrench		1
F	Bolt	 Φ1/4"*1-1/2"	4
G	Handle		3
H	Machine screw	 Φ5/32"*4/5"	6
I	Door hinge (big bend)		4

Hardware List:



ITEM	DESCRIPTION	PART	QTY
J	Round head screw	 Φ4*12mm	36
K	Back screw	 Φ3*12mm	20
L	Shelf support		8
M	Safety wall strap		2
N	Plastic anchor		2
O	Mounting screw	 Φ4*38mm	2
P	Washer		2
Q	Door hinge (middle bend)		2

MADE IN CHINA

ASSEMBLY INSTRUCTION

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)

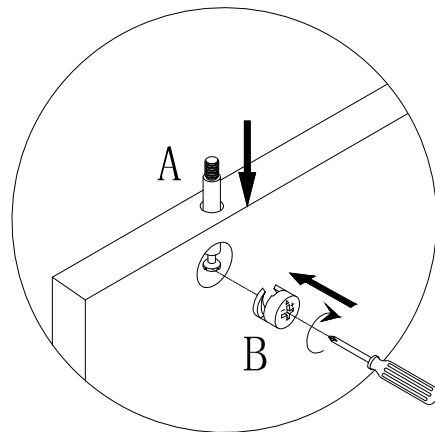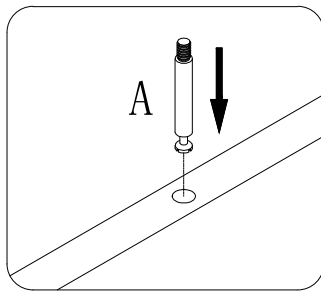




Screw camlock bolt (A) to wood part.


Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

ASSEMBLY INSTRUCTION




STEP 1

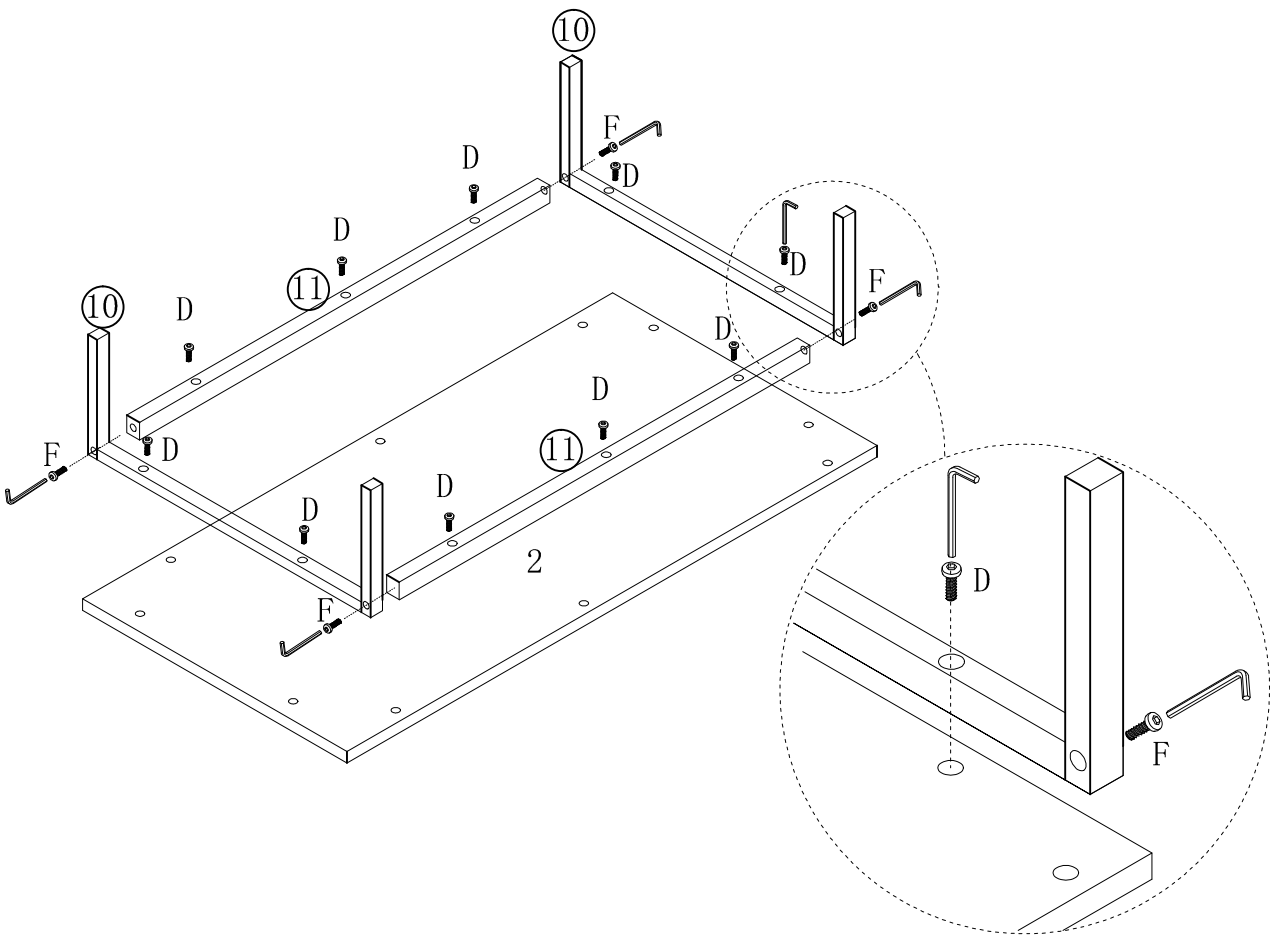
D:		10PCS
E:		1PC
F:		4PCS



ASSEMBLY INSTRUCTION



STEP 2

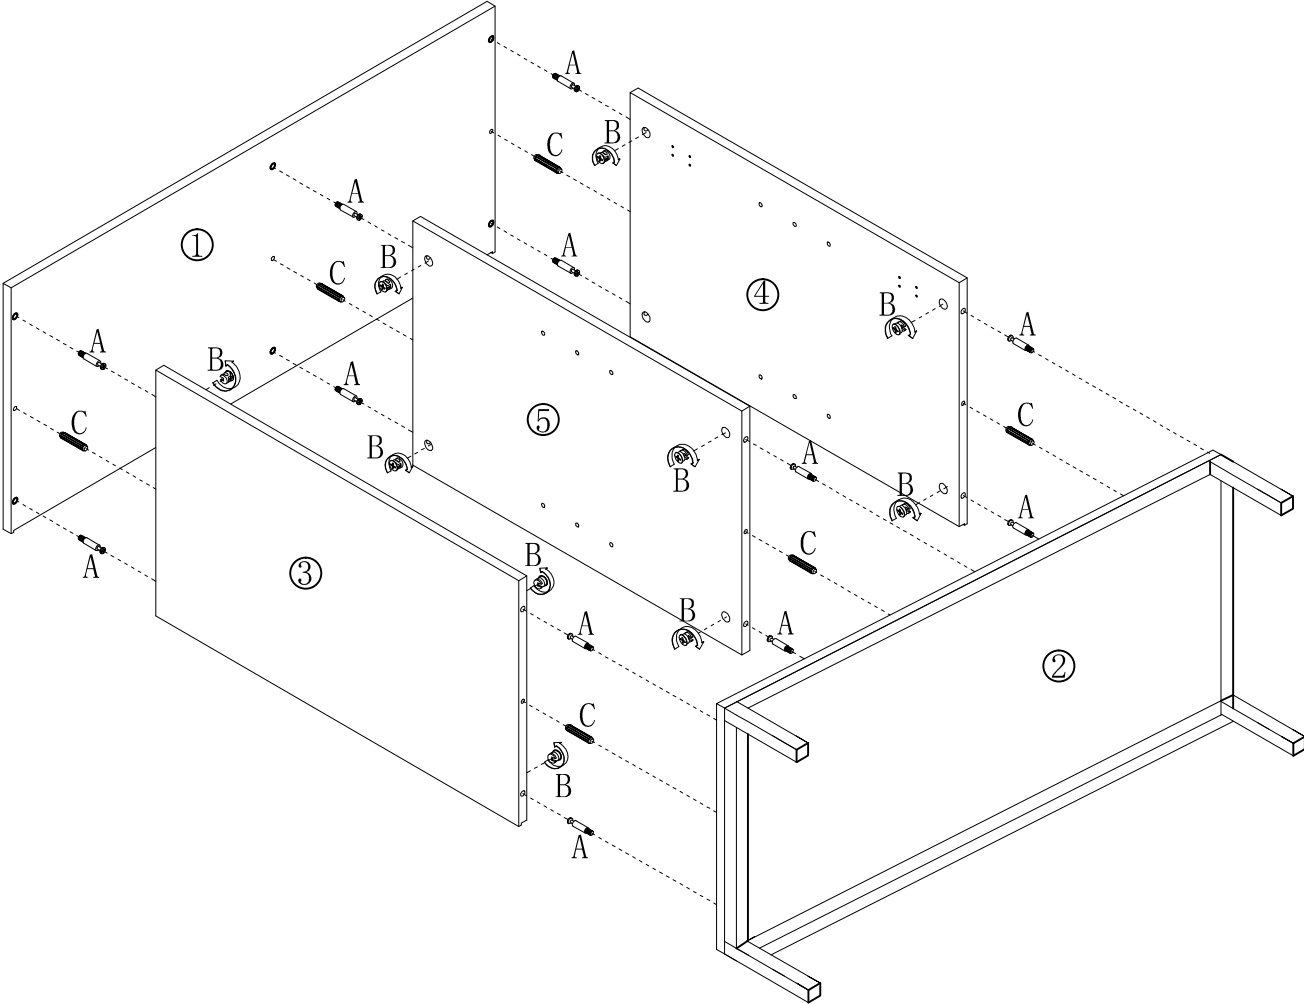
A:		12PCS
B:		12PCS
C:		6PCS








ASSEMBLY INSTRUCTION

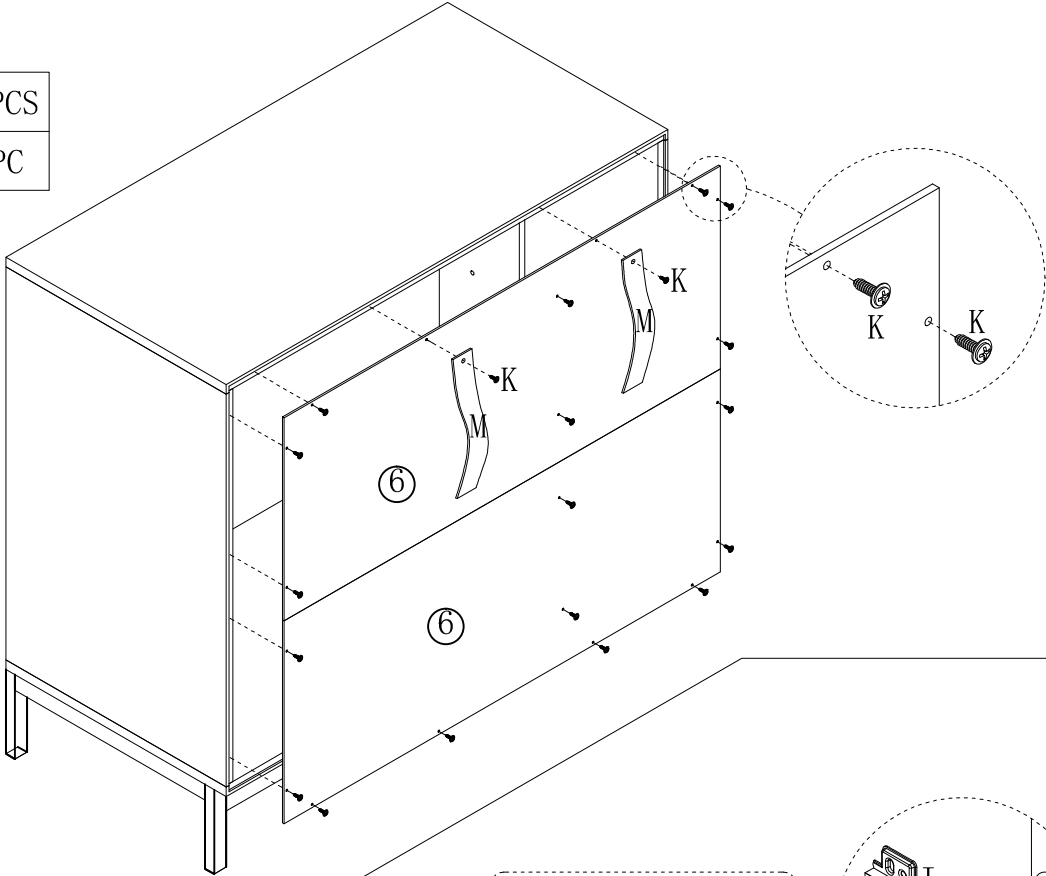
STEP 3

K:		20PCS
M:		2PC



STEP 4


G:		3PCS
H:		6PCS
I:		4PCS
Q:		2PCS
J:		8PCS

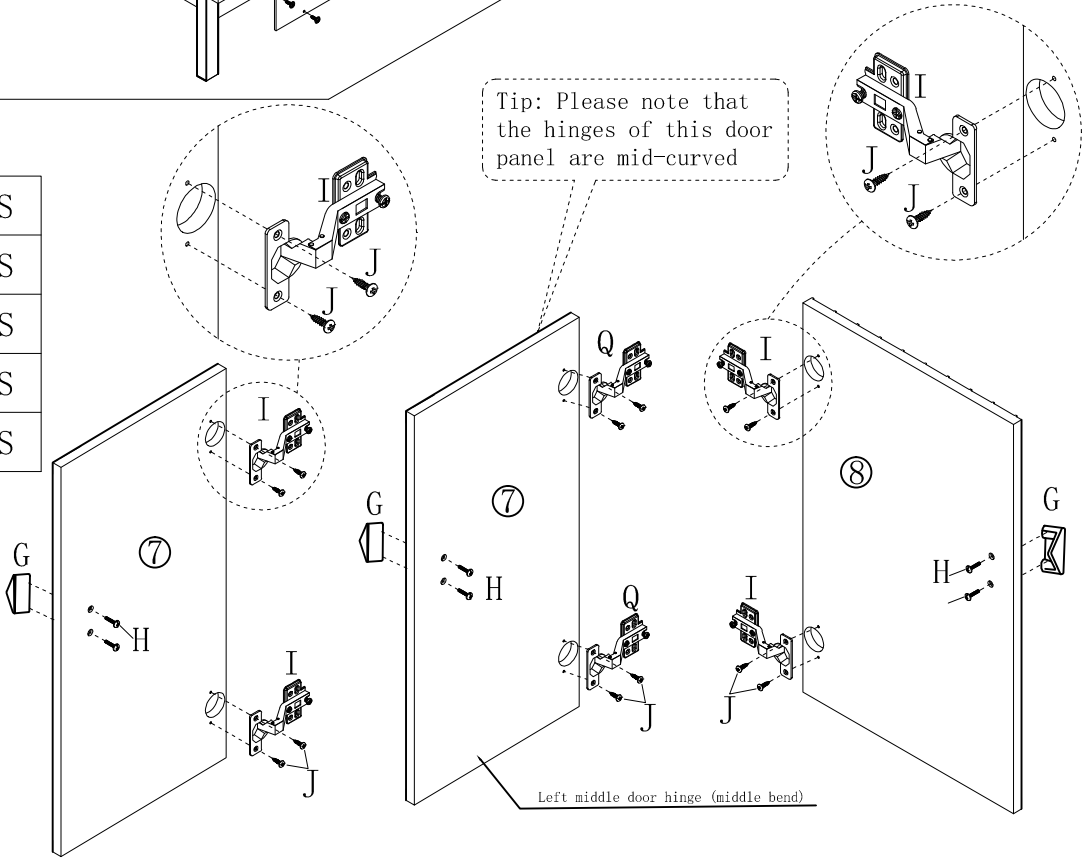


ASSEMBLY INSTRUCTION

STEP 5


J:  16PCS

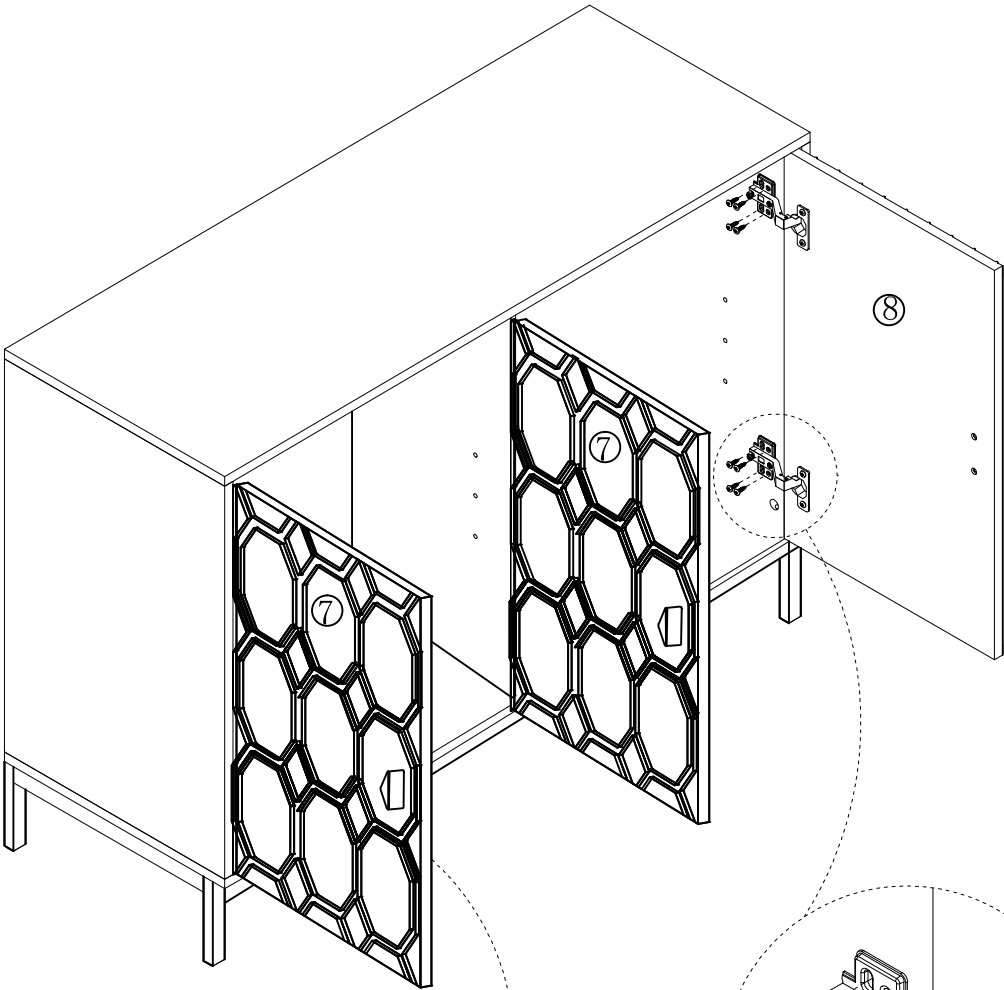


DOOR FITTING

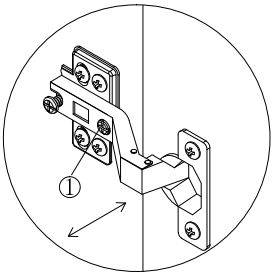


To adjust in width

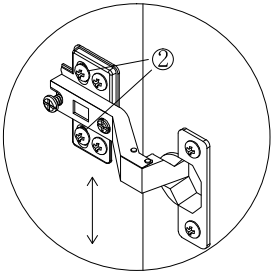

To adjust in height

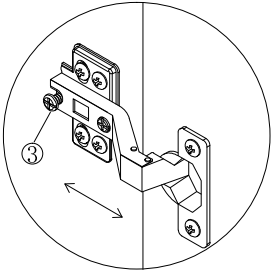


To adjust in depth

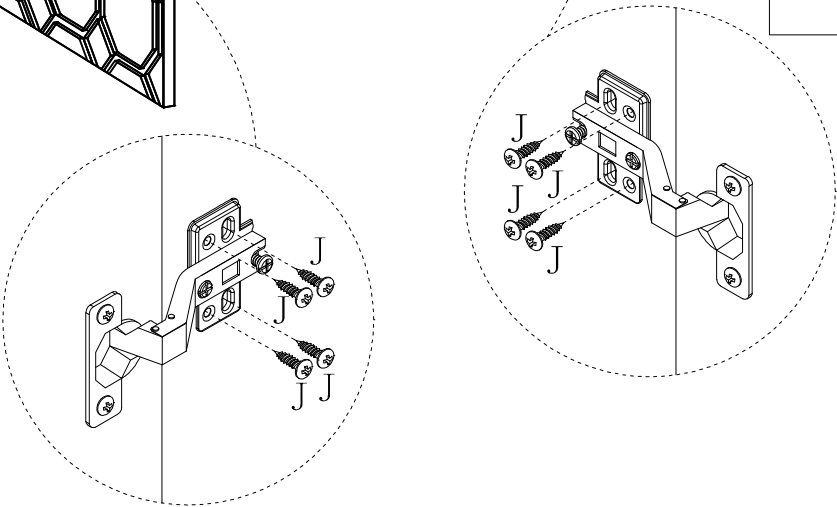




STEP 6

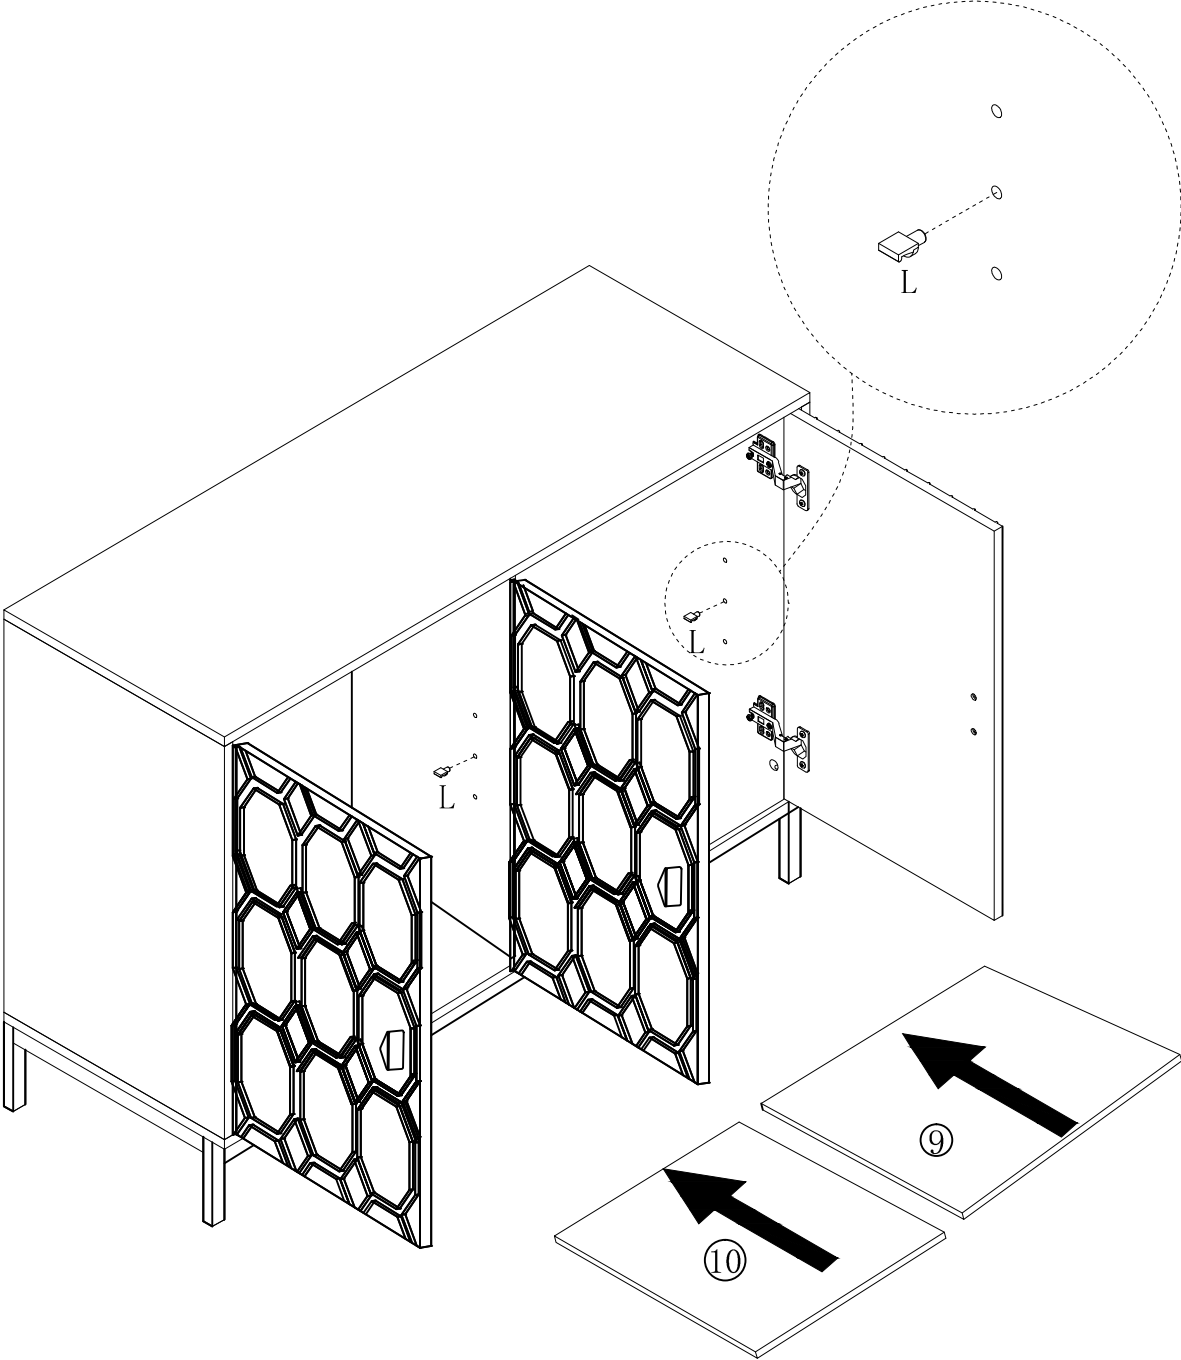L:  8PCS



ASSEMBLY INSTRUCTION

STEP 7

N:		2PC
O:		2PC
P:		2PC

