

ASSEMBLY INSTRUCTIONS

Cabinet

EEl-7439 / V0.04.22.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.





Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

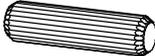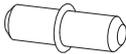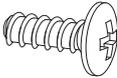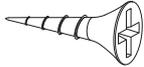A		Cam Bolt Ø6 x 35 mm	x20
B		Cam Lock Ø15 mm	x20
C		Wood Dowel Ø8 x 30 mm	x22
D		Shelf Pin	x12
E		Screw Cap Ø15 mm	x4
F		Screw M 7 x 50 mm	x4
G		Allen Key	x2
H		Screw M 4.5 x 12.5 mm	x24
I		Screw M 3.5 x 15.5 mm	x16
J		Wedge	x16
K		Joining Strip 382 mm	x1
L		Joining Strip 478 mm	x1
HS26A		Hinge	x4

WHAT YOU NEED:




Phillips



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

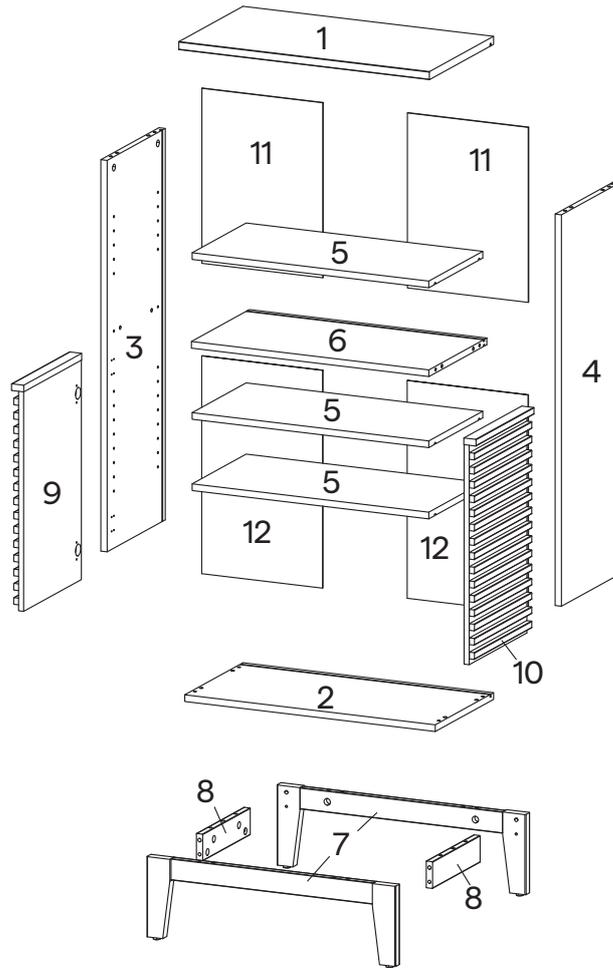

1	Top Board	x1	7	Assembly Leg	x2
2	Bottom Board	x1	8	Bottom Skirt	x2
3	Side Board Left	x1	9	Door 1	x1
4	Side Board Right	x1	10	Door 2	x1
5	Adjustable Shelf	x3	11	Back Board 1	x2
6	Fixed Shelf	x1	12	Back Board 2	x2

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- C** Wood Dowel Ø8 x 30 mm x12

COMPONENTS


- 1** Top Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1
- 6** Fixed Shelf x1

1.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board (1), then tighten using screwdriver.

1.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Fixed Shelf (6).

1.3 Insert Wood Dowel Ø8 x 30 mm (C) and Cam Bolt Ø6 x 35 mm (A) into the Side Board Left (3), then tighten the Cam Bolt using screwdriver.

1.4 Insert Wood Dowel Ø8 x 30 mm (C) and Cam Bolt Ø6 x 35 mm (A) into the Side Board Right (4), then tighten the Cam Bolt using screwdriver.

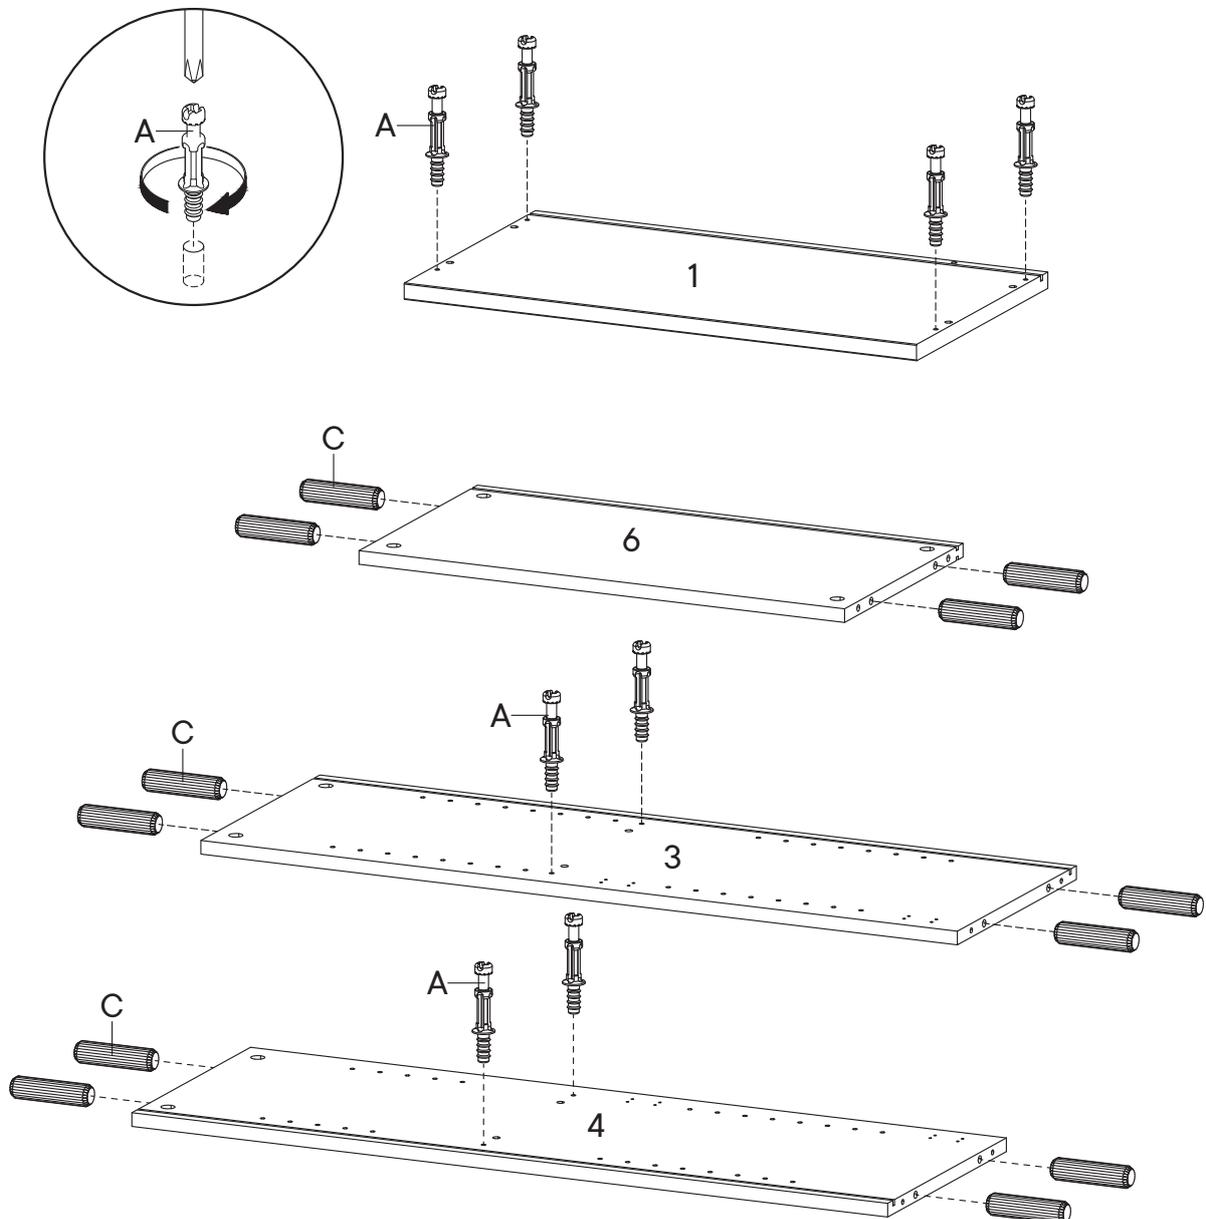

HARDWARE

B Cam Lock Ø15 mm x4


COMPONENTS

3 Side Board Left x1

4 Side Board Right x1

6 Fixed Shelf x1

2.1 Combine Side Board Left (3), Fixed Shelf (6) and Side Board Right (4) according to picture. Insert Cam Lock Ø15 mm (B) then tighten using screwdriver, Position as shown in the figure.

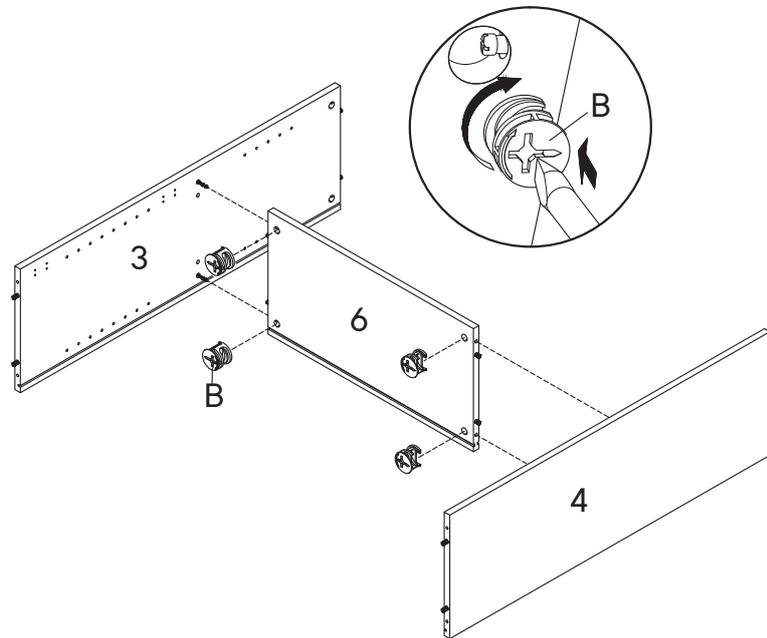

STEP 03


HARDWARE

L Joining Strip 478 mm x1

COMPONENTS

12 Back Board 2 x2

3.1 Insert Back Board 2 (12) into Fixed Shelf. Insert Joining Strip 478 mm (L) in between the Back Board 2 (12).

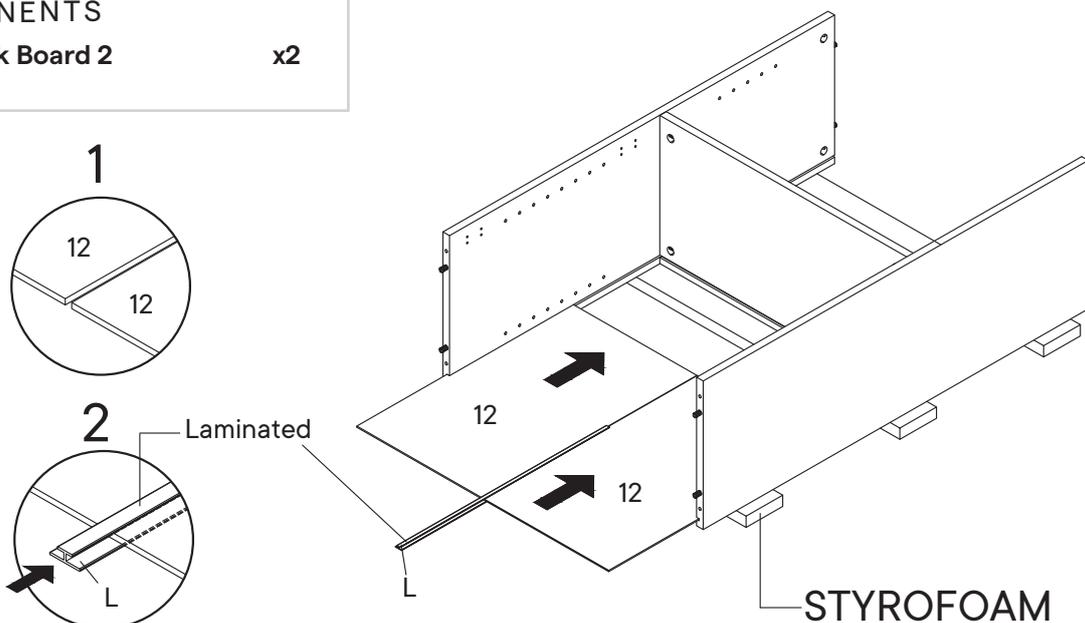


HARDWARE

- F** Screw M 7 x 50 mm x4
- G** Allen Key x1

COMPONENTS

- 2** Bottom Board x1

4.1 Insert Bottom Board (2) and secure with Screw M 7 x 50 mm (F), tighten screws using Allen Key (G).

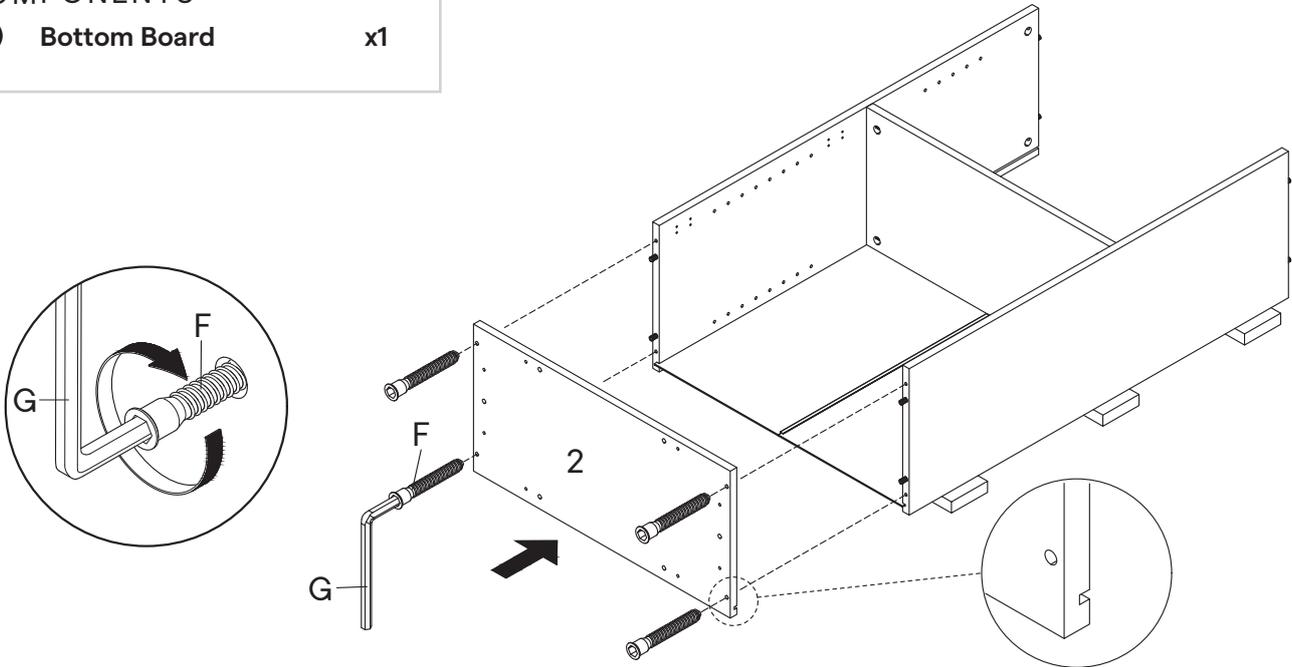


STEP 05

HARDWARE

- A** Cam Bolt $\varnothing 6 \times 35$ mm x8

5.1 Insert Cam Bolt $\varnothing 6 \times 35$ mm (A) into the Bottom Board (2), then tighten using screwdriver.

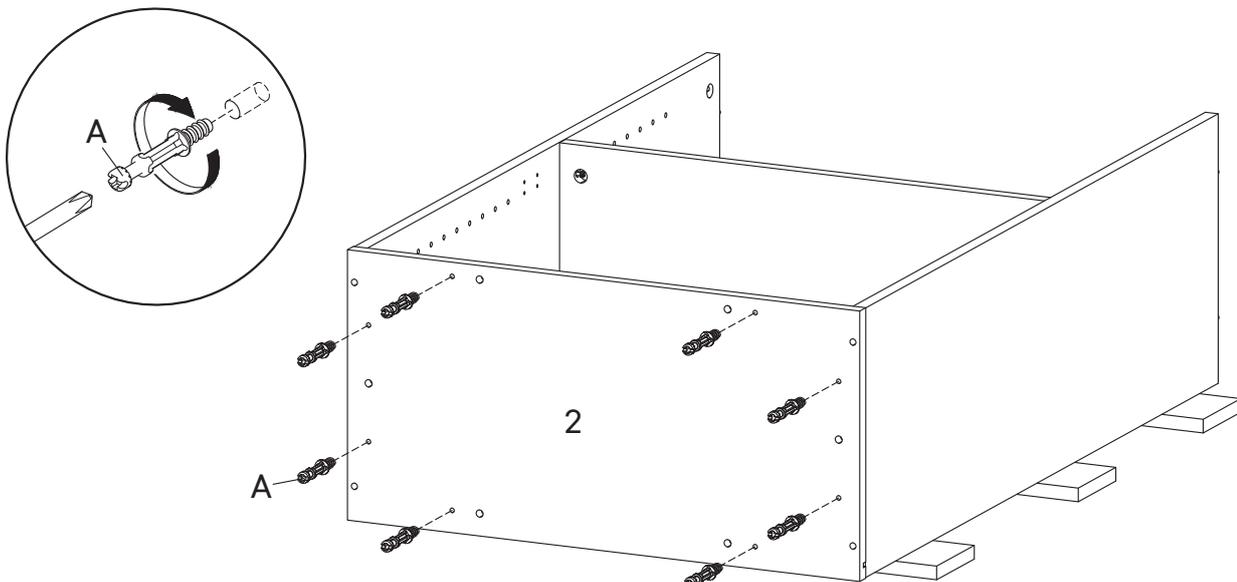

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x4
- C** Wood Dowel Ø8 x 30 mm x4

COMPONENTS

- 7** Assembly Leg x2
- 8** Bottom Skirt x2

6.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Assembly Leg (7), then tighten using screwdriver.

6.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Bottom Skirt (8).

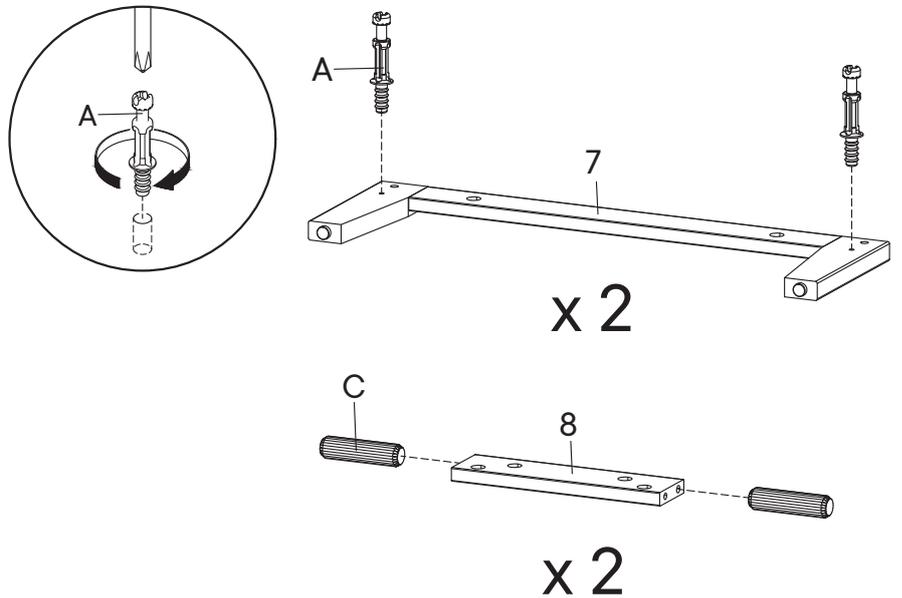

STEP 07


HARDWARE

- B** Cam Lock Ø15 mm x4

COMPONENTS

- 7** Assembly Leg x2
- 8** Bottom Skirt x2


7.1 Combine Assembly Leg (7) and Bottom Skirt (8) according to picture. Insert Cam Lock Ø15 mm (B) then tighten using screwdriver, Position as shown in the figure.

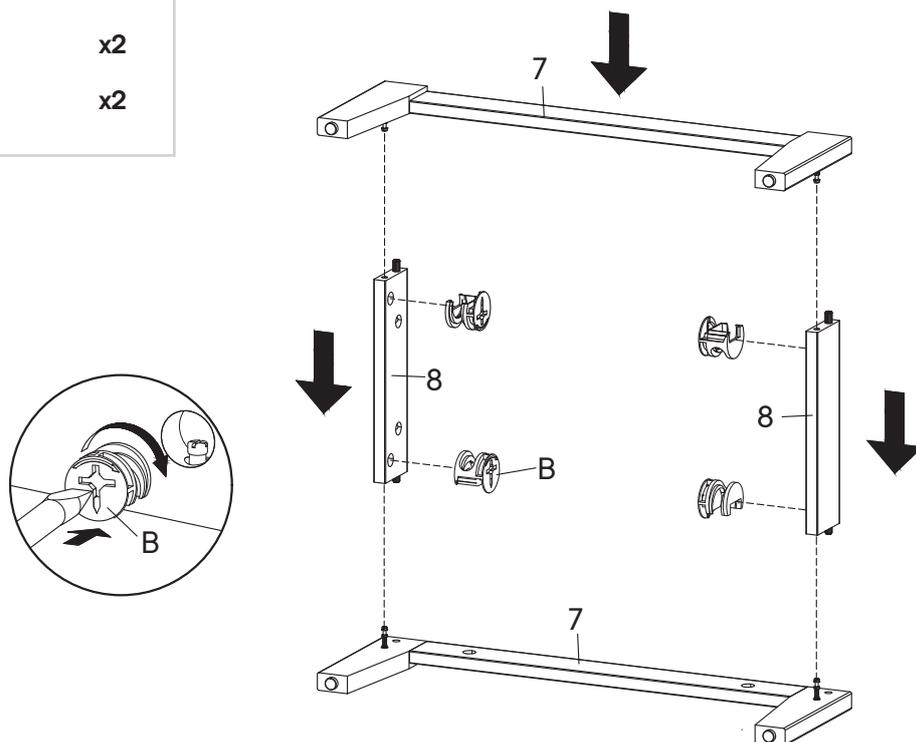

HARDWARE

C Wood Dowel Ø8 x 30 mm x6

8.1 Insert Wood Dowel Ø8 x 30 mm (C) into assembled from previous step.


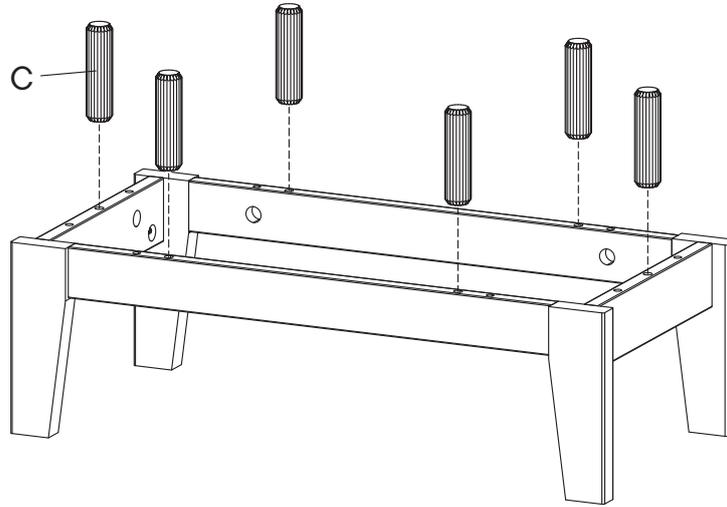


STEP 09

HARDWARE

B Cam Lock Ø15 mm x8

9.1 Attach the Assembly leg into Bottom Board, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver, Position as shown in the figure.

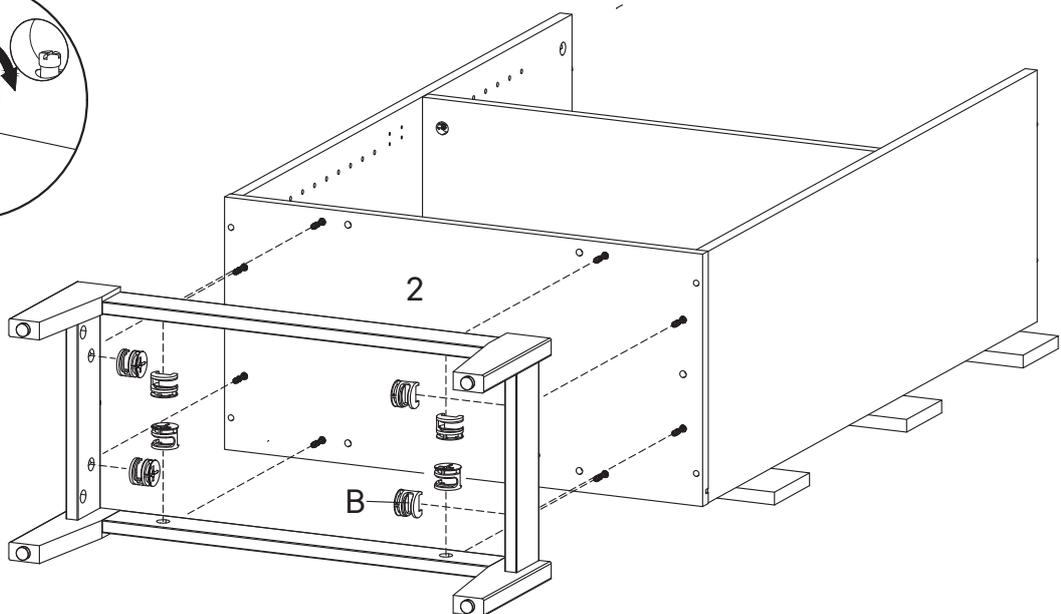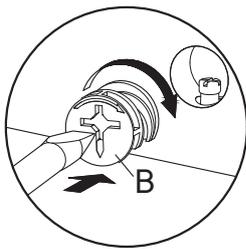



HARDWARE

K Joining Strip 382 mm x1

COMPONENTS

11 Back Board 1 x2

10.1 Insert Back Board 1 (11) into Fixed Shelf. Insert Joining Strip 382 mm (K) in between the Back Board 1 (11).

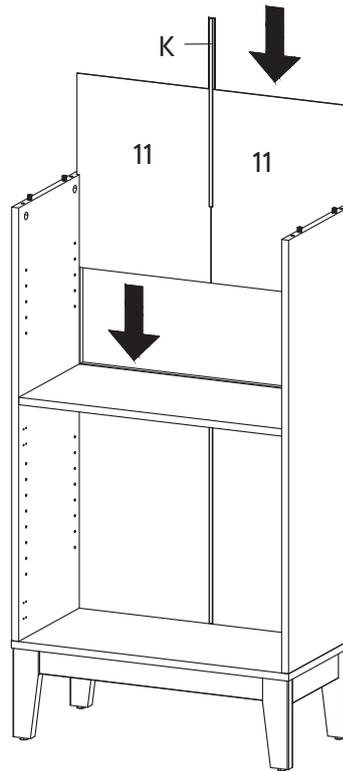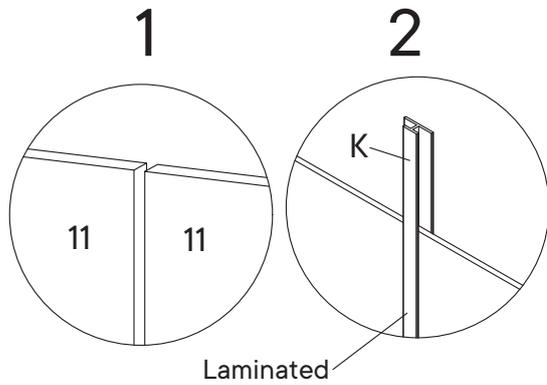

STEP 11

HARDWARE



B Cam Lock \varnothing 15 mm x4

E Screw Cap \varnothing 15 mm x4

COMPONENTS

1 Top Board x1

11.1 Insert Top Board (1) and secure with Cam Lock \varnothing 15 mm (B) then tighten using screwdriver. Put Screw Cap \varnothing 15 mm (E) to the Cam Lock on Side Boards. Position as shown in the figure.

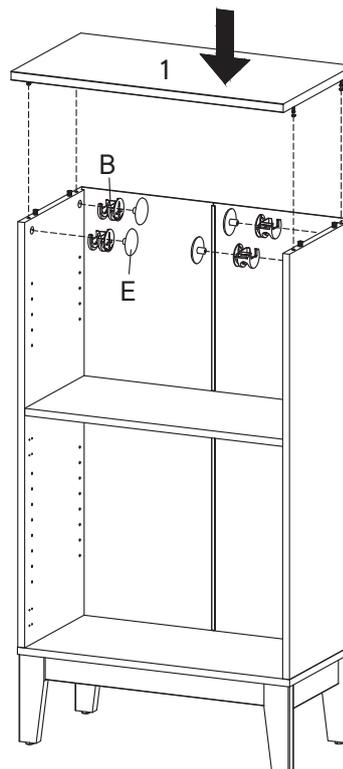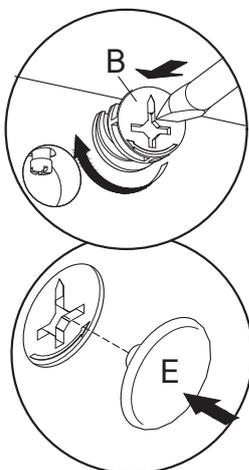




HARDWARE

D Shelf Pin x12

COMPONENTS

5 Adjustable Shelf x3

12.1 Insert Shelf Pin (D) into the holes on the Side Boards at the desired level. Then, place the Adjustable Shelf (5) by aligning its hole with the Shelf Pin (D) and inserting it securely.

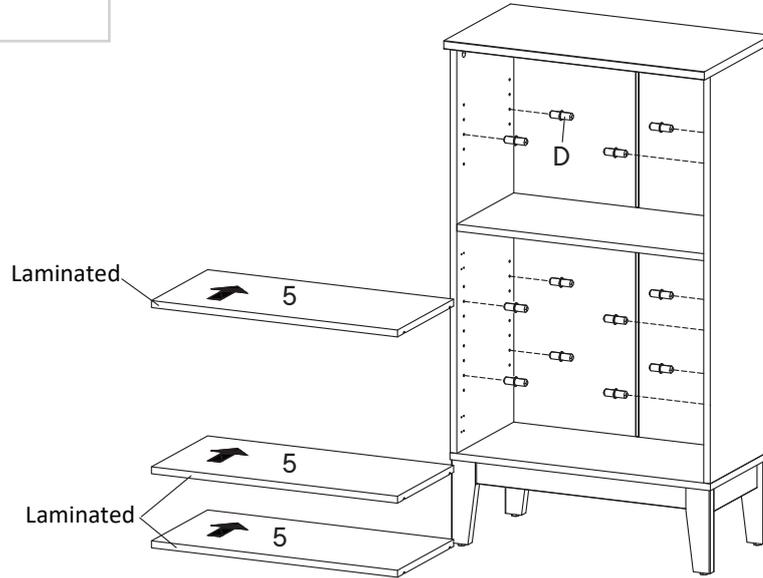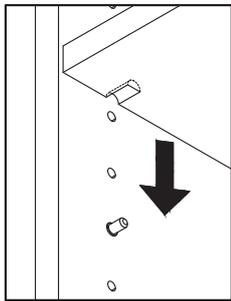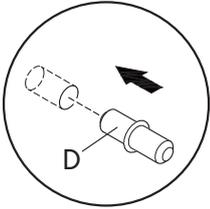

STEP 13

HARDWARE

H Screw M 4.5 x 12.5 mm x8


HS26A Hinge x4

COMPONENTS

9 Door 1 x1

10 Door 2 x1

13.1 Insert Hinge (HS26A) into Door 1 (9) and Door 2 (10). Secure with Screw M 4.5 x 12.5 mm (H), then tighten using screwdriver.

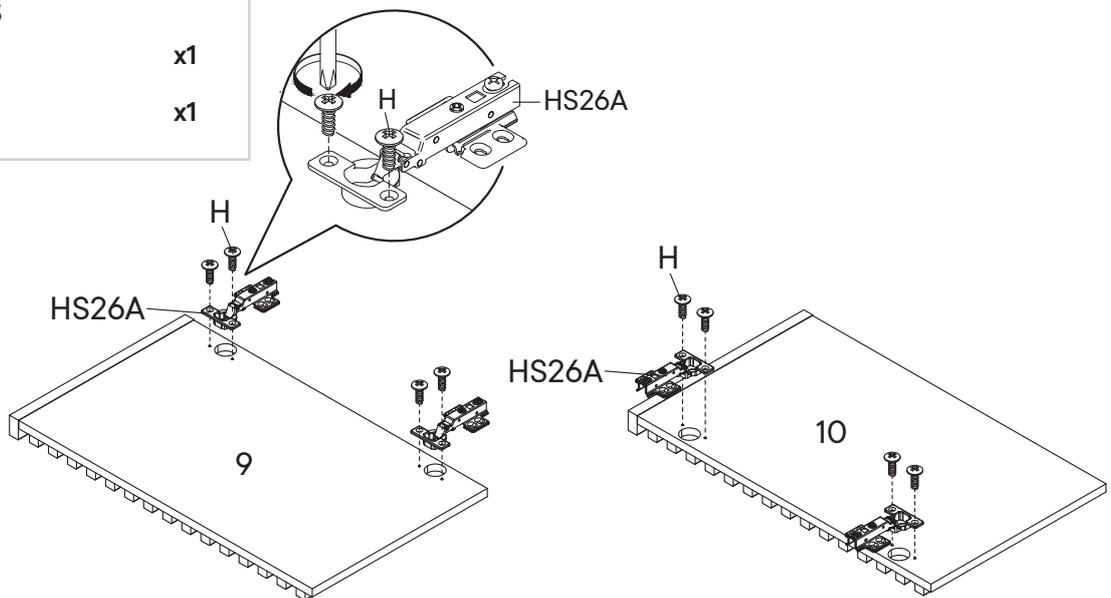

HARDWARE



H Screw M 4.5 x 12.5 mm x16

COMPONENTS

9 Door 1 x1

10 Door 2 x1

14.1 Install Door 1 (9) and Door 2 (10) into Side Board. Please see the above images carefully. Secure with Screw M 4.5 x 12.5 mm (H) and then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure.

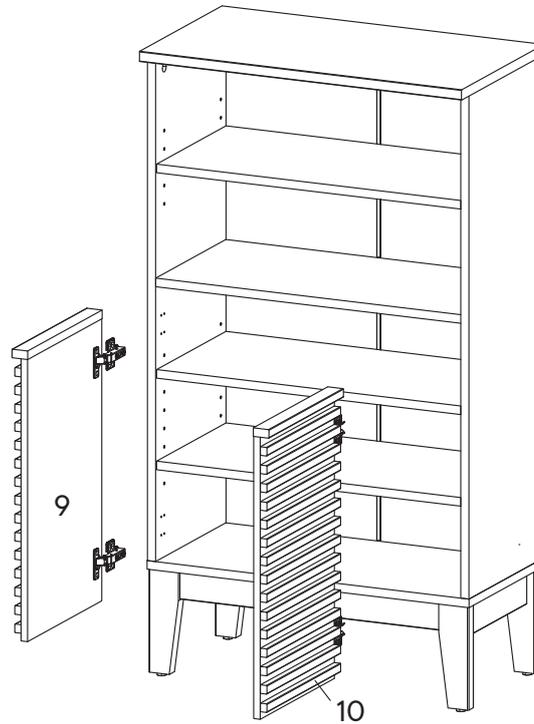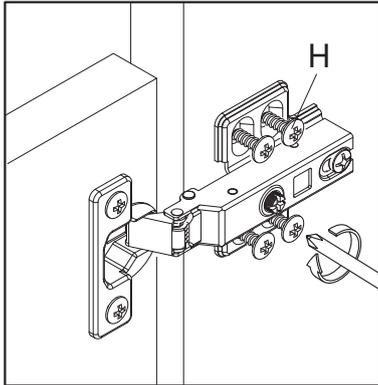



STEP 15

HARDWARE

I Screw M 3.5 x 15.5 mm x16

J Wedge x16

15.1 Use the Wedge (J) and Screw M 3.5 x 15.5 mm (I) to tighten the back of the cabinet using screwdriver. Before securing the wedges (J), ensure that the top board and bottom board are aligned at a 90° angle against the cabinet.

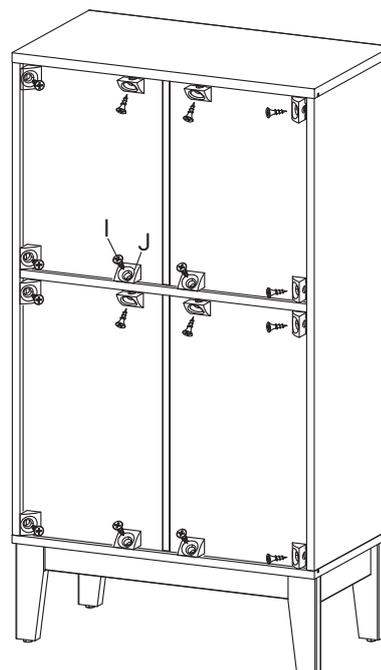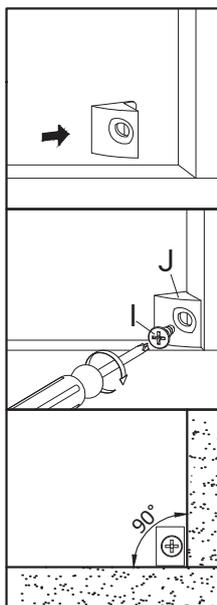


Great job!

Cabinet assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

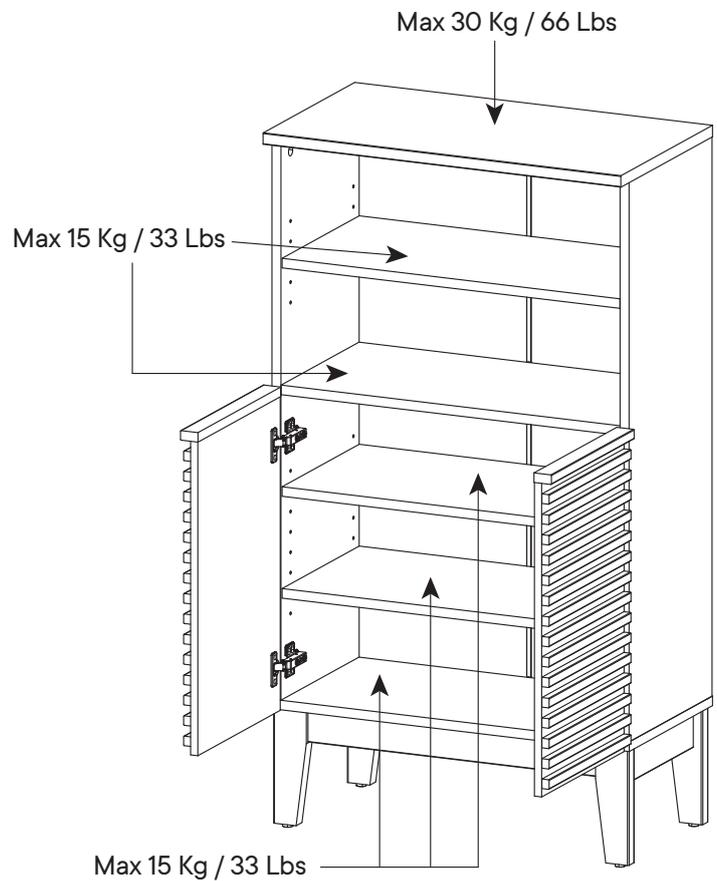

CONNECT WITH US!



Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

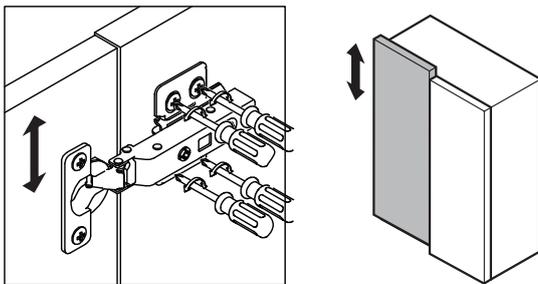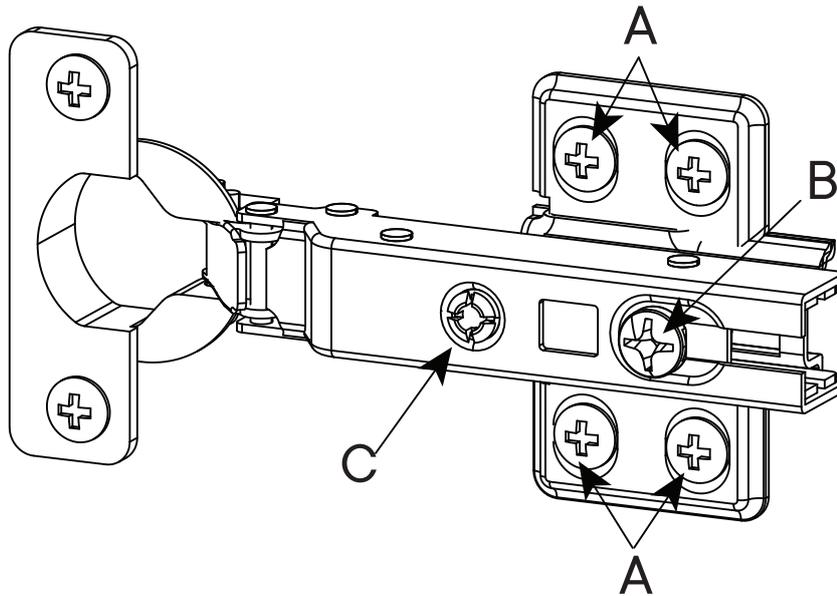


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

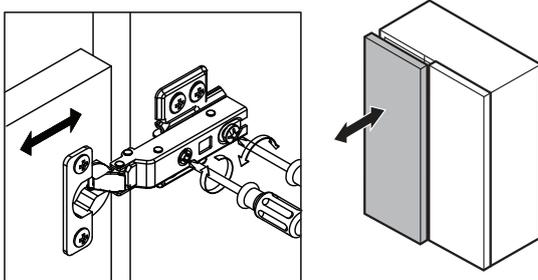

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

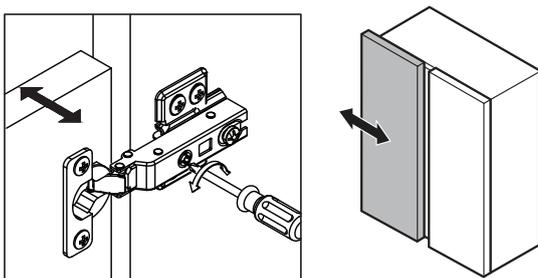

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

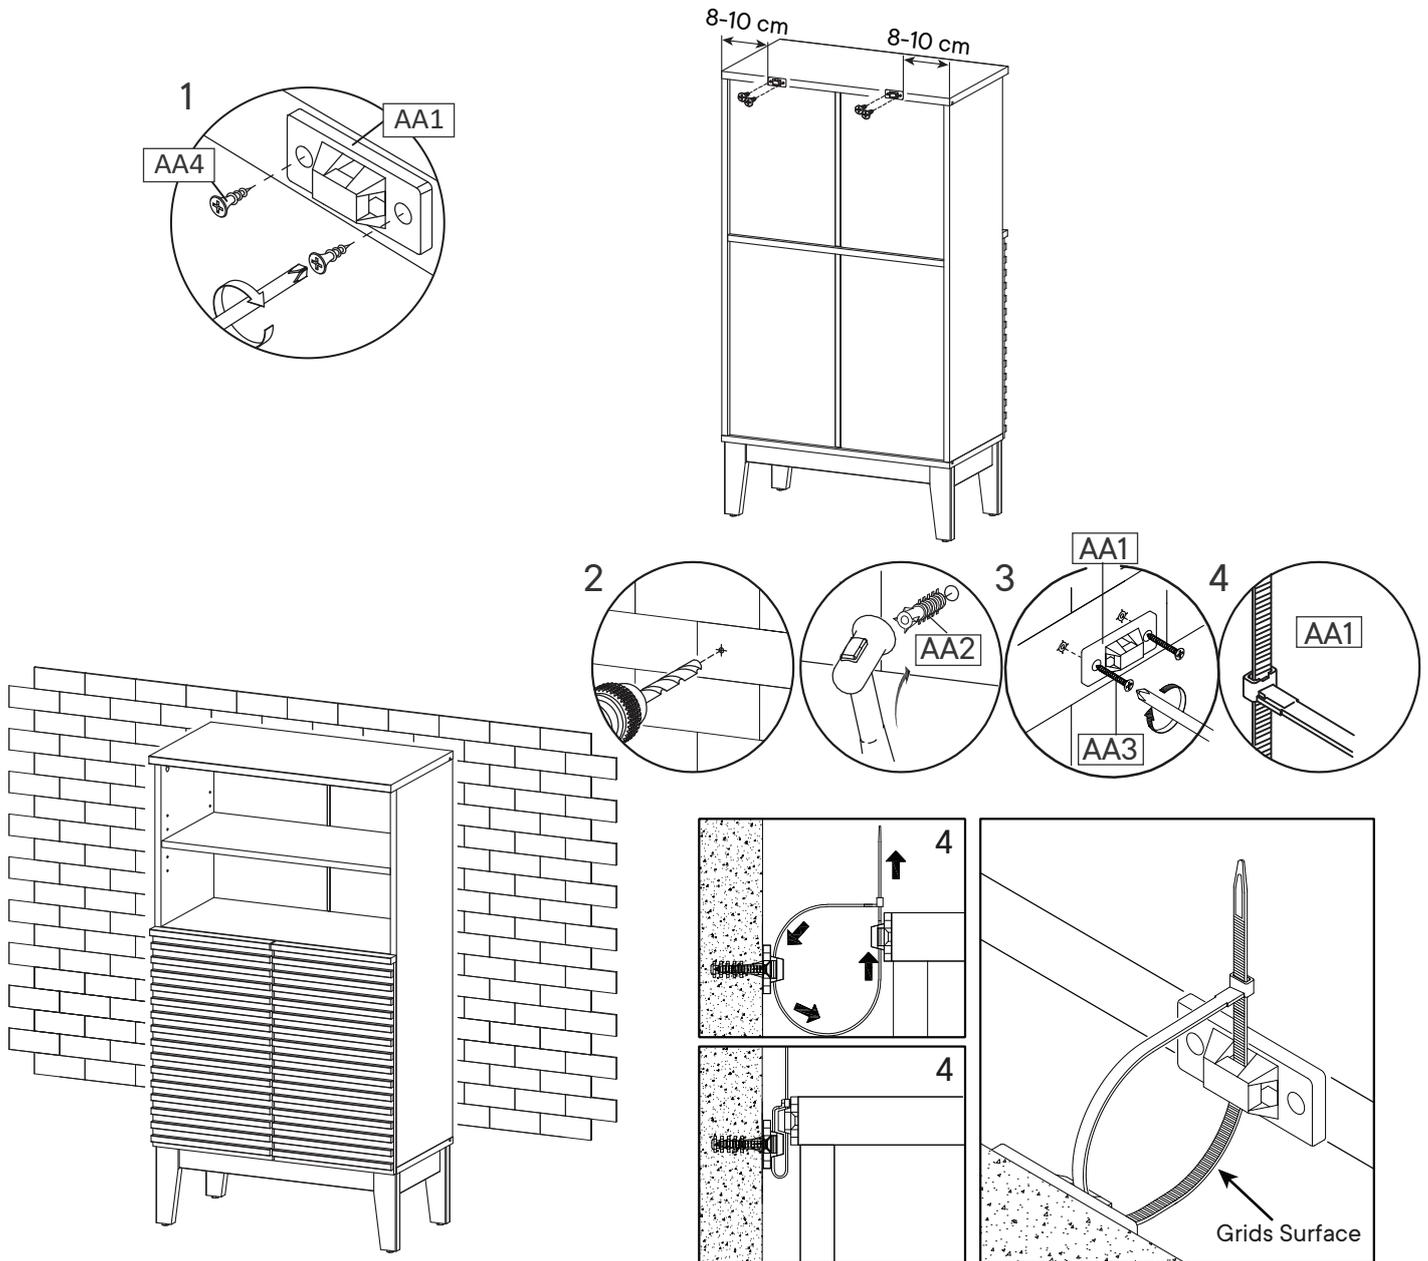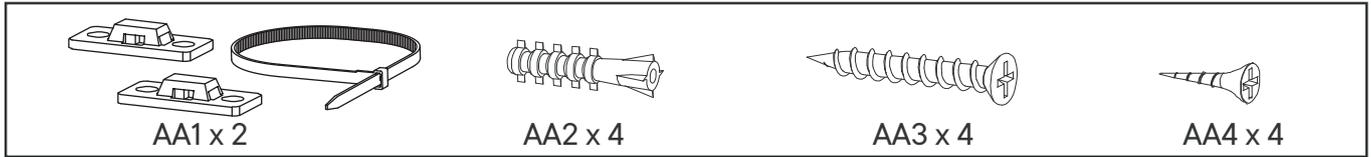

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.