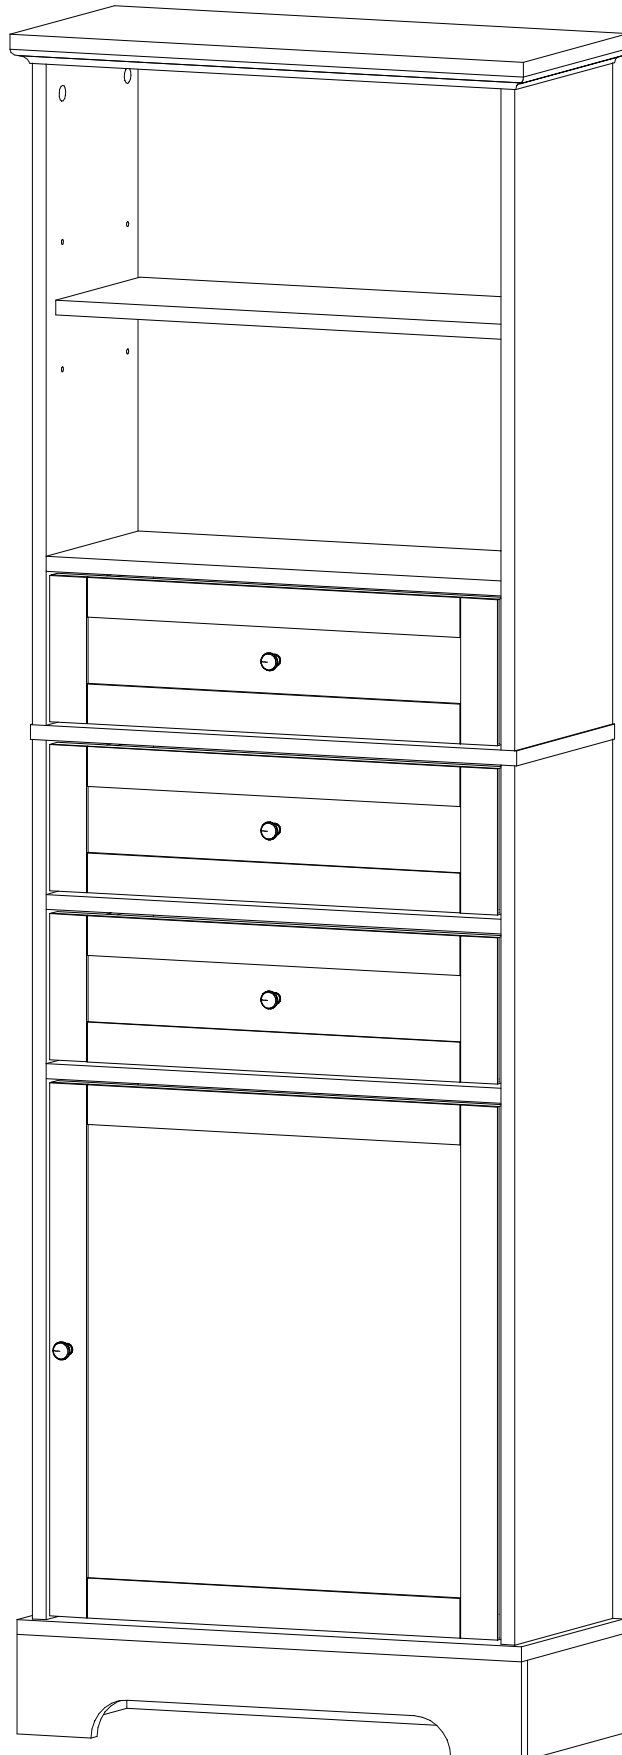
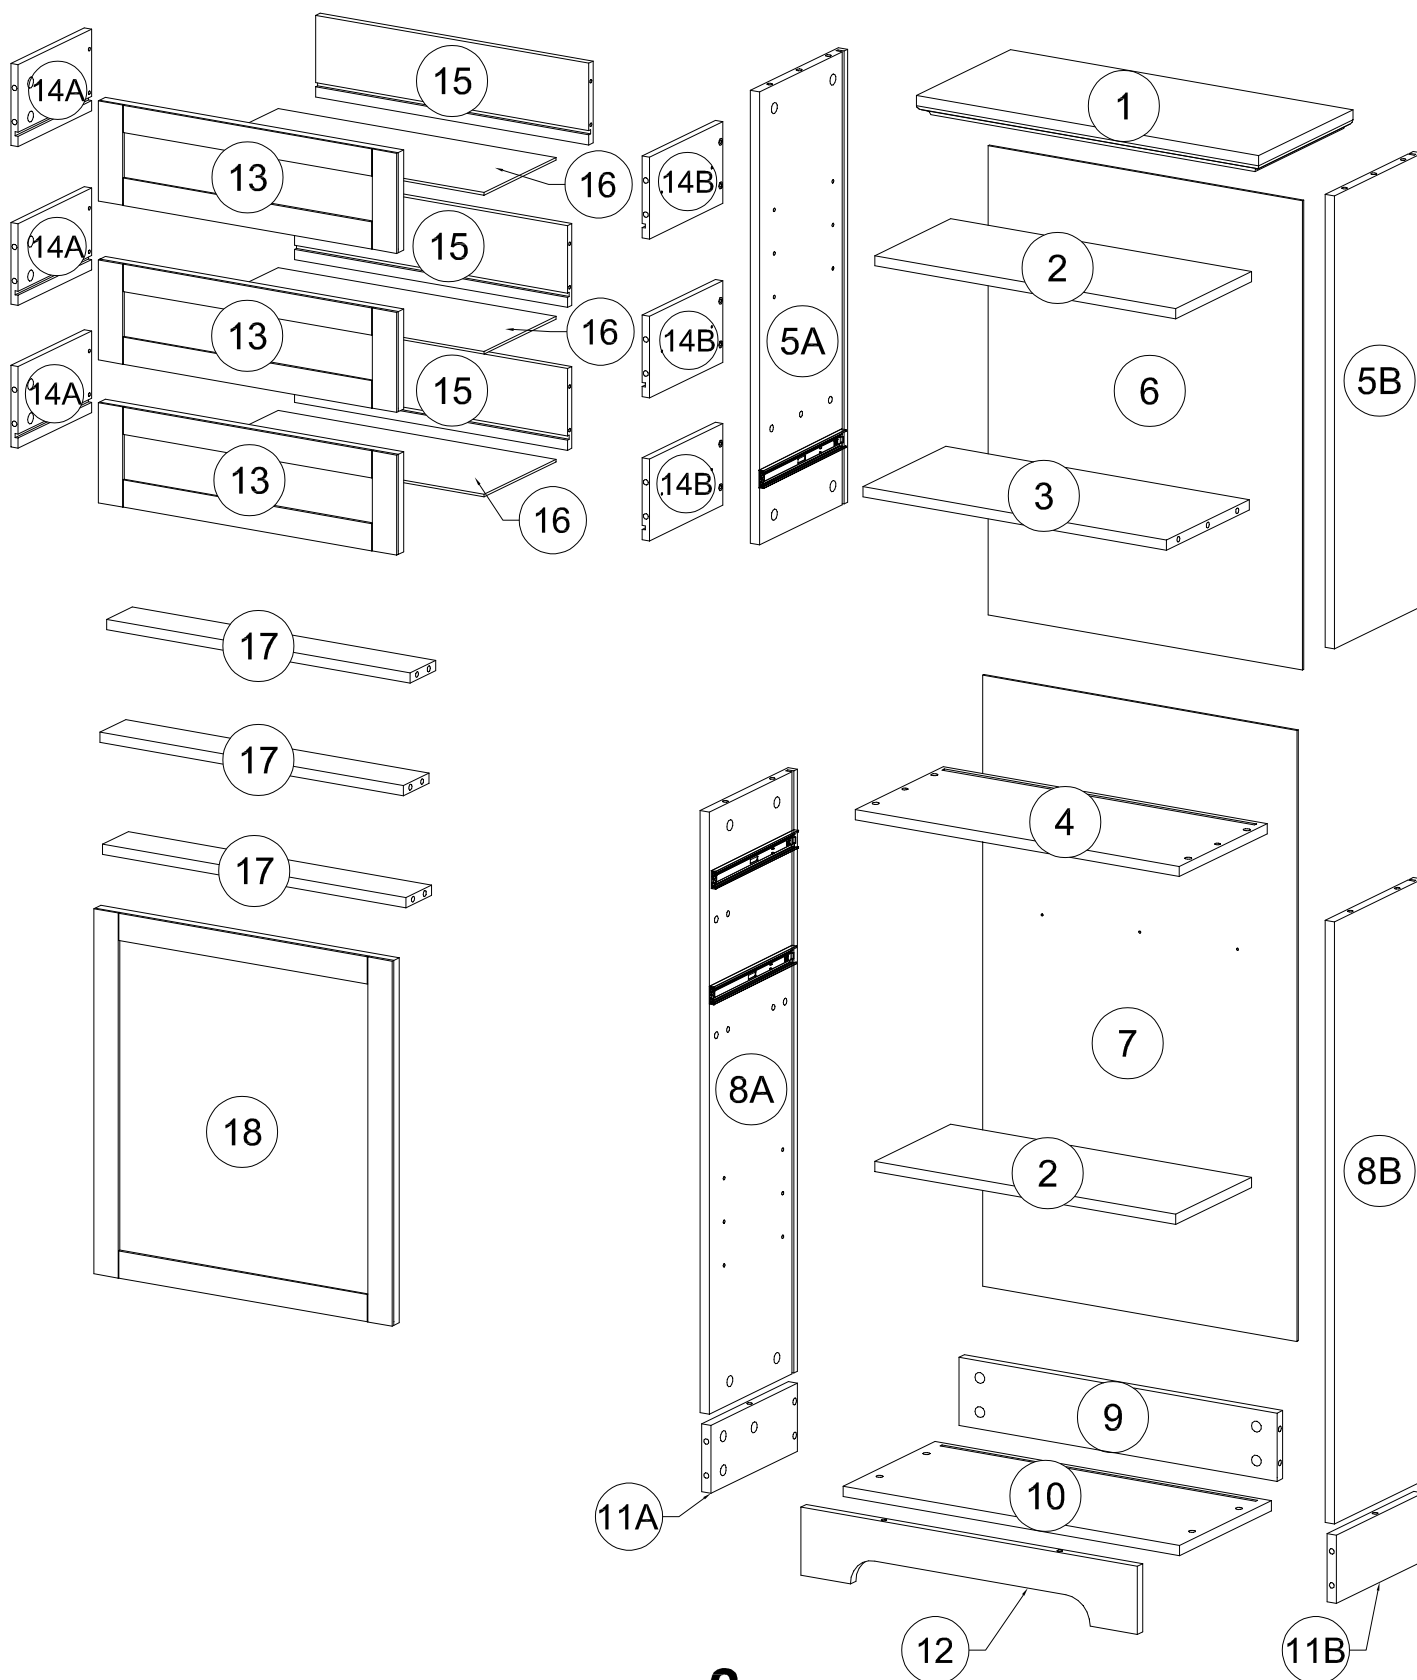


ASSEMBLY INSTRUCTION





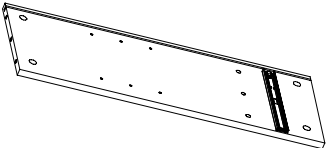
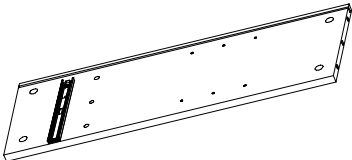
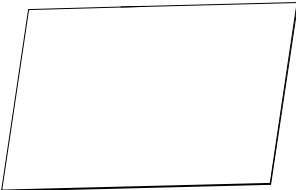
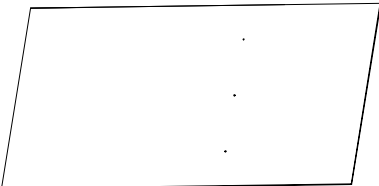
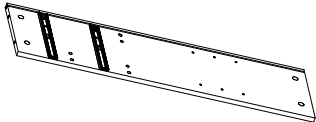
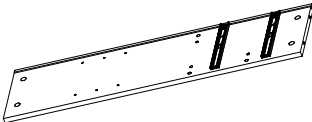
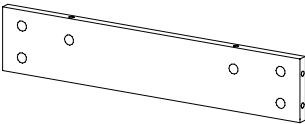

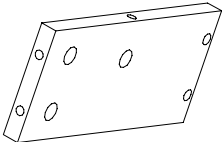
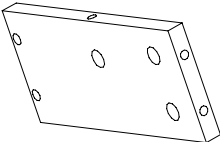

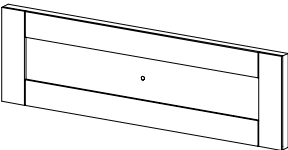
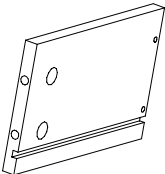
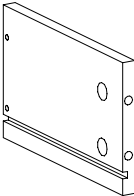
SKU CODE: (WF323347)



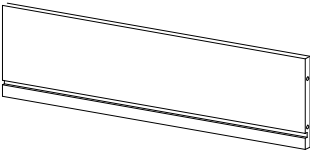


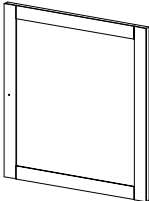
ASSEMBLY INSTRUCTION






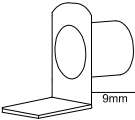

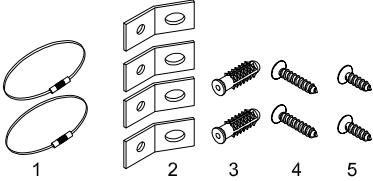

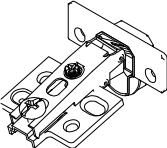




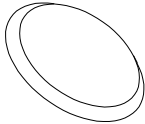

Part List (WF323347)


1		2		3	
The top of the cabinet-1pc		MOVING SHELVES-2pcs		FIXED SHELF-1pc	
4		5A		5B	
CABINET DIVIDING PLATE-1pc		HIP EDGE ON CABINET-1pc		HIP EDGE ON CABINET-1pc	
6		7		8A	
Cabinet Back-1pc		Cabinet Back-1pc		HIP EDGE UNDER THE CABINET-1pc	
8B		9		10	
HIP EDGE UNDER THE CABINET-1pc		Short bar - 1pc		CABINET BOTTOM-1pc	
11A		11B		12	
Short bar - 1pc		Short bar - 1pc		Short bar - 1pc	
13		14A		14B	
DRAWER-FRONT Panels-3pcs		DRAWER-SIDE Panels-3pcs		DRAWER-SIDE Panes-3pcs	

Part List (WF323347)

<div>15</div> <div></div> <div>DRAWER-Back Panels-3pcs</div>	<div>16</div> <div></div> <div>Panel- 3pcs</div>	<div>17</div> <div></div> <div>SUPPORT BAR- 3pcs</div>
<div>18</div> <div></div> <div>CABINET WINGS-1pc</div>		




Hardware List (WF323347)

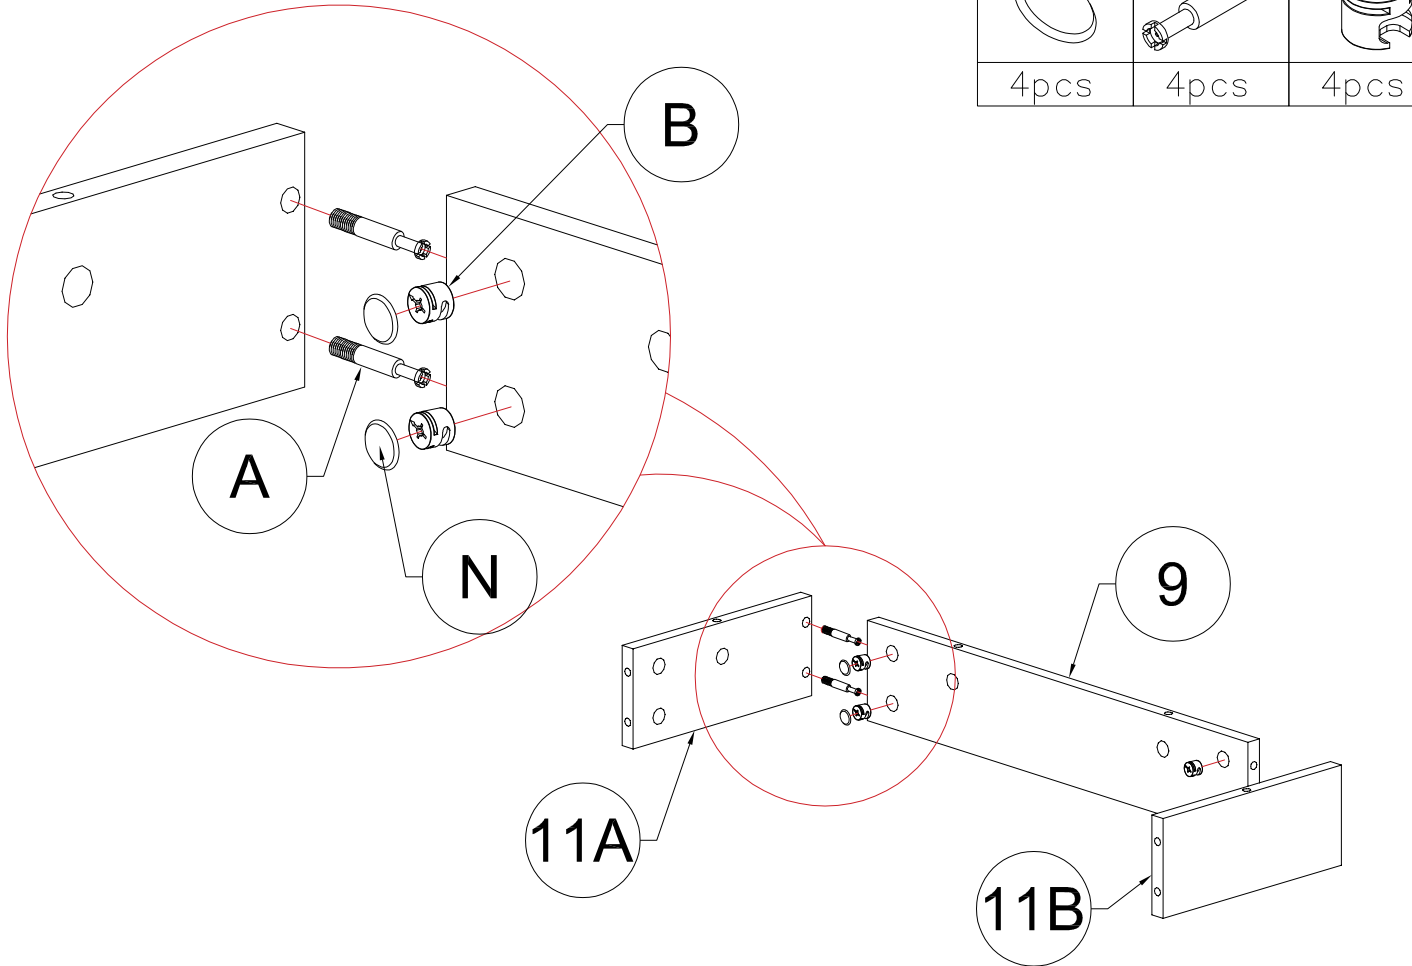
<div>A</div> <div></div> <div>Link 1 - 50 pcs</div>	<div>B</div> <div></div> <div>Link 2- 12mm - 50 pcs</div>	<div>C</div> <div></div> <div>Ø8 x 30 mm Wood dowel 12pcs</div>
<div>D</div> <div></div> <div>Support Pin 8pcs</div>	<div>E</div> <div></div> <div>M4 x 20 mm Wood Screws 23pcs</div>	<div>F</div> <div></div> <div>Wall brackets 1set</div>
<div>G</div> <div></div> <div>#4 x 30 mm Wood Screws 12pcs</div>	<div>H</div> <div></div> <div>Hinge - 2pcs</div>	<div>R</div> <div></div> <div>CABINET DOOR HANDLES - 4pcs</div>
<div>J</div> <div></div> <div>M4 x 20mm Hex-Head bolts 3pcs</div>	<div>K</div> <div></div> <div>M4 x 25mm Hex-Head bolts 1pc</div>	<div>L</div> <div></div> <div>#4 x 15 mm Wood Screws 16pcs</div>
<div>N</div> <div></div> <div>Plastic button 50pcs</div>	<div>M</div> <div></div> <div>Iron Steel 2pcs</div>	






Assembly Tools Required (Not Included)

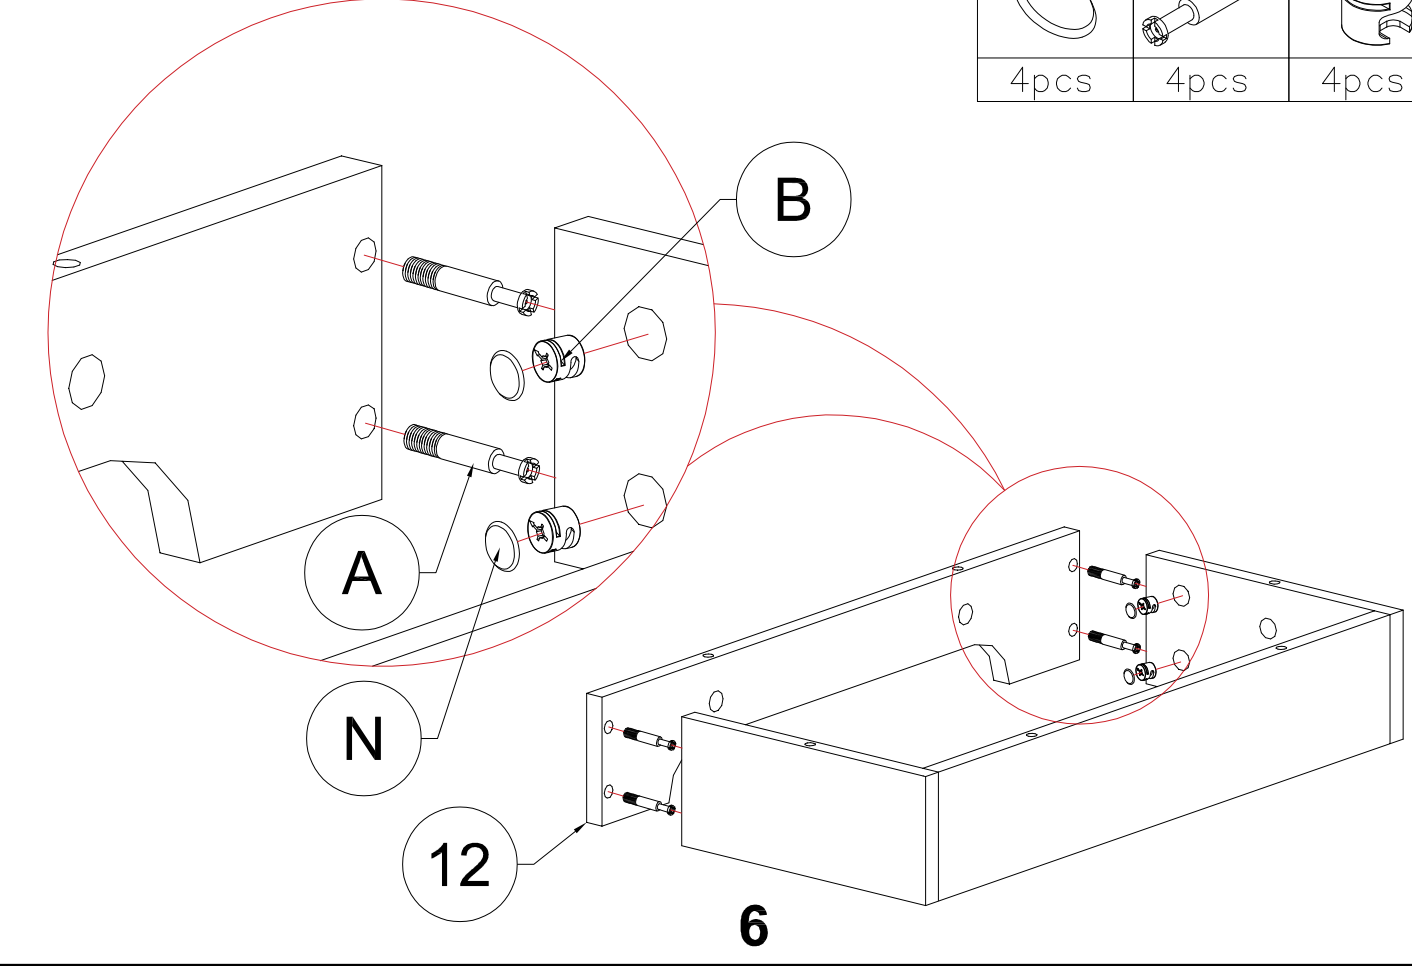
STEP 1.1: Following below illustration:

N	A	B
		
4pcs	4pcs	4pcs






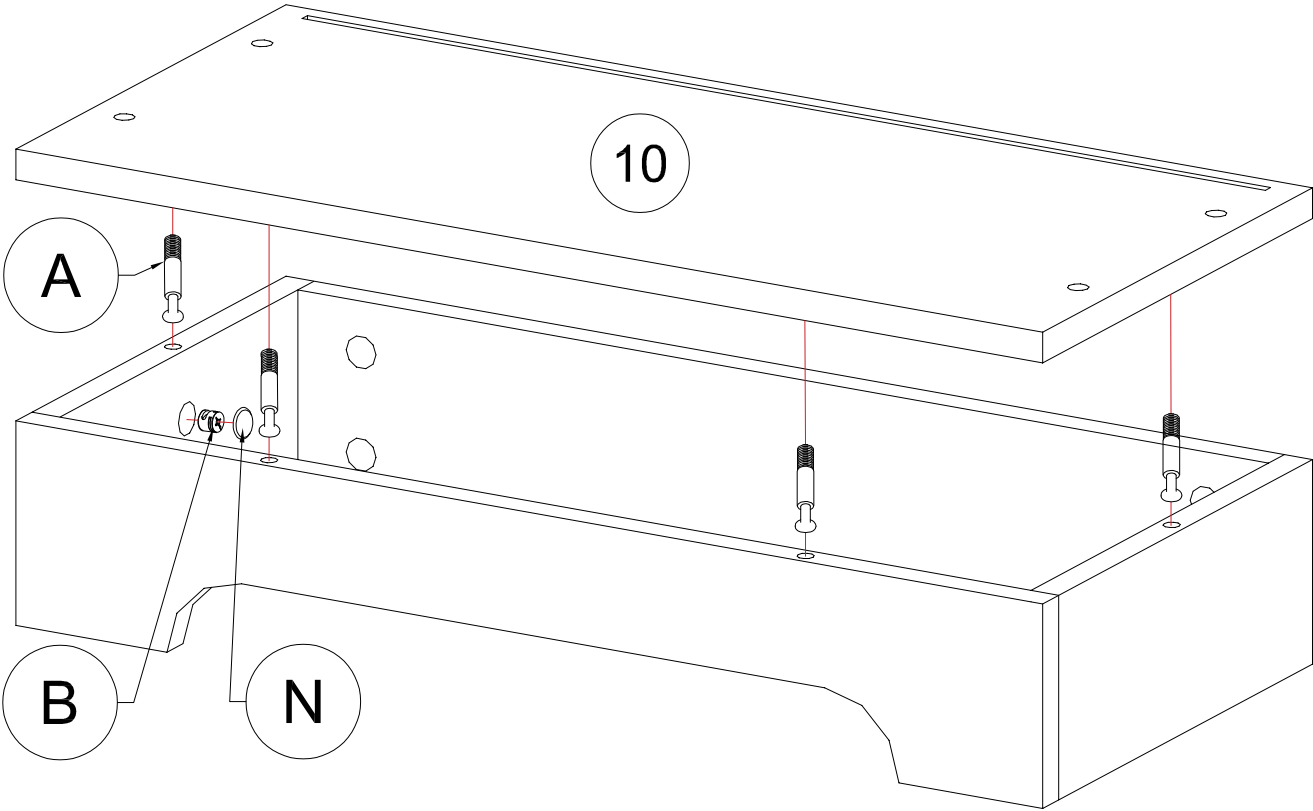
STEP 1.2: Following below illustration:

N	A	B
		
4pcs	4pcs	4pcs





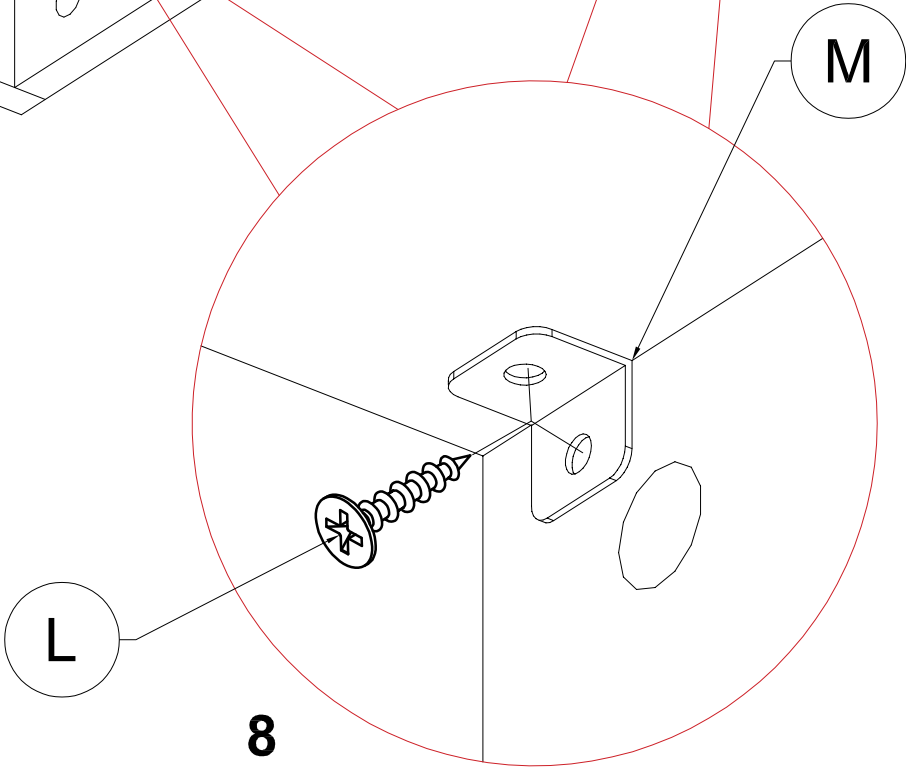
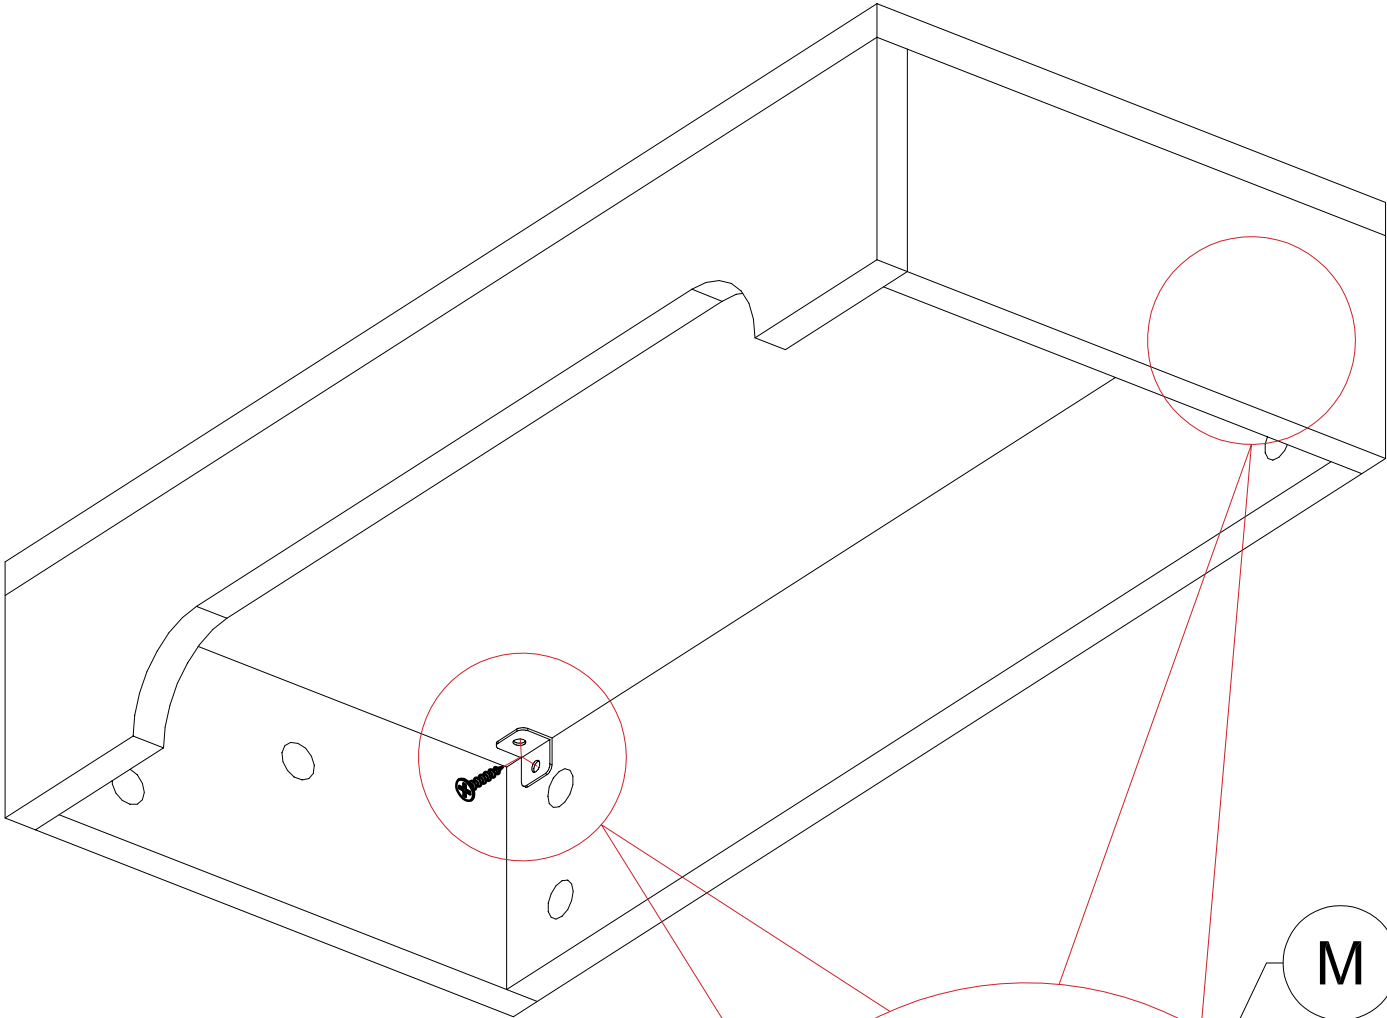
STEP 2: Following below illustration:

N	A	B
		
4pcs	4pcs	4pcs







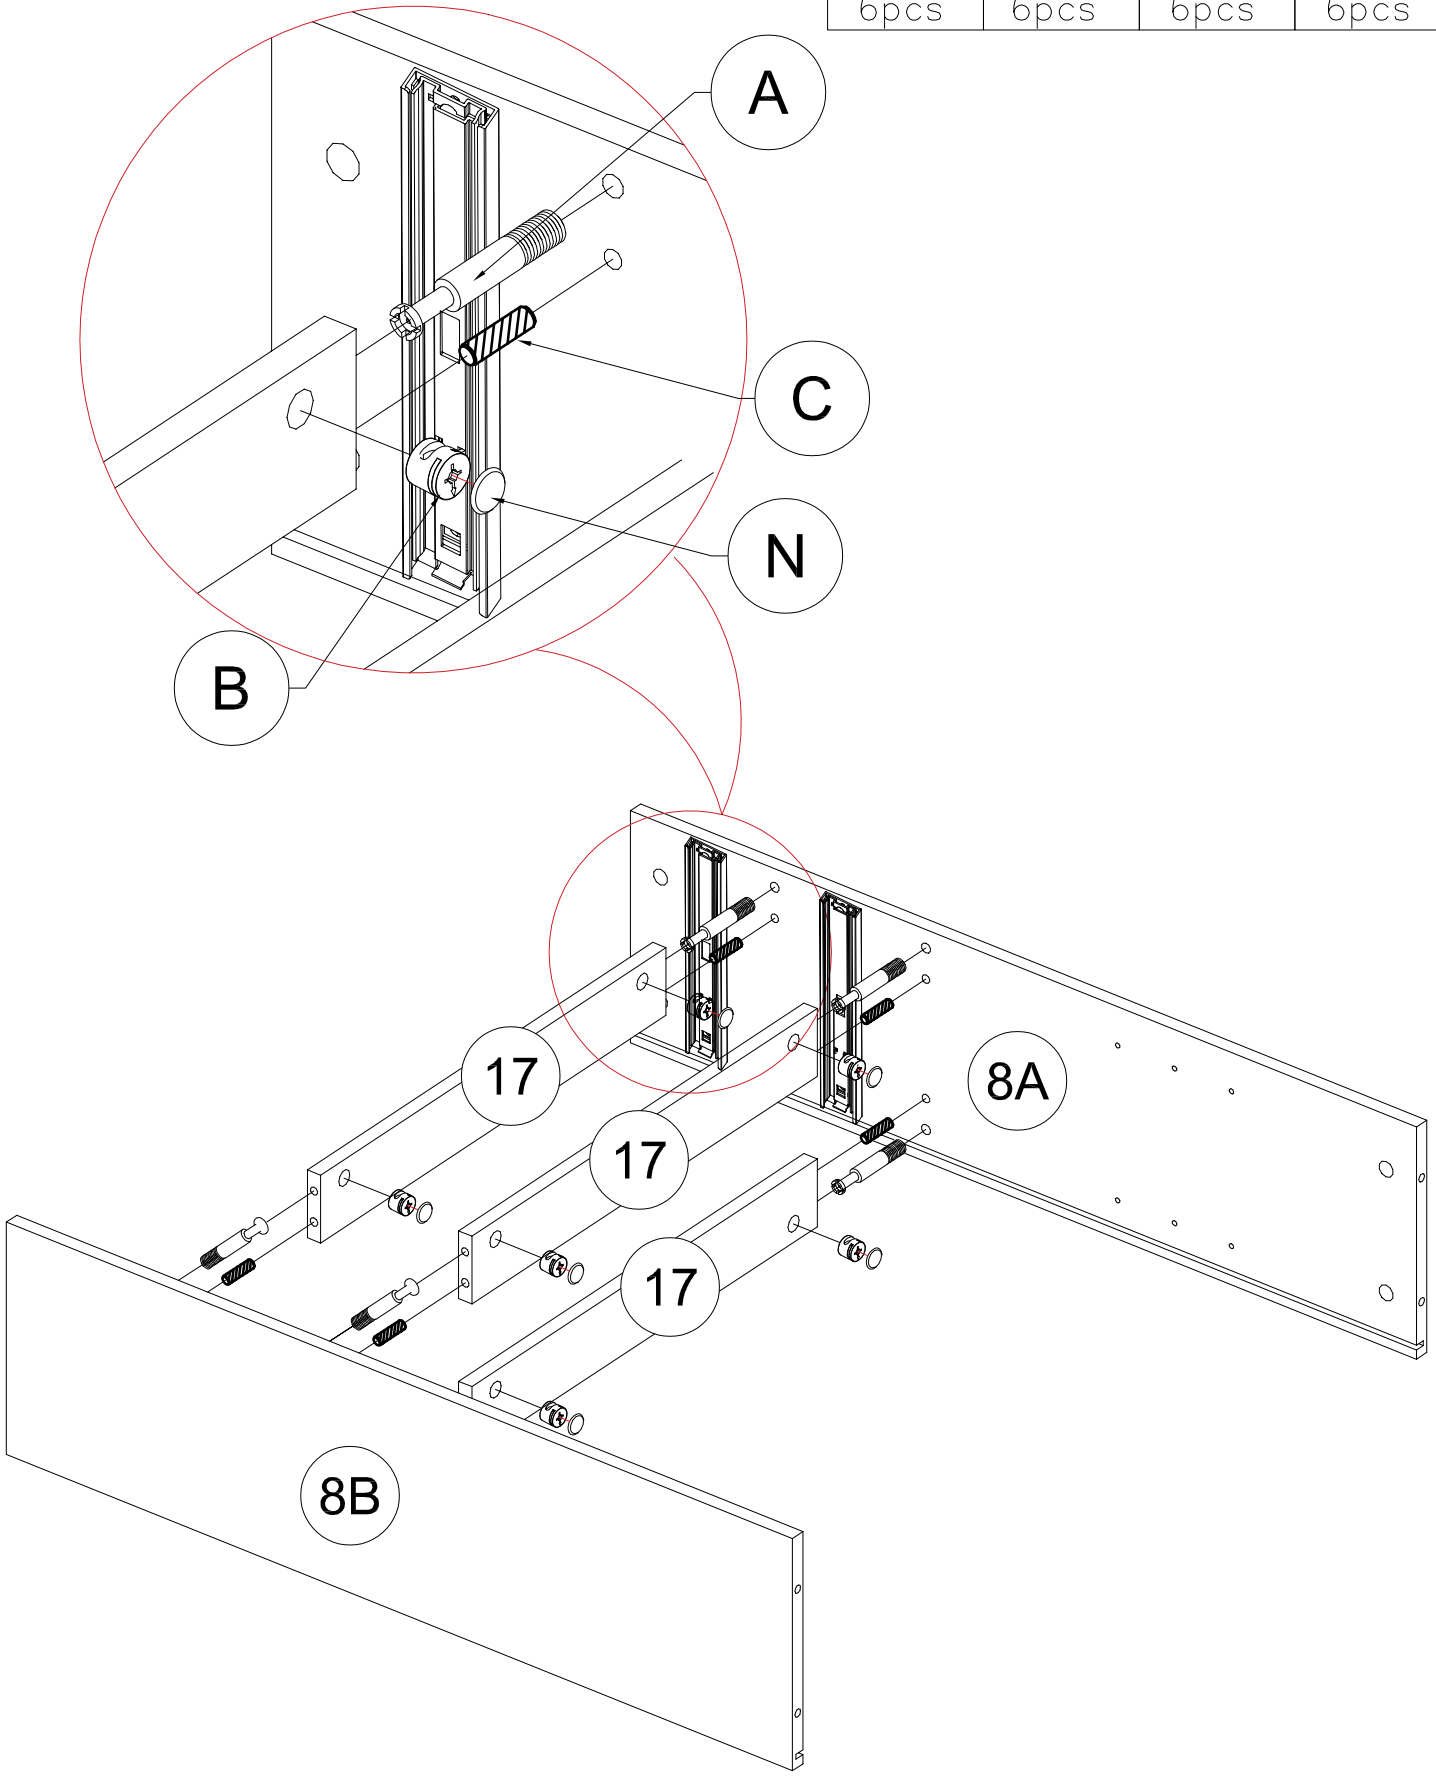
STEP 3: Following below illustration:

M	L
	
2pcs	4pcs






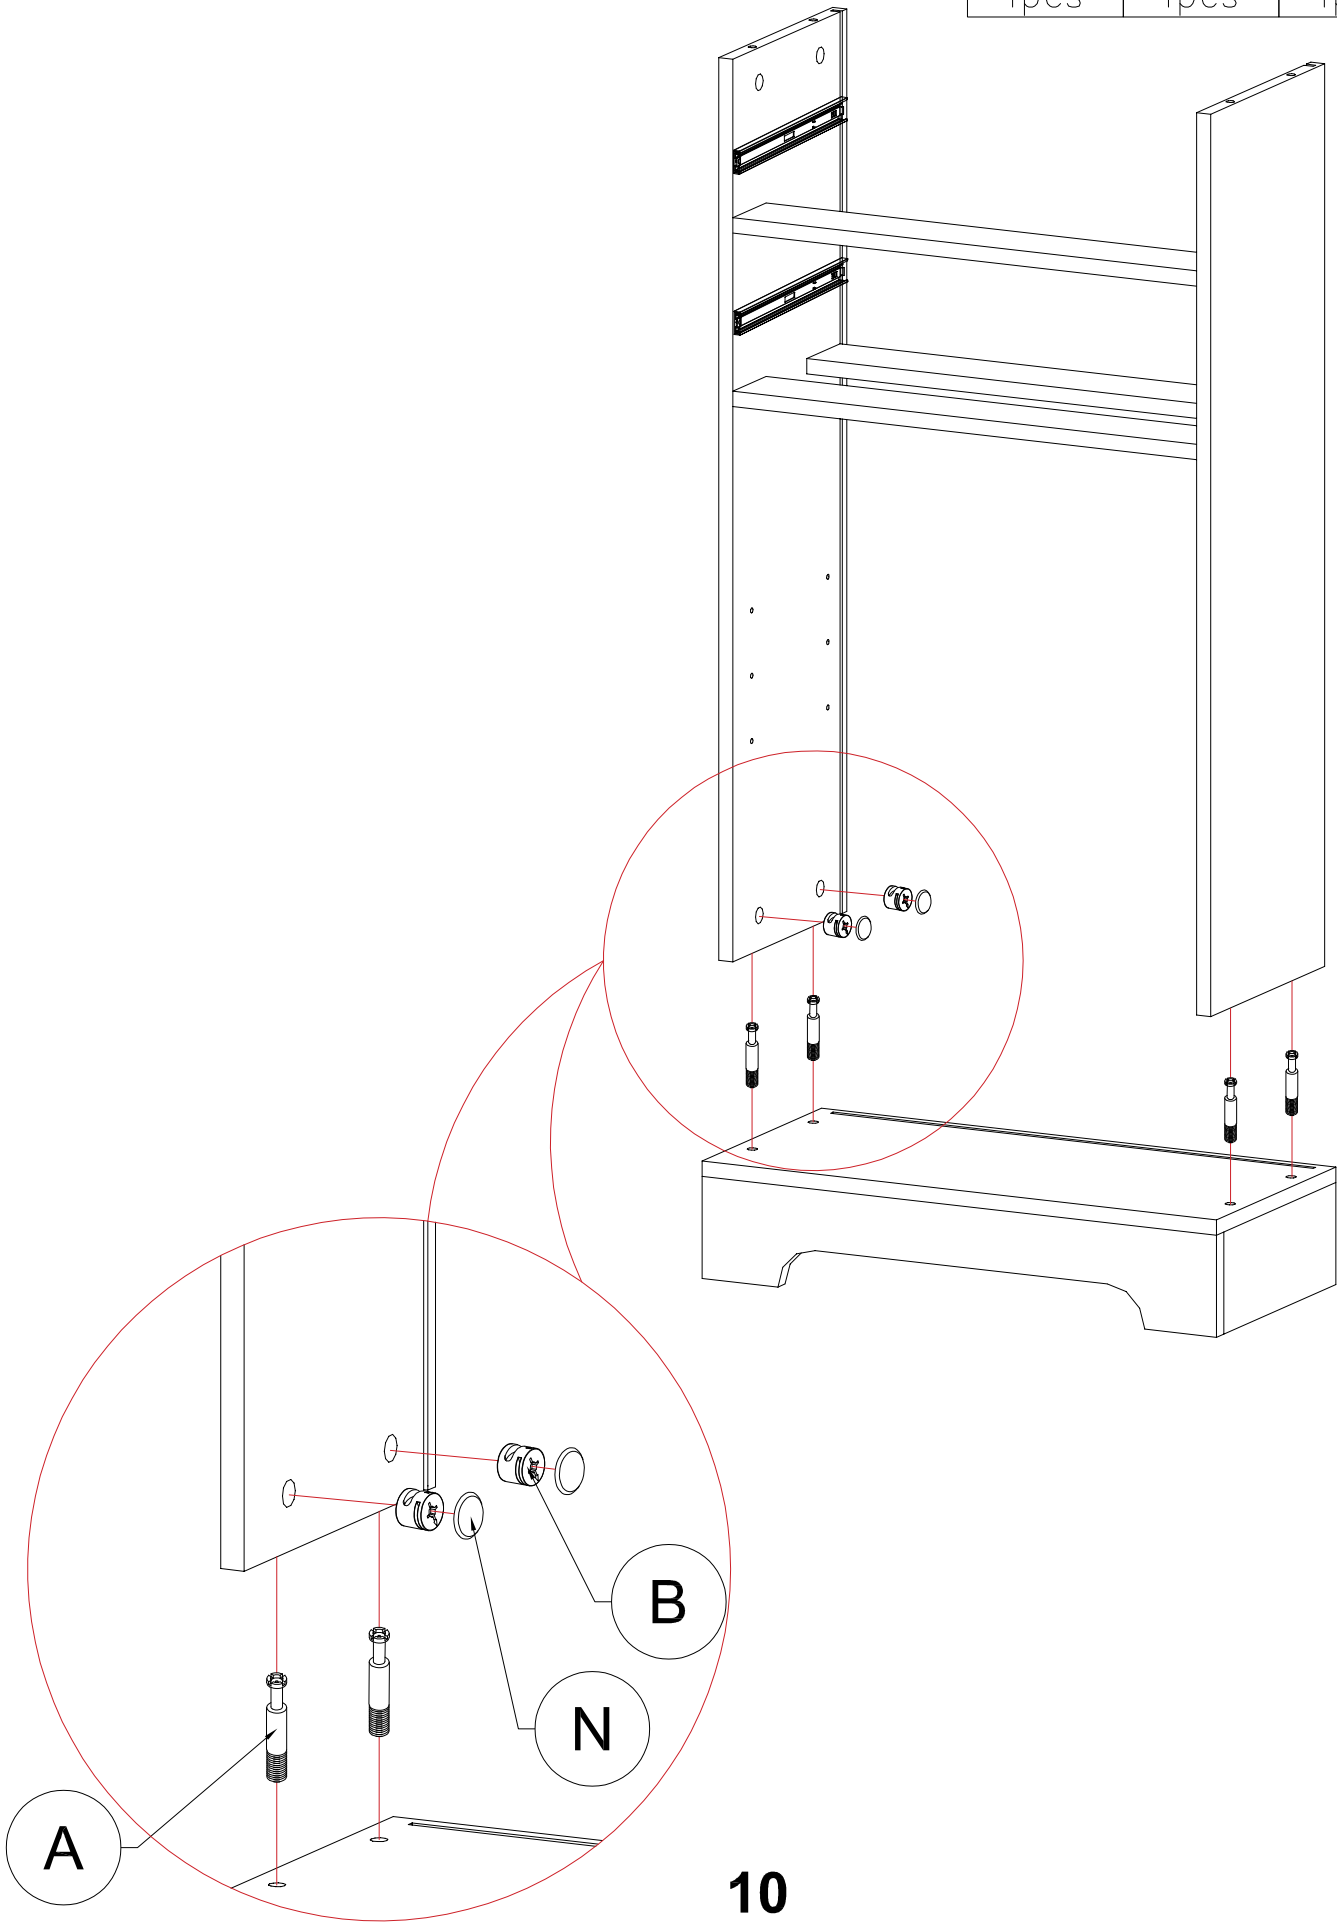
STEP 4: Following below illustration:

N	C	A	B
			
6pcs	6pcs	6pcs	6pcs

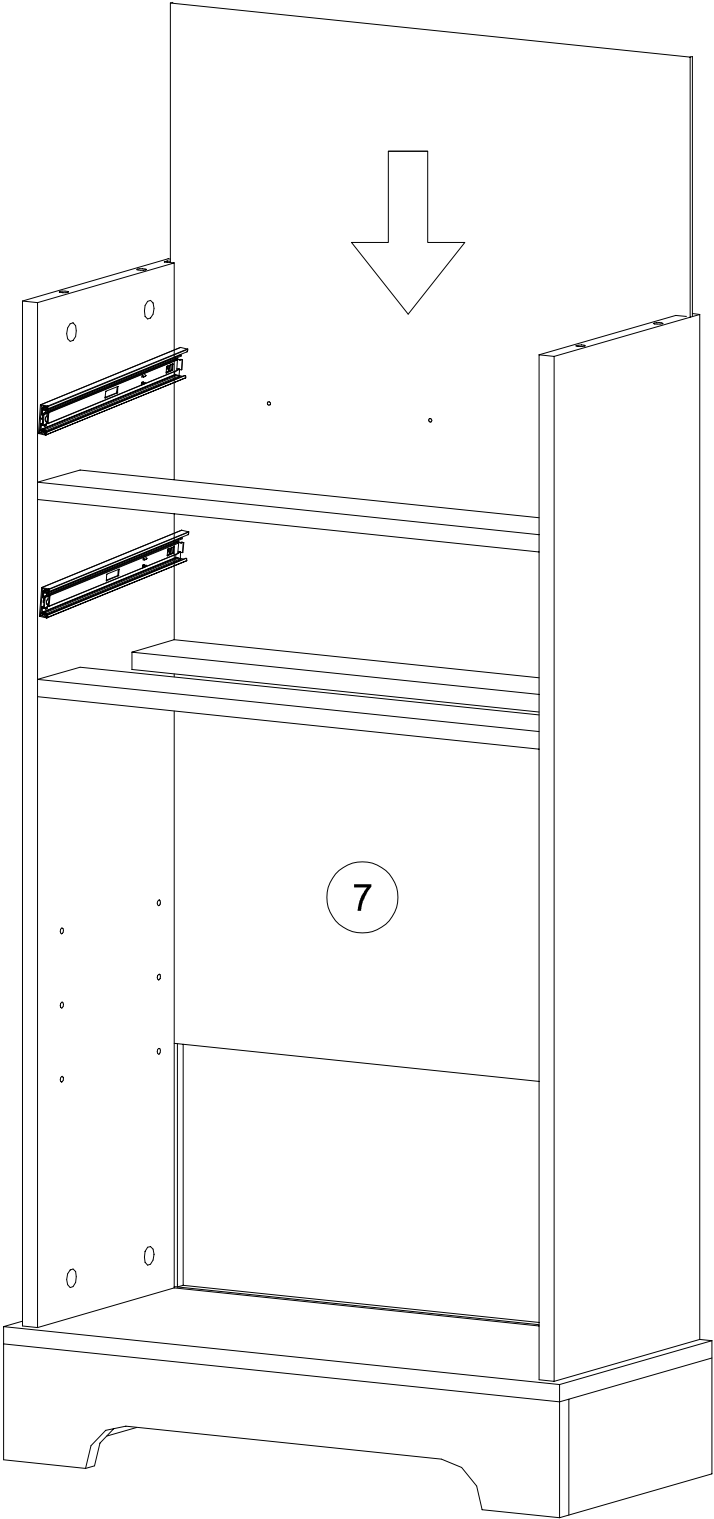


STEP 5: Following below illustration:




N	A	B
		
4pcs	4pcs	4pcs

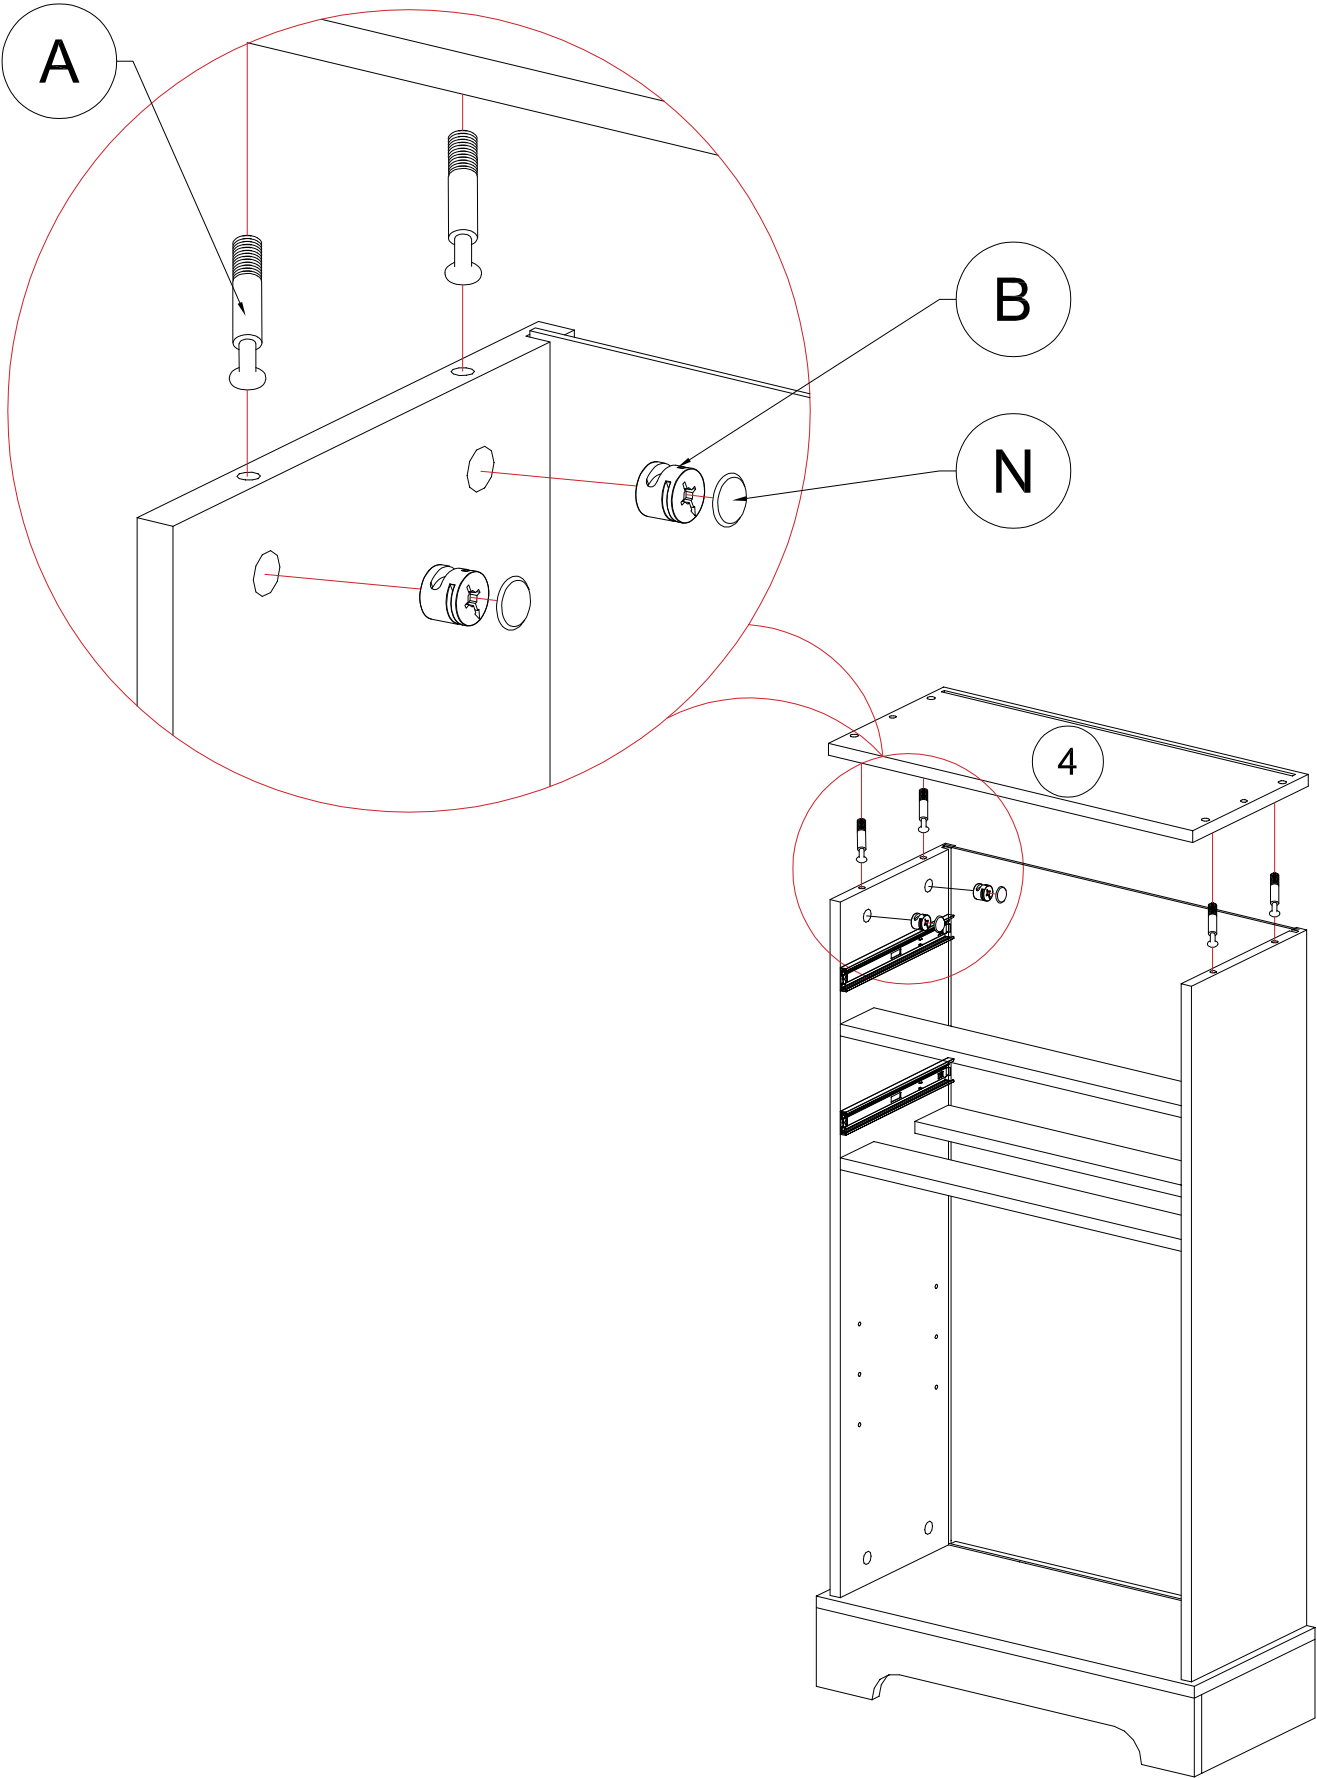


STEP 6: Following below illustration:







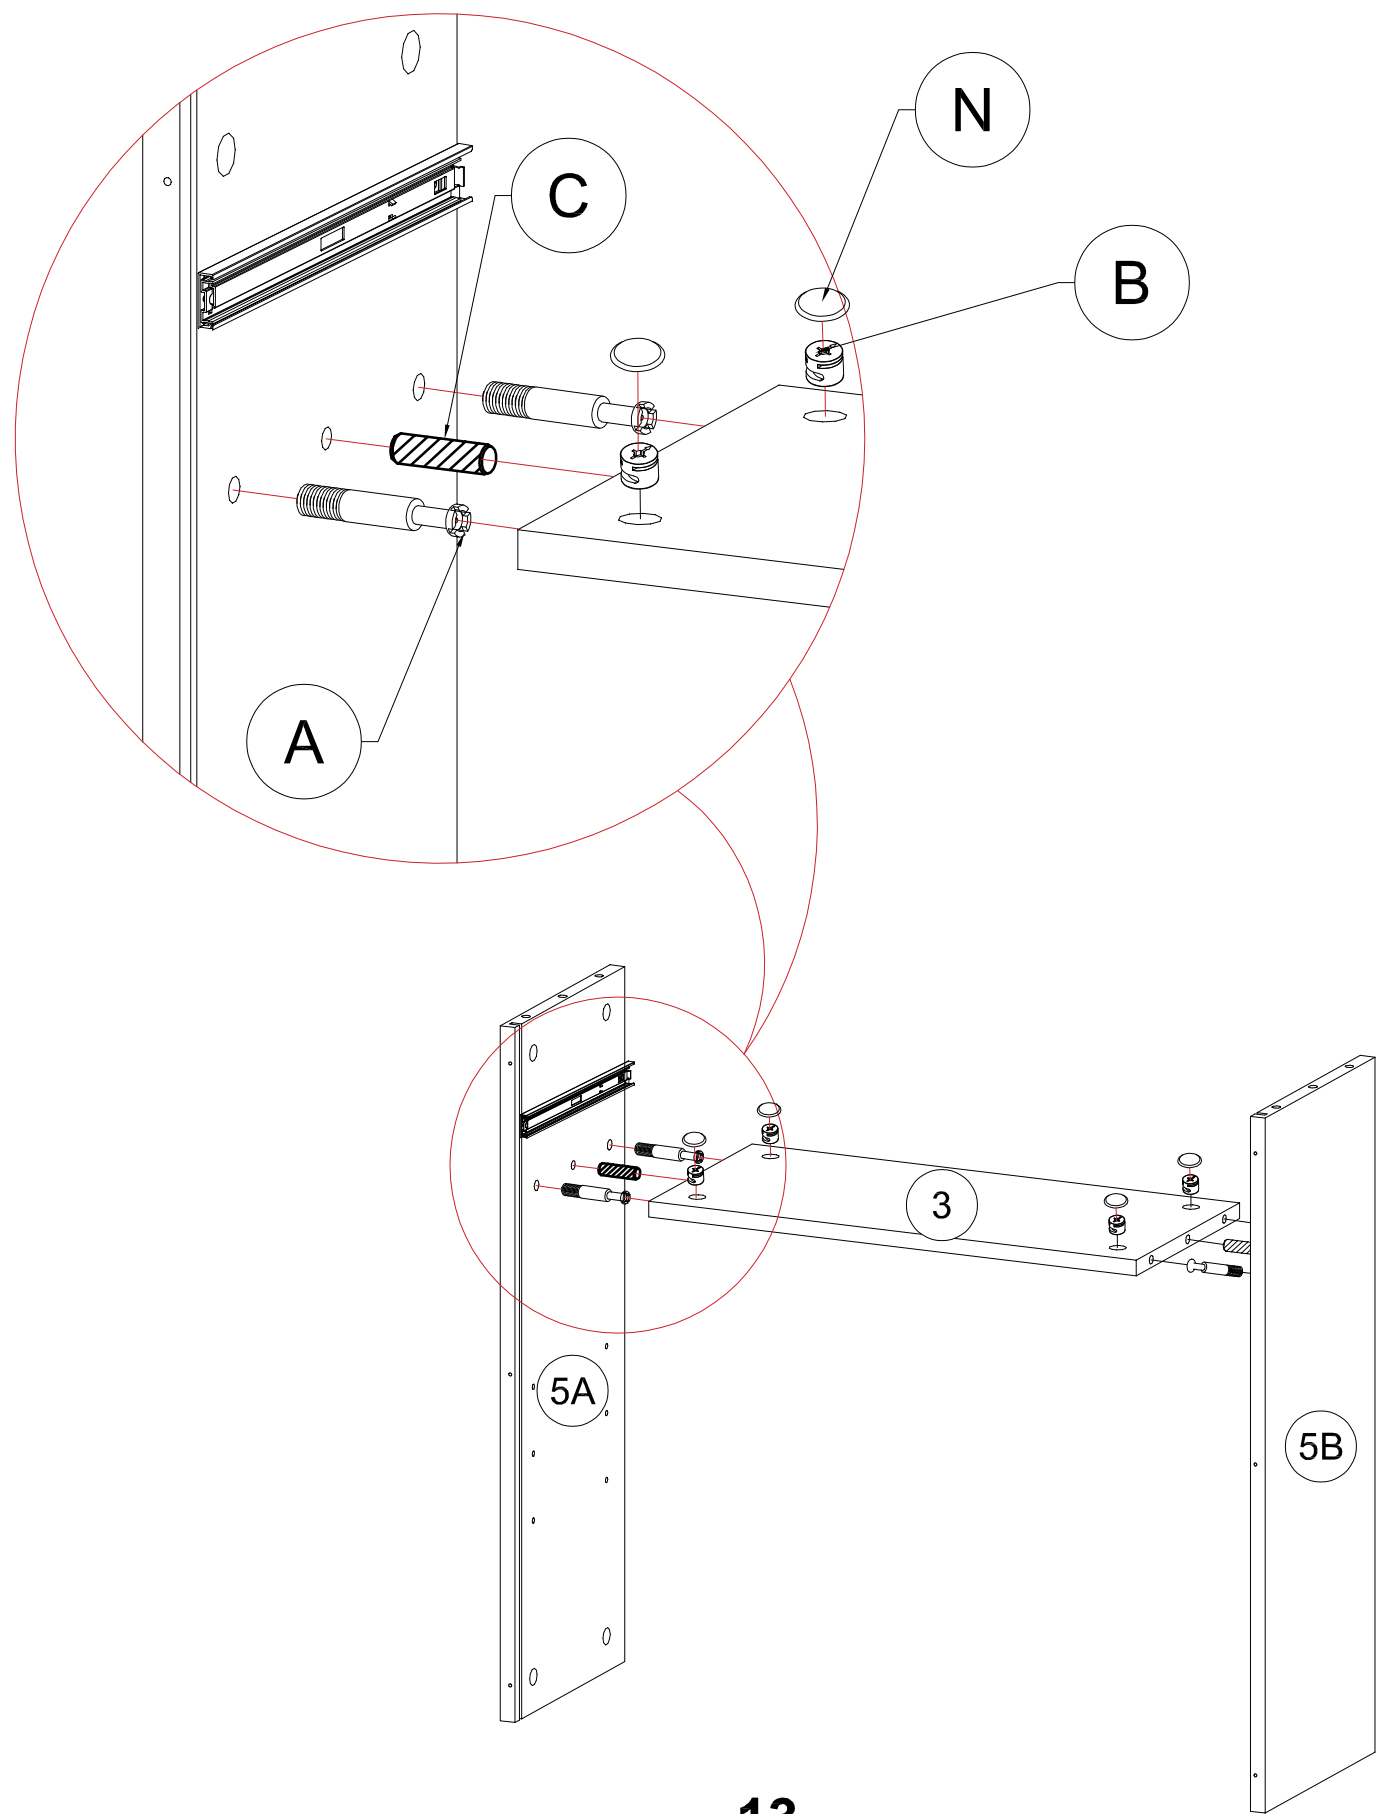
STEP 7: Following below illustration:

N	A	B
		
4pcs	4pcs	4pcs







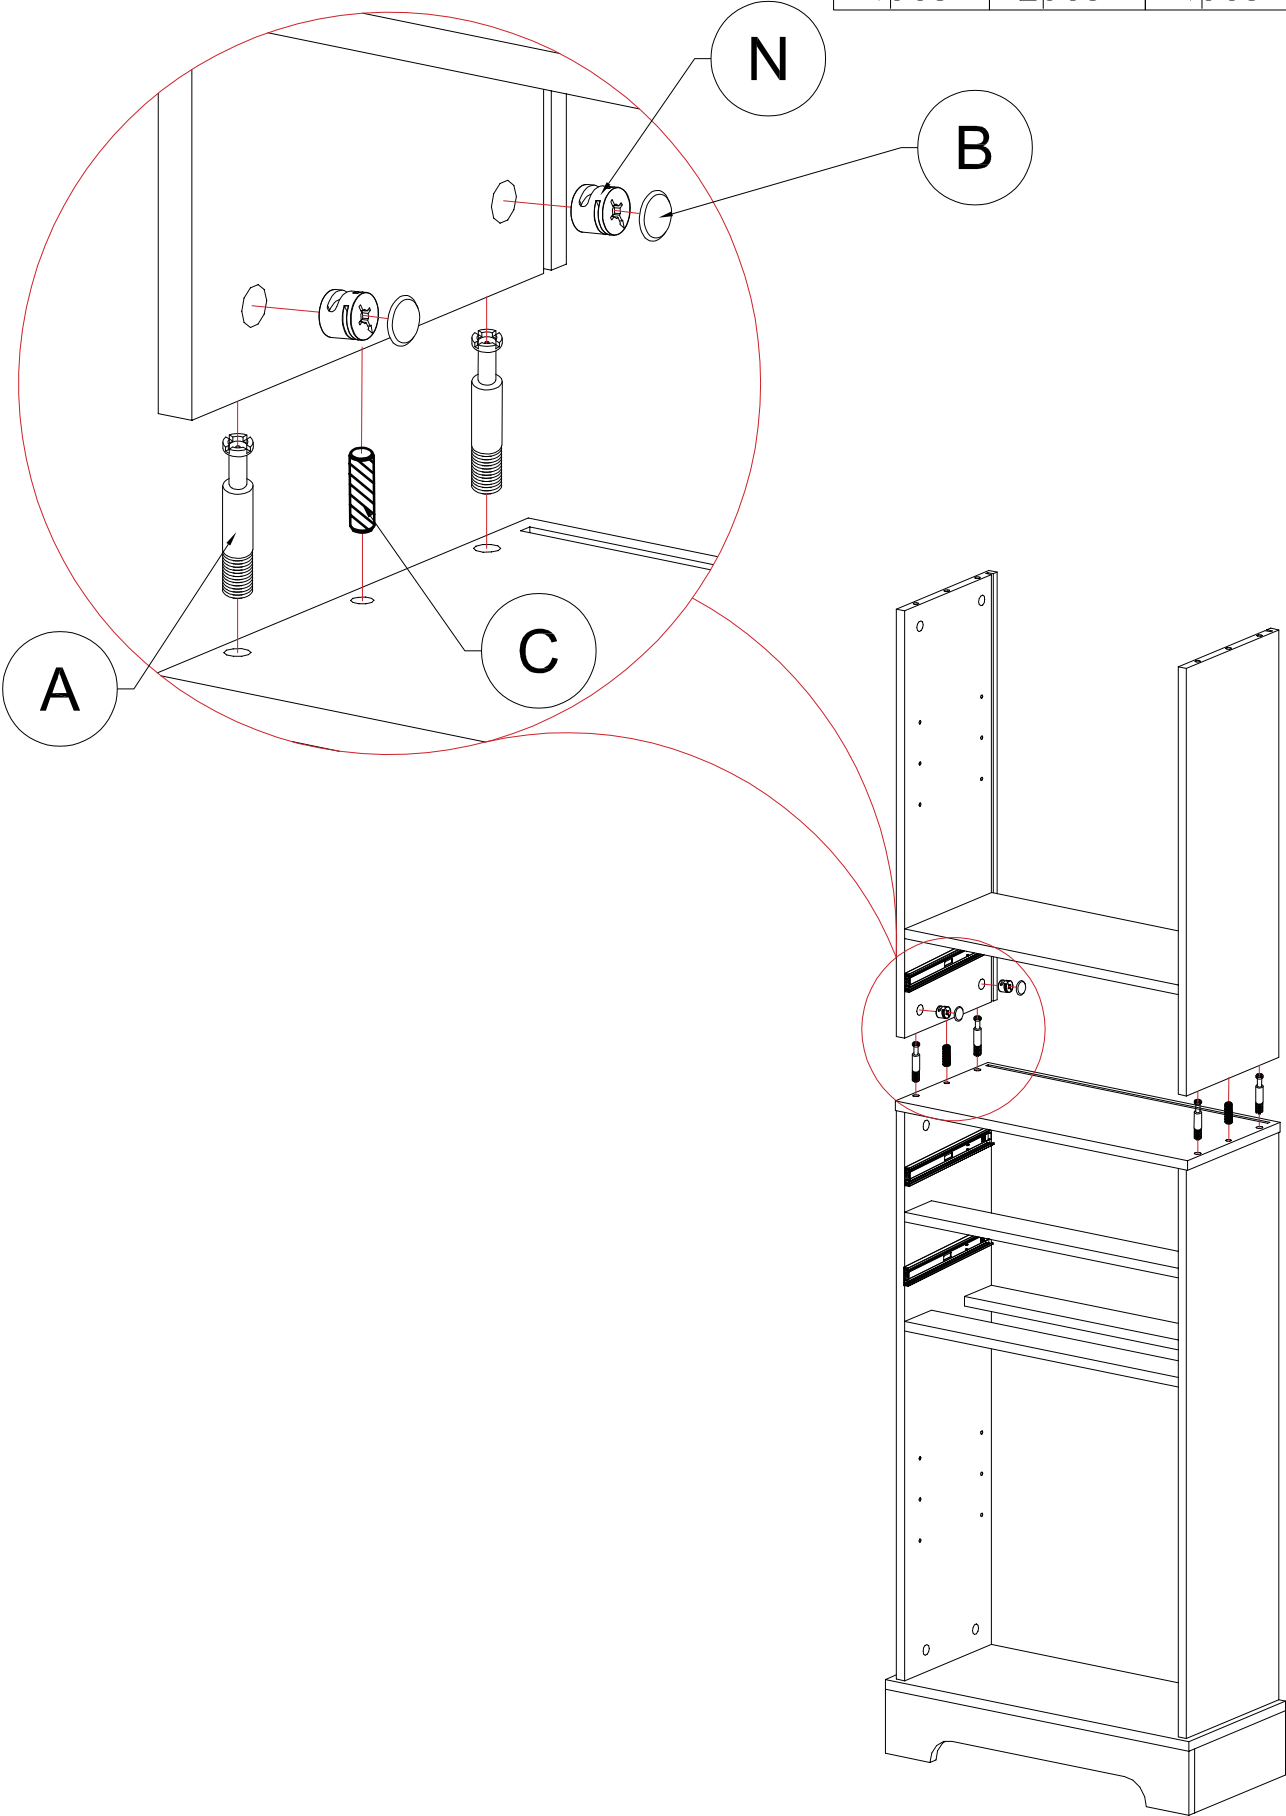
STEP 8: Following below illustration:

N	C	A	B
			
4pcs	2pcs	4pcs	4pcs

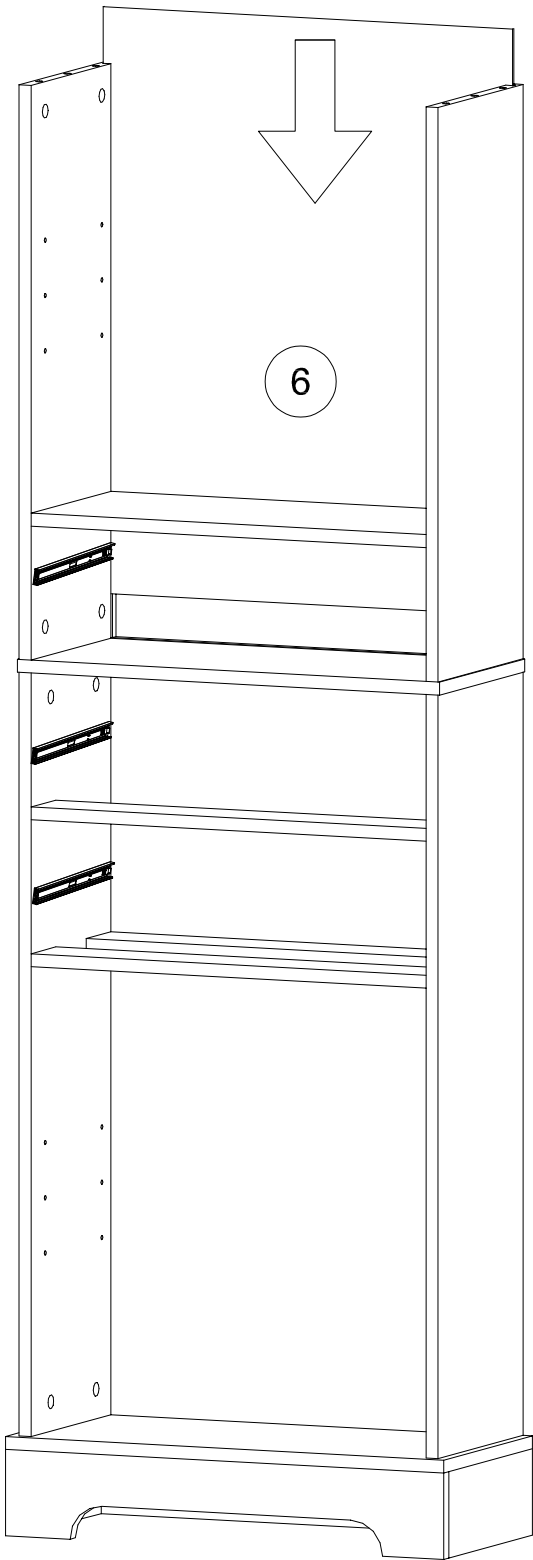


STEP 9: Following below illustration:





N	C	A	B
			
4pcs	2pcs	4pcs	4pcs

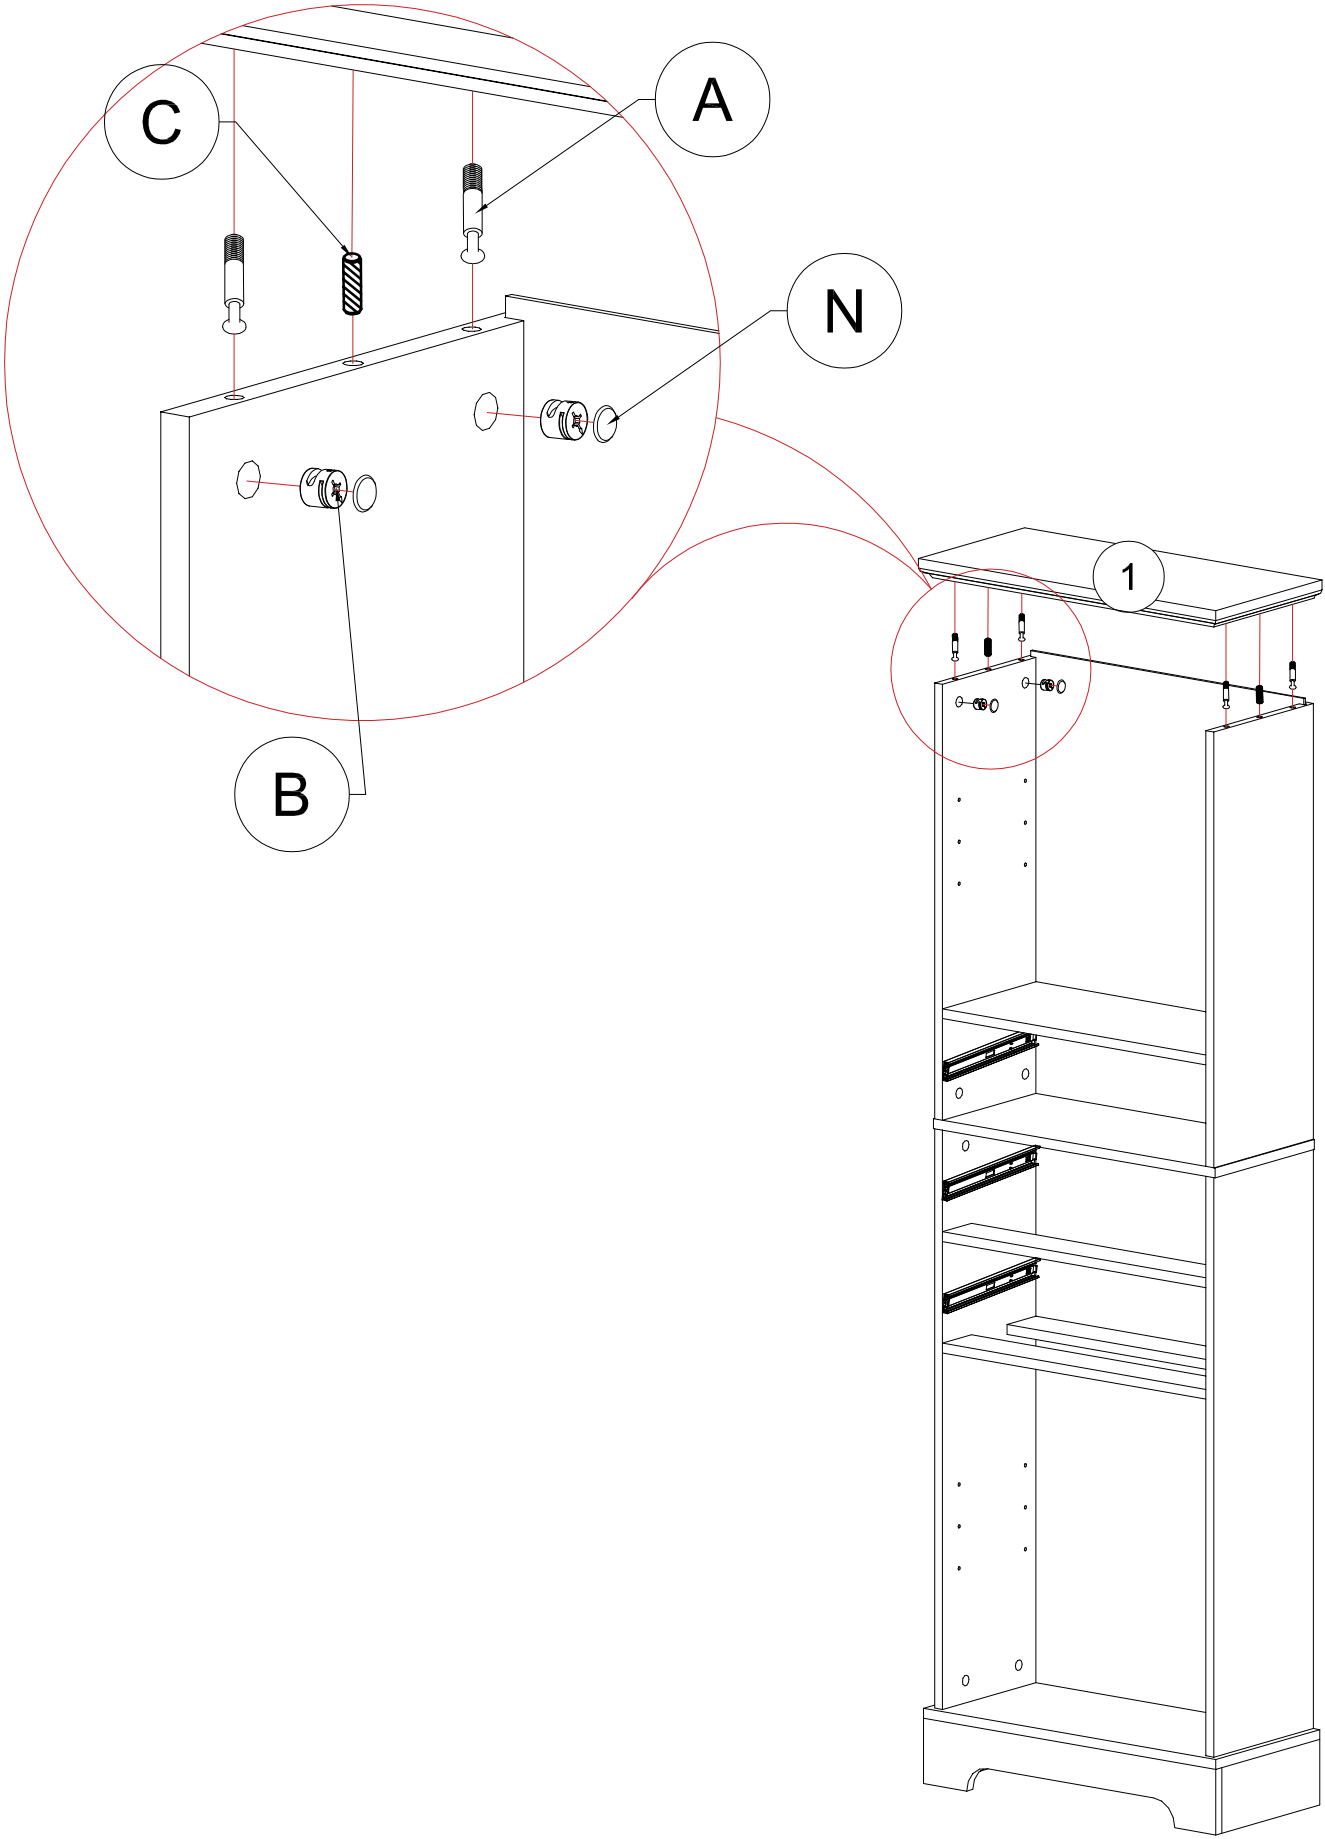


STEP 10: Following below illustration:






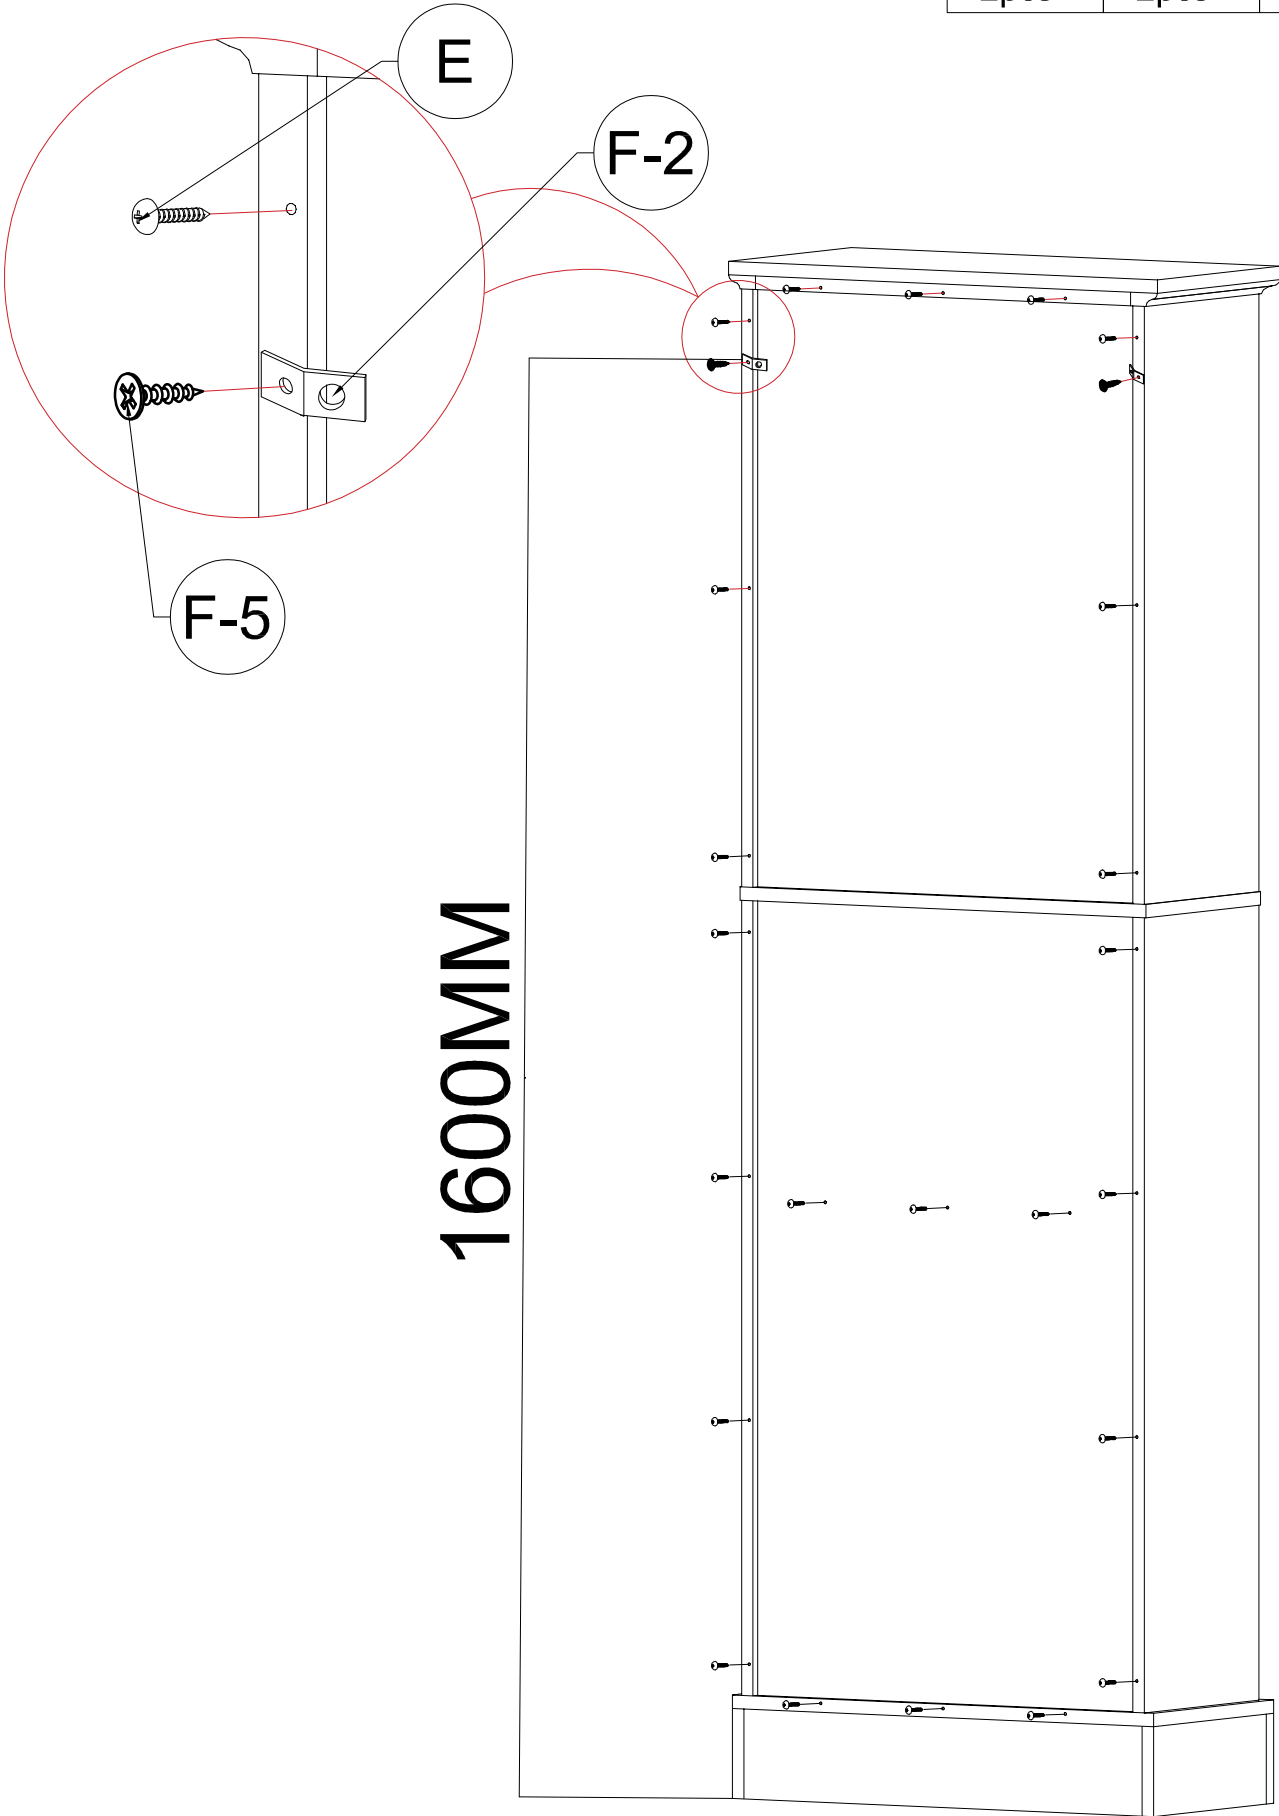
STEP 11: Following below illustration:

N	C	A	B
			
4pcs	2pcs	4pcs	4pcs



STEP 12: Following below illustration:


F-2	F-5	E
		
2pcs	2pcs	23pcs



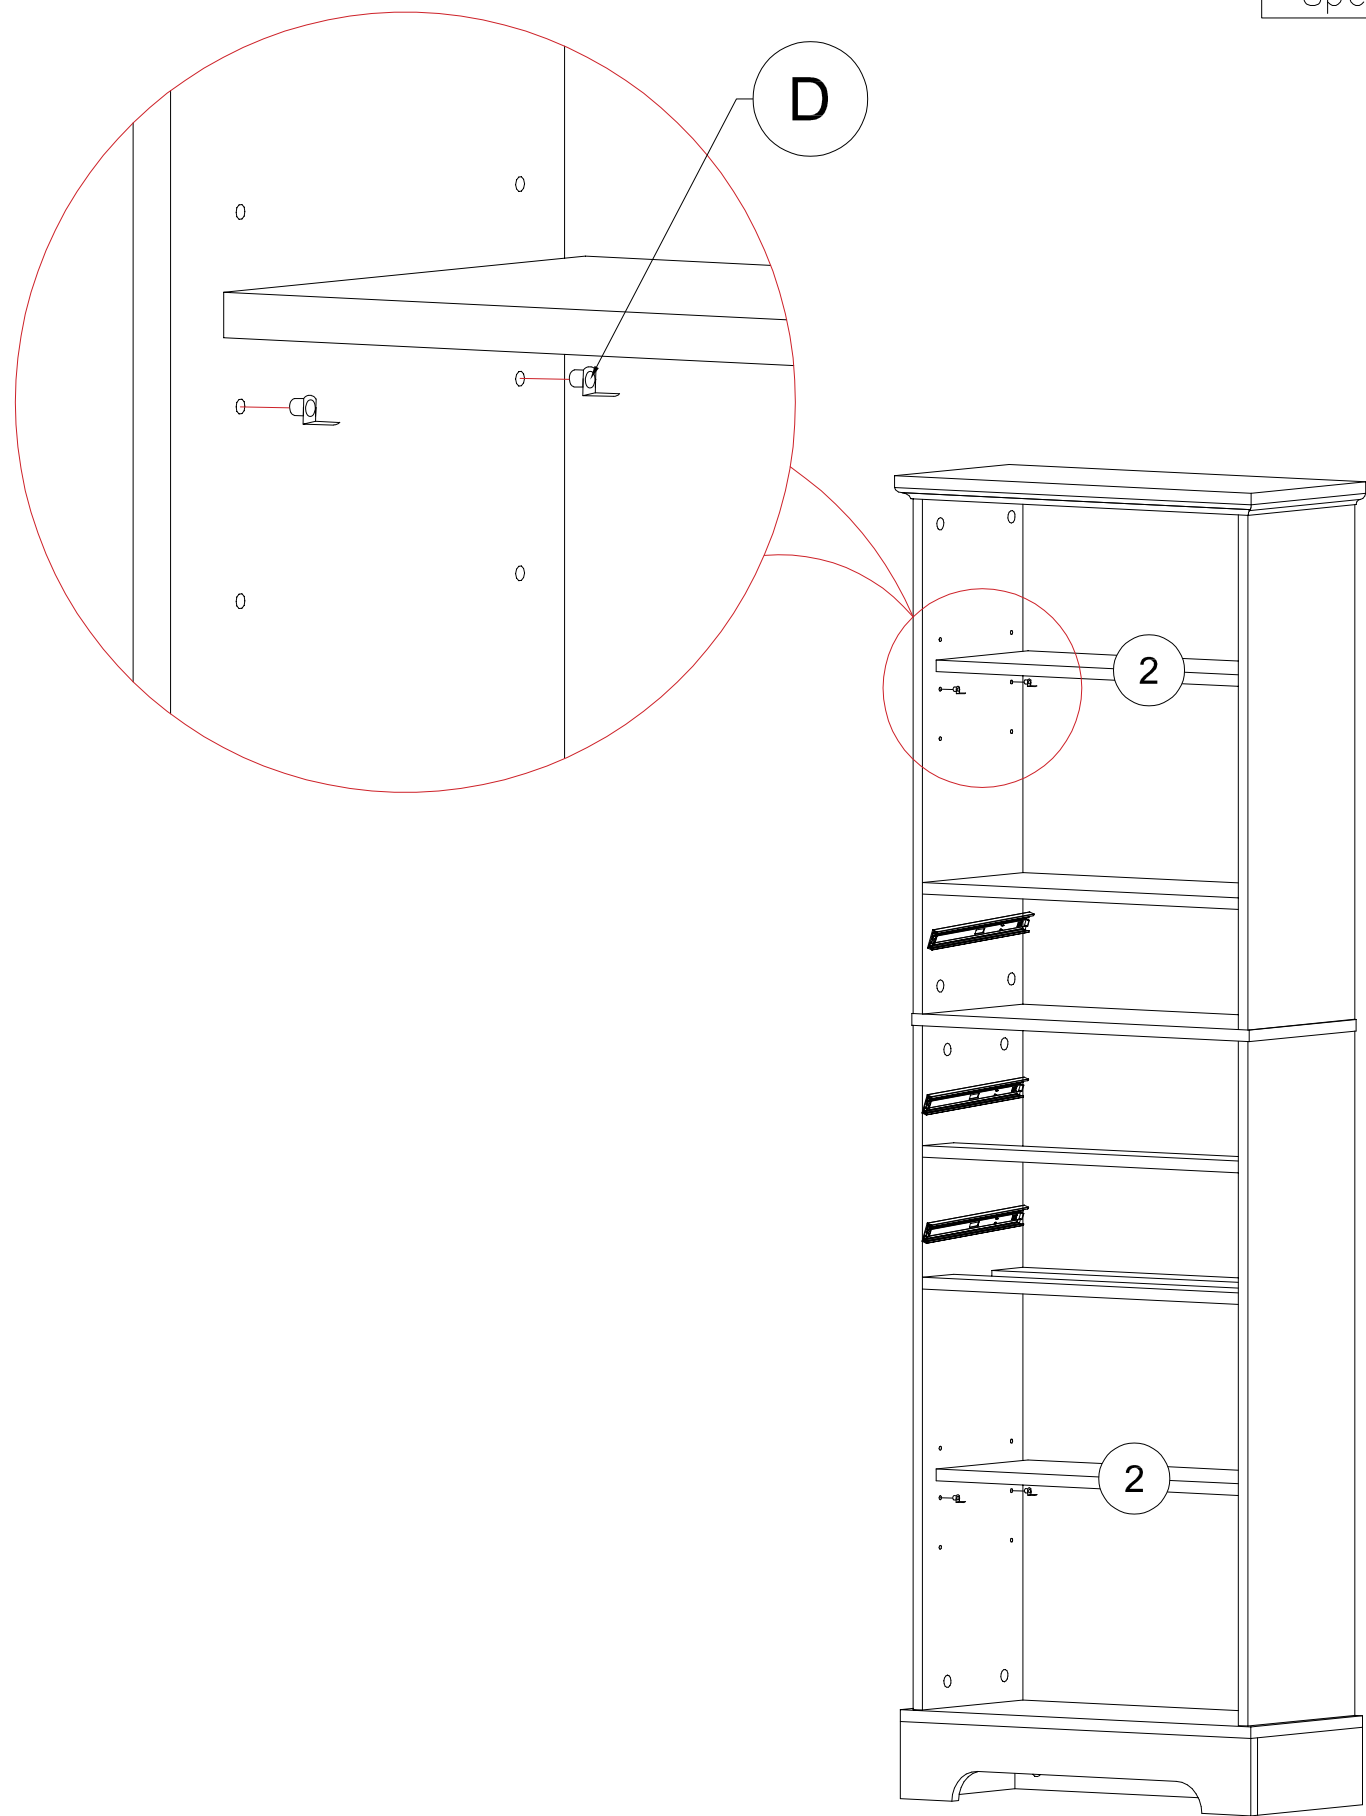
1600MM

STEP 13: Following below illustration:




D

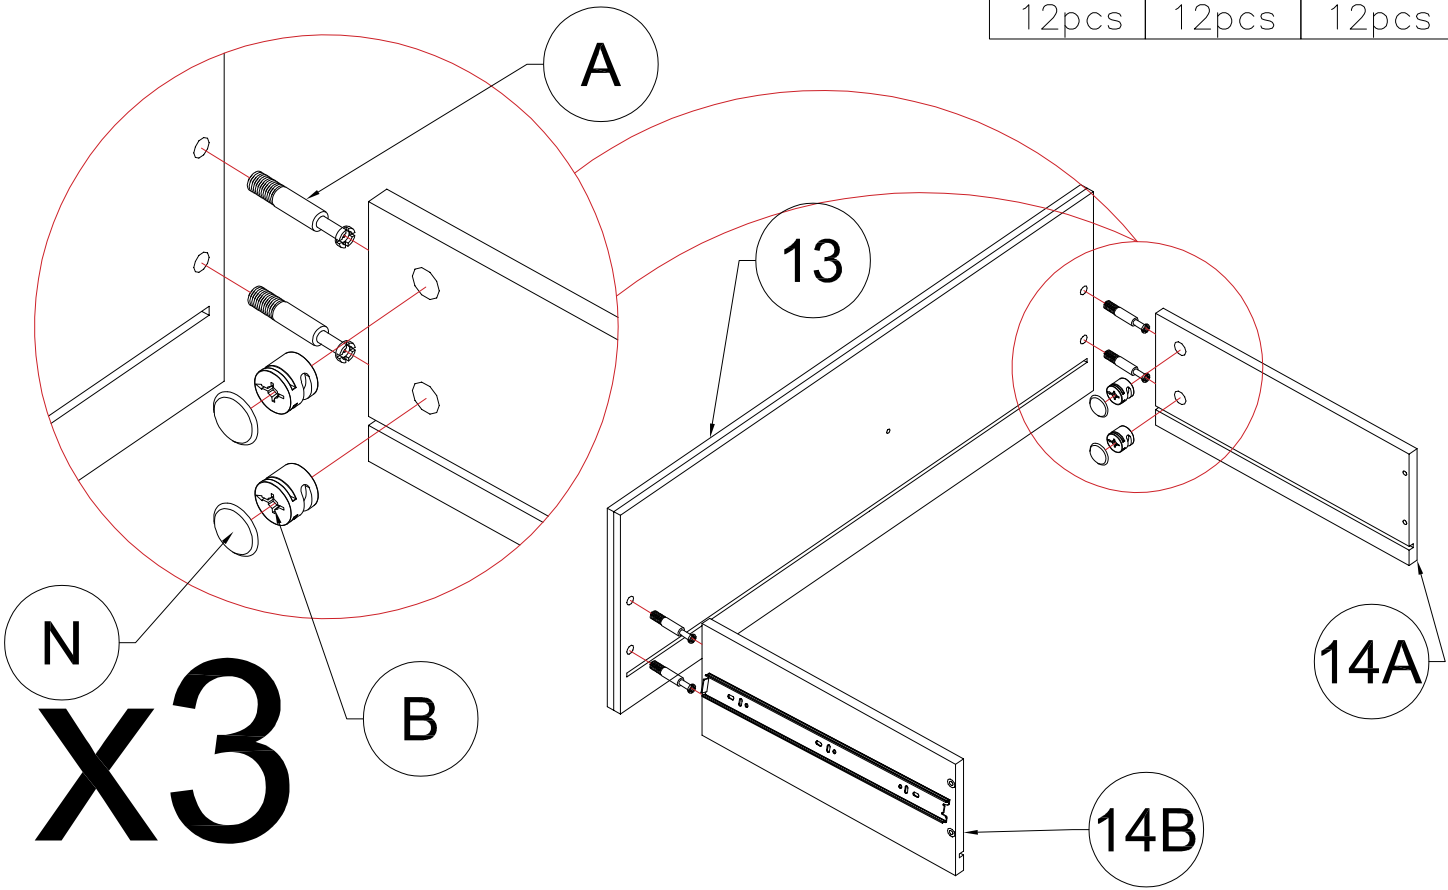


8pcs

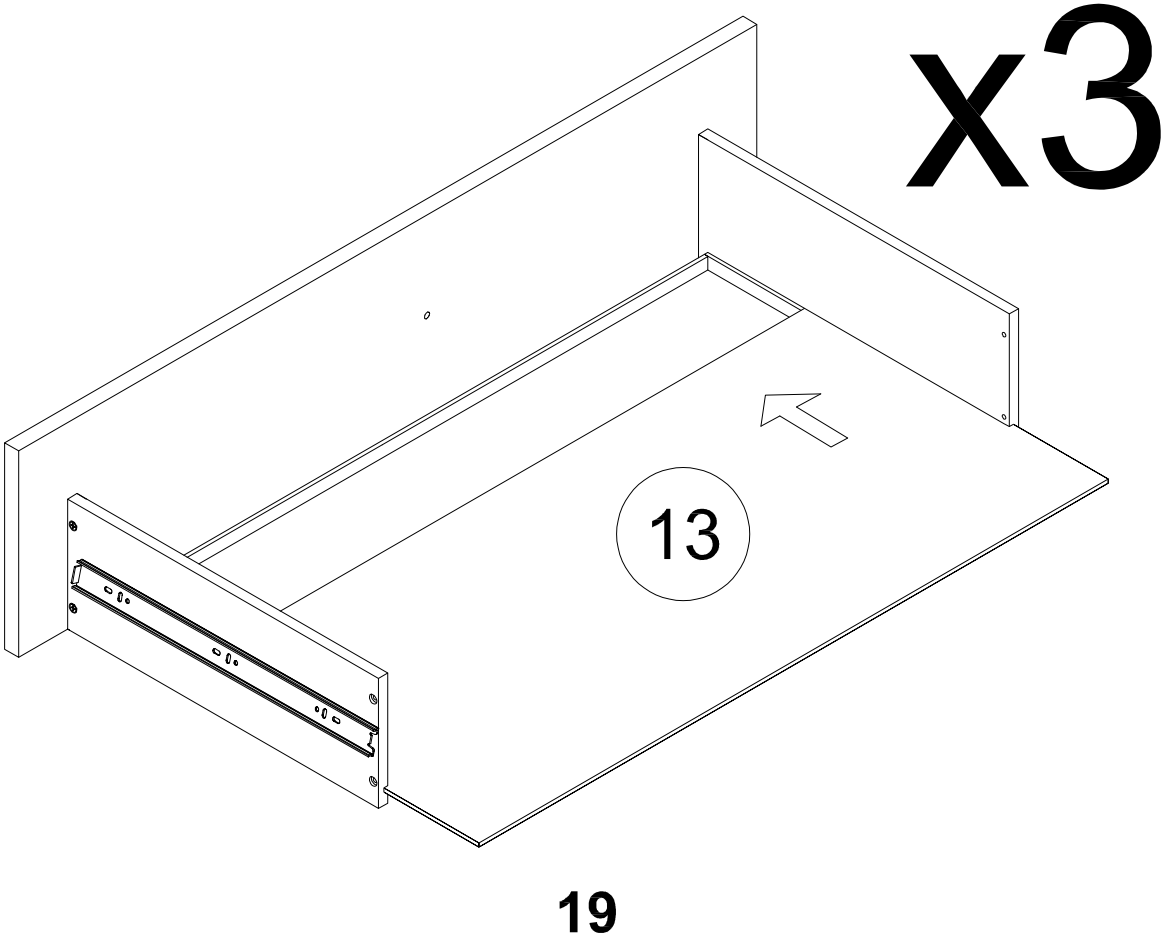


STEP 14.1: Following below illustration:




N	A	B
		
12pcs	12pcs	12pcs

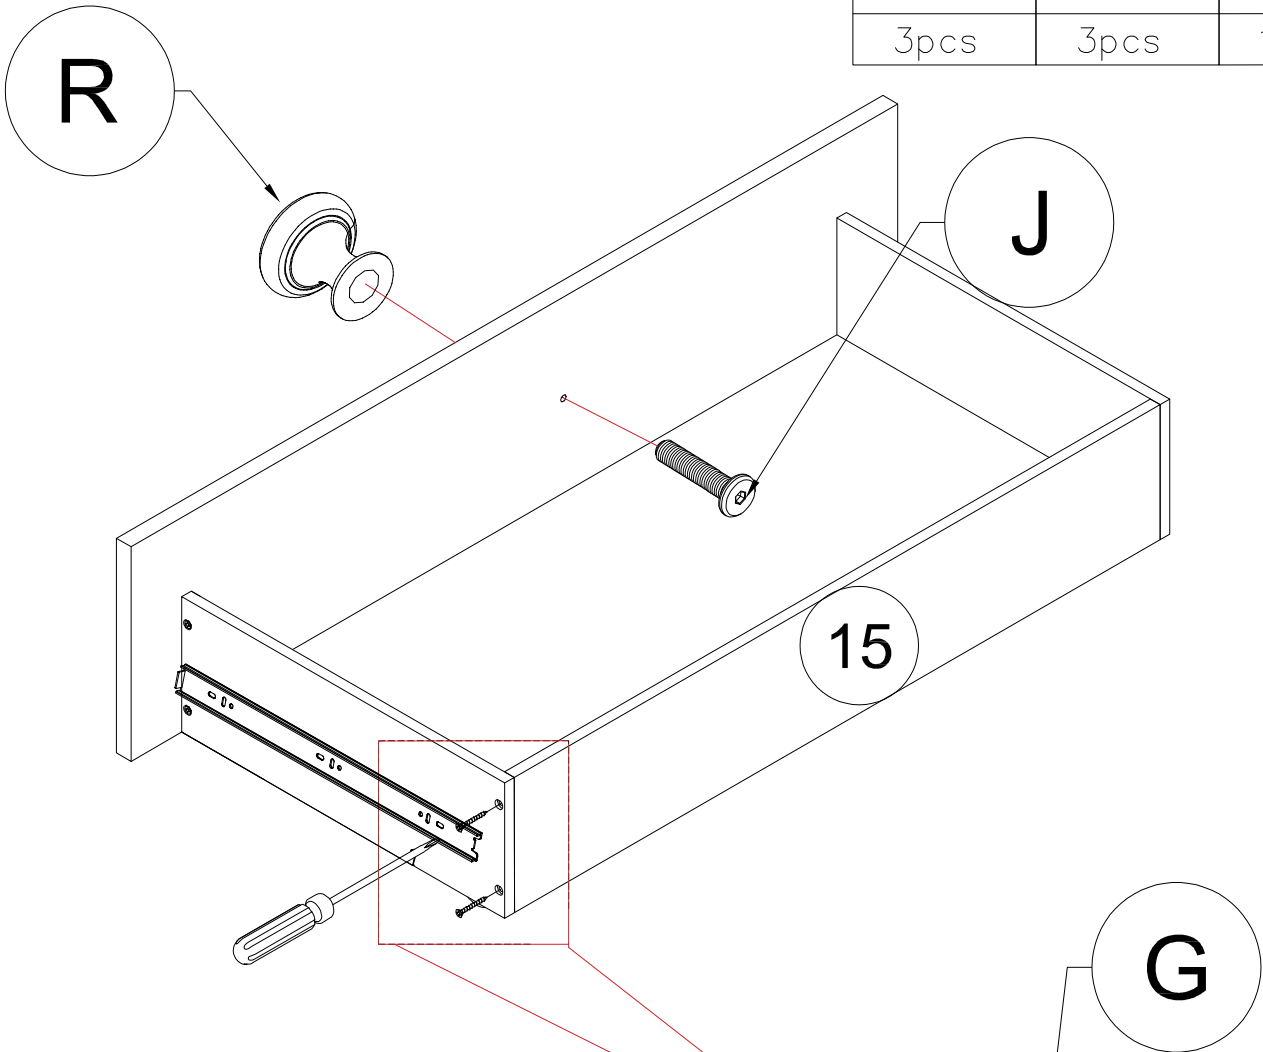


STEP 14.1: Following below illustration:

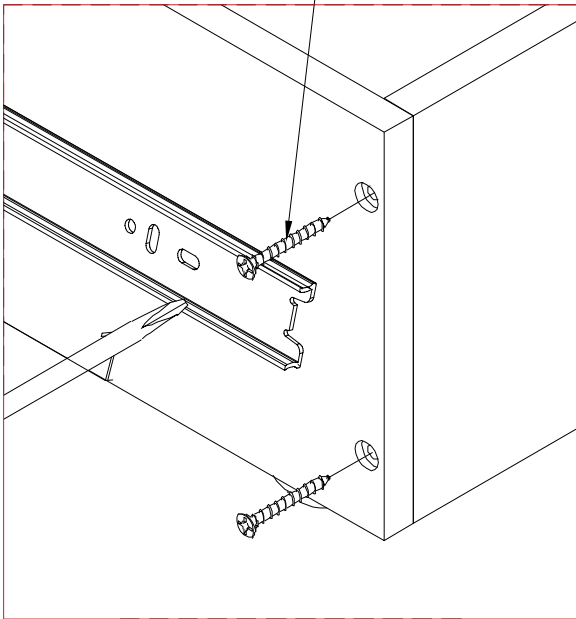


STEP 15: Following below illustration:

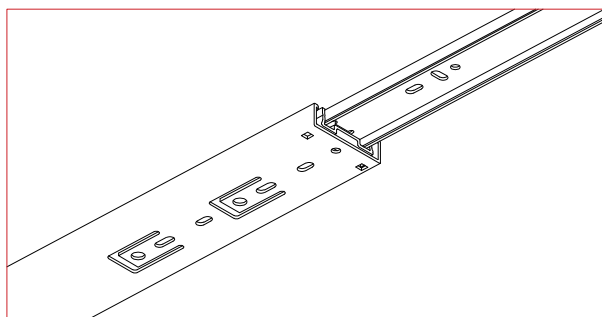
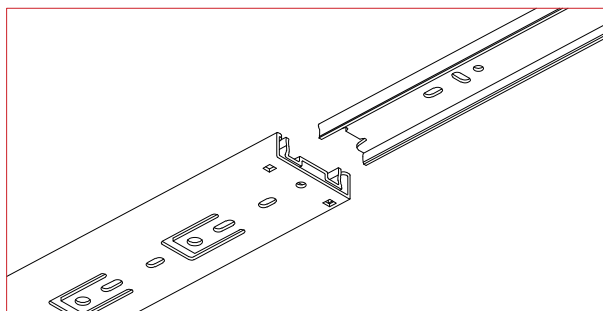
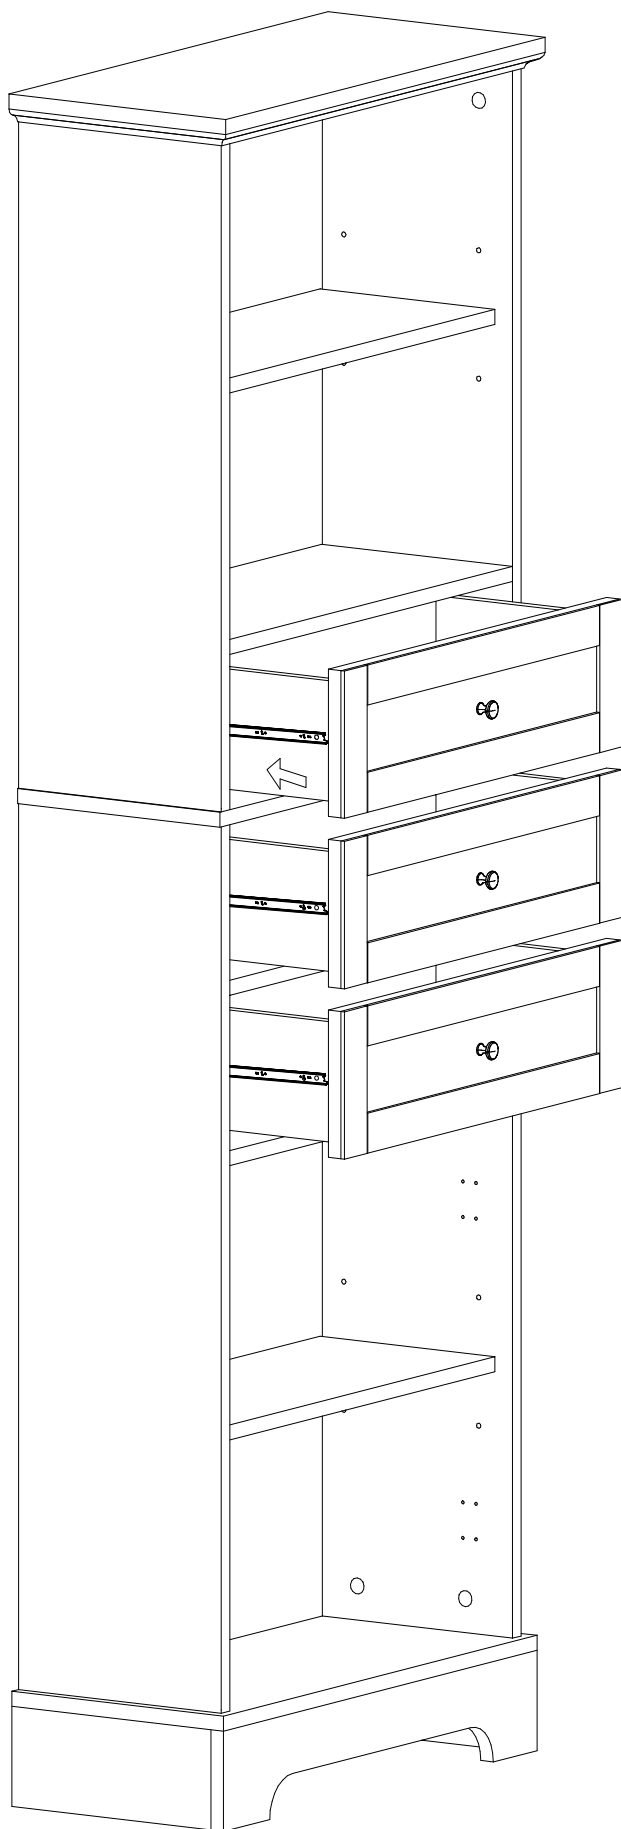
R	J	G
		
3pcs	3pcs	12pcs





x3

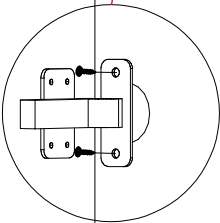
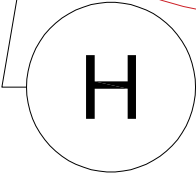
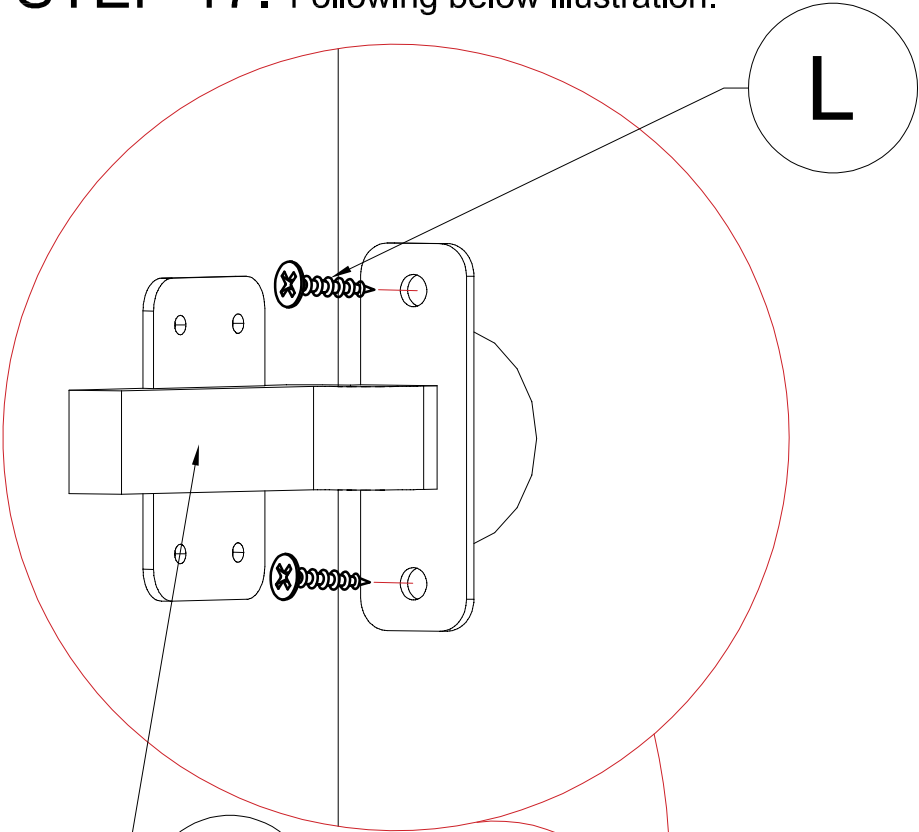


STEP 16: Following below illustration:




STEP 17: Following below illustration:




H	L
	
2pcs	4pcs

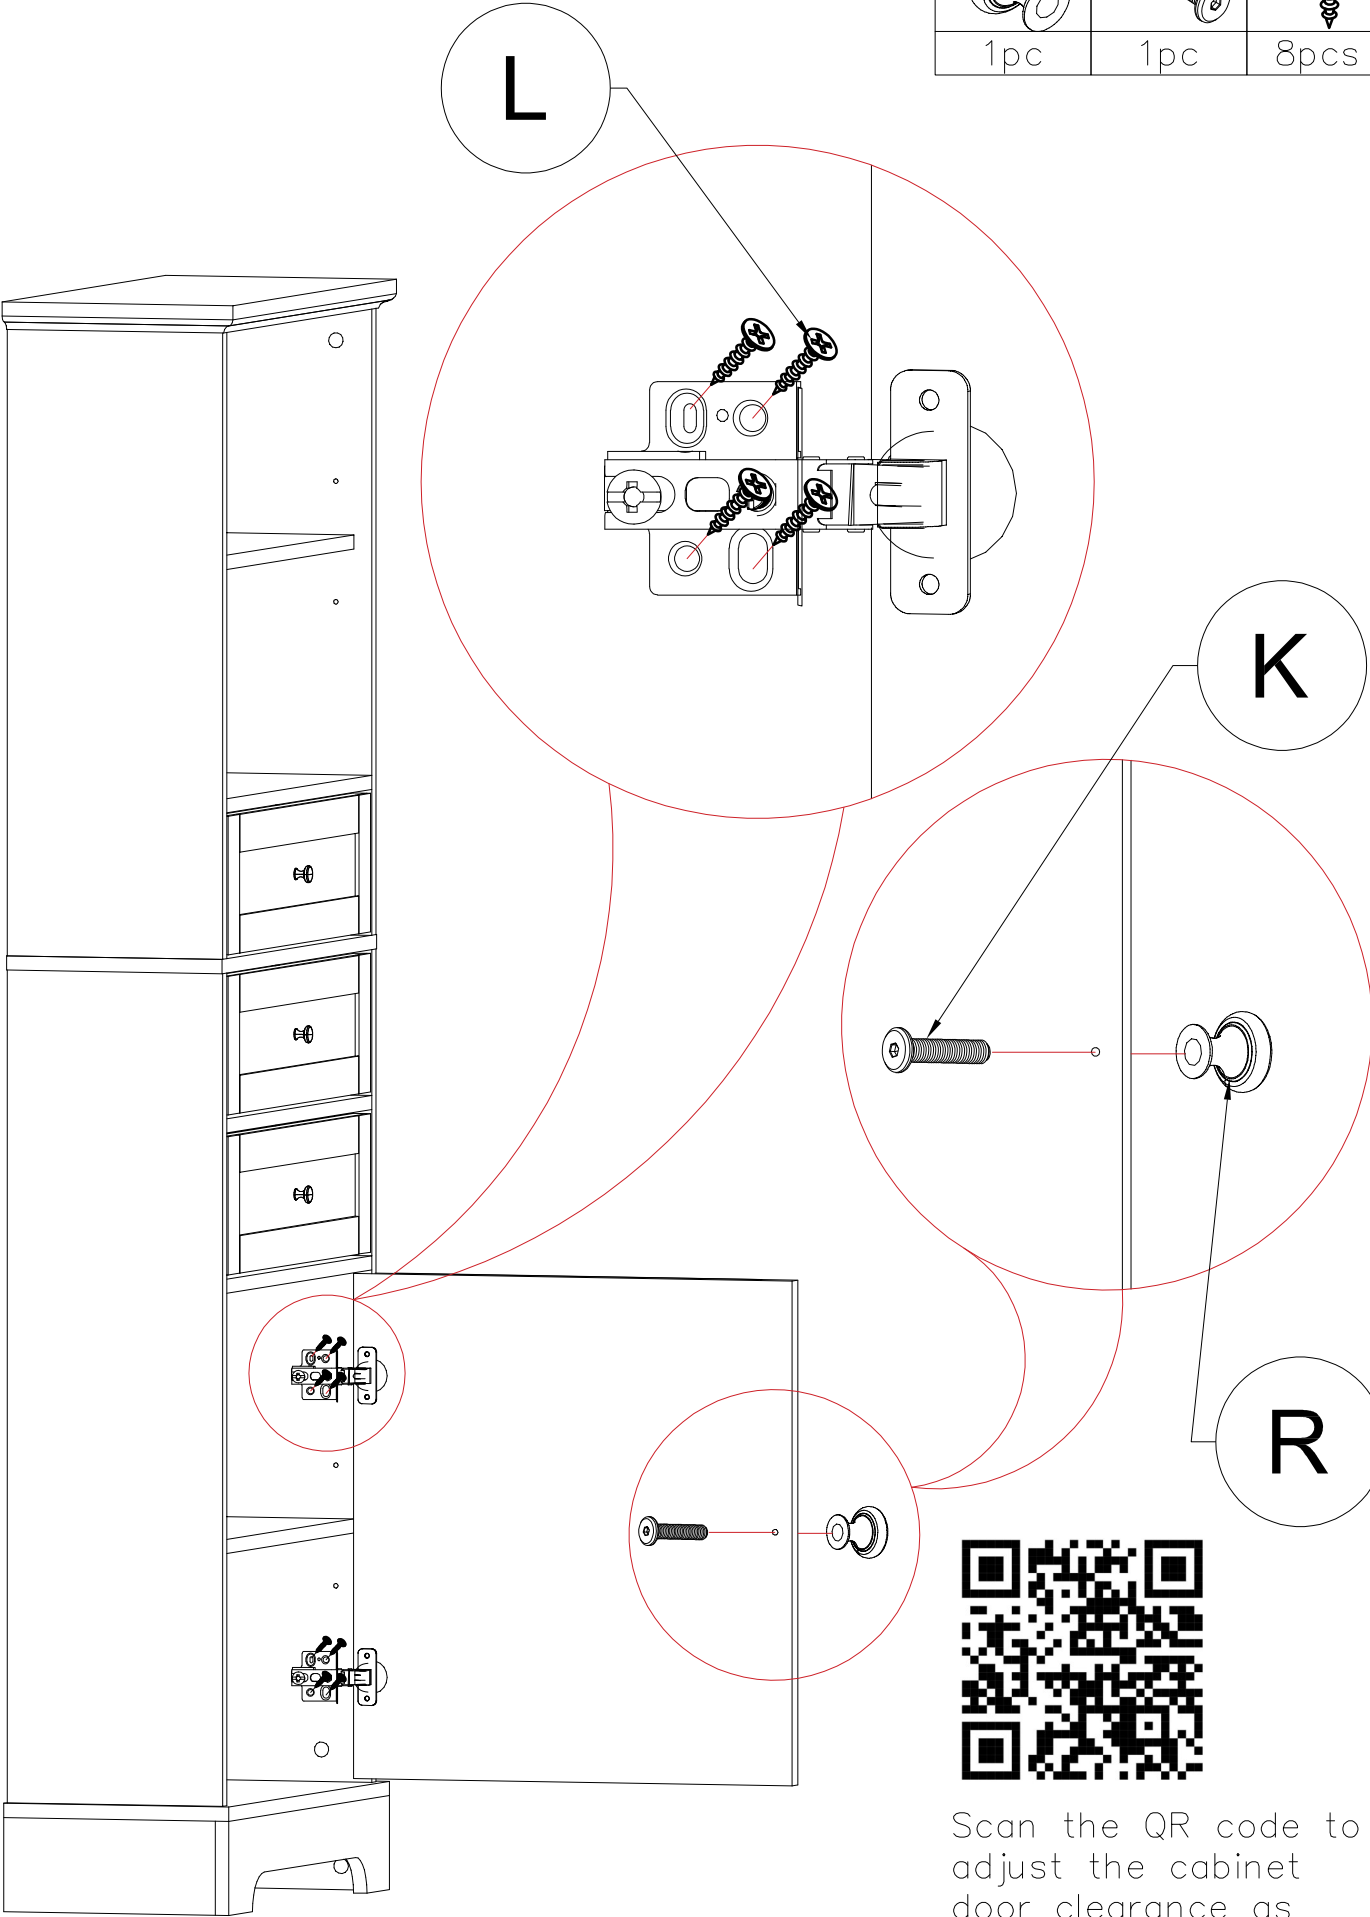


18






STEP 18: Following below illustration:

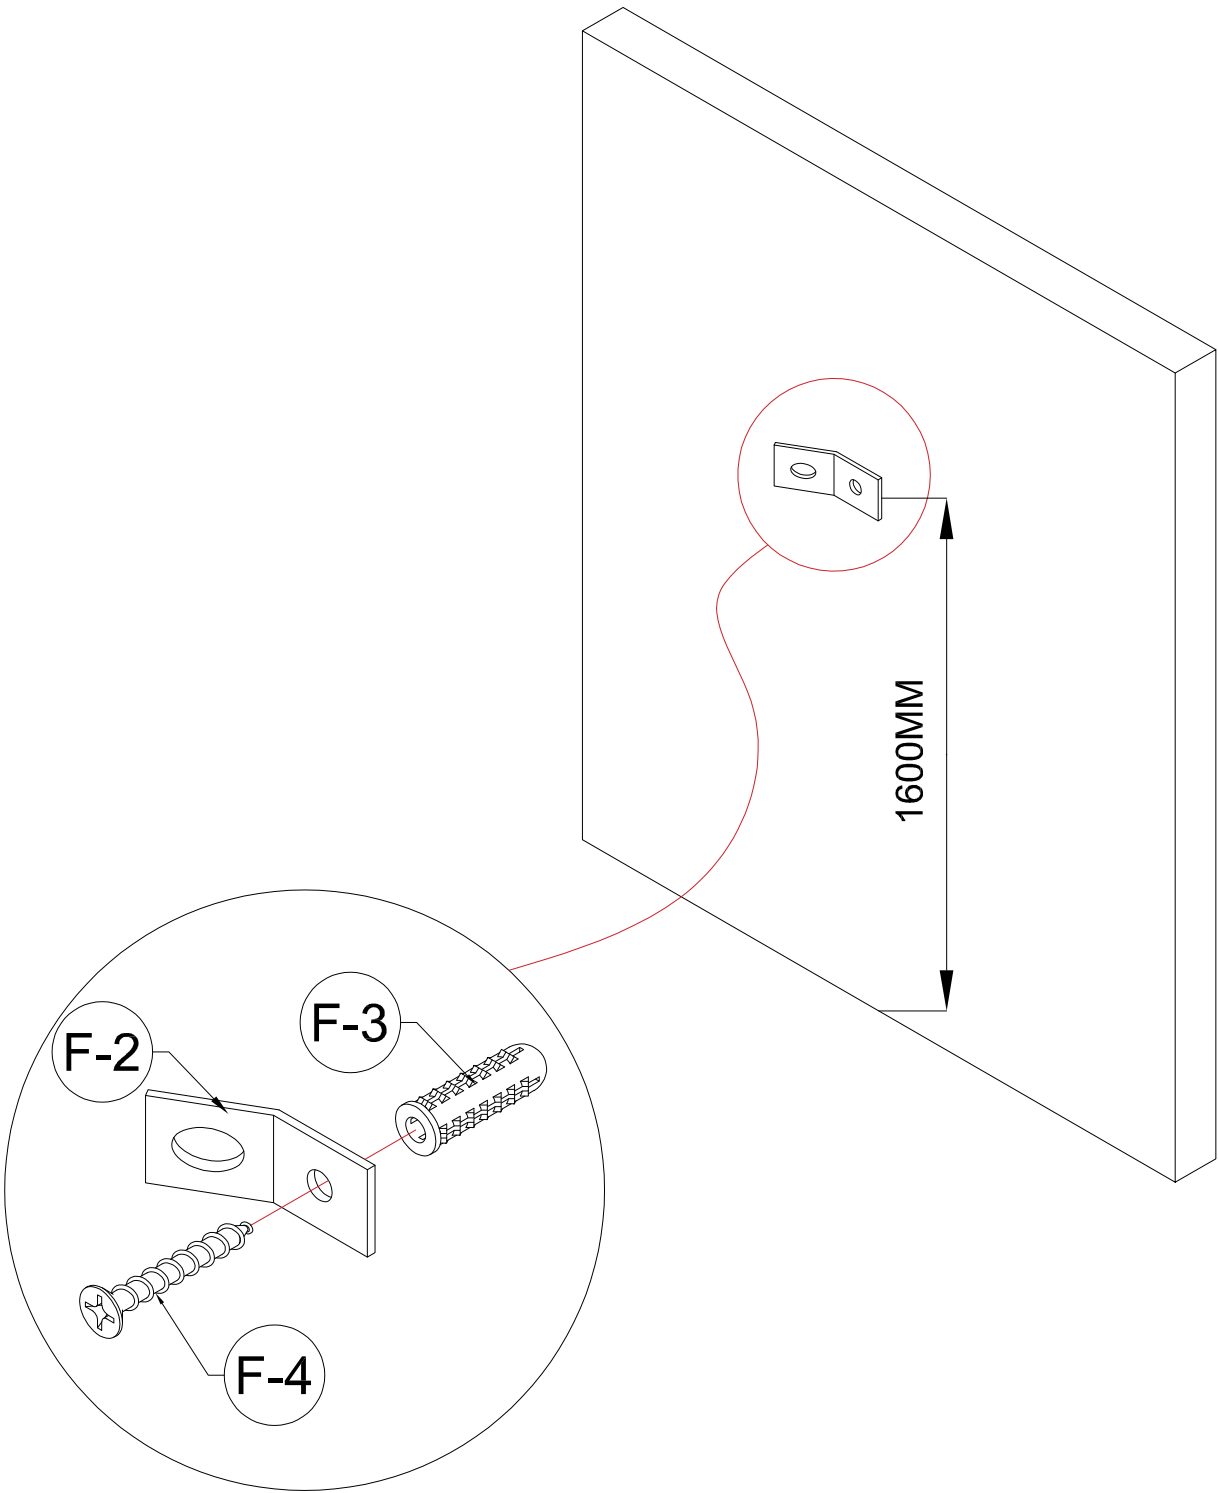
R	K	L
		
1pc	1pc	8pcs



Scan the QR code to
adjust the cabinet
door clearance as
desired.

STEP 19: Following below illustration:

F-2	F-4	F-3
		
2pcs	2pcs	2pcs

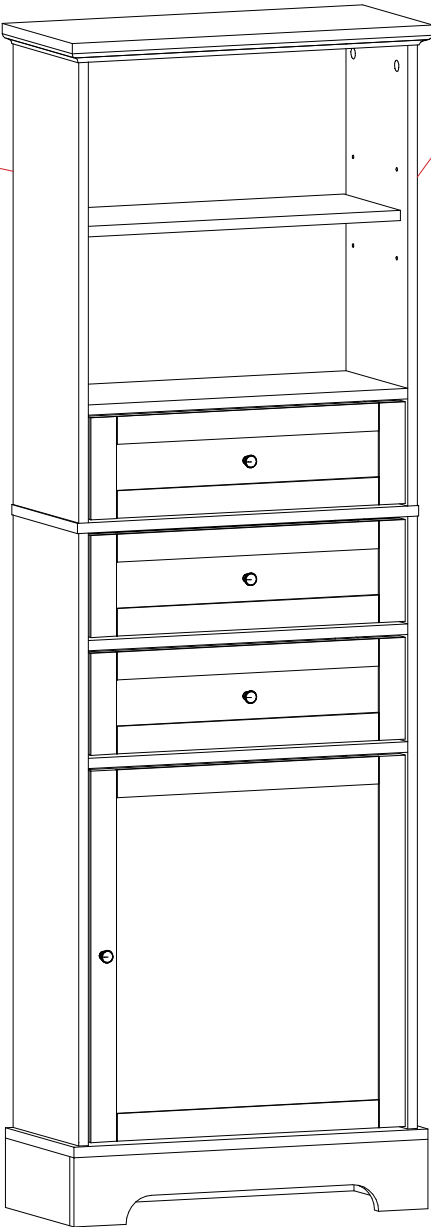
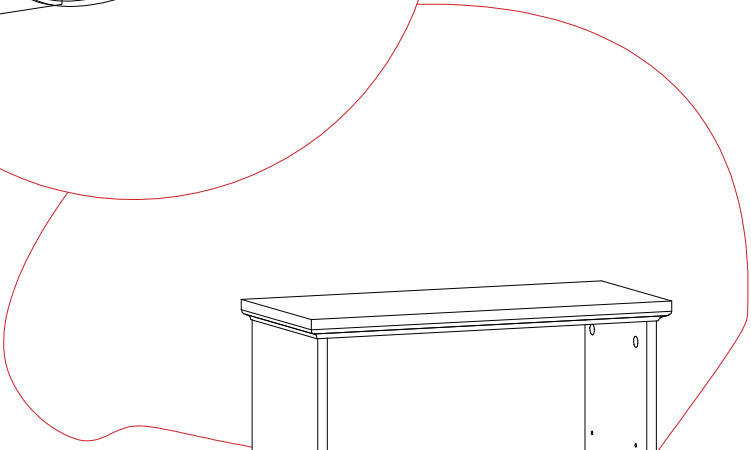
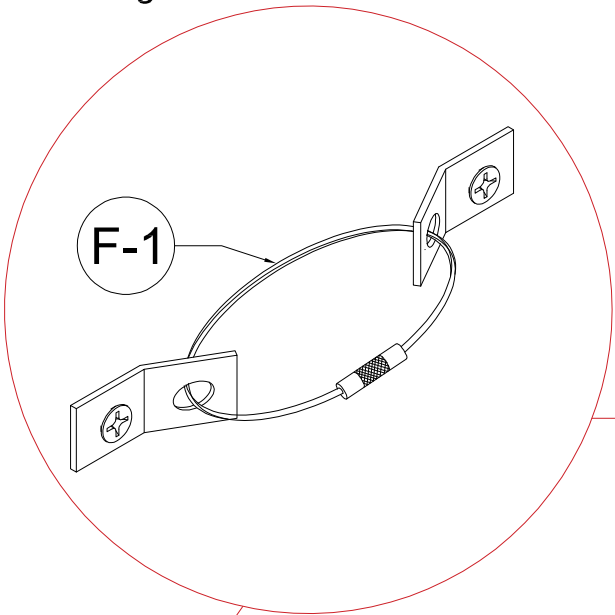


STEP 20: Following below illustration:

F-1



2pcs



FINISH

