ASSEMBLY INSTRUCTIONS


ITEM NO.WF212654

If you have any questions, please feel free to contact us. Email: lowes.team@qualfurn.net



IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

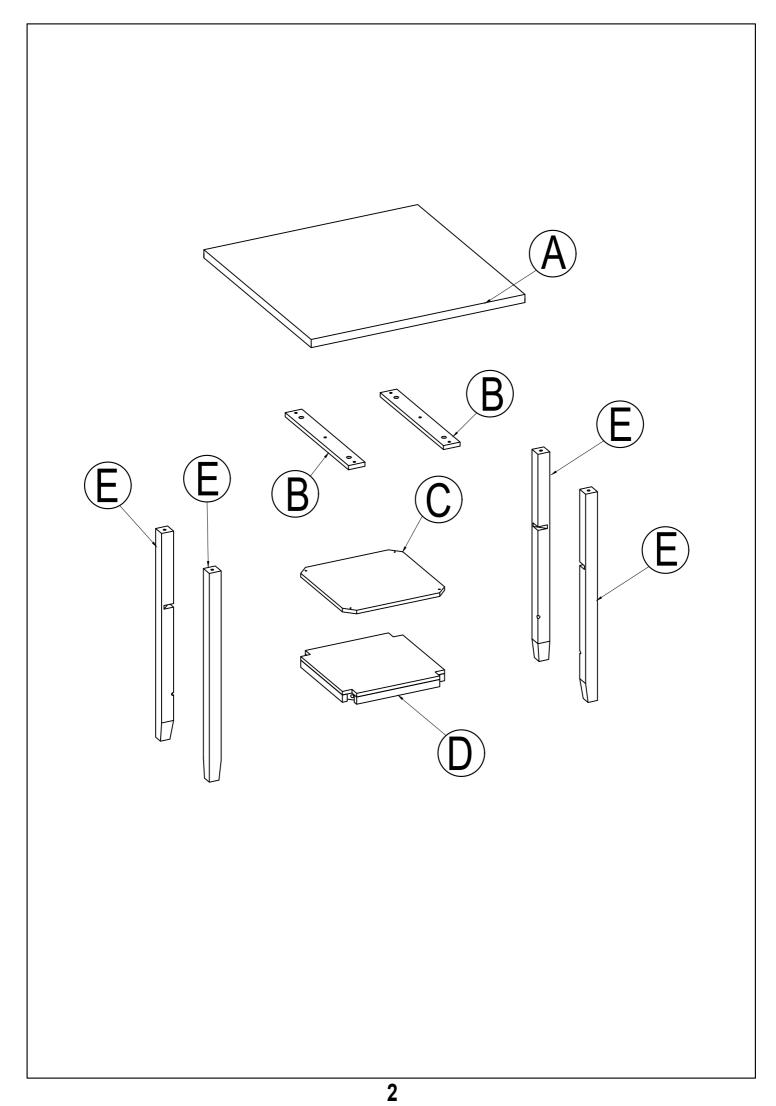

Part List Hardware List (B) Ø 1/4" x 35mm BOLT (10 pcs) TABLE TOP (1 pc) Ø 1/4" x 55 mm BOLT (4 pcs) BASE PANEL (2 pcs) Ø5/16" x 13 mm FLAT WASHER (14 pcs) SHELVES PANEL (1 pc) Ø5/16" x 19 mm LOCK WASHER (10 pcs) **(5)** TABLE SHELVES (1 pc) 4 mm ALLEN KEY (1pc) 6

A

B

 $\overline{\mathbb{C}}$

(D)


E


TABLE LEG (4 pcs)

Ø 4 x 38 mm

WOOD SCREWS (4 pcs)


STEP 1: 3 4 2 X4 6 <u>X4</u>

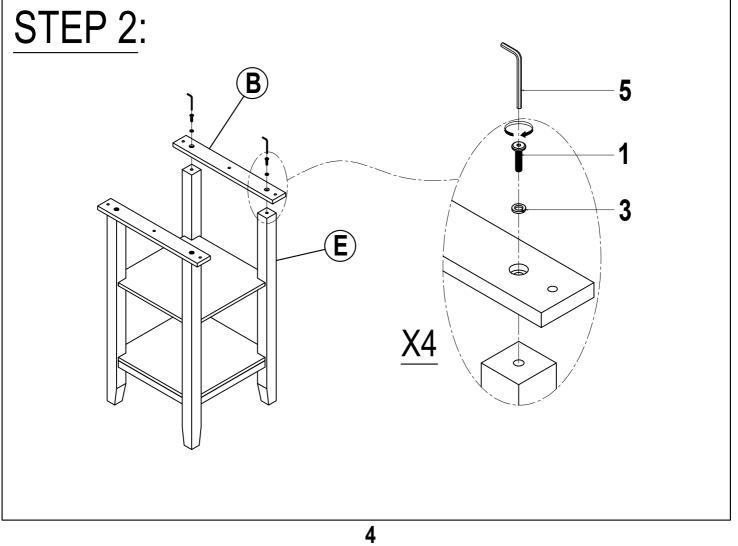

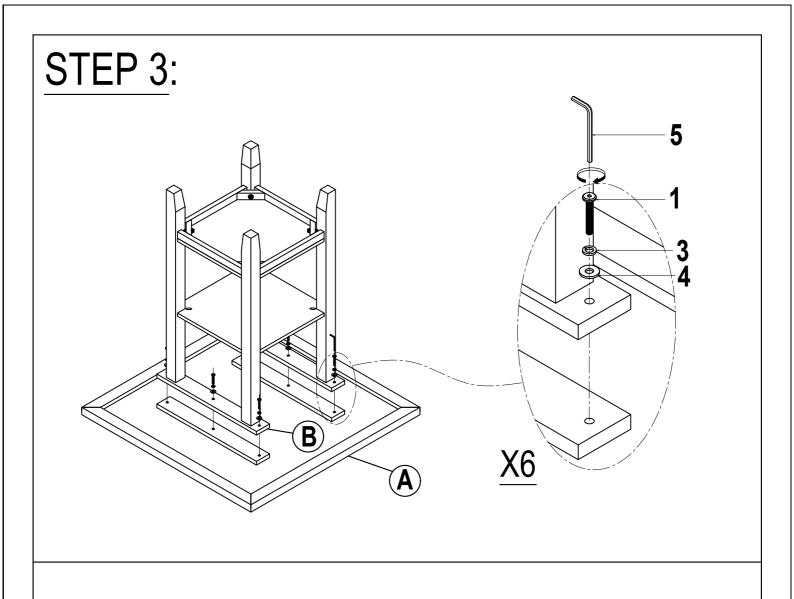


ASSEMBLY INSTRUCTIONS

ITEM NO.WF212650

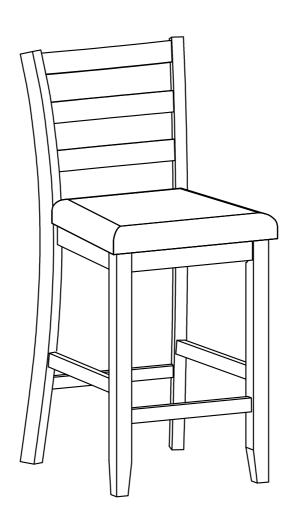

IMPORTANT NOTE:


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

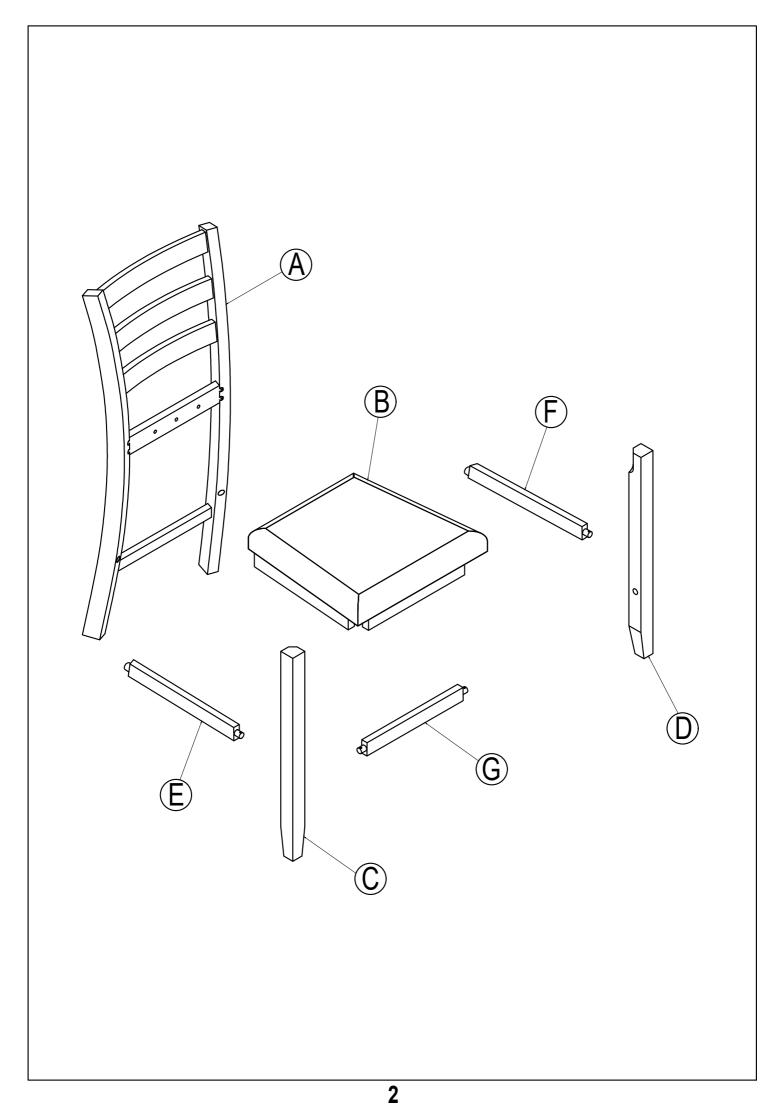


Part List

Hardware List

A	
	Ø 1/4" x 40 mm
BACK FRAME (4 pcs)	BOLT (8pcs)
B	2
	Ø 1/4" x 55 mm
SEAT FRAME (4 pcs)	BOLT (16 pcs)
	3
	Ø 1/4" x 75 mm
LEG LEFT (4 pcs)	BOLT (16 pcs)
	4
	Ø5/16" x 13 mm
LEG RIGHT (4 pcs)	FLAT WASHER (40 pcs)
E)	Ø5/16" x 19 mm
LEFT SIDE STRETCHER (4 pcs)	LOCK WASHER (40 pcs)
F)	6 4 mm
RIGHT SIDE STRETCHER (4 pcs)	ALLEN KEY (1 pc)
G (7
86/	Ø4 x 38 mm
FRONT STRETCHER (4 pcs)	WOOD SCREWS (24 pcs)

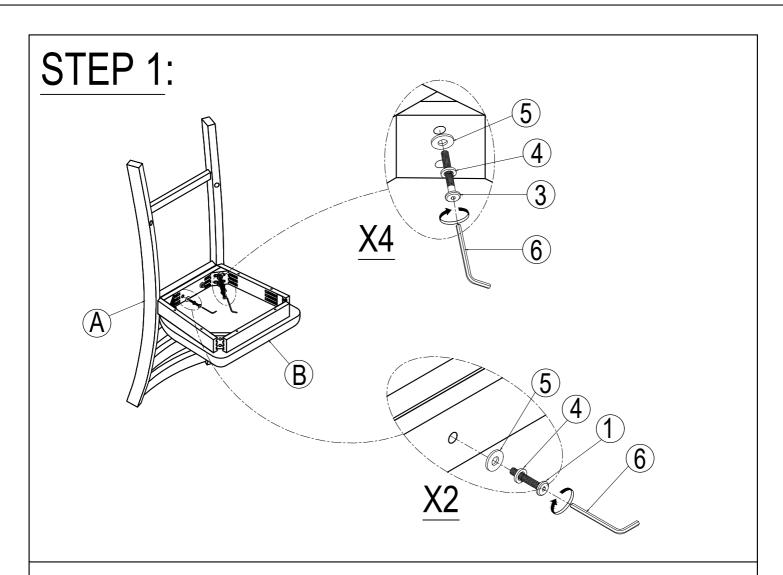

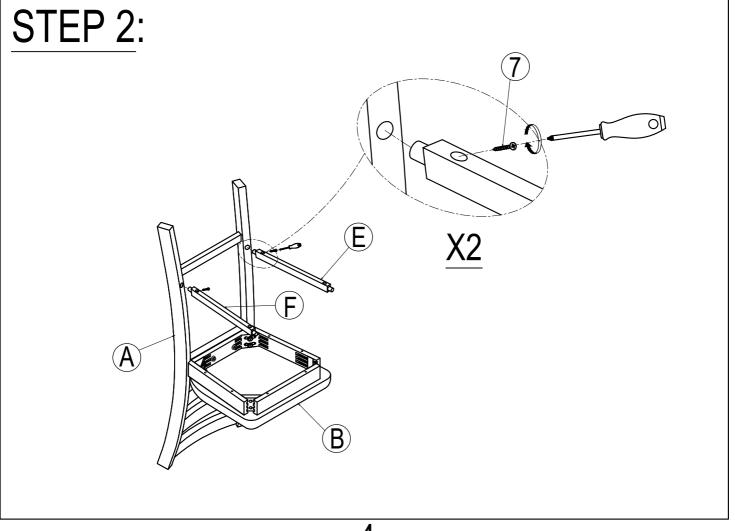

STEP 3:

