



ZIPPITY

Easy Does It!

WOODTEK POOLSIDE ORGANIZER (38" W X 51" L X 41" H)


ASSEMBLY INSTRUCTIONS ZP19078

60 MIN

Approximate assembly time

Want to see a video on how to
assemble this product?

Scan the QR code

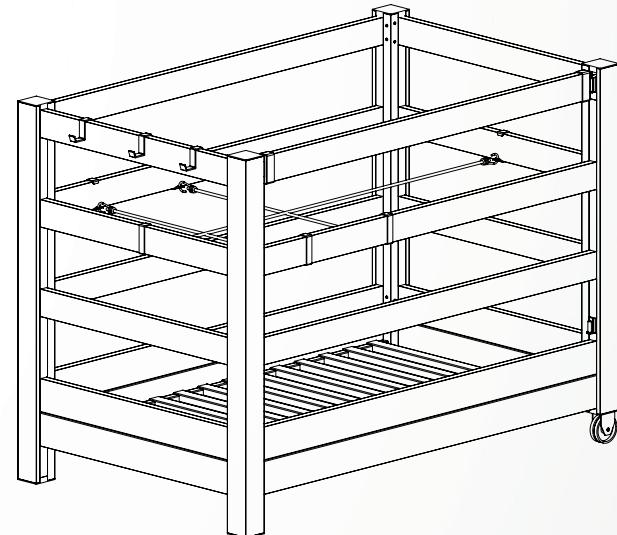

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following** ➤ Your product number (**ZP19078**)
➤ Your affected part letters (**page 4-7**)
➤ Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉️ **support@zippity-outdoor.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

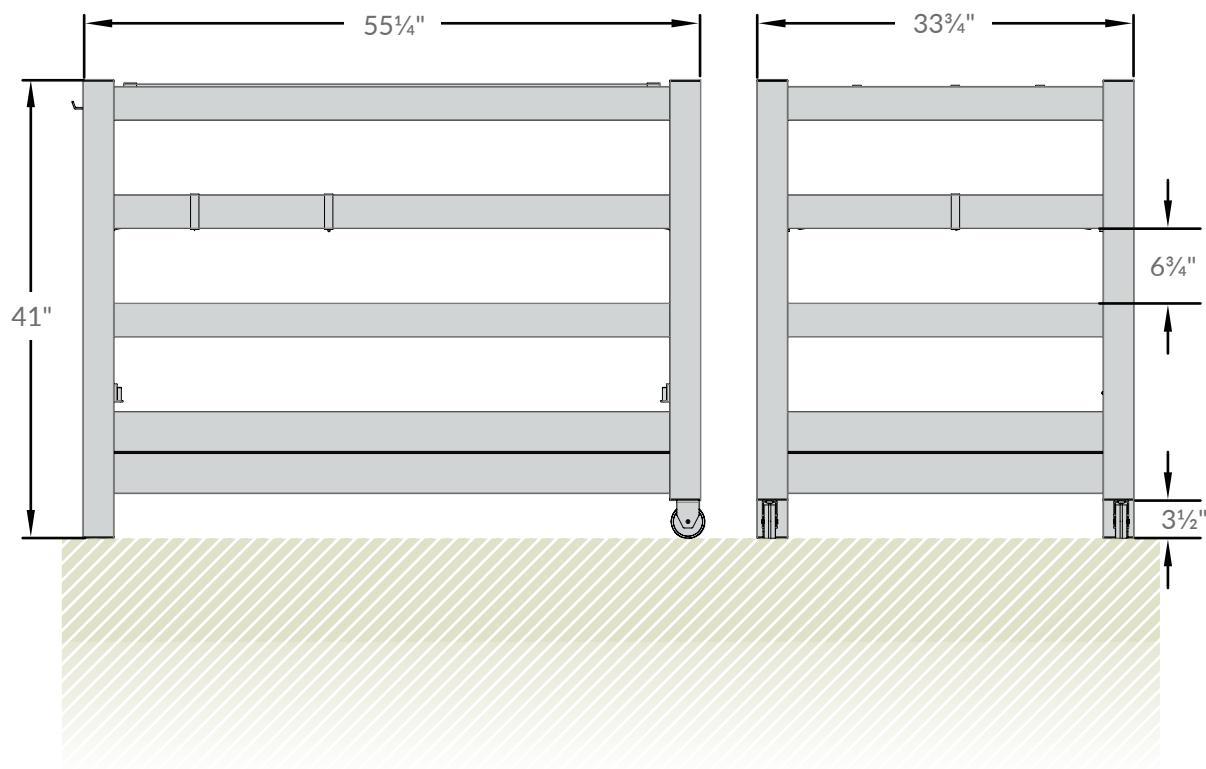

LAYOUT MATERIALS

► Tools required for a smoother installation experience.

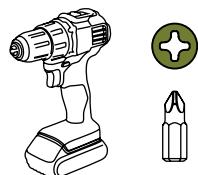


► Drill with Phillips bit

POSTS



A

Post A (1)
2 $\frac{3}{4}$ " x 2 $\frac{3}{4}$ " x 41"

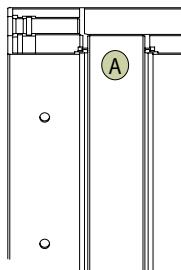


B

Post B (1)
2 $\frac{3}{4}$ " x 2 $\frac{3}{4}$ " x 41"

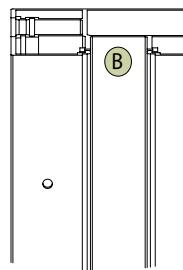



C

Post C (1)
2 $\frac{3}{4}$ " x 2 $\frac{3}{4}$ " x 41"

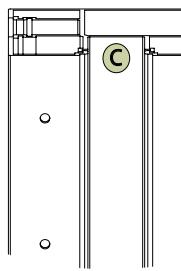


D

Post D (1)
2 $\frac{3}{4}$ " x 2 $\frac{3}{4}$ " x 41"

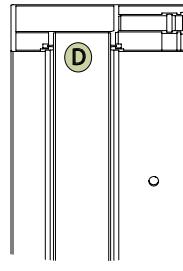


LAYOUT MATERIALS

WALLS

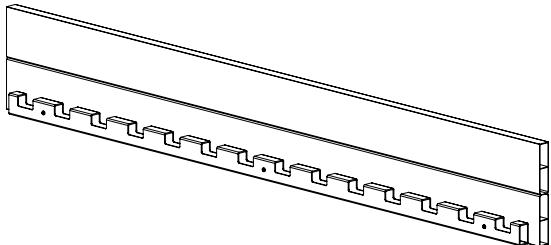


E

Long Bottom Board (2)
 $1\frac{3}{4}'' \times 7\frac{3}{8}'' \times 52''$

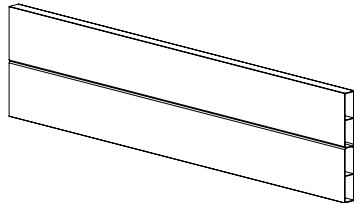


F

Short Bottom Board (2)
 $7\frac{3}{8}'' \times \frac{7}{8}'' \times 30\frac{1}{2}''$

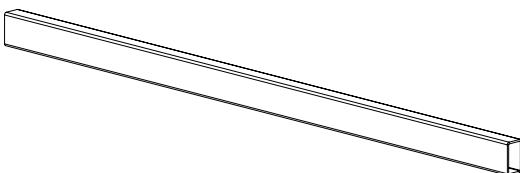


G

Floor Boards (14)
 $1\frac{1}{2}'' \times \frac{7}{8}'' \times 30\frac{3}{4}''$

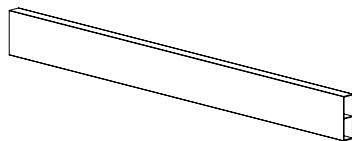


H

Short Slat (6)
 $3'' \times \frac{7}{8}'' \times 30\frac{1}{2}''$

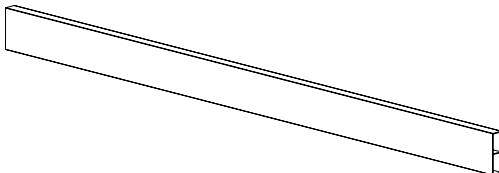

I

Long Adjustable Slat (1)
 $3'' \times \frac{7}{8}'' \times 47\frac{3}{4}''$

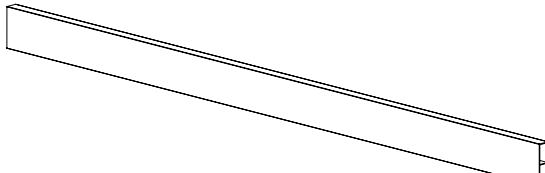

J


Long Slat (5)
 $3'' \times \frac{7}{8}'' \times 52''$

LAYOUT MATERIALS

SPACERS


K

Spacer K (4)
 $\frac{7}{8}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$




L

Spacer L (4)
 $3\frac{1}{2}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$

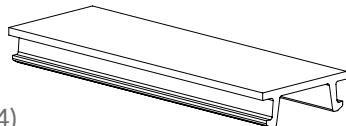


M

Spacer M (2)
 $4\frac{1}{4}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$

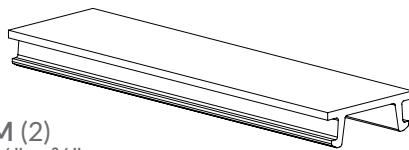

N


Spacer N (23)
 $6\frac{3}{4}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$

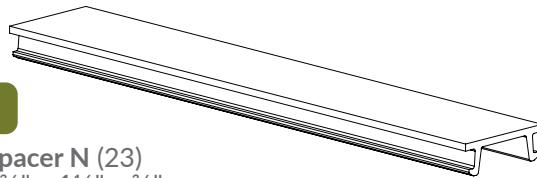

SMALL PARTS


O

Post Cap (4)
 $2\frac{3}{4}'' \times 2\frac{3}{4}'' \times 1''$

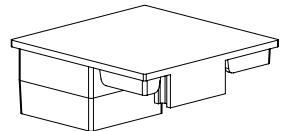


P

Towel Hook (3)

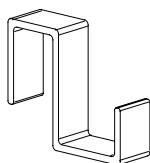


Q

Bungee Bracket (6)




R

Rail Hinge (2)



S

Post Hinge (4)

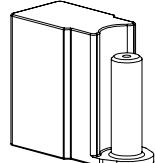

HARDWARE

T

Long Bungee (1)



U

Short Bungee (2)



V

Short Self-Drilling Screws (4)
.75"



W

Long Self-Drilling Screws (36)
2.5"



USE THIS PAGE TO MEASURE YOUR SPACERS.

N

$6\frac{3}{4}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$

M

$4\frac{1}{4}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$

L

$3\frac{1}{2}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$


K

$4\frac{1}{4}'' \times 1\frac{1}{4}'' \times \frac{3}{8}''$




ASSEMBLE UNIT

1



A x1




B x1



L x4

L


A

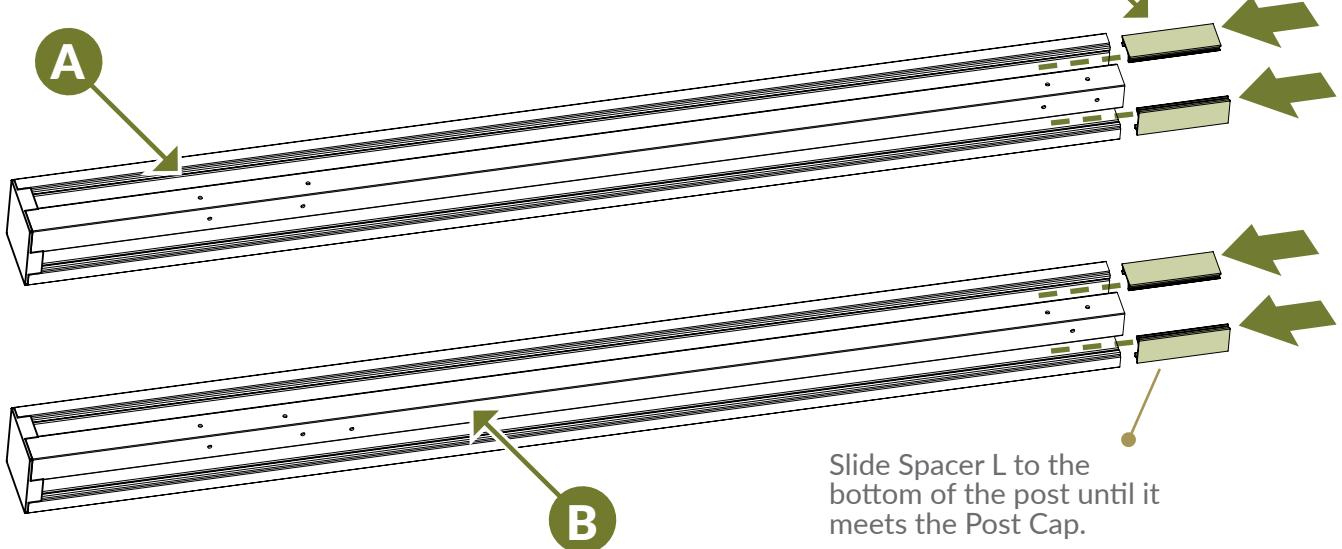


B

Slide Spacer L to the bottom of the post until it meets the Post Cap.

2



A x1




C x1

A


Align posts as shown below.

C



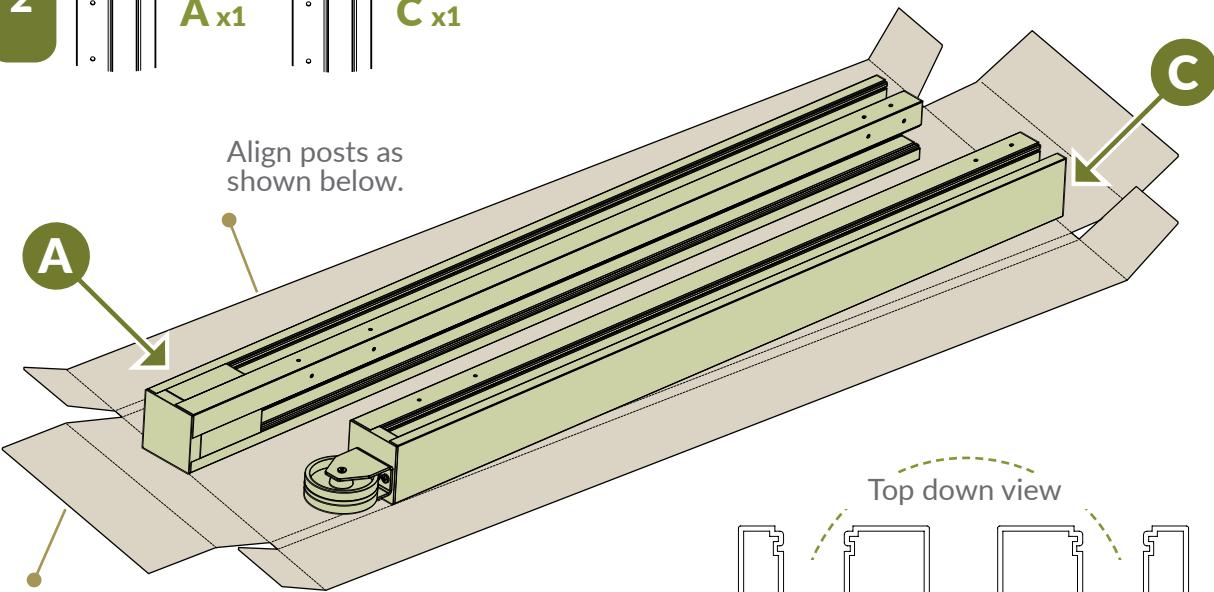


Assemble on box or other smooth surface to prevent scratching

Top down view

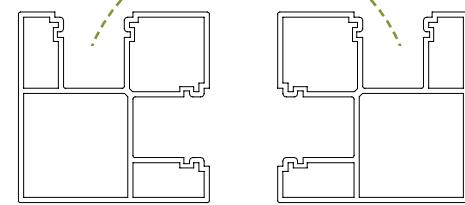


3

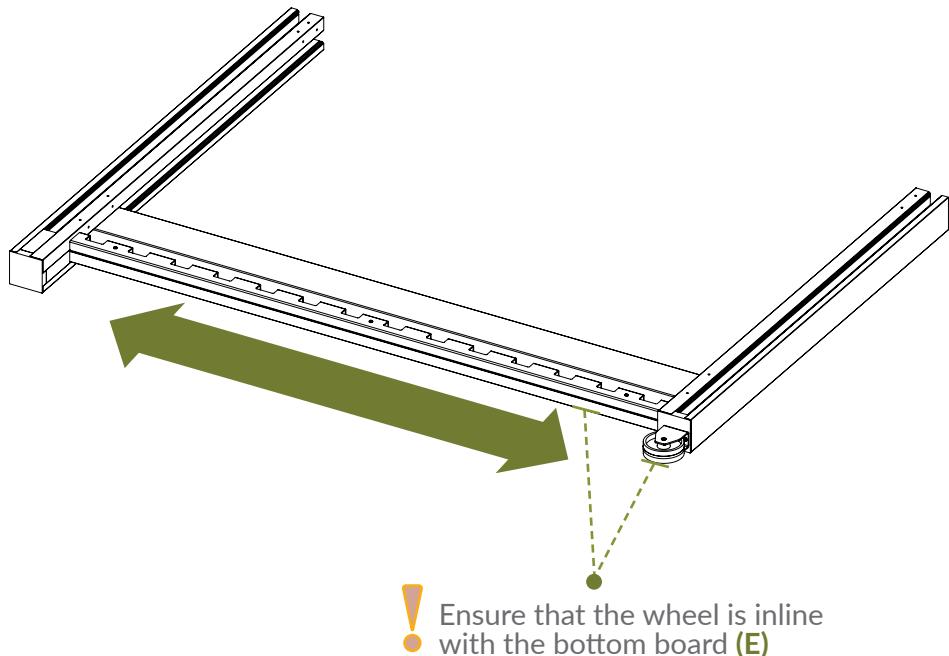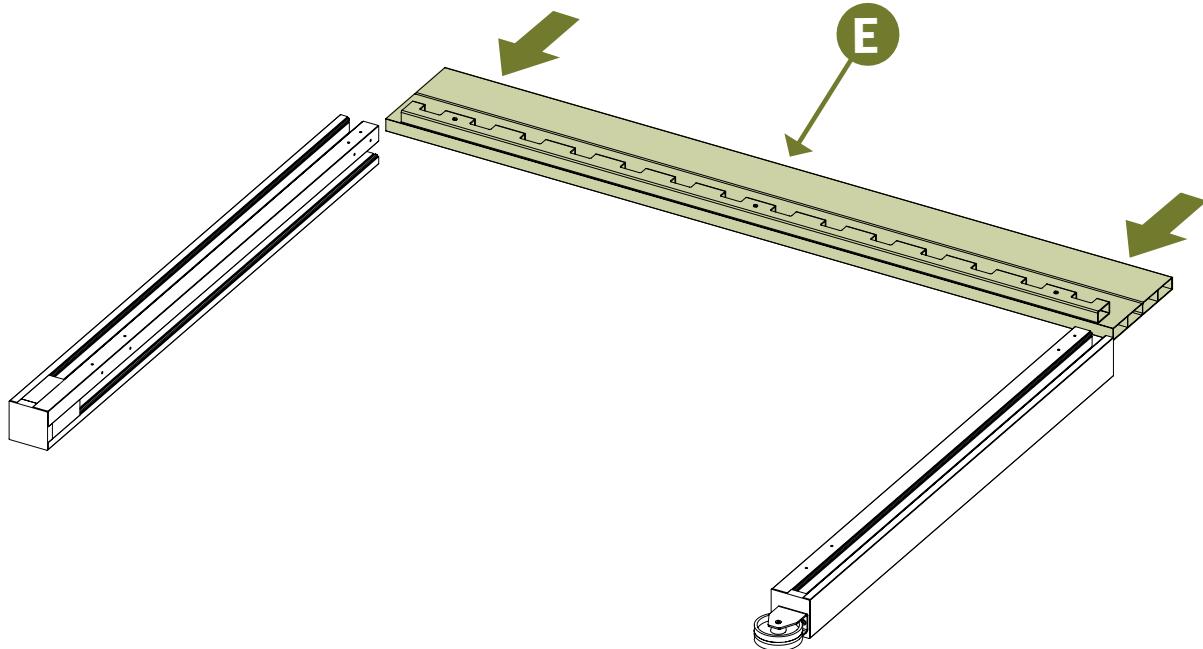


4

— W x4

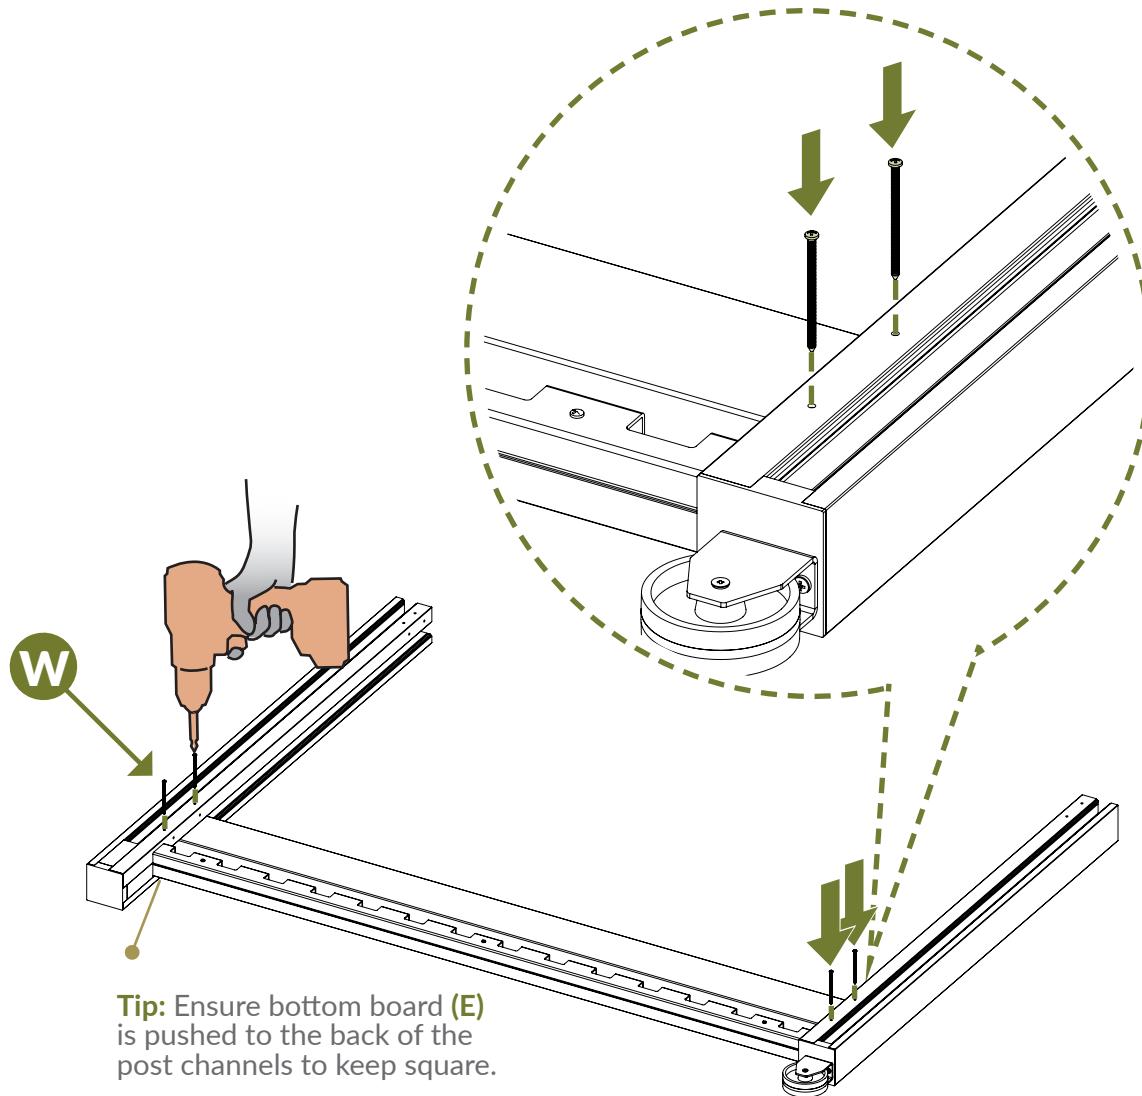


5


Repeat steps 2-3 for opposite side using



B x1




D x1

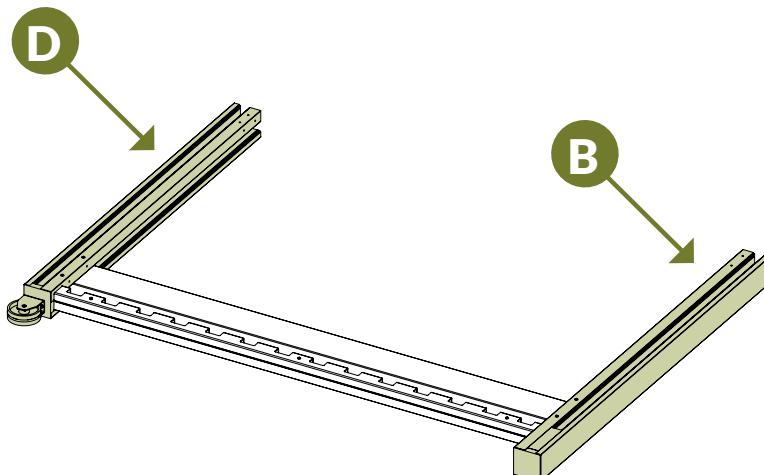


Repeat steps 3-4 to create second panel

6

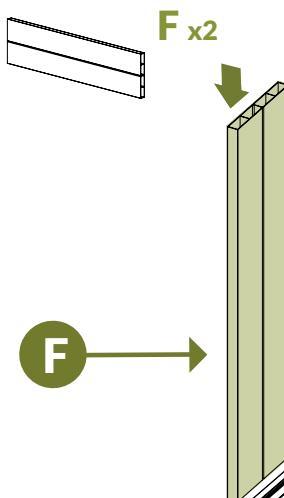


F x2

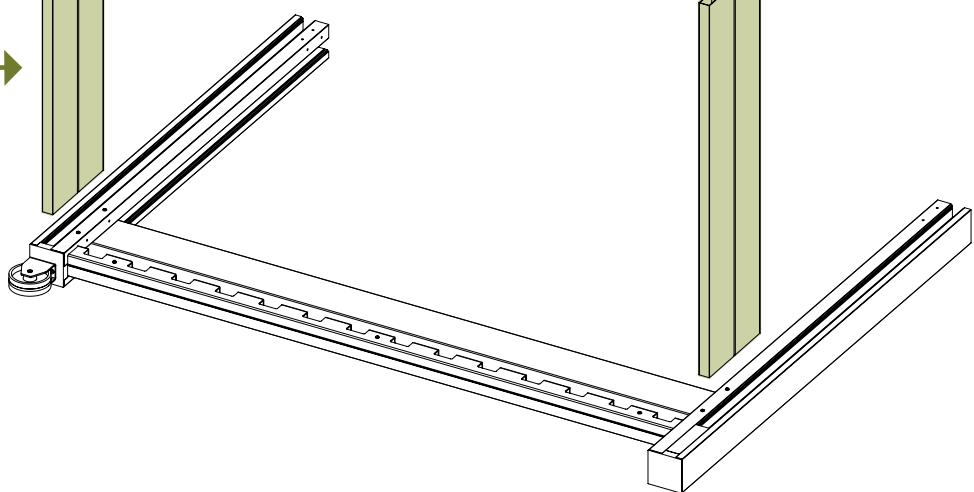



7





W x4

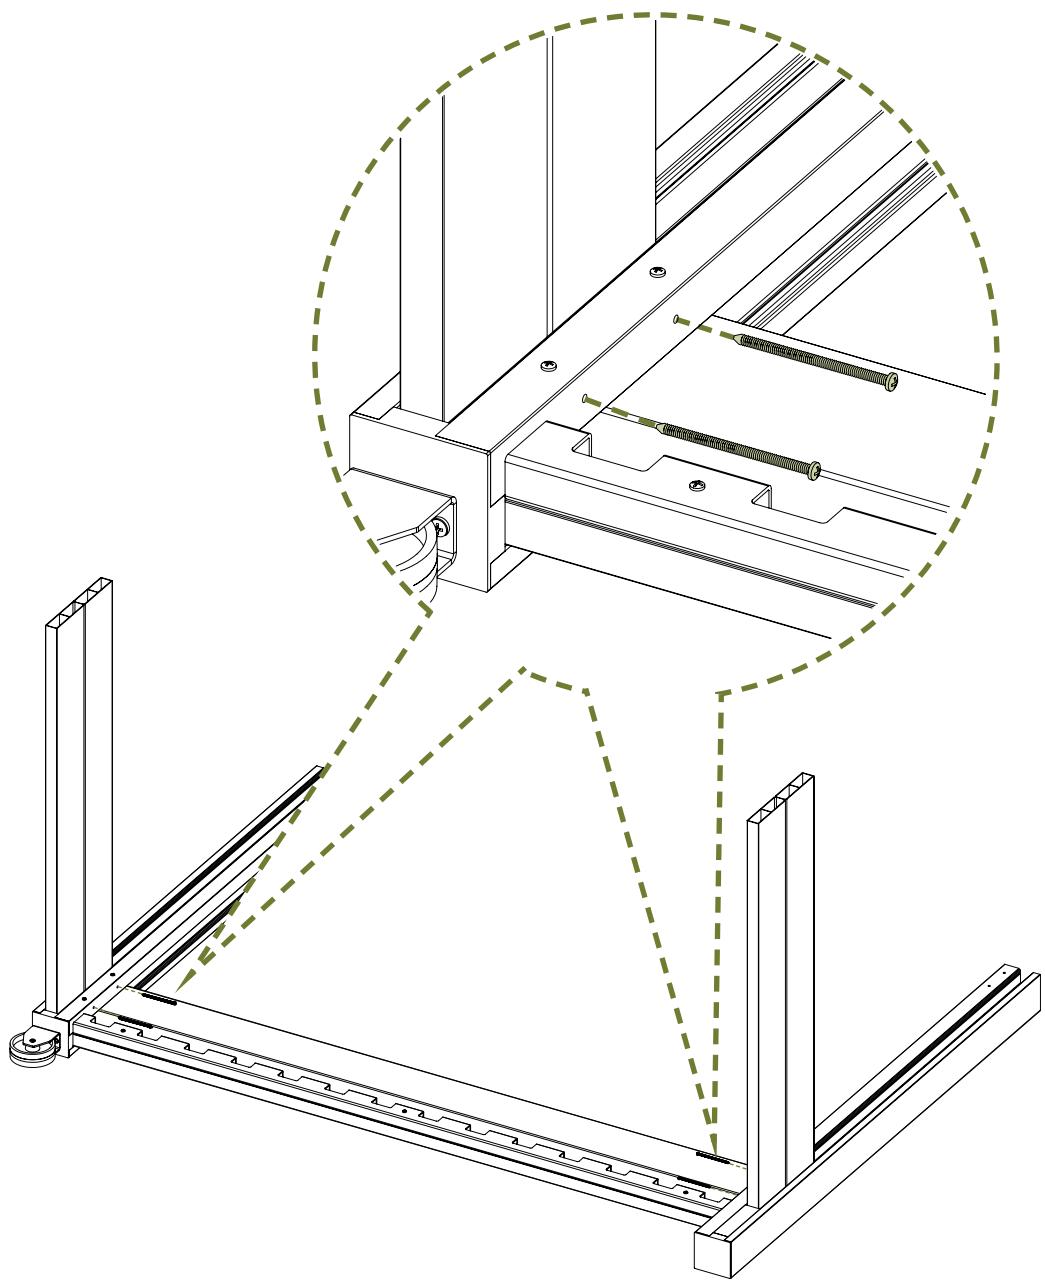

8

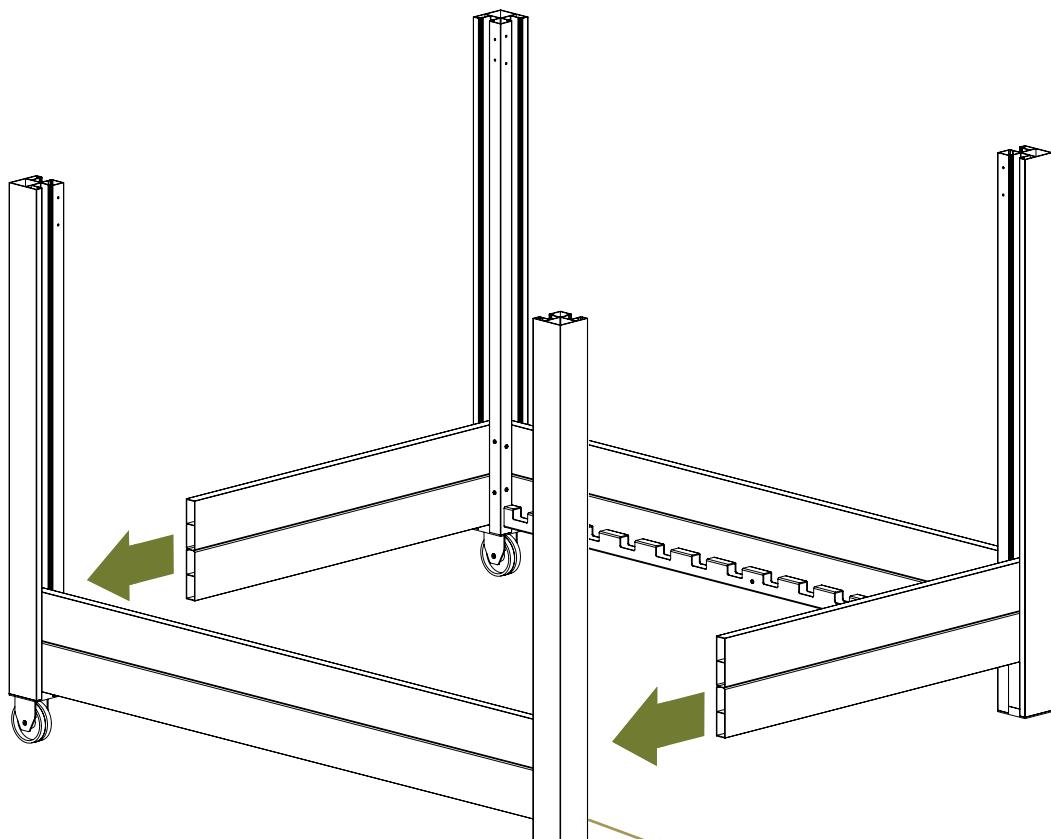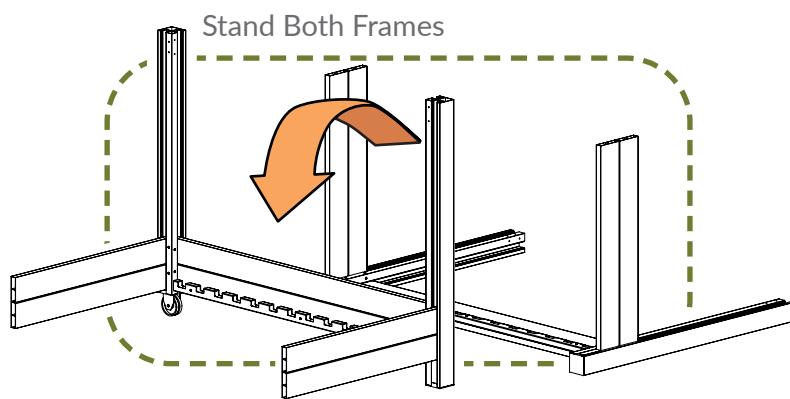


Tip: Ensure boards are pushed to the back of the post channels.

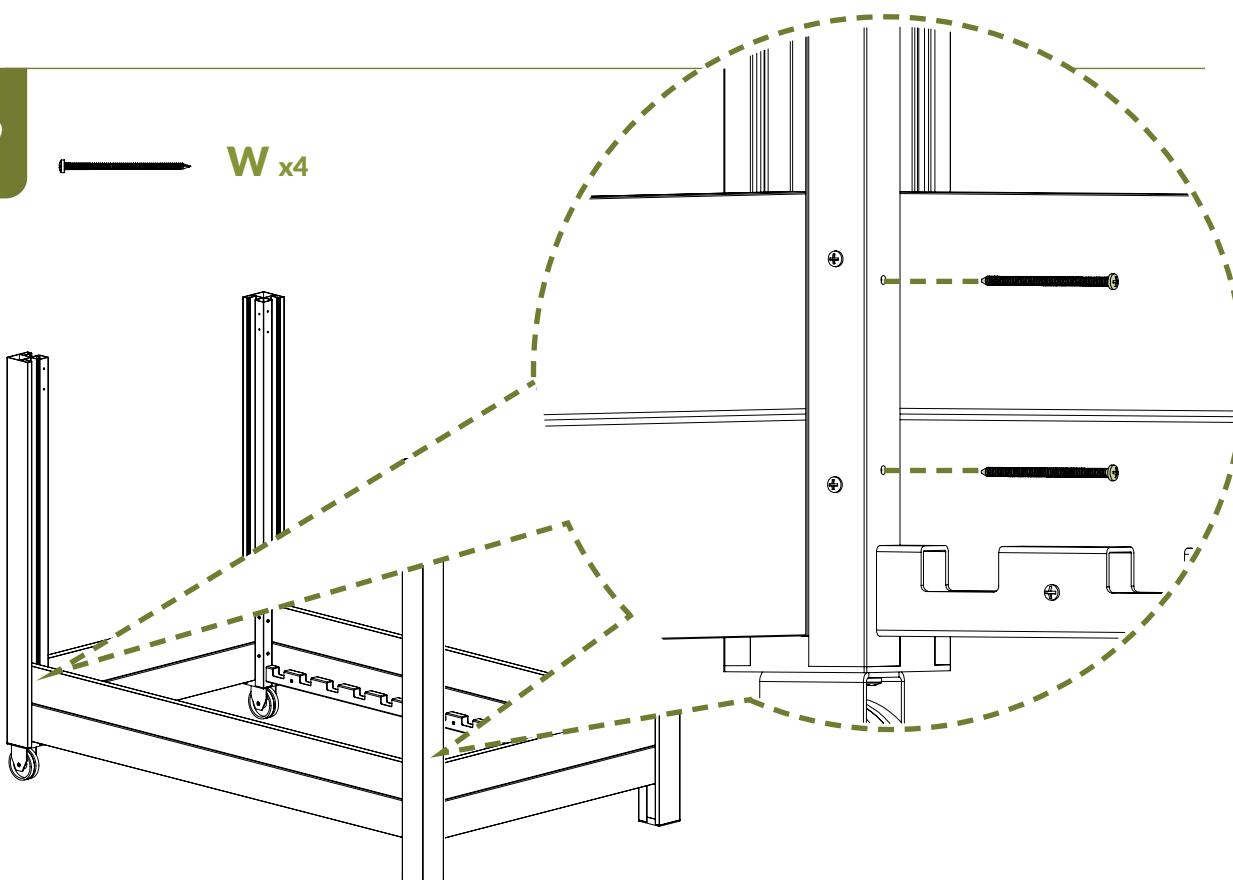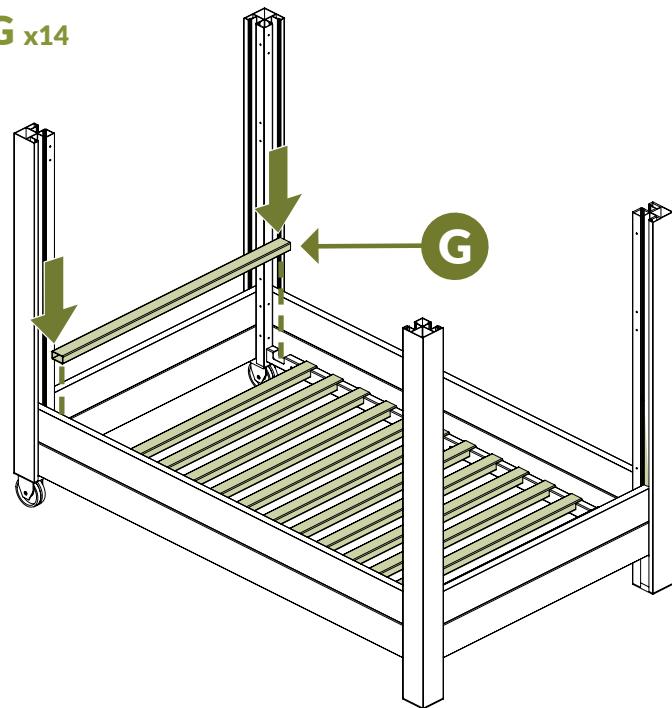9**W x4****10****G x14**


11



N x6

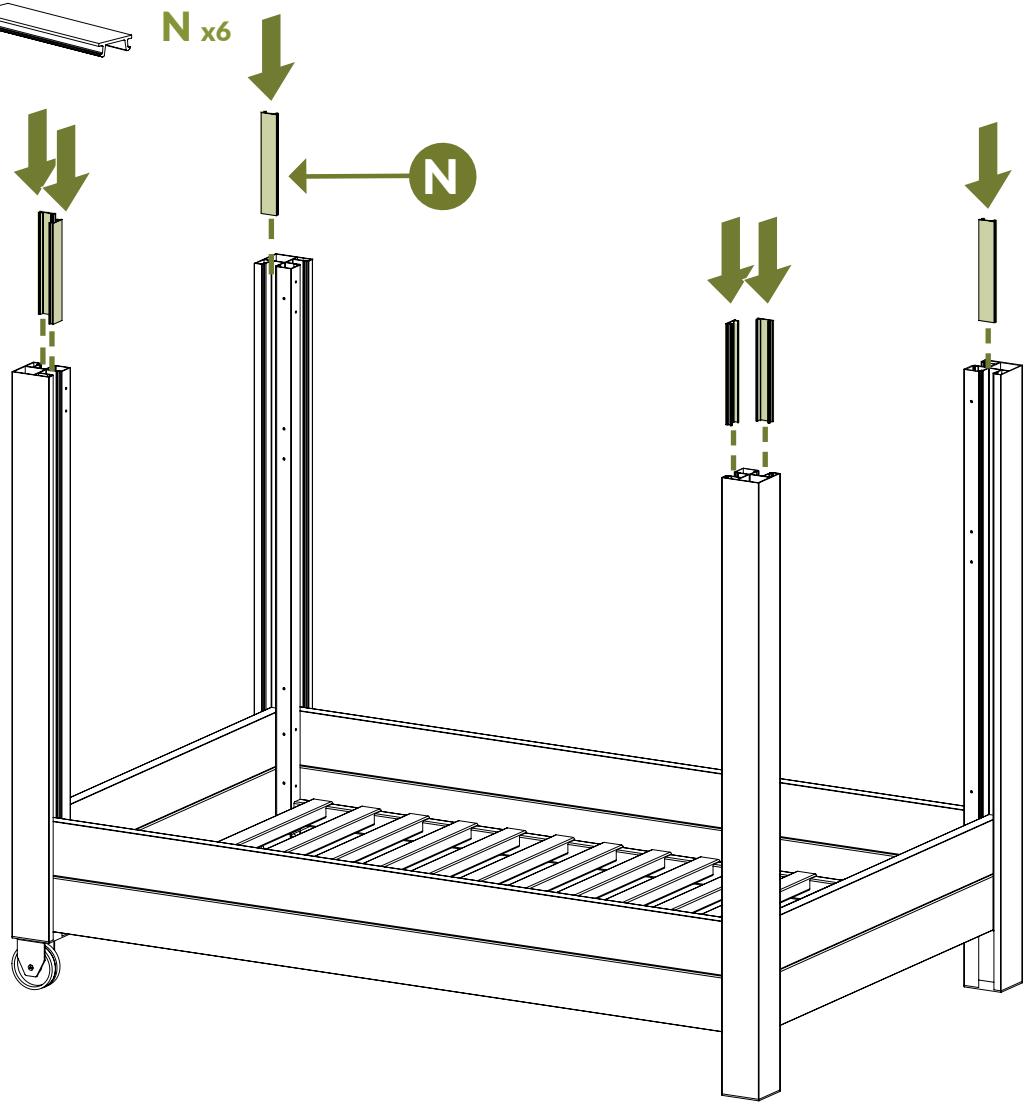

Rotate so that the wheels
are on your right hand side.

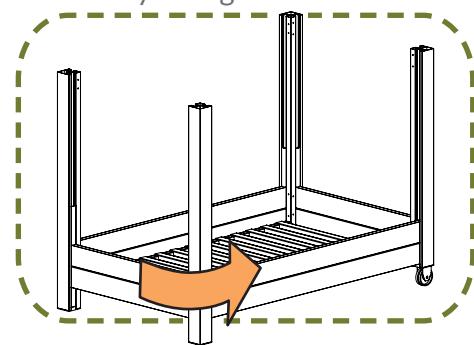


12



K x2




S x2




M x2




W x2

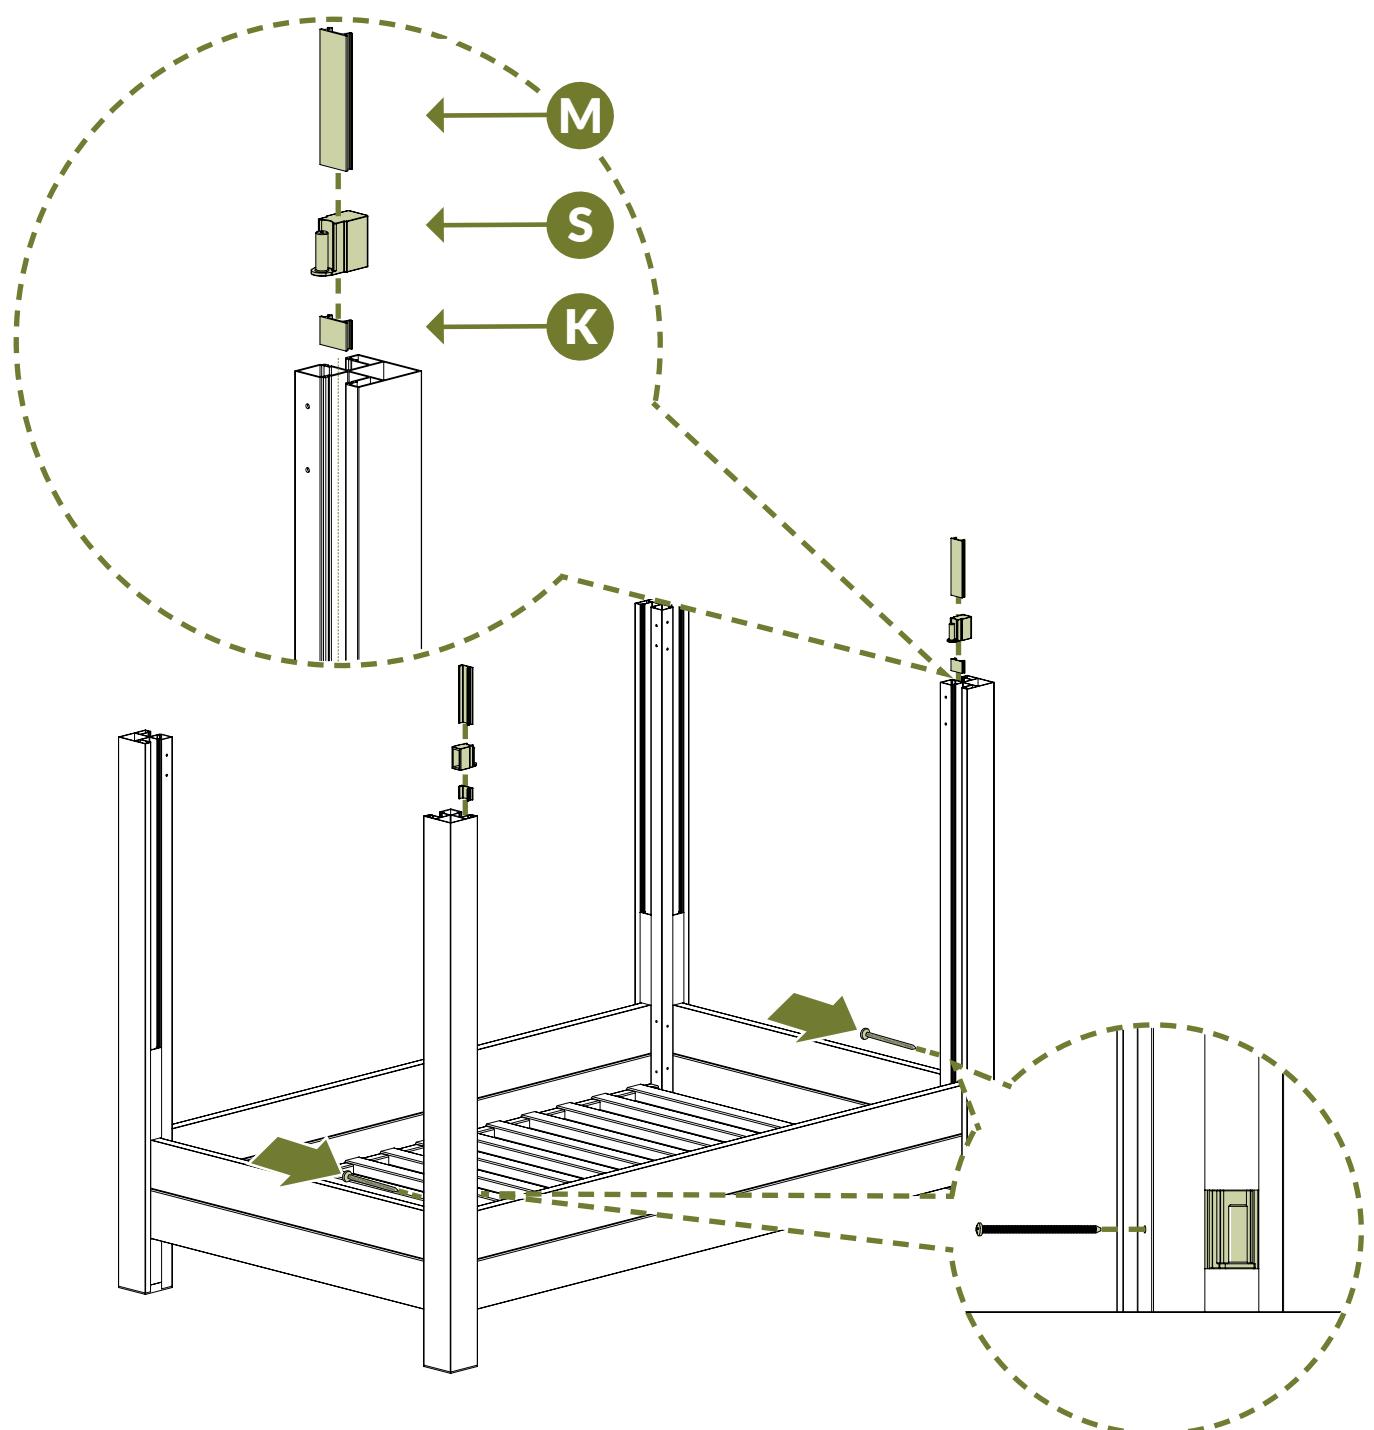

13

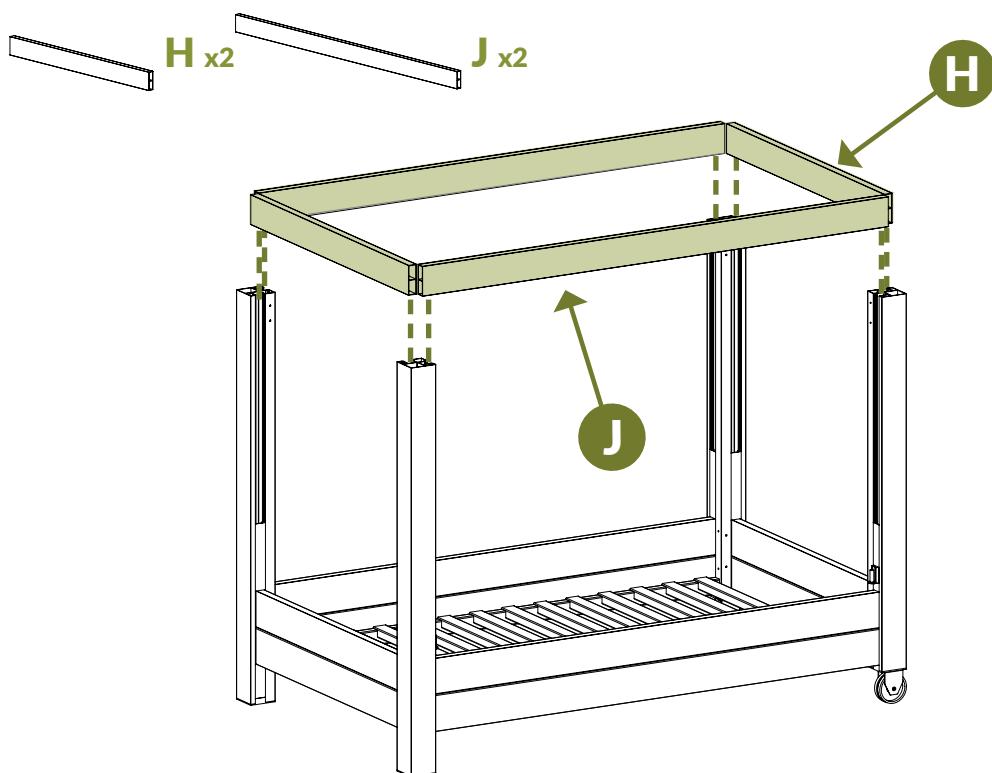

14

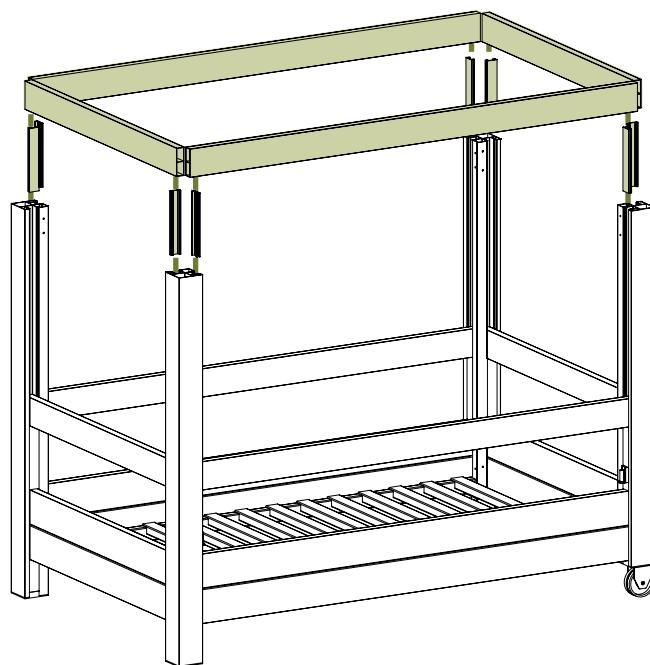

15



N x2




Kx2



S x2




W x2

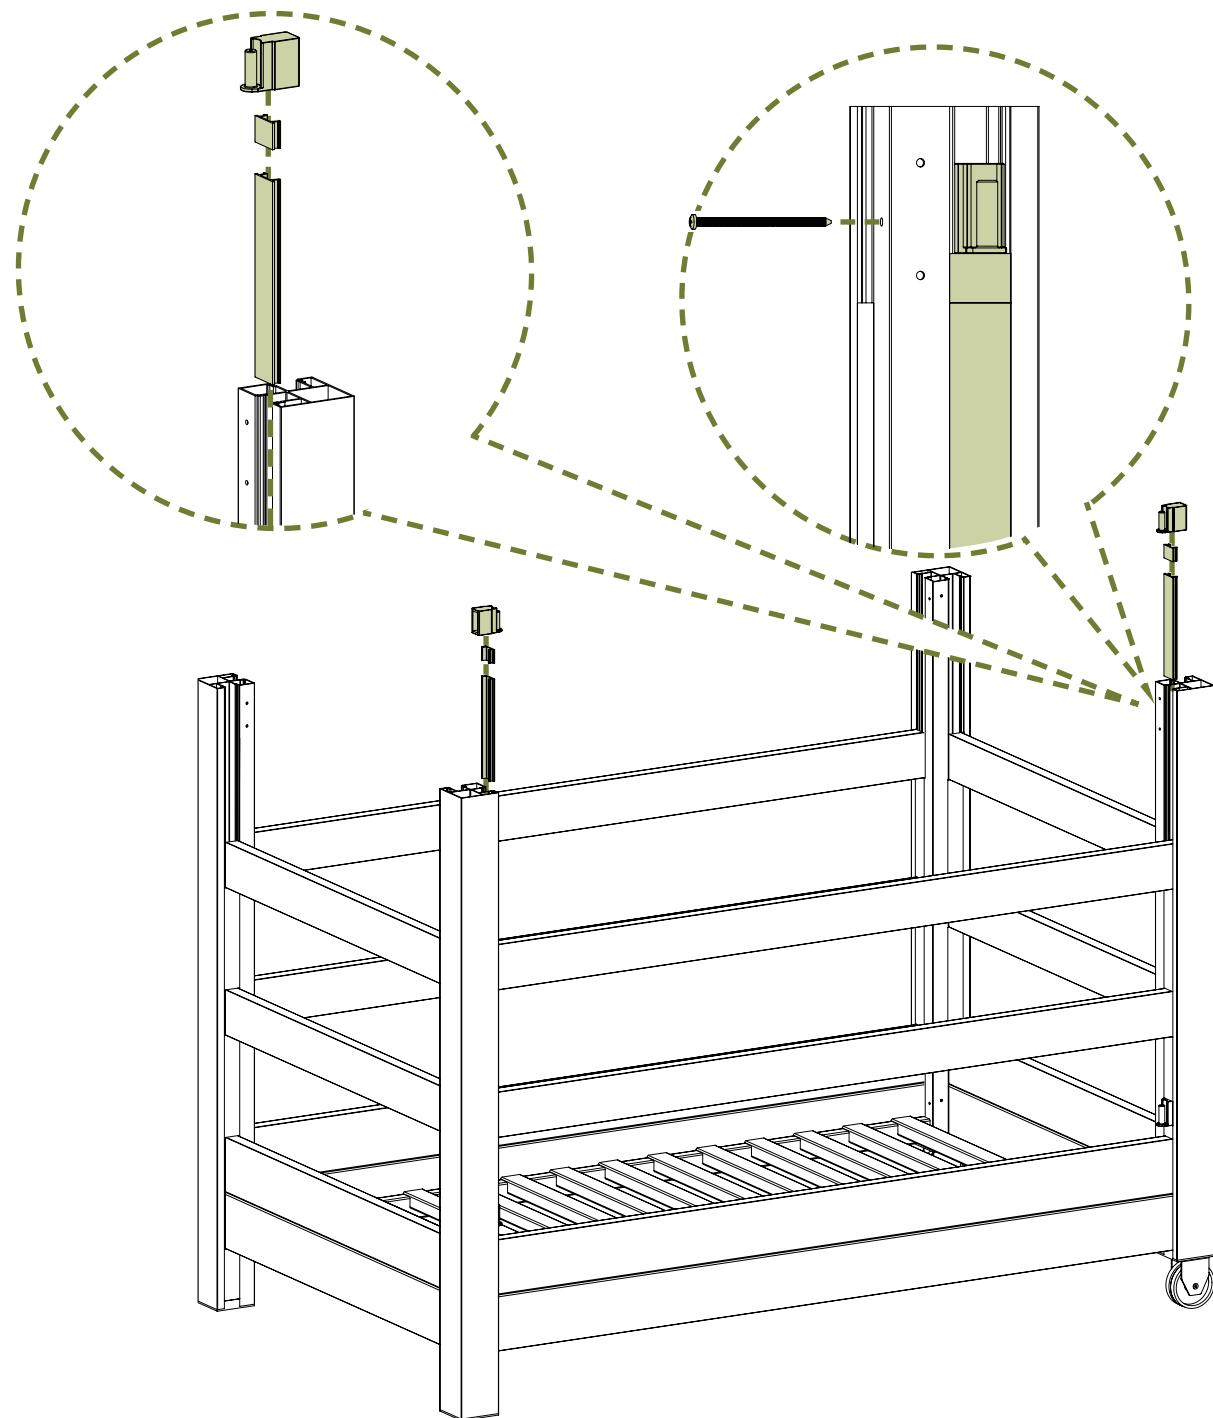

16




N x6

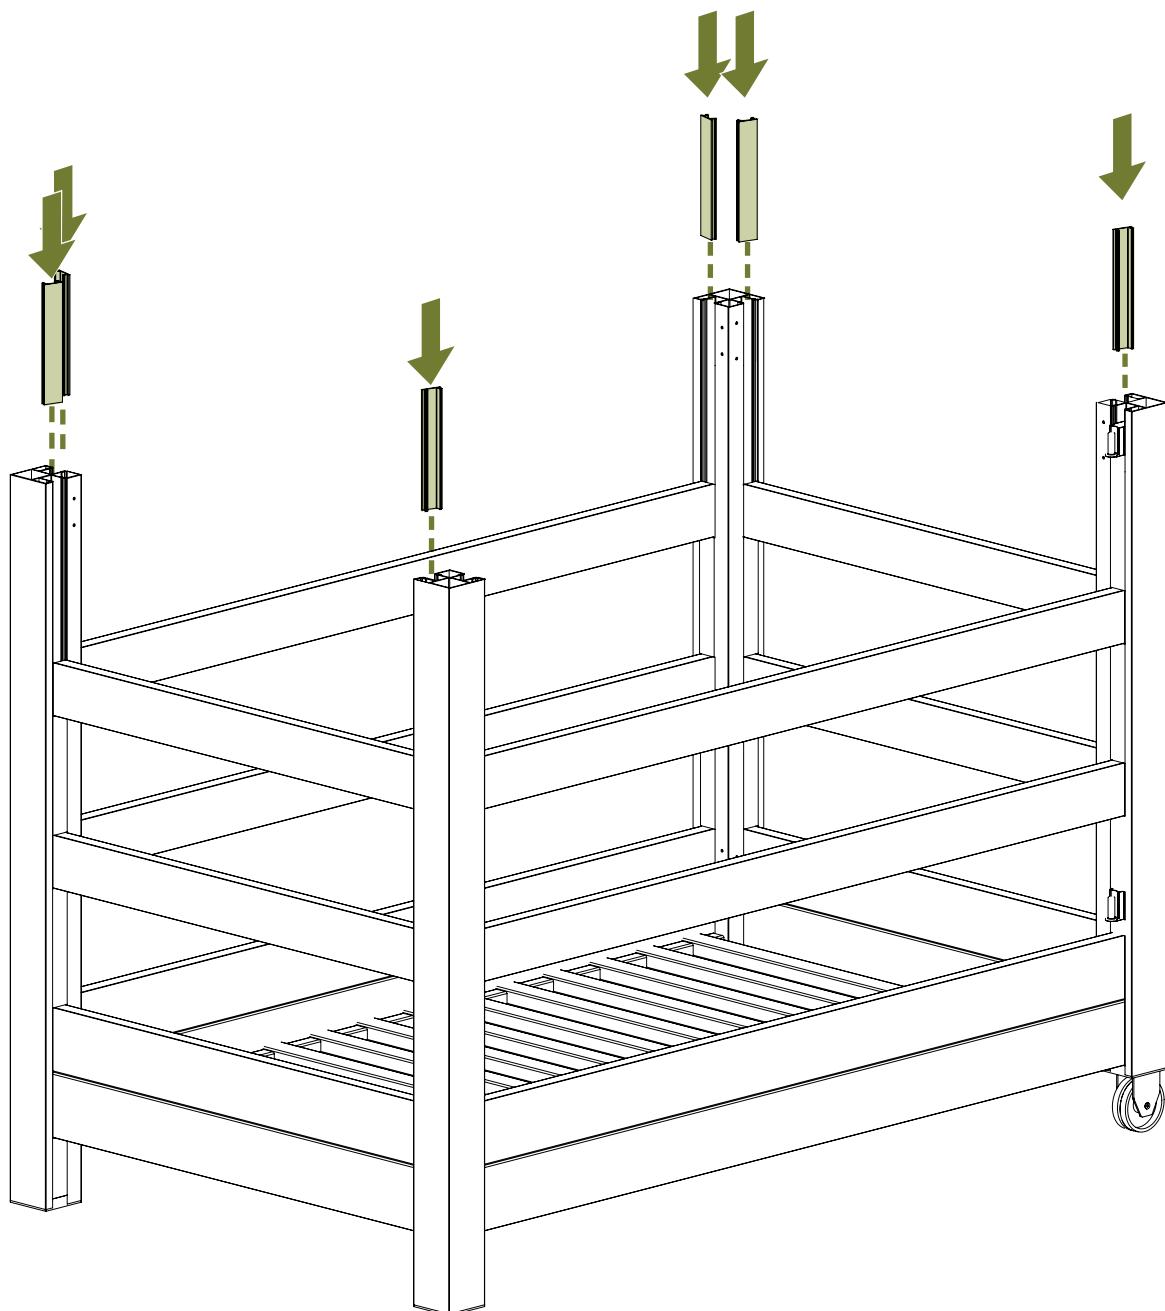

17

 **J x1**  **W x4**

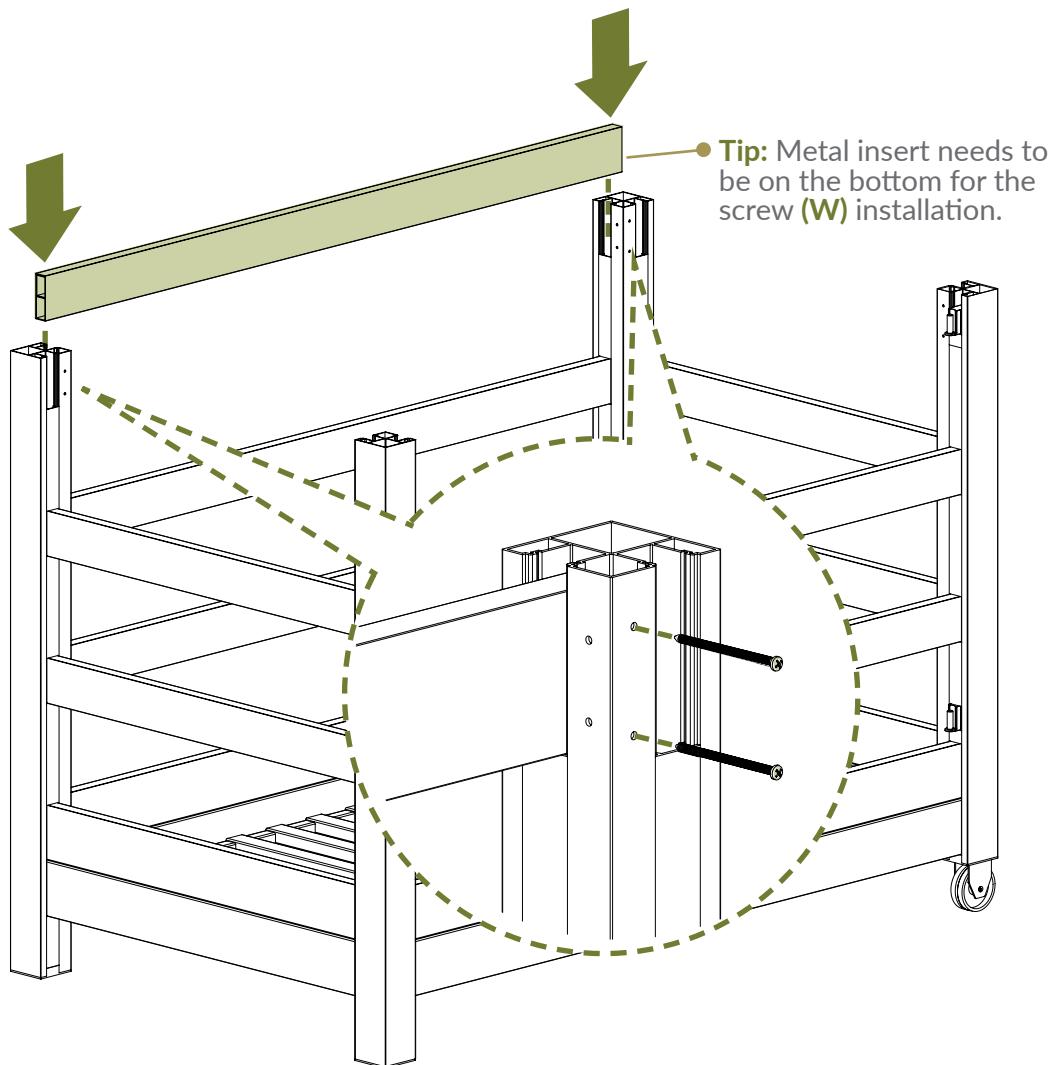


18



H x2




W x8

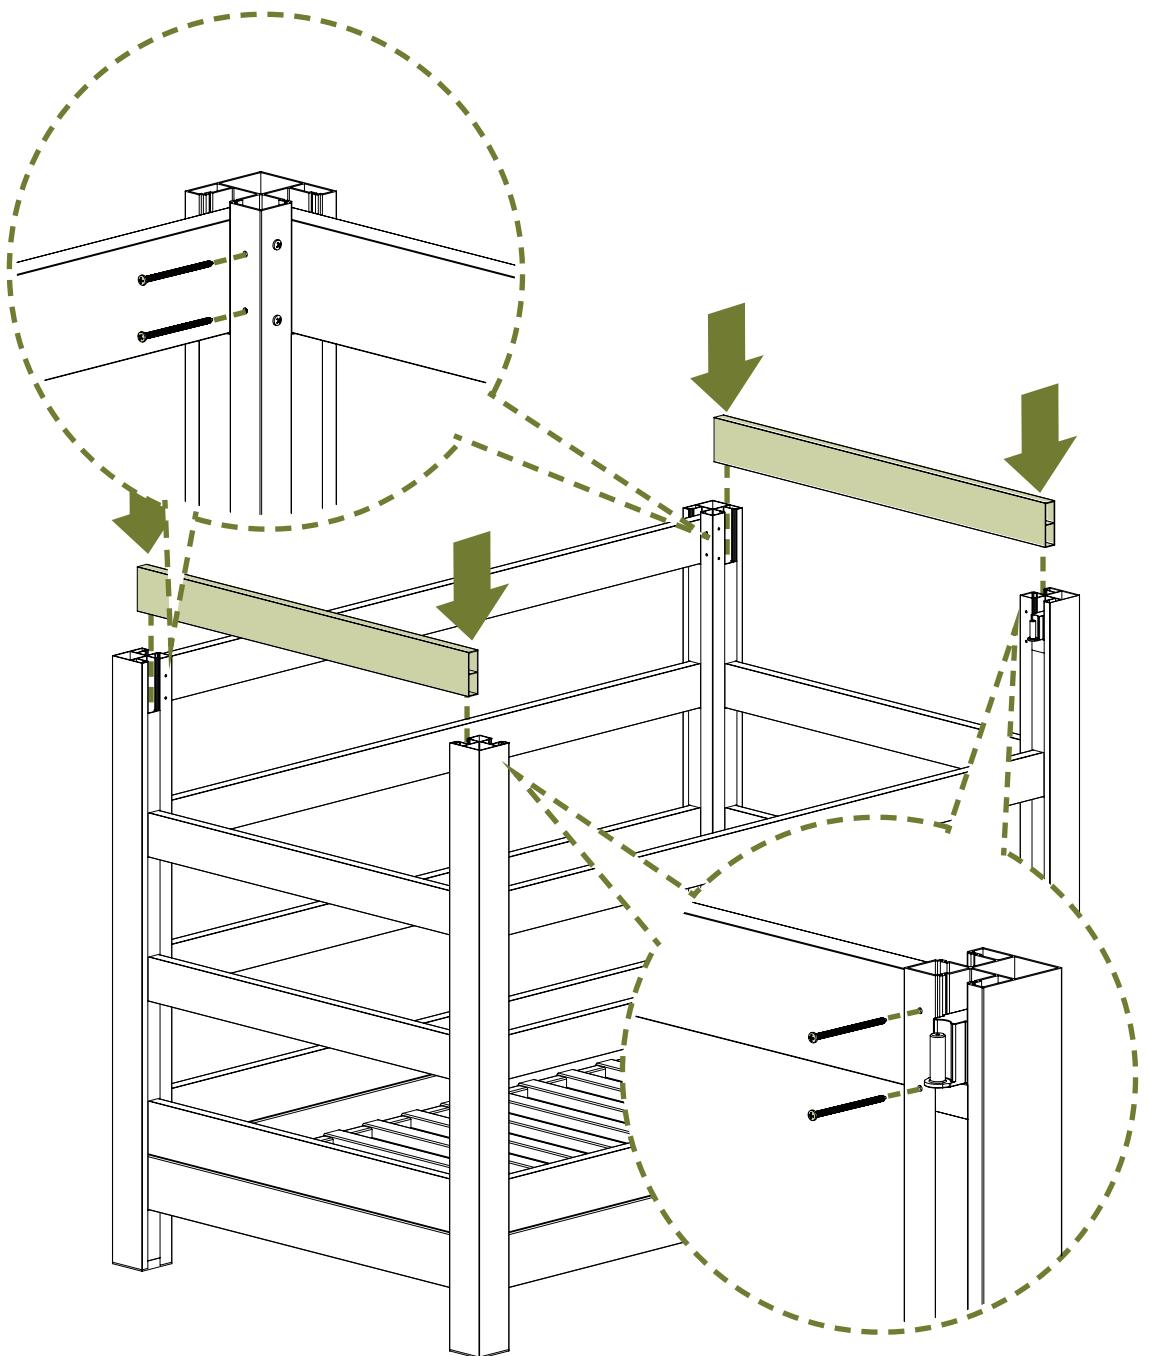


19

 O x4

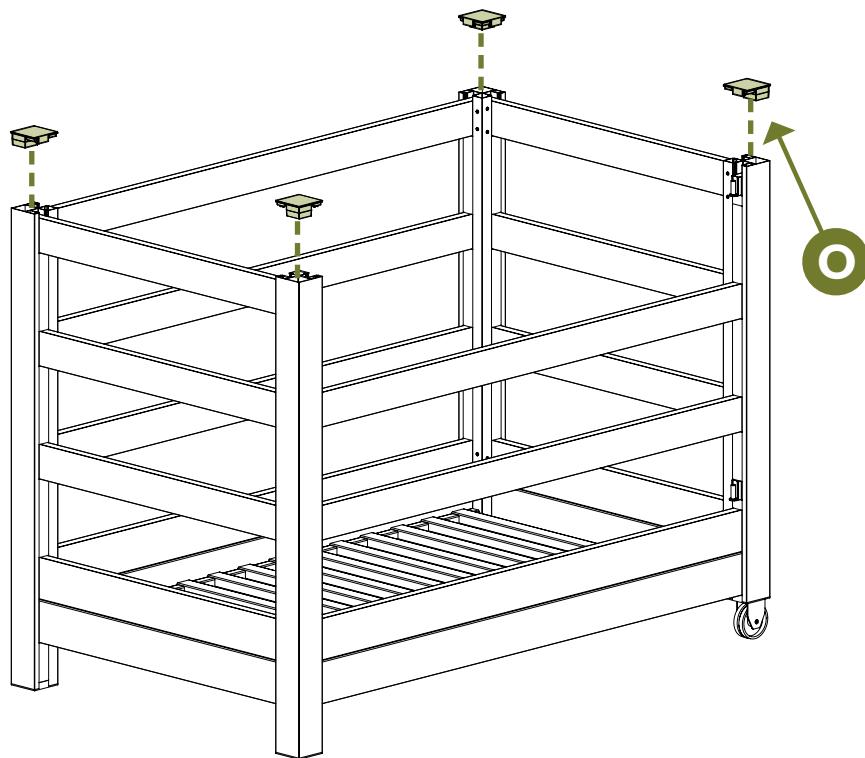


20


 P x3

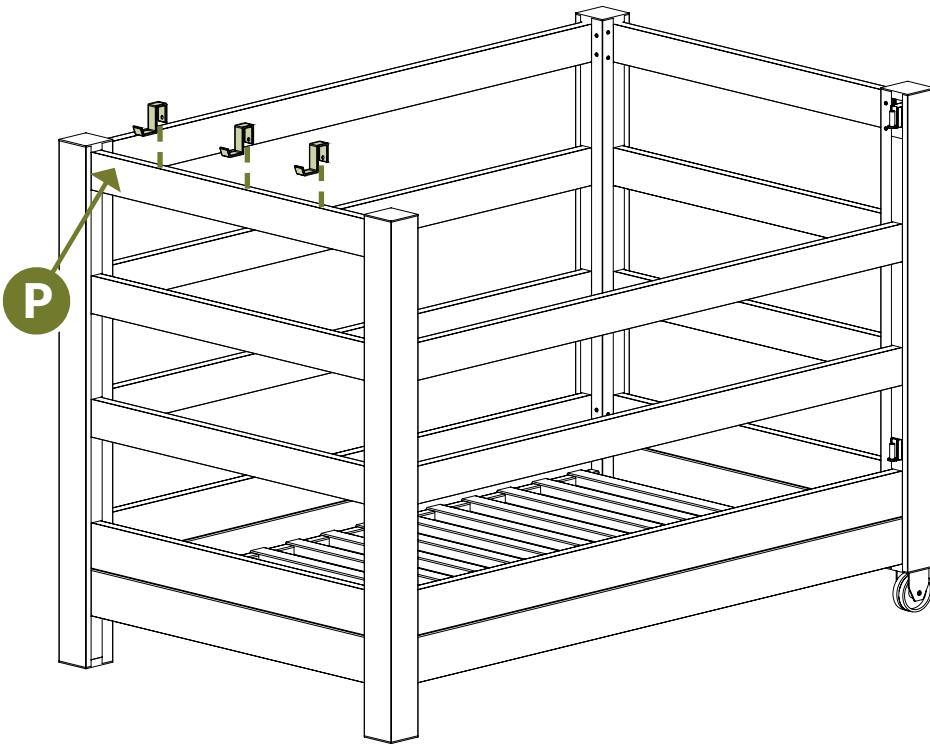


21




Q x6

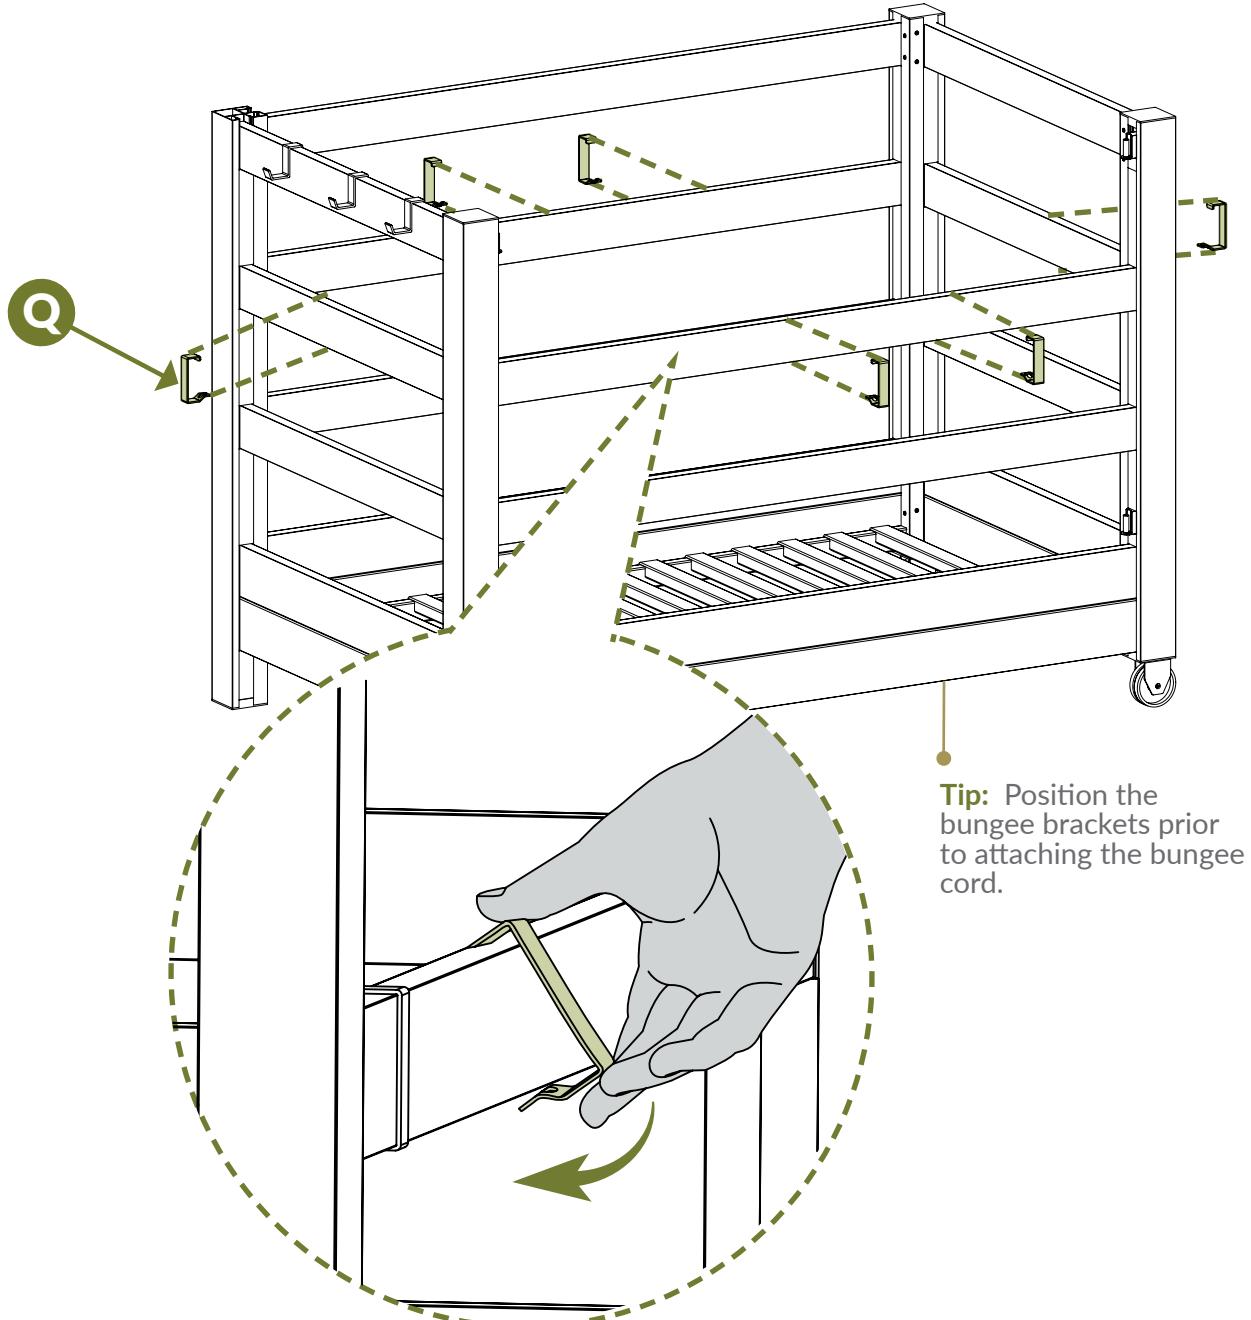

22

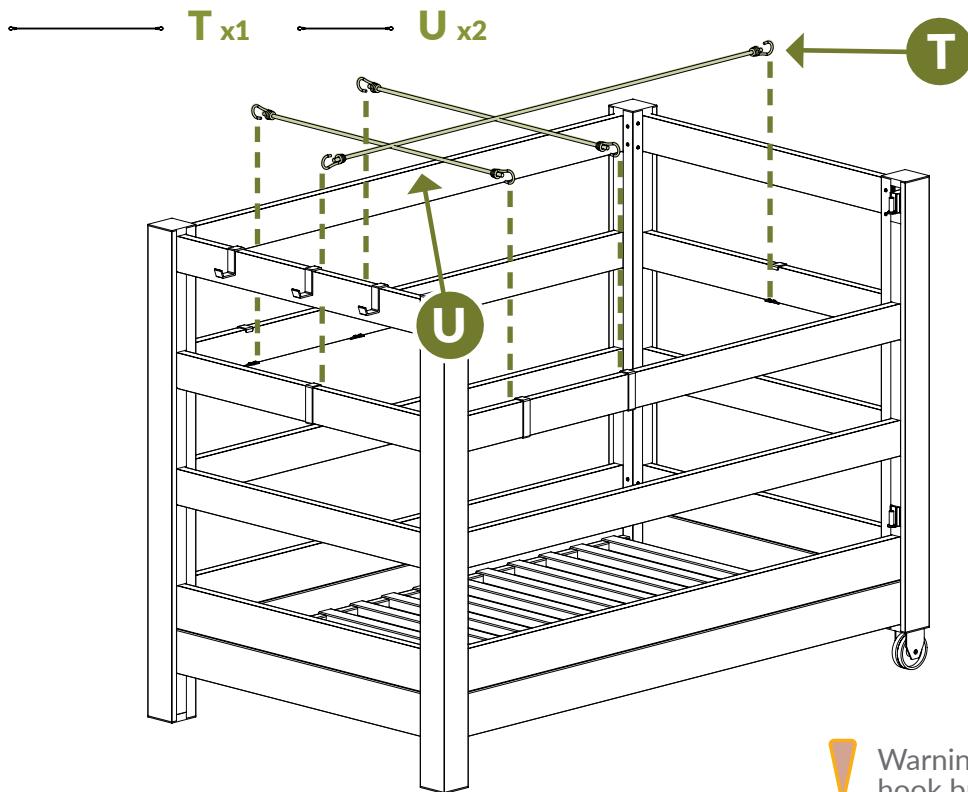


⚠ Warning: Do not hook bungee cords from towel hooks.

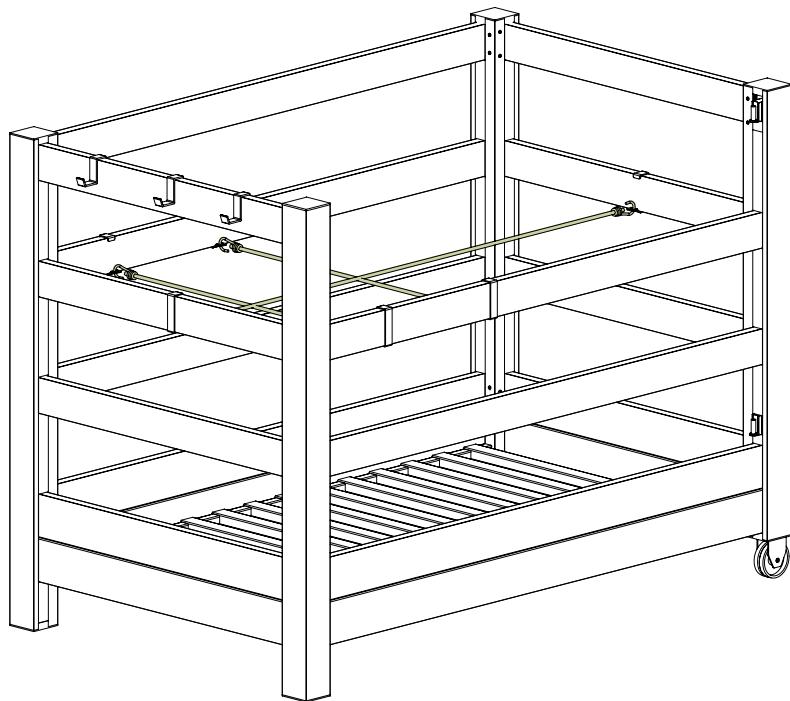


24

• WWW.ZIPPITY-OUTDOOR.COM

23

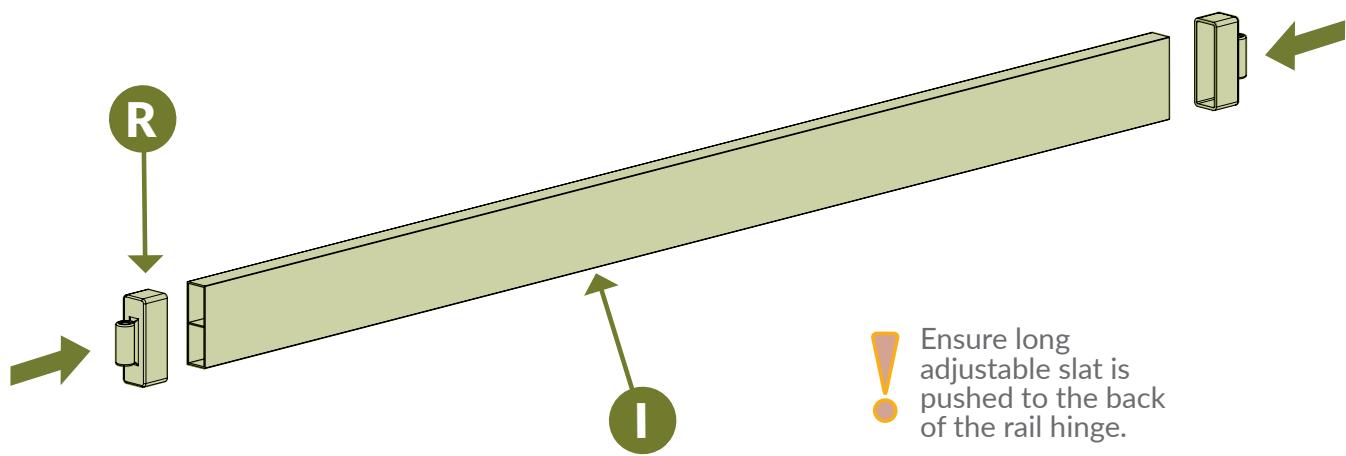


24

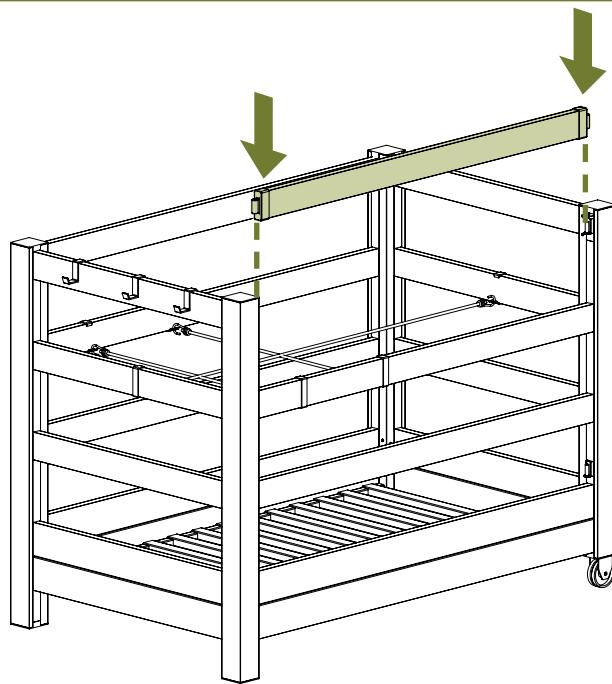


25



4
V x4

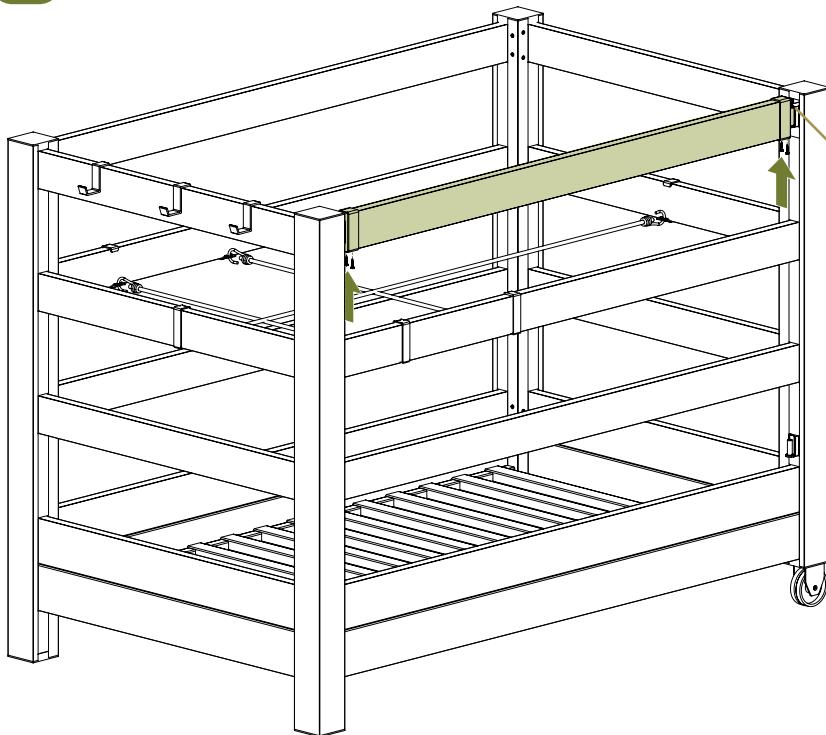

Tip: For the best fit, fasten your rail hinges with your adjustable slat on your poolside organizer.

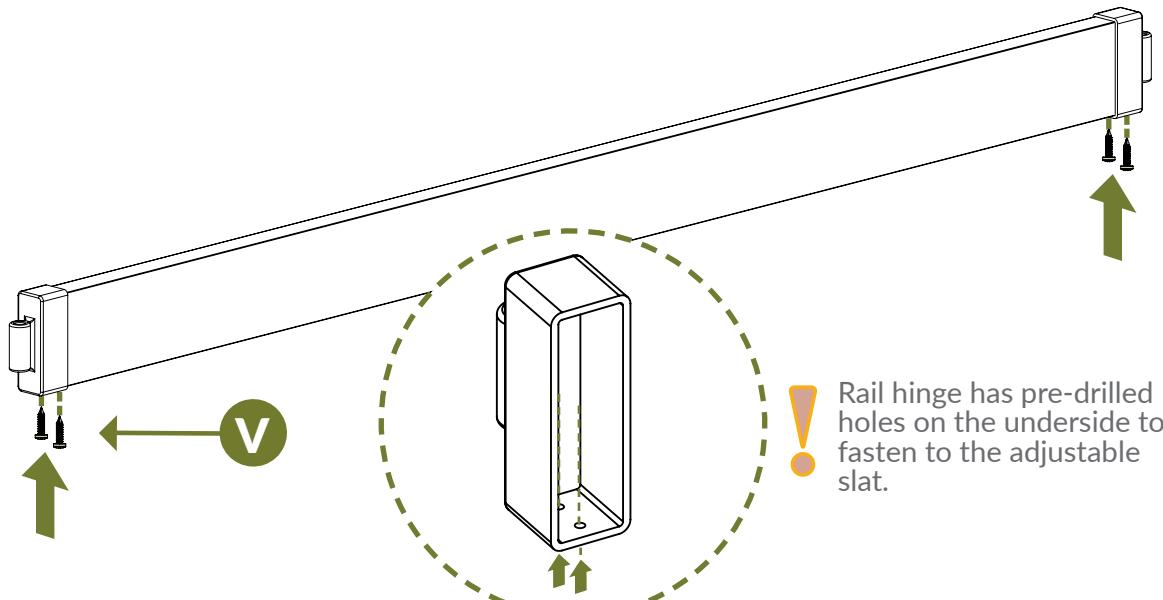

Rail hinge has pre-drilled holes on the underside to fasten to the adjustable slat.

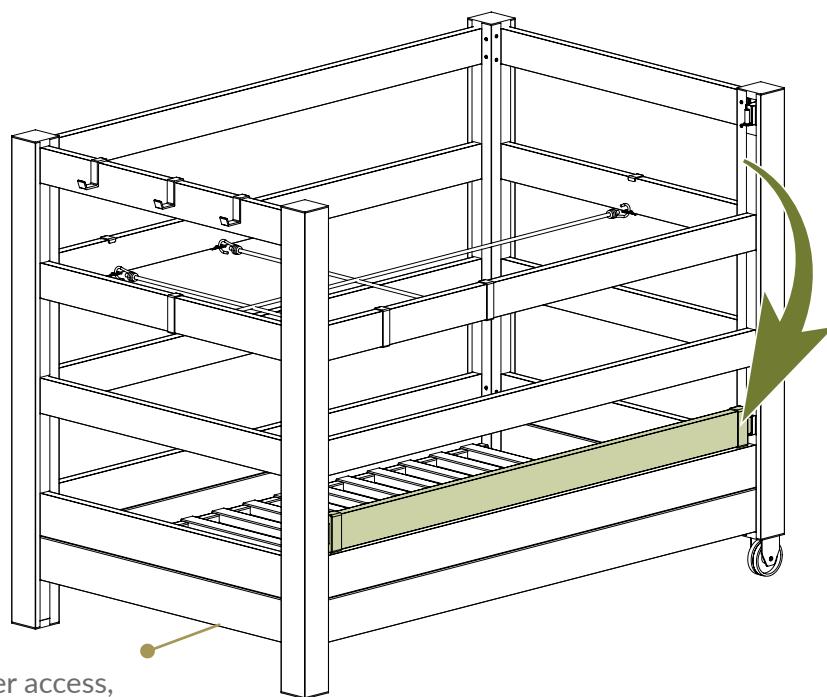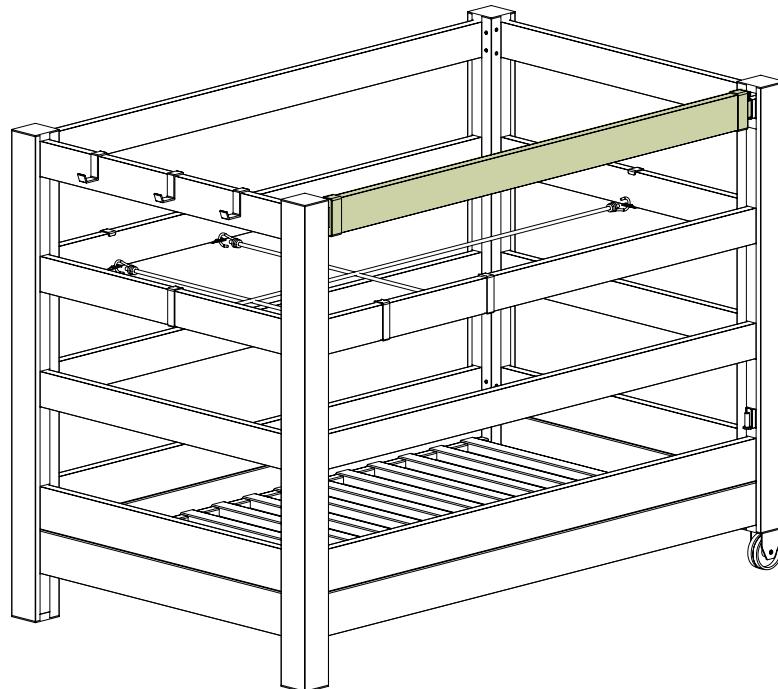

Tip: For easier access, place the adjustable rail in the lower position.



ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com



704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM

