




DESIGNED FOR LIFE

Assembly Instructions

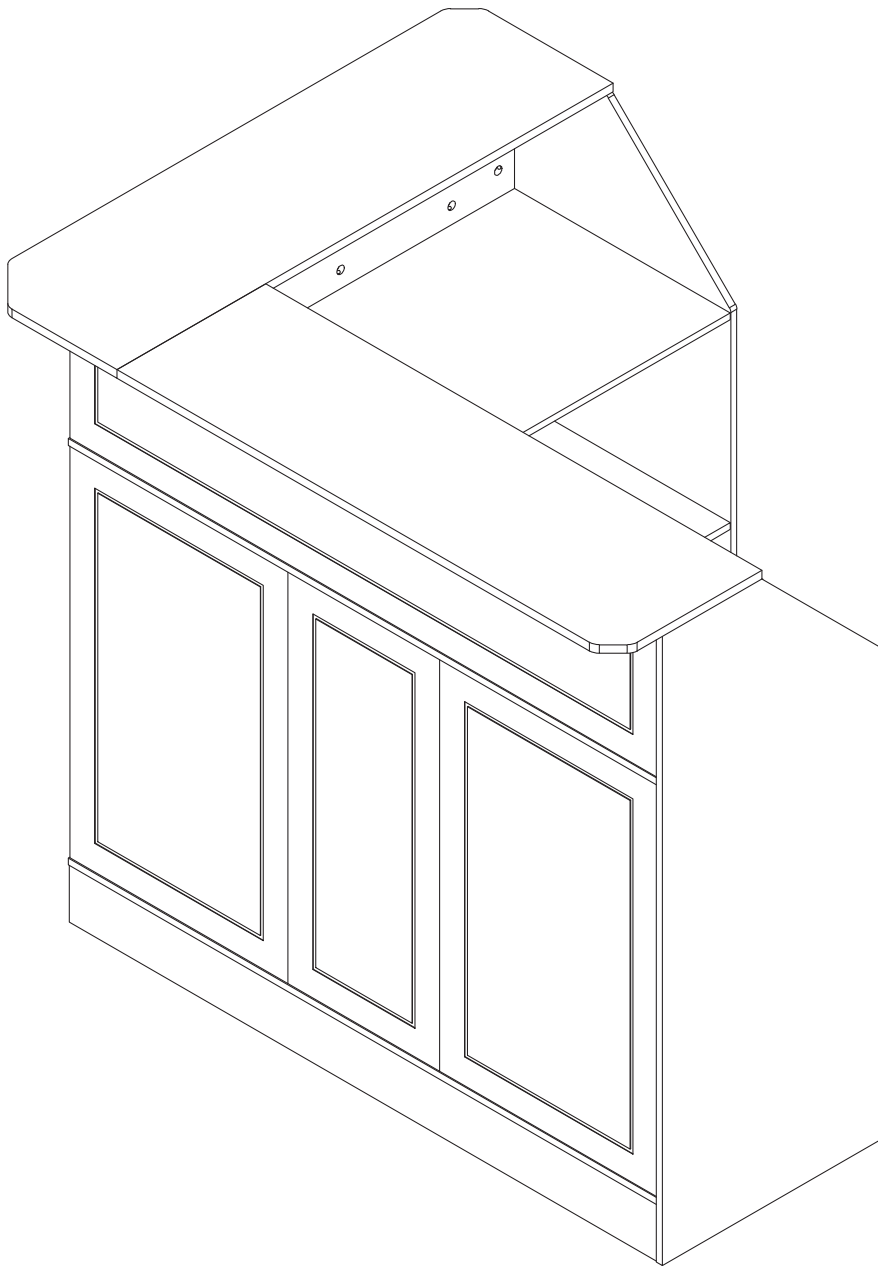

Corner Bar Table

Model No. **HOGA-YS0248**
HOGA-YS0301
HOGA-YS0324



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.



Installation Video




Step2

Search with the Model No.
(on the bottom left corner of the title page)

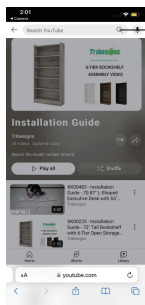


HOGA-YS0248

Note: If you can't find the assembly video, please contact us.

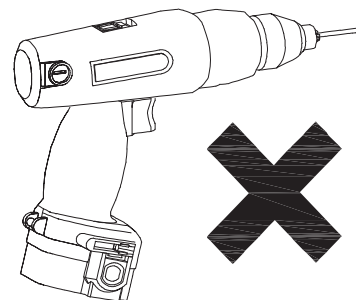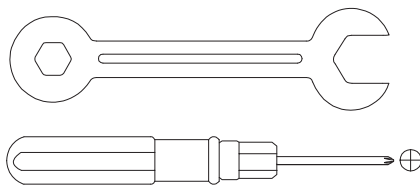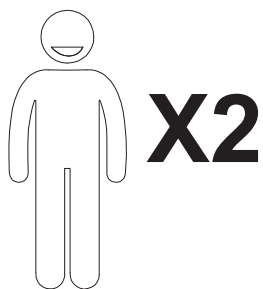



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

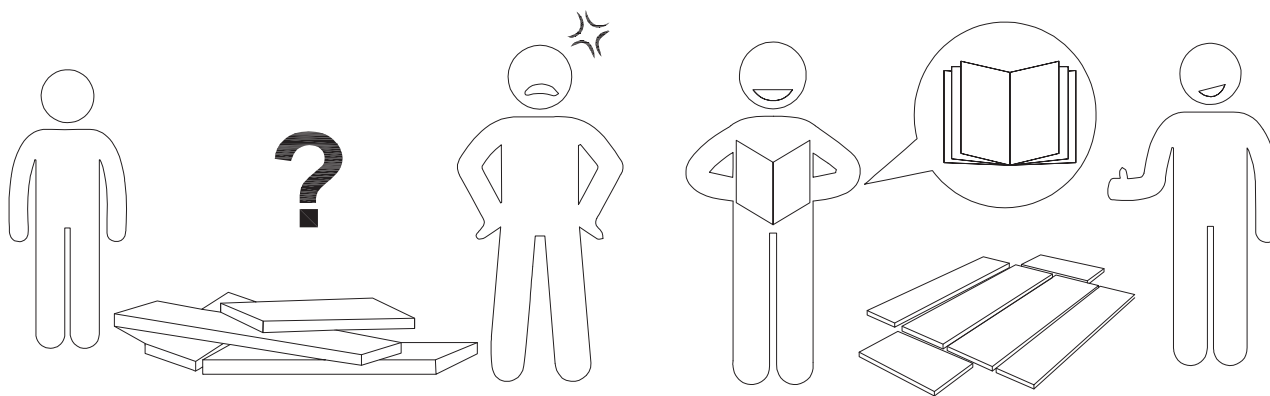

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

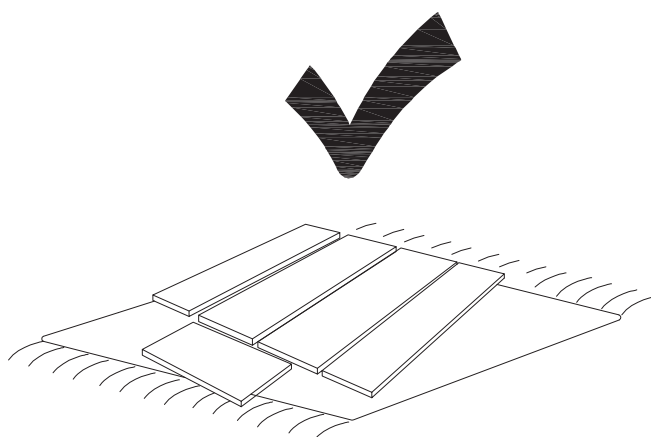
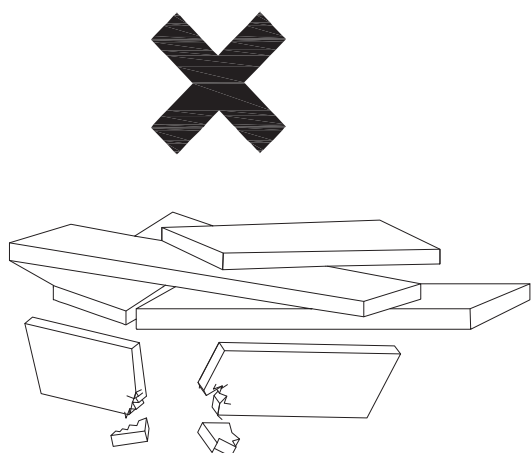









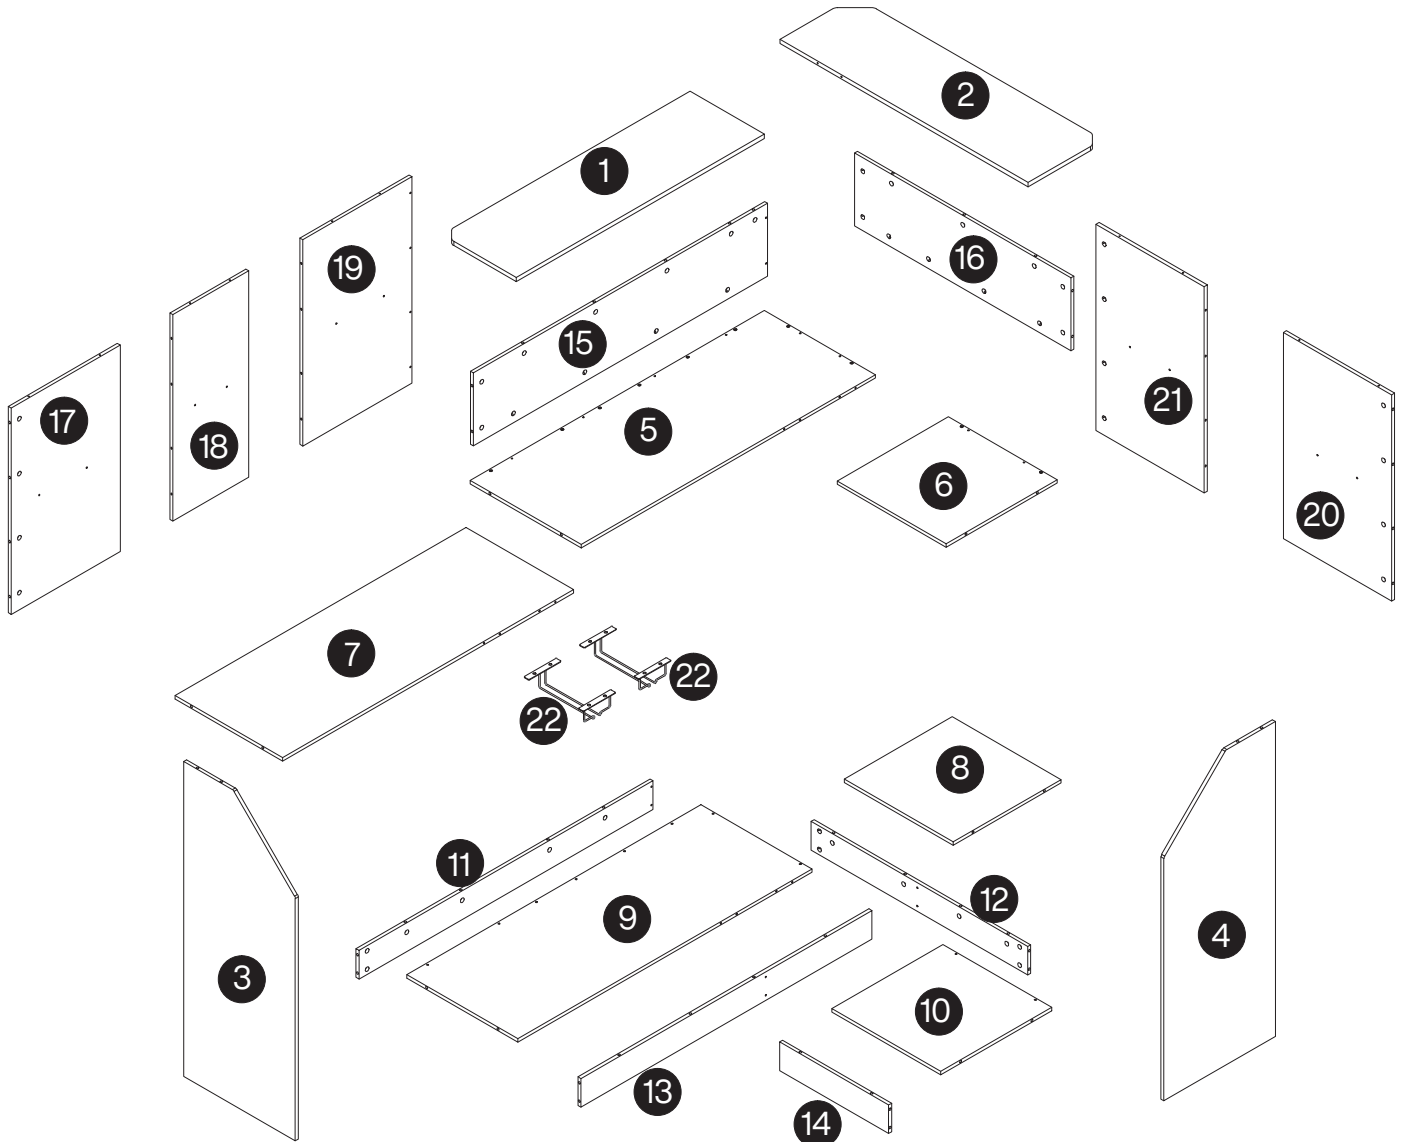


**⚠ Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.



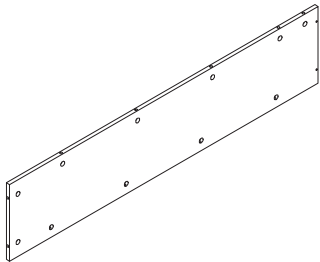
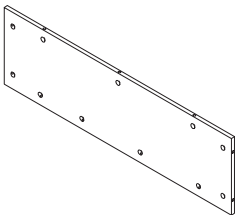
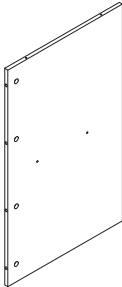

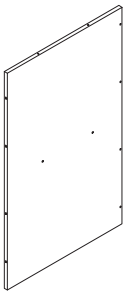


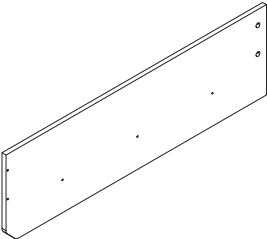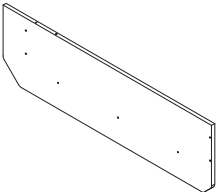


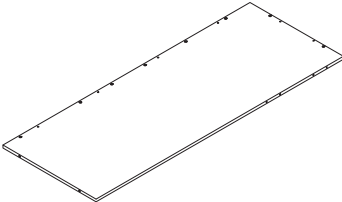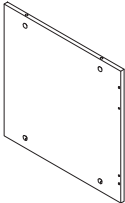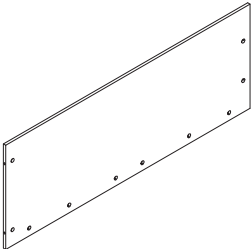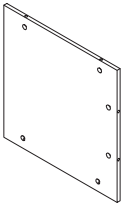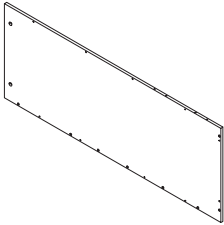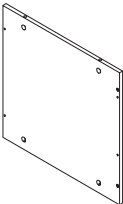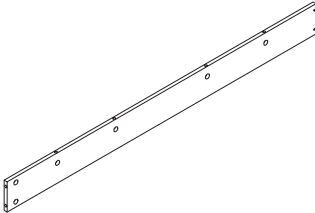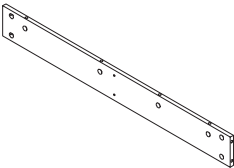Parts List







<div>1</div> <div></div> <div>1pc</div>	<div>2</div> <div></div> <div>1pc</div>	<div>3</div> <div></div> <div>1pc</div>
<div>4</div> <div></div> <div>1pc</div>	<div>5</div> <div></div> <div>1pc</div>	<div>6</div> <div></div> <div>1pc</div>
<div>7</div> <div></div> <div>1pc</div>	<div>8</div> <div></div> <div>1pc</div>	<div>9</div> <div></div> <div>1pc</div>
<div>10</div> <div></div> <div>1pc</div>	<div>11</div> <div></div> <div>1pc</div>	<div>12</div> <div></div> <div>1pc</div>



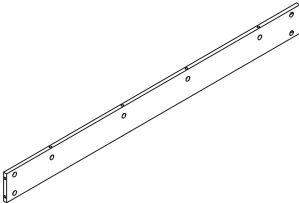



Parts List
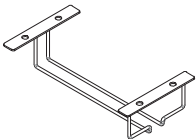
<div>13</div> <div></div> <div>1pc</div>	<div>14</div> <div></div> <div>1pc</div>	<div>15</div> <div></div> <div>1pc</div>	
<div>16</div> <div></div> <div>1pc</div>	<div>17</div> <div></div> <div>1pc</div>	<div>18</div> <div></div> <div>1pc</div>	
<div>19</div> <div></div> <div>1pc</div>	<div>20</div> <div></div> <div>1pc</div>	<div>21</div> <div></div> <div>1pc</div>	<div>22</div> <div></div> <div>2pcs</div>

Hardware List

A	B	C	D	E
 M6 x 40mm  9.5	 Ø6 x 35mm	 M6 x 10mm	 ST5 x 40mm	 → 96
96pcs	18pcs	8pcs	20pcs	1pc

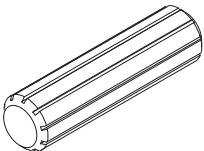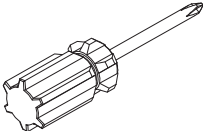
F		4#	3#
 Ø8 x 35mm			
2pcs	1pc	1pc	1pc




Parts List

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

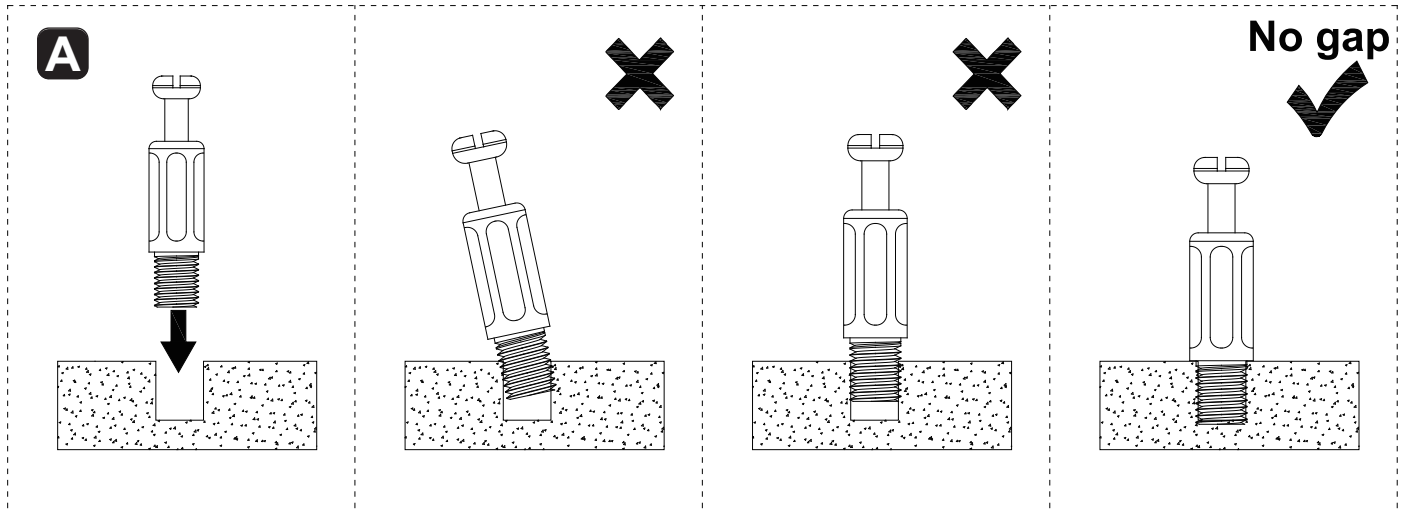




Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

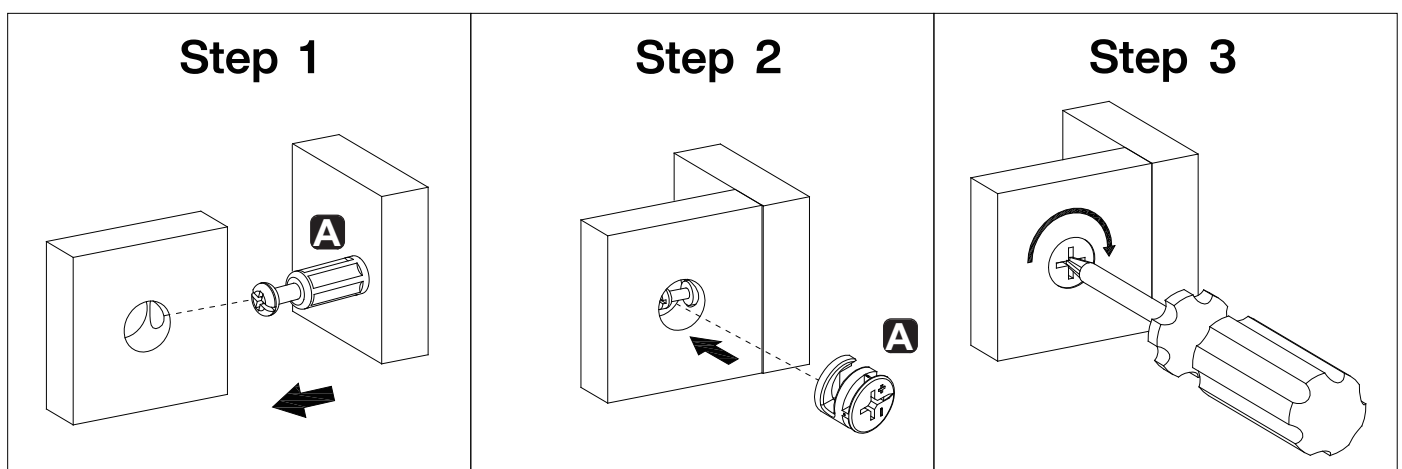




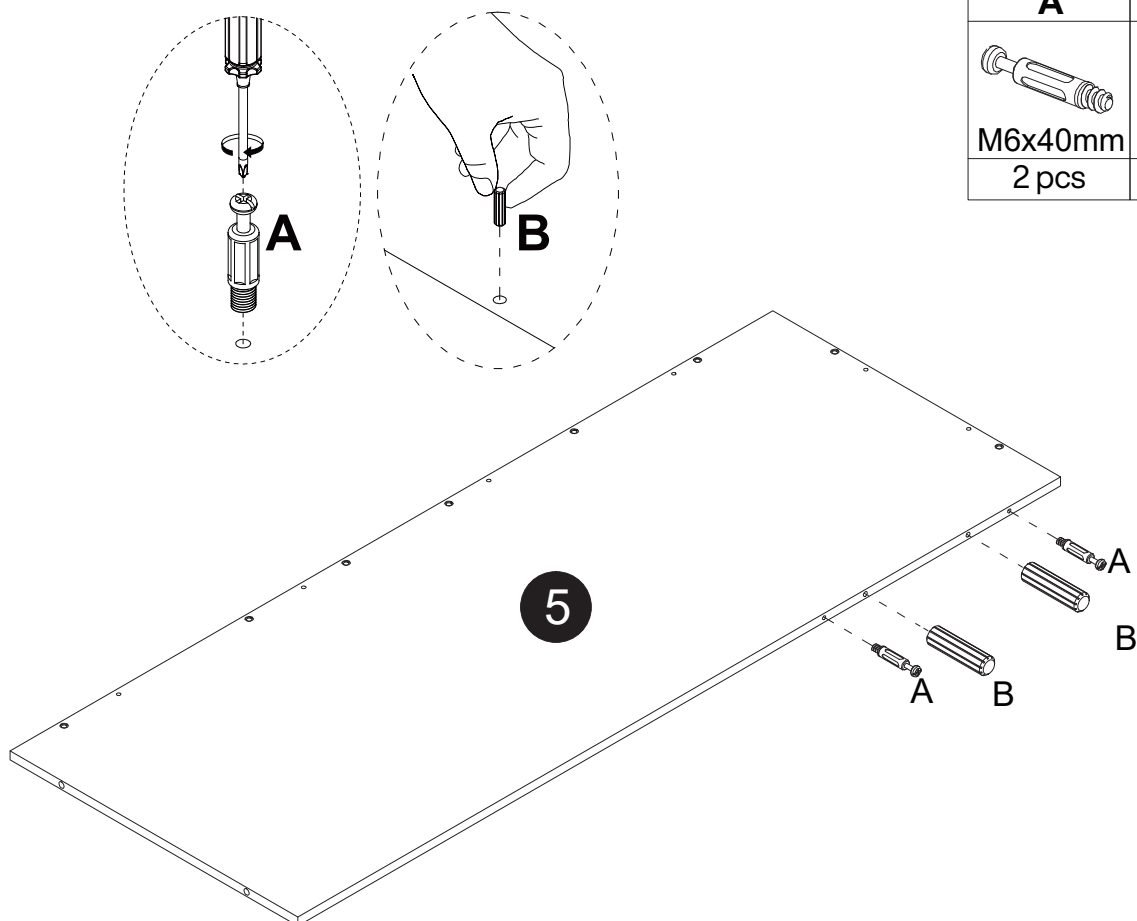

1




A	B
	
M6x40mm 2 pcs	Ø6x35mm 2 pcs

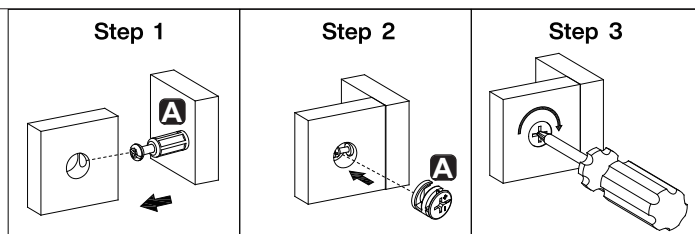2






A	C
	
Ø15 2 pcs	M6x10mm 8 pcs

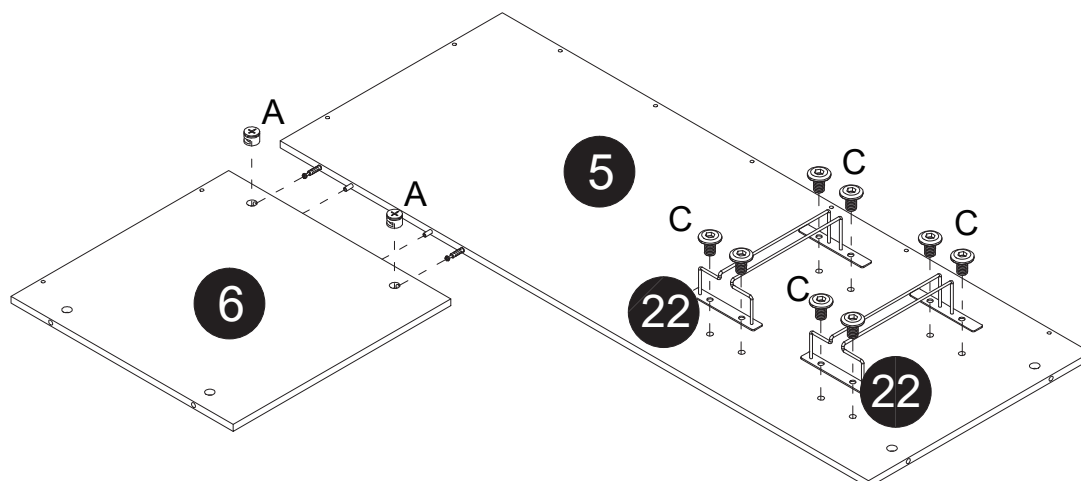





3

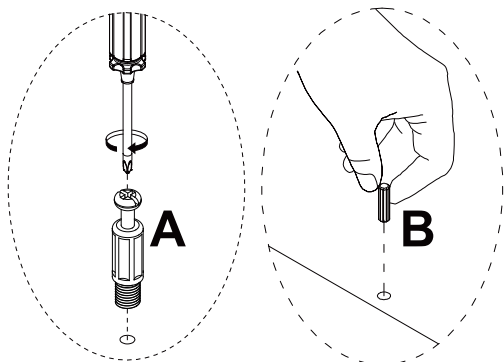


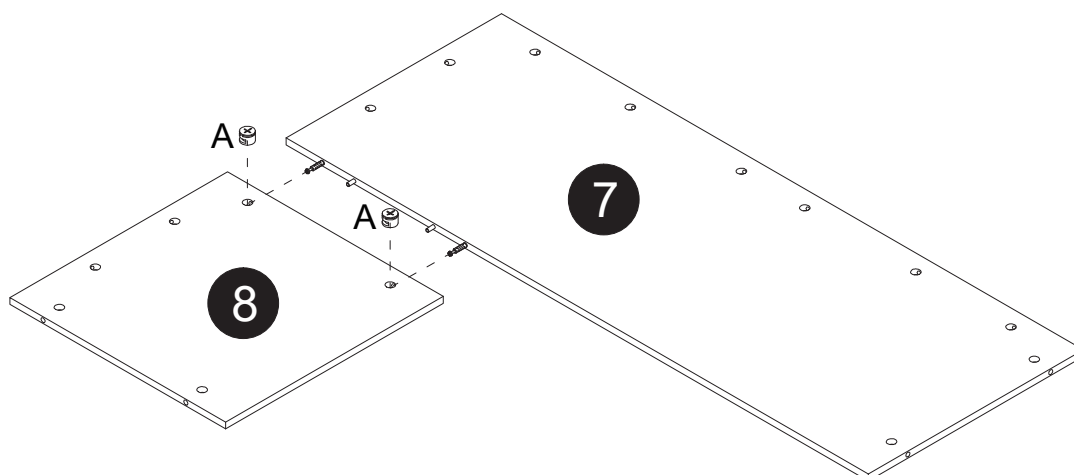
A	B
	
M6x40mm	Ø6x35mm
2 pcs	2 pcs

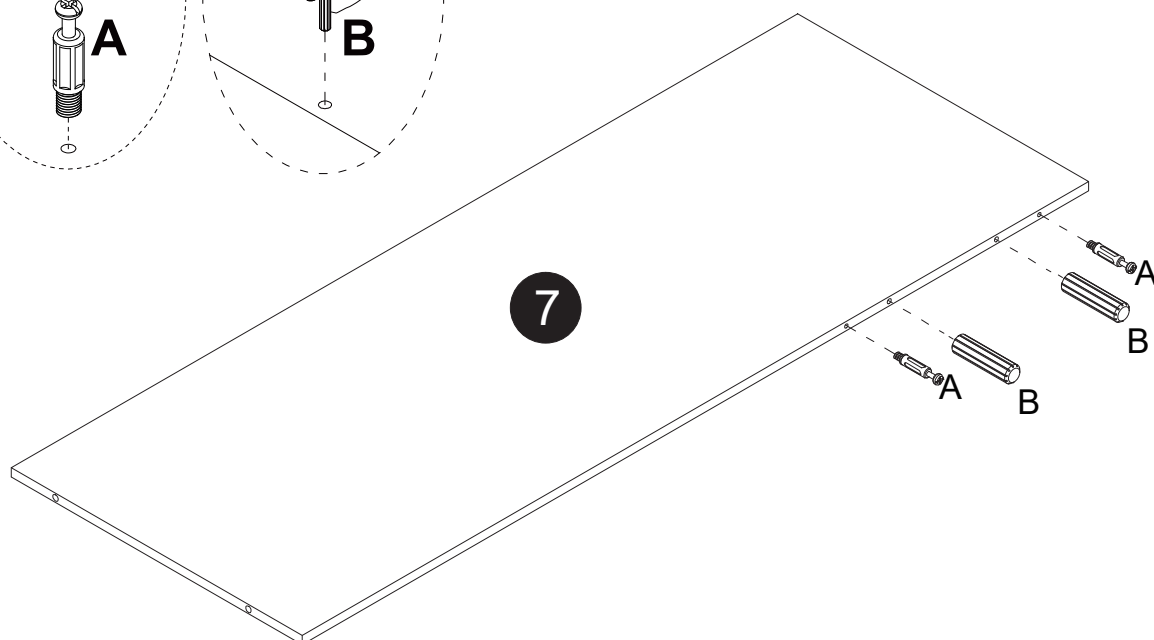

4


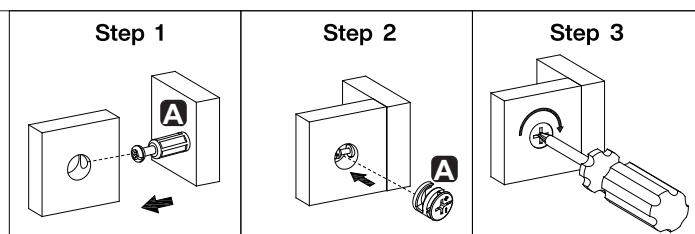



A

Ø15
2 pcs








5

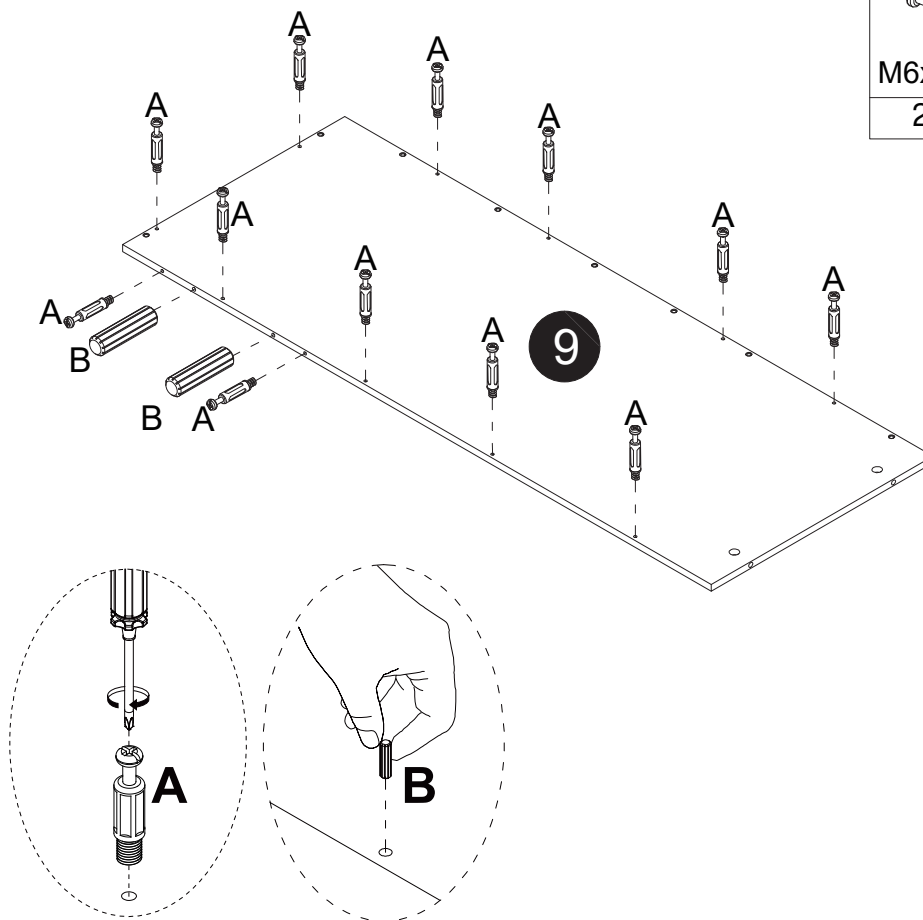
A	B
	
M6x40mm	Ø6x35mm
2pcs	2pcs



6

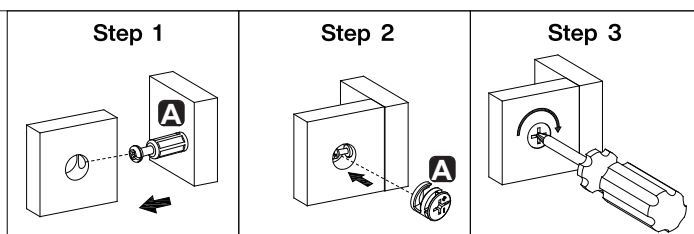




A	A
	
Ø15	M6x40mm
2pcs	4pcs

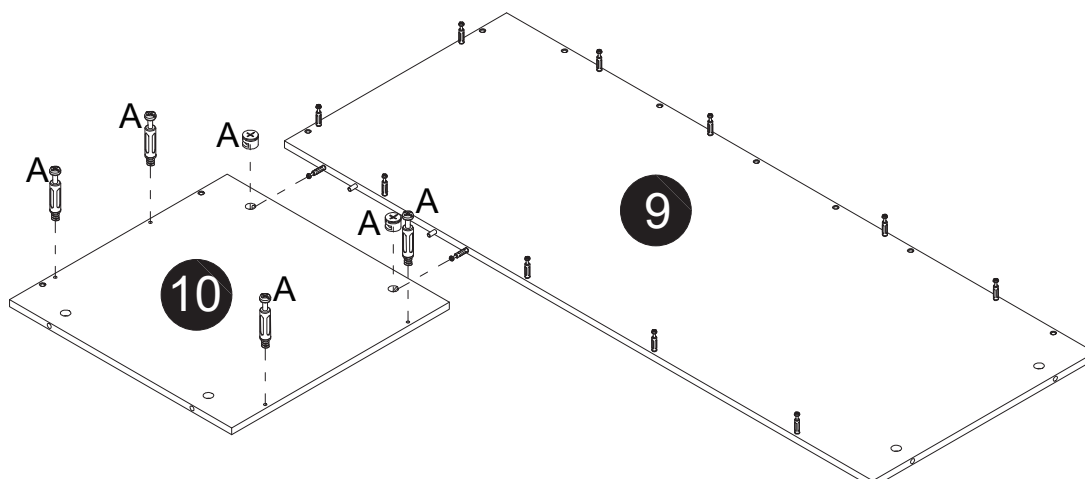







7

A	F
	
M6x40mm	Ø8x35mm
2pcs	2pcs

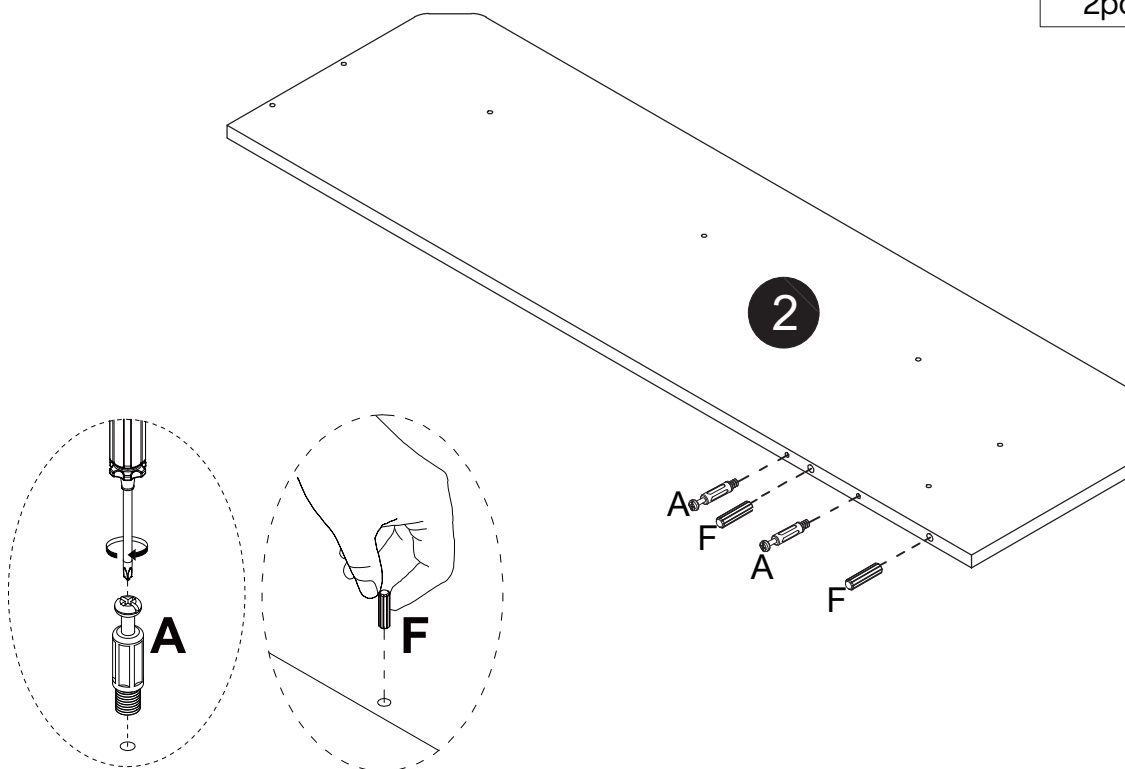


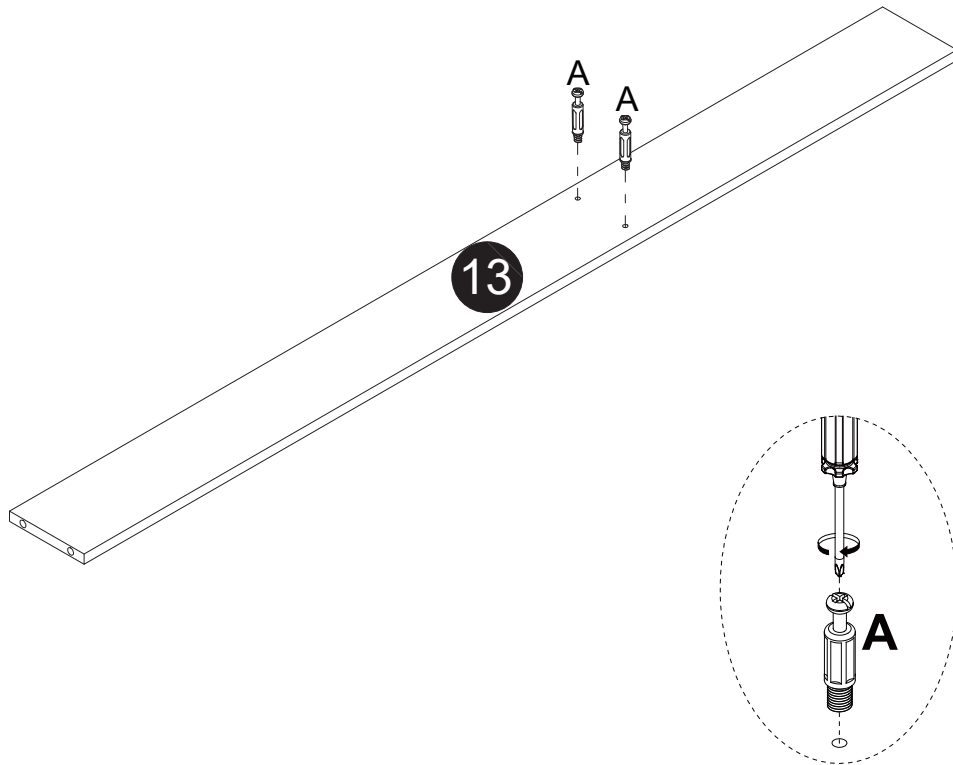
8

A	A
	
Ø15	M6x40mm
2pcs	12pcs

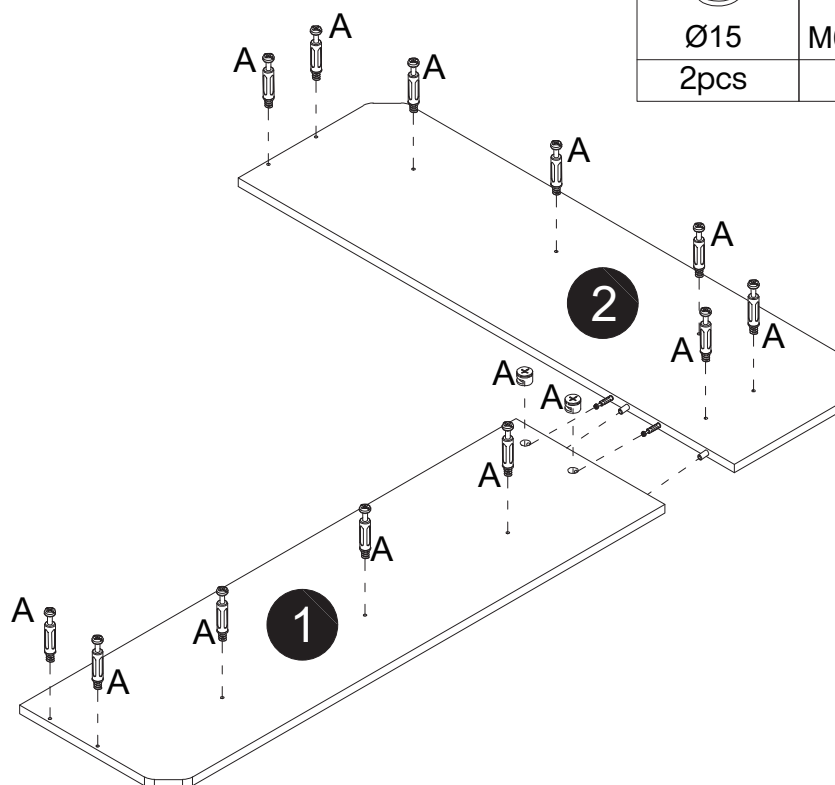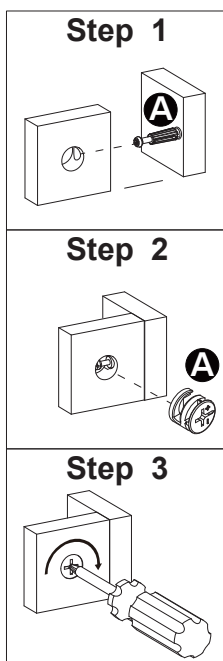


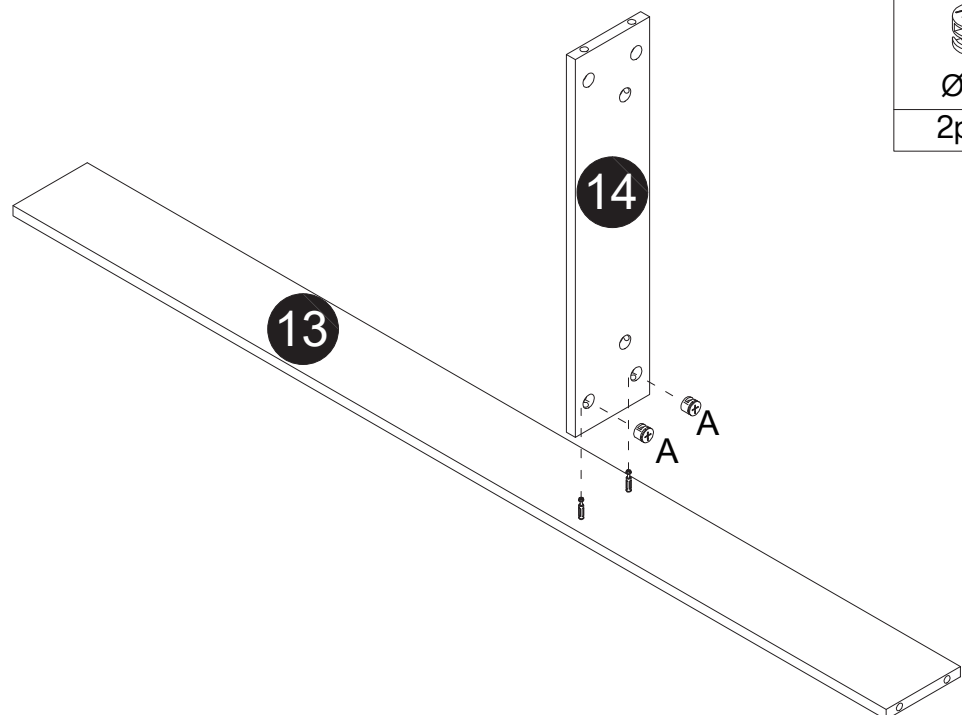
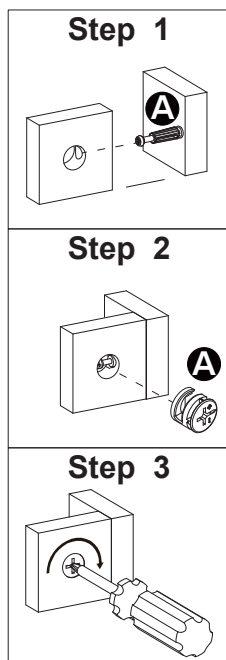
9

A

M6x40mm
2pcs




10


A

Ø15
2pcs





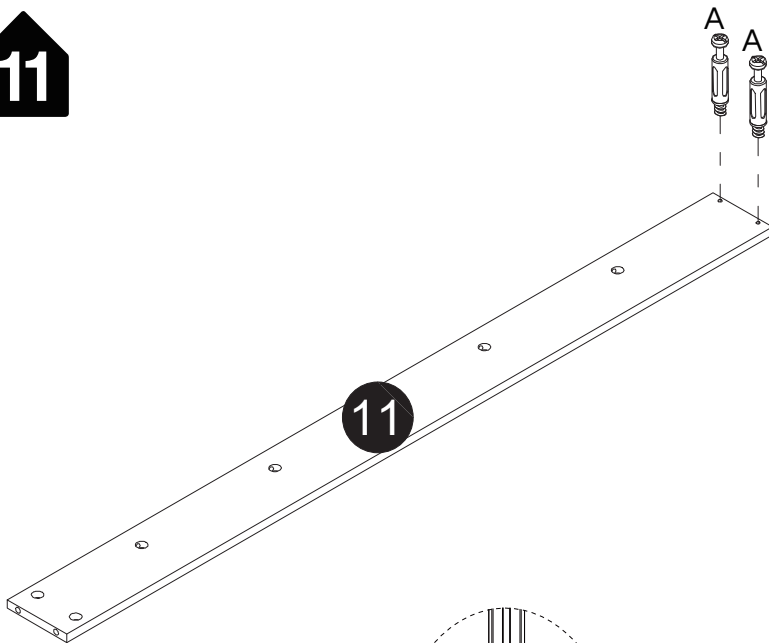

11




A

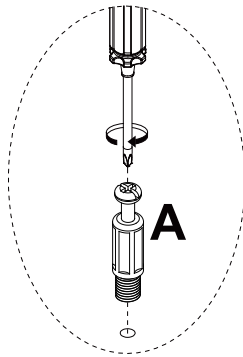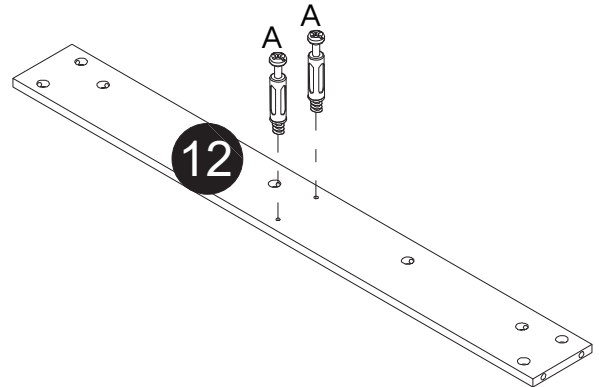M6x40mm
4pcs




12


12

A

Ø15
2pcs



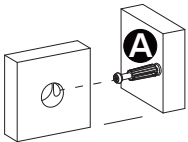
Step 1

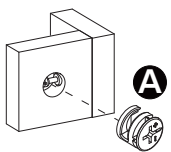

Step 2




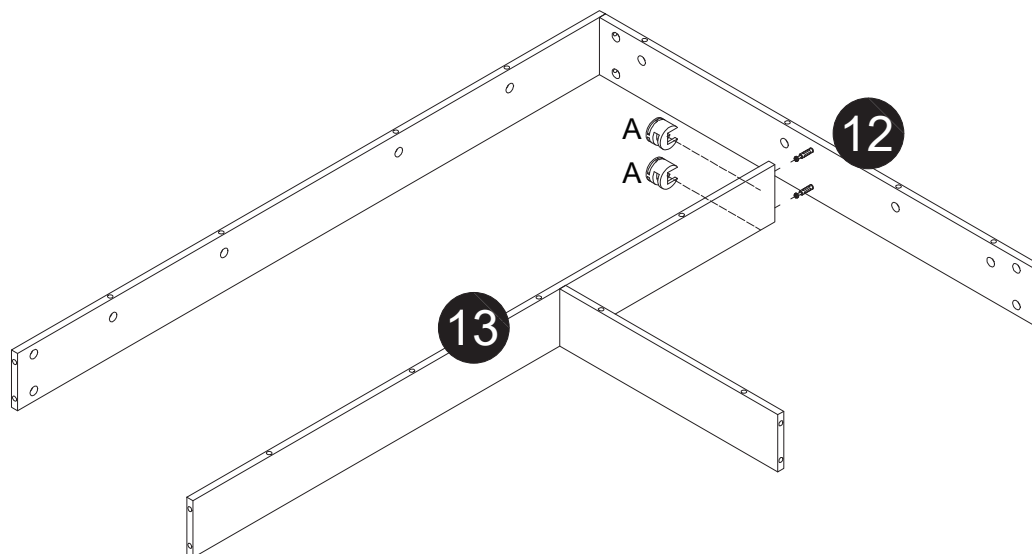
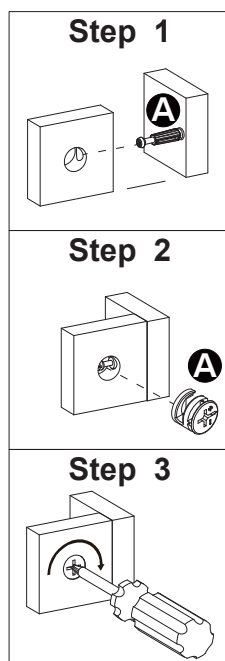
Step 3

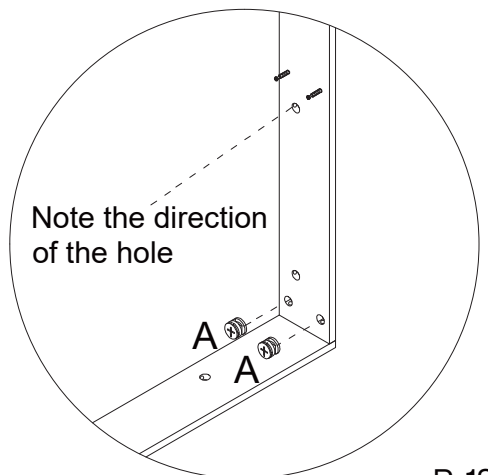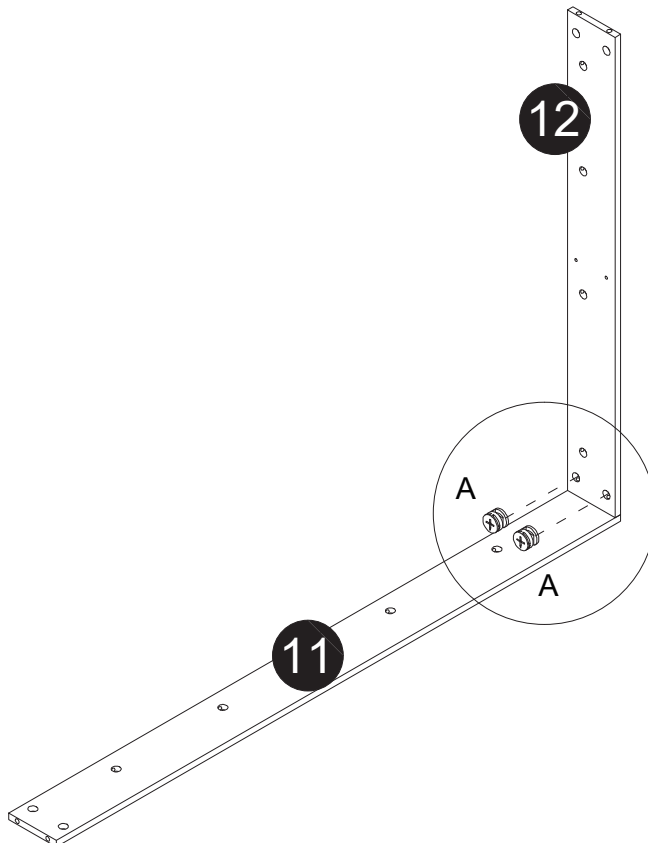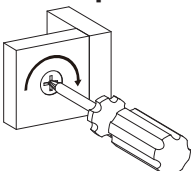






13

A

Ø15
2pcs




14

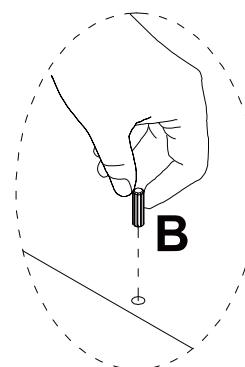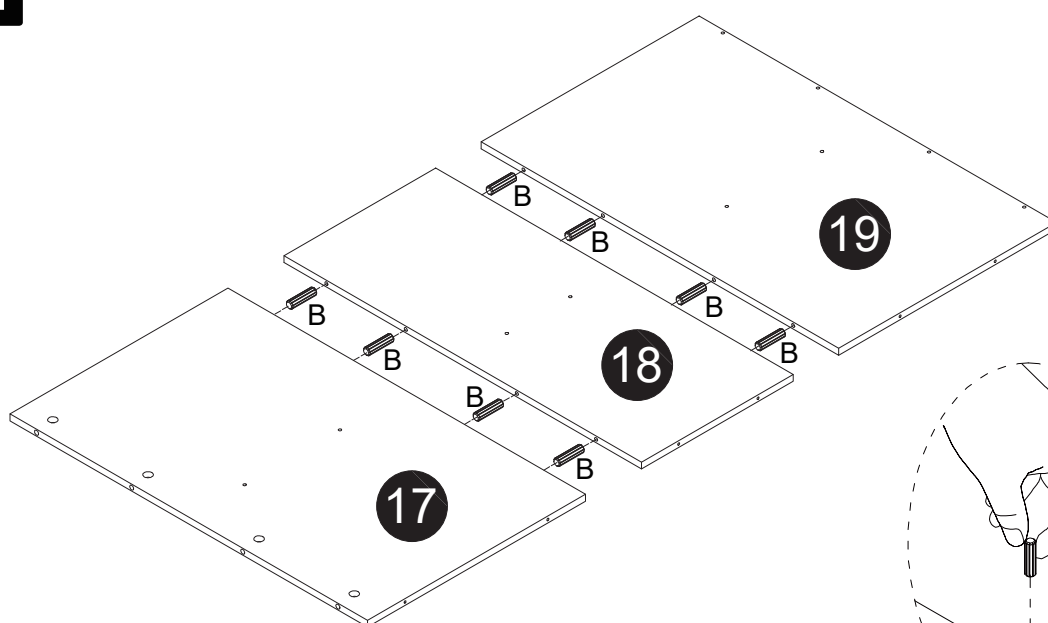
B

Ø6x35mm
8pcs







15

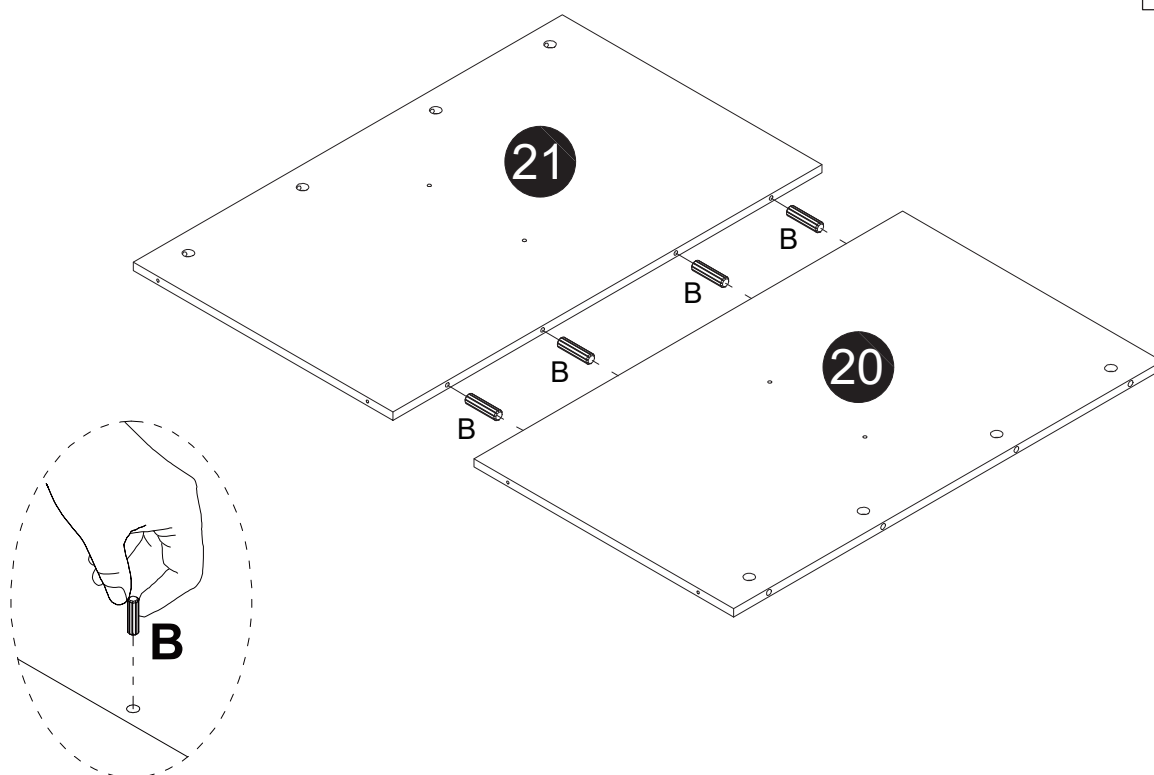B
 Ø6x35mm
4pcs




16


A
 M6x40mm
10pcs

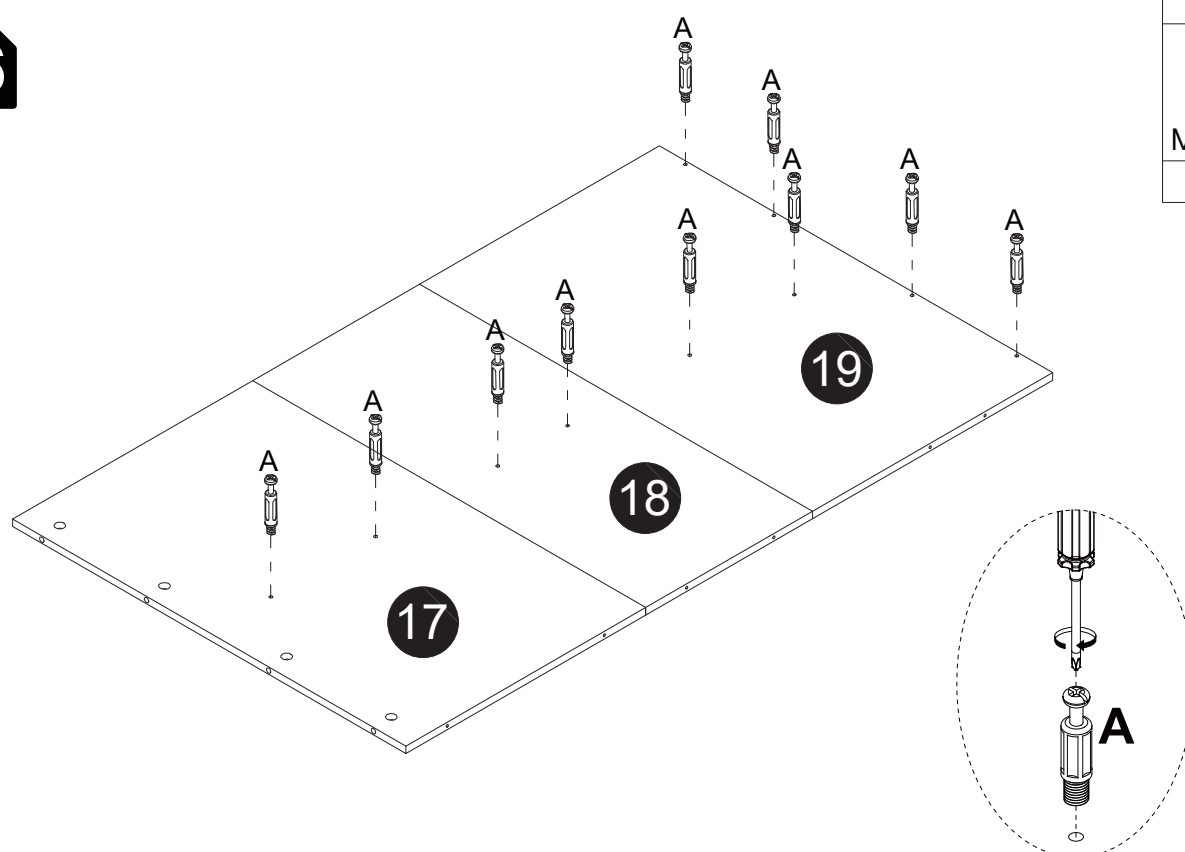




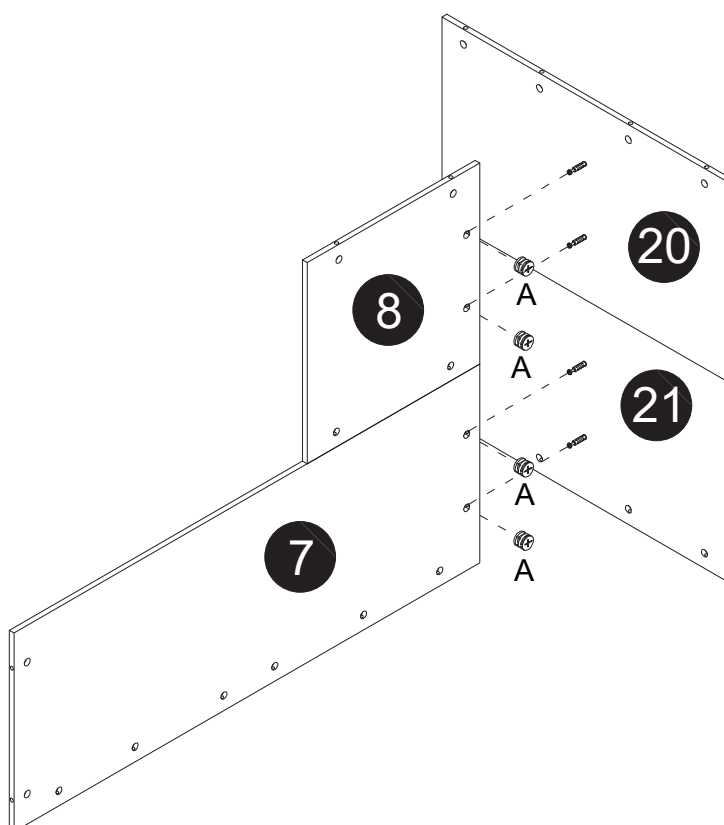
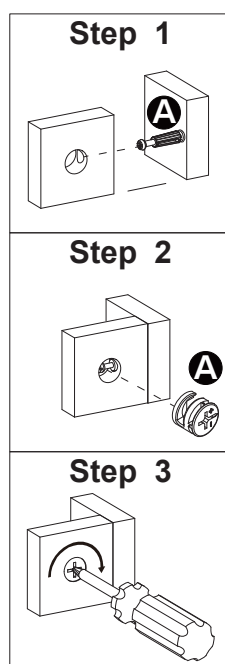
17

A

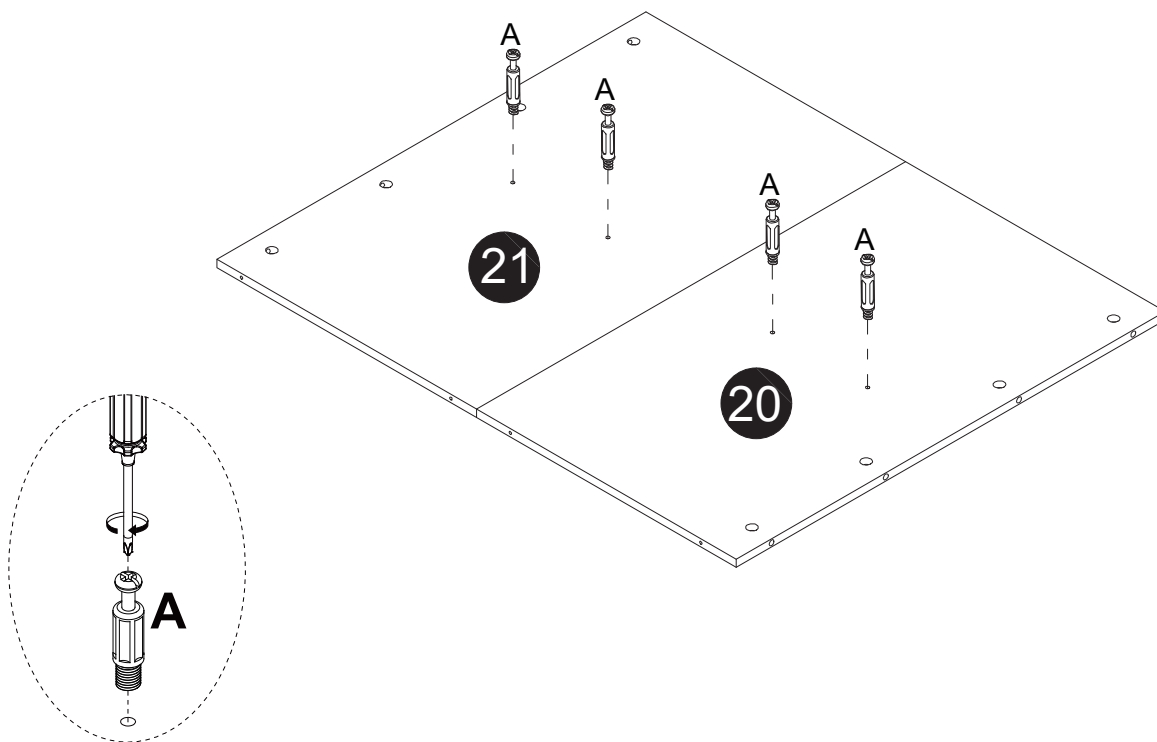M6x40mm
4pcs





18


A

Ø15
4pcs



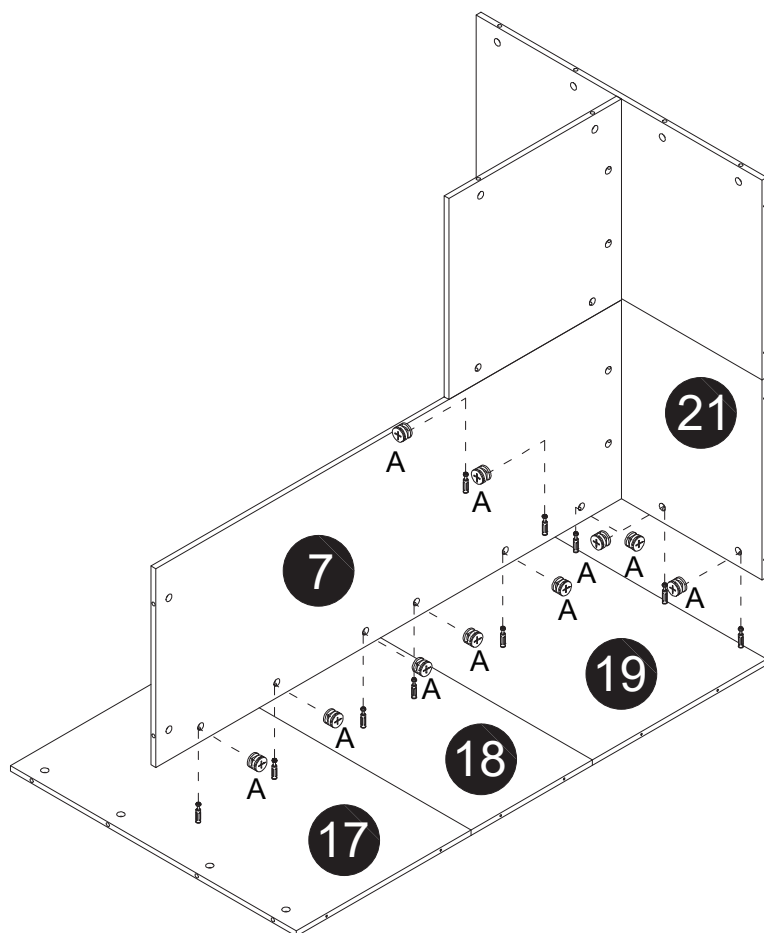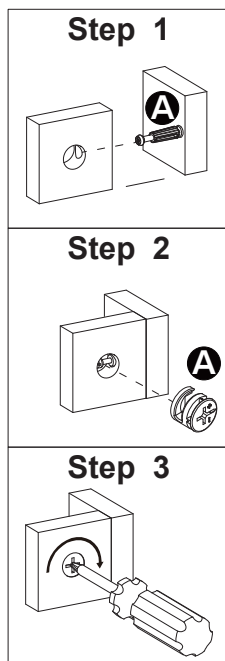



19



A

Ø15
10pcs

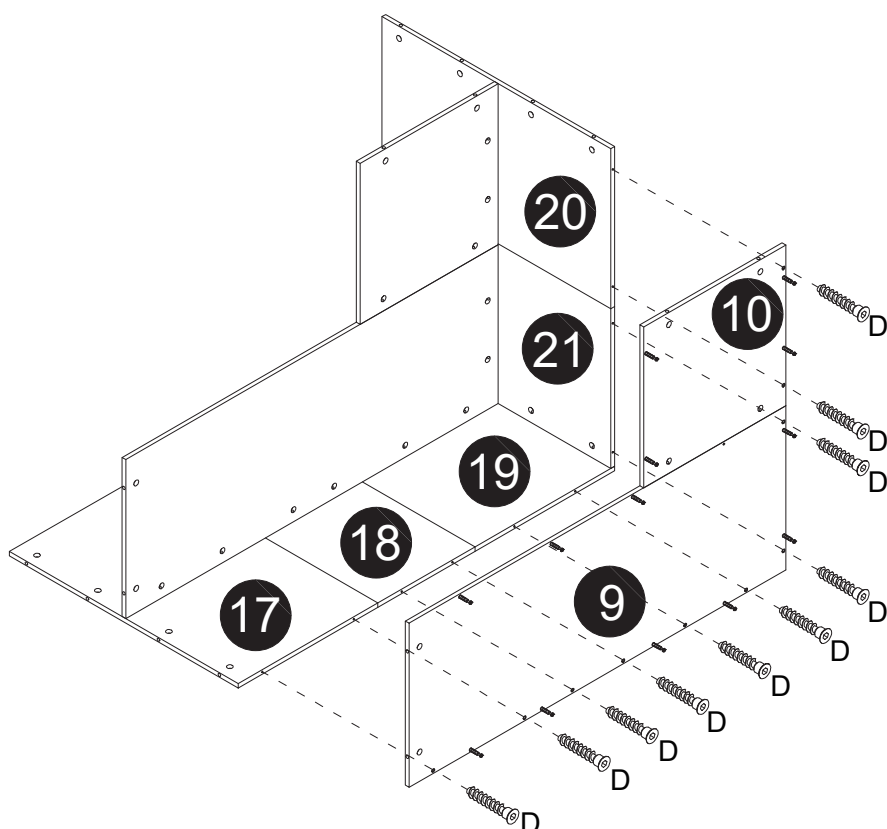
20





D

M5x40mm
10pcs





21

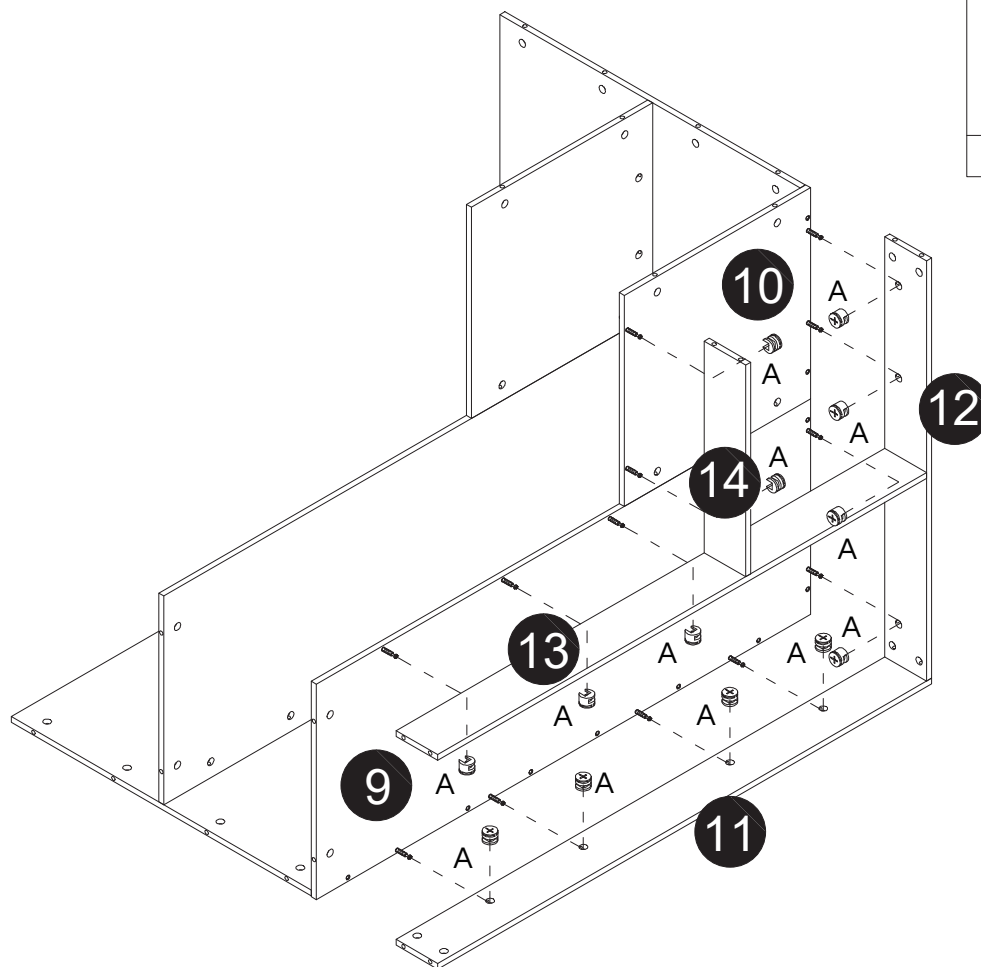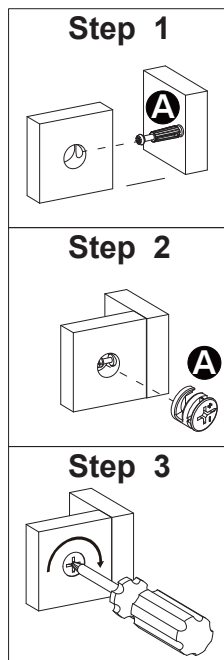A

Ø15
14pcs





22

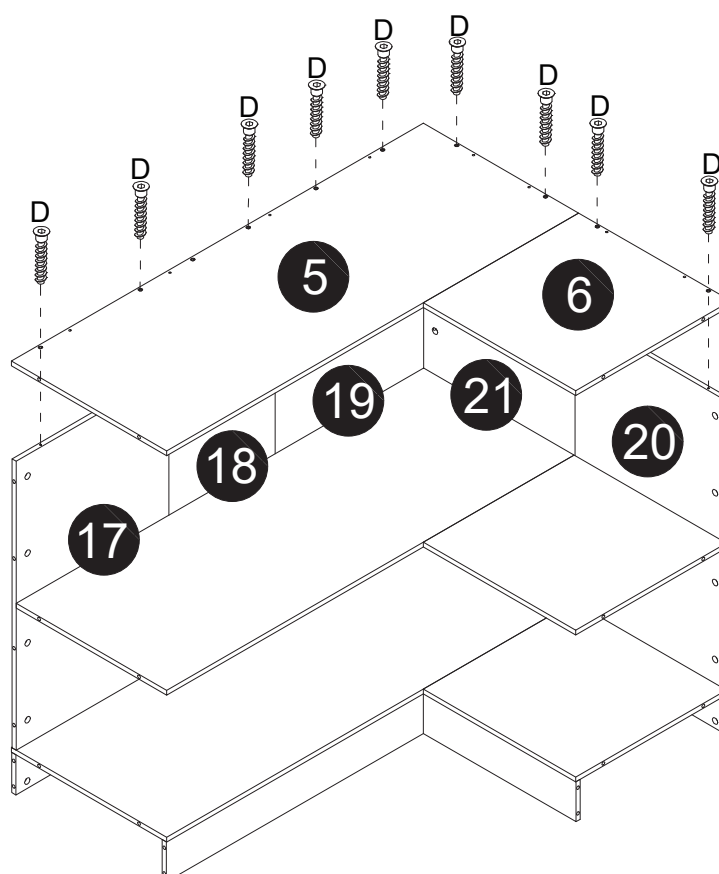
D

M5x40mm
10pcs



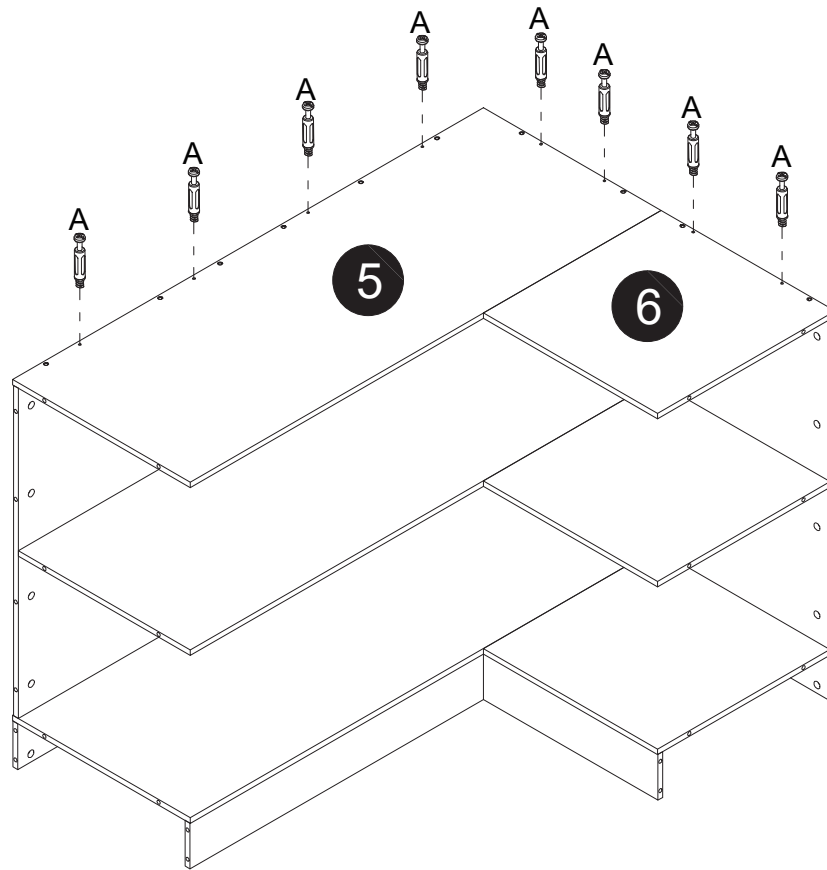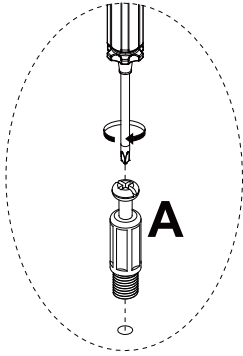



23



A

M6x40mm
8pcs

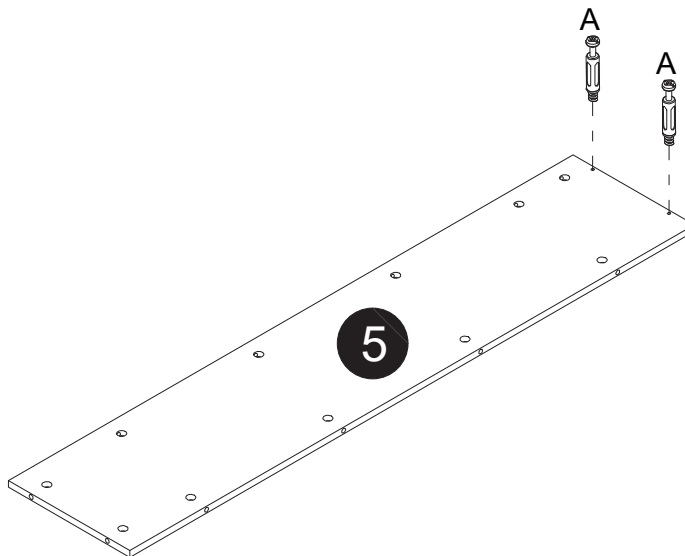
24




A

M6x40mm
2pcs




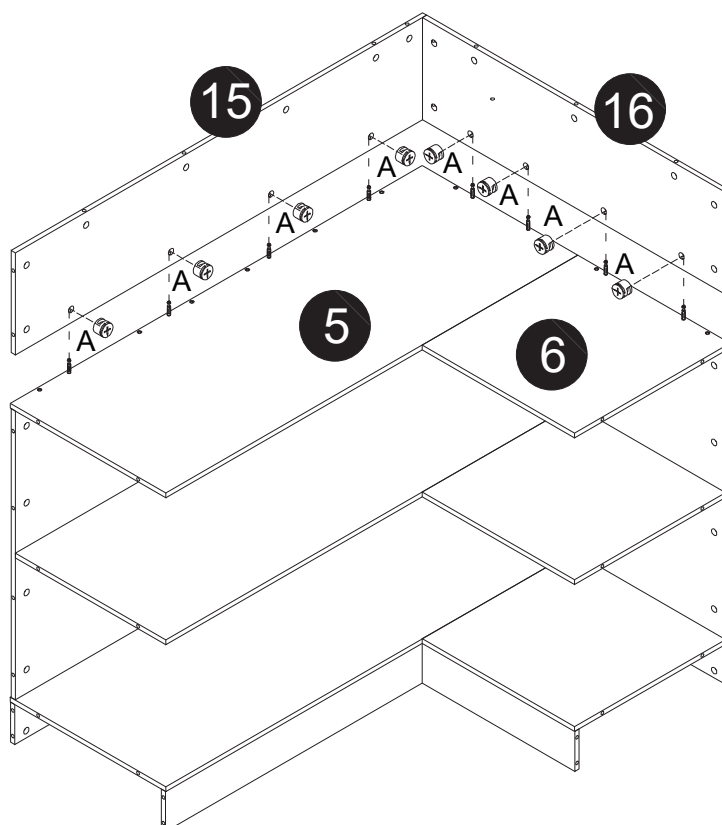
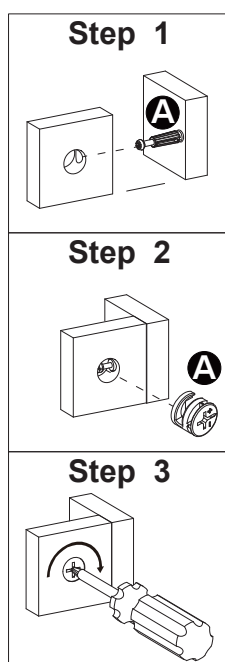
25

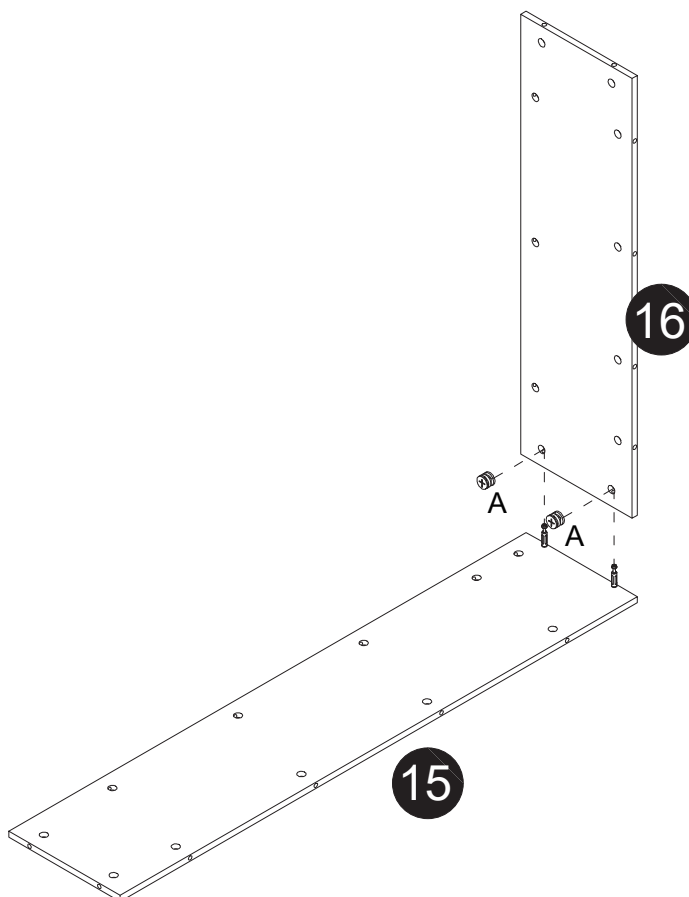A

Ø15
2pcs




26


A

Ø15
8pcs






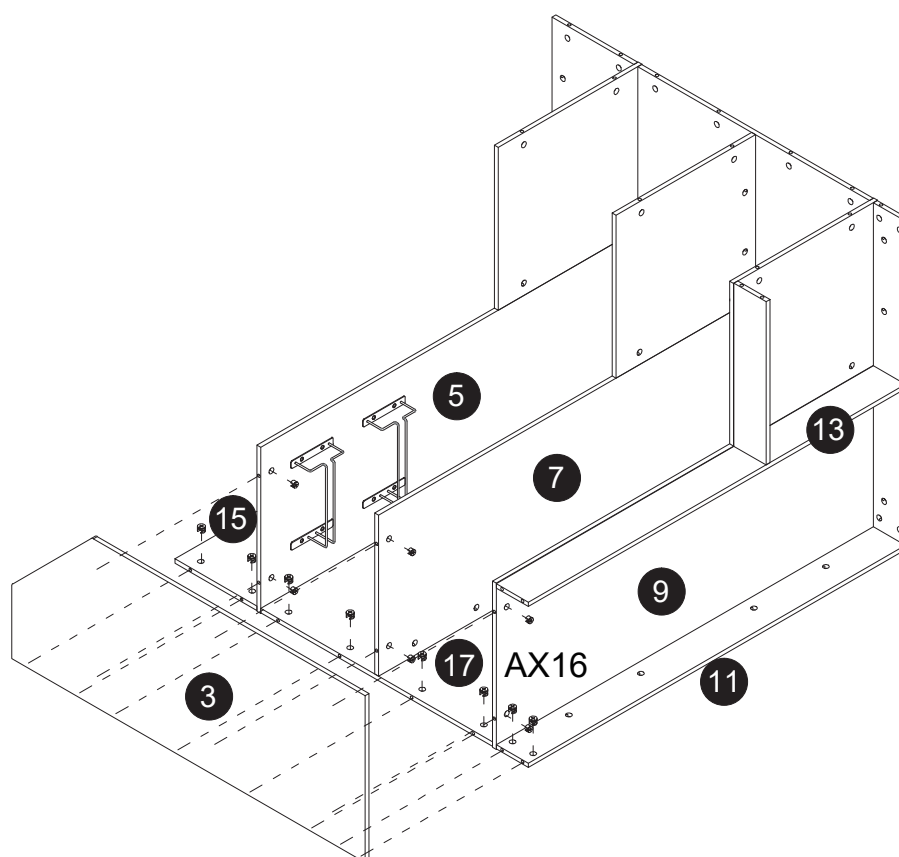
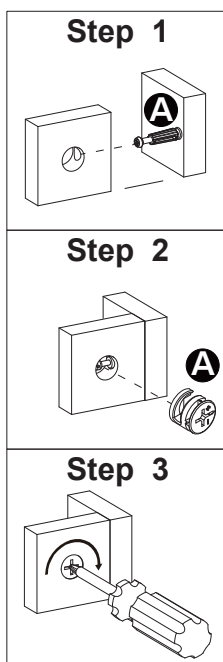
27

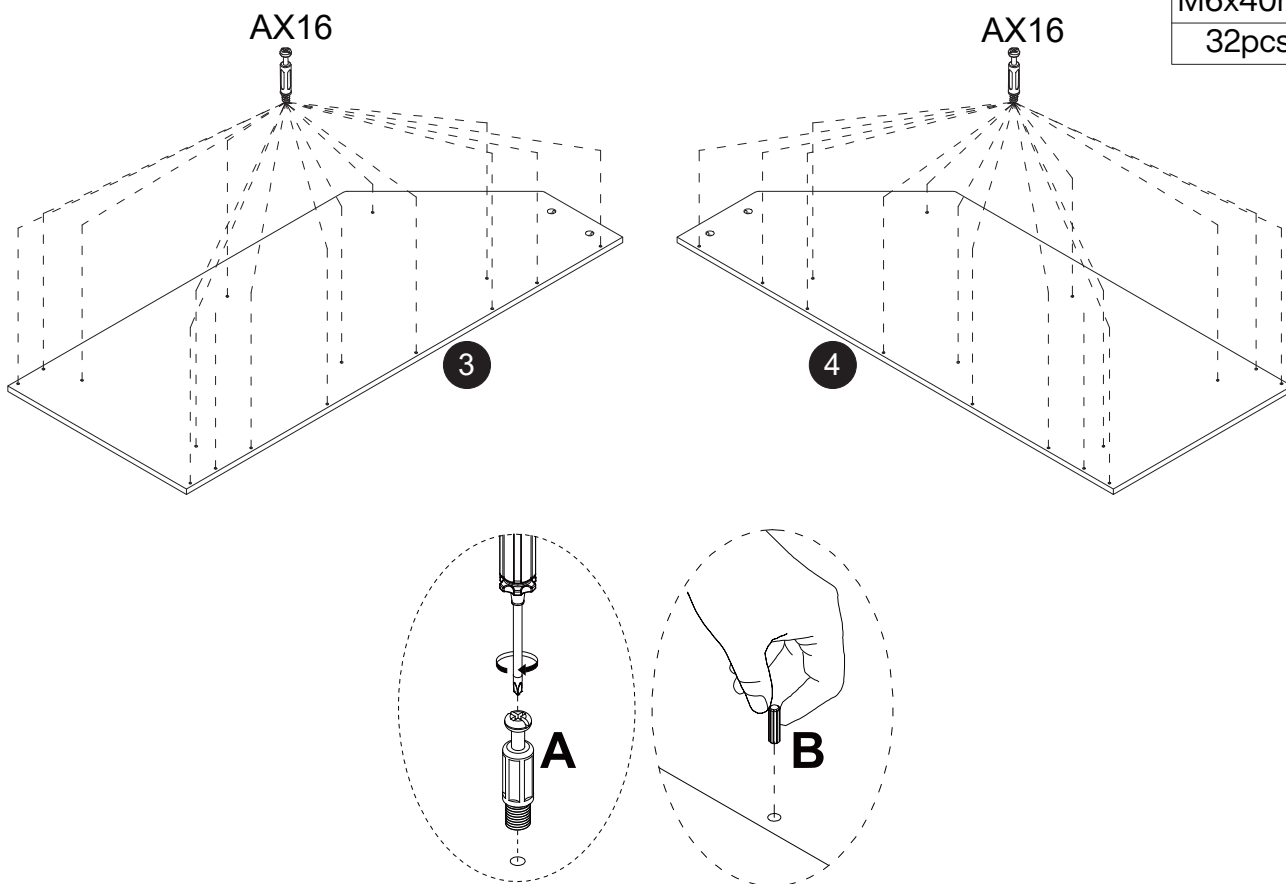A

M6x40mm
32pcs




28



A

Ø15
16pcs





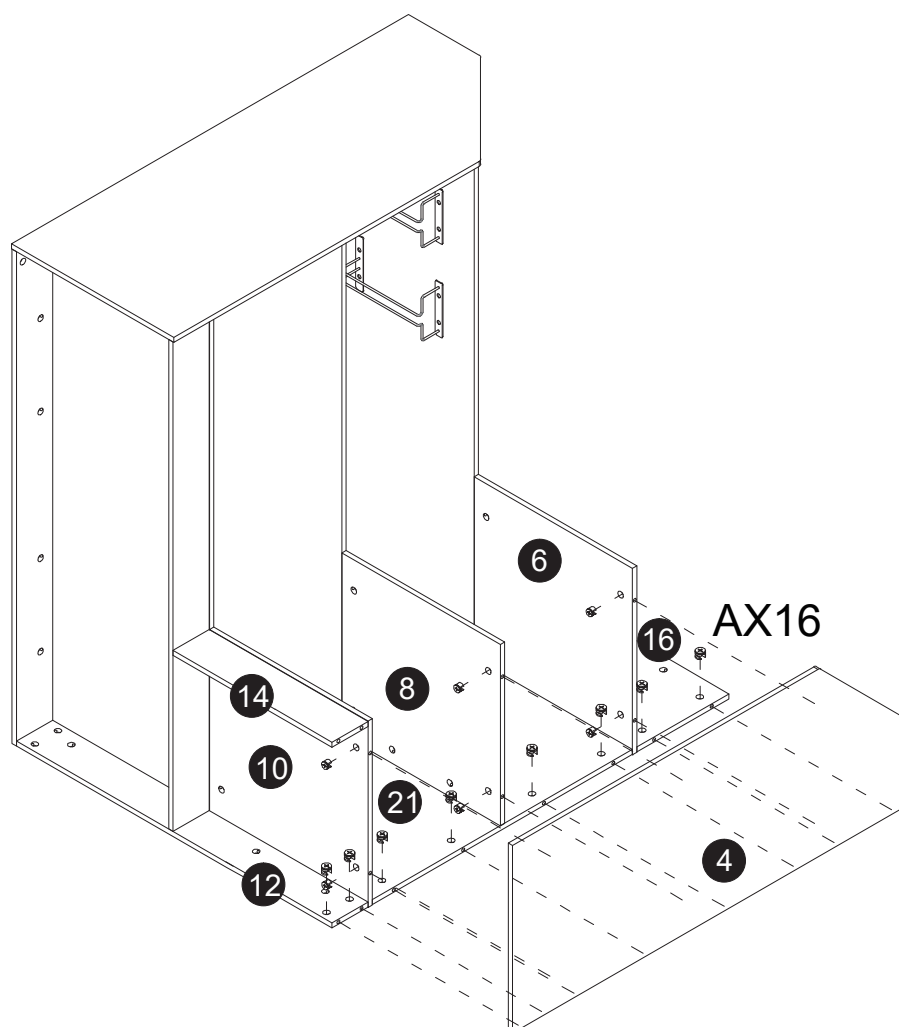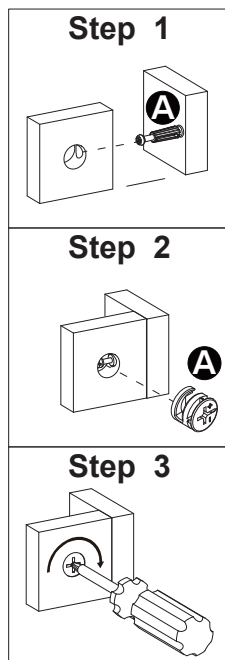


29

A

Ø15
16pcs



30

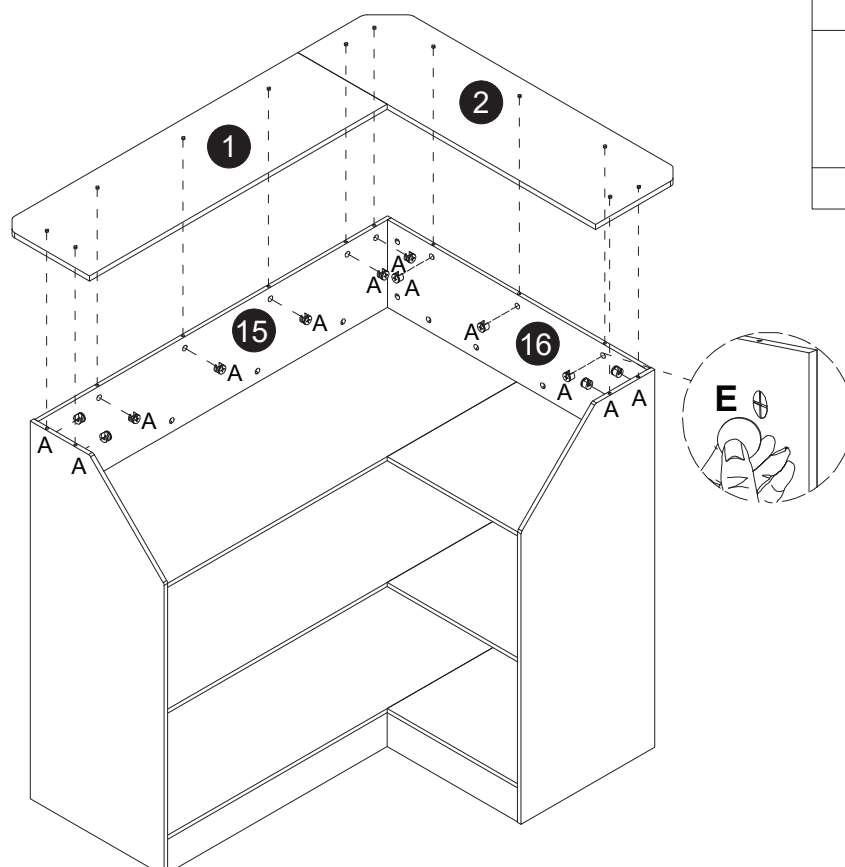
E	A
	
1pc	Ø15
	12pcs





DESIGNED FOR LIFE

Thank you for your support!

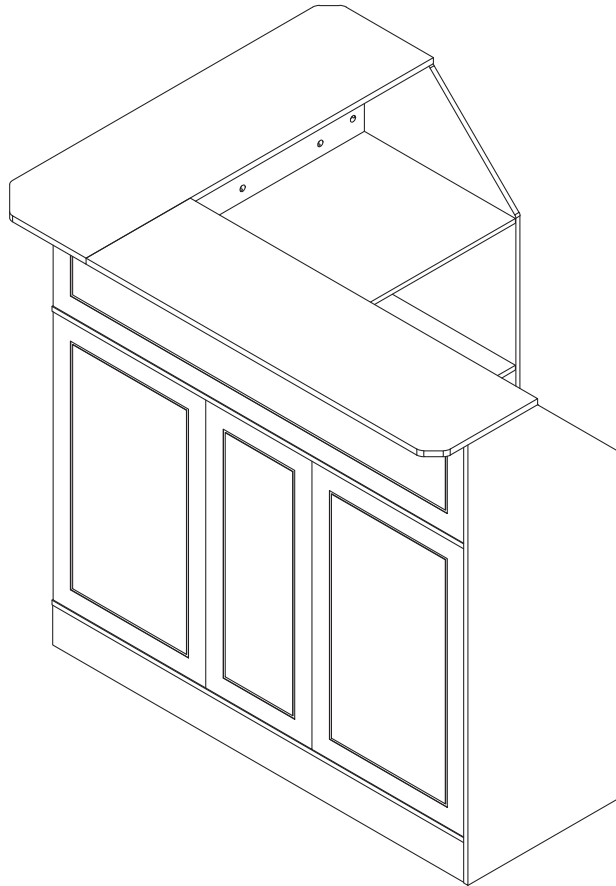

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp