
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

If you have any questions, please feel free to contact us. Email: lowes.team@qualfurn.net

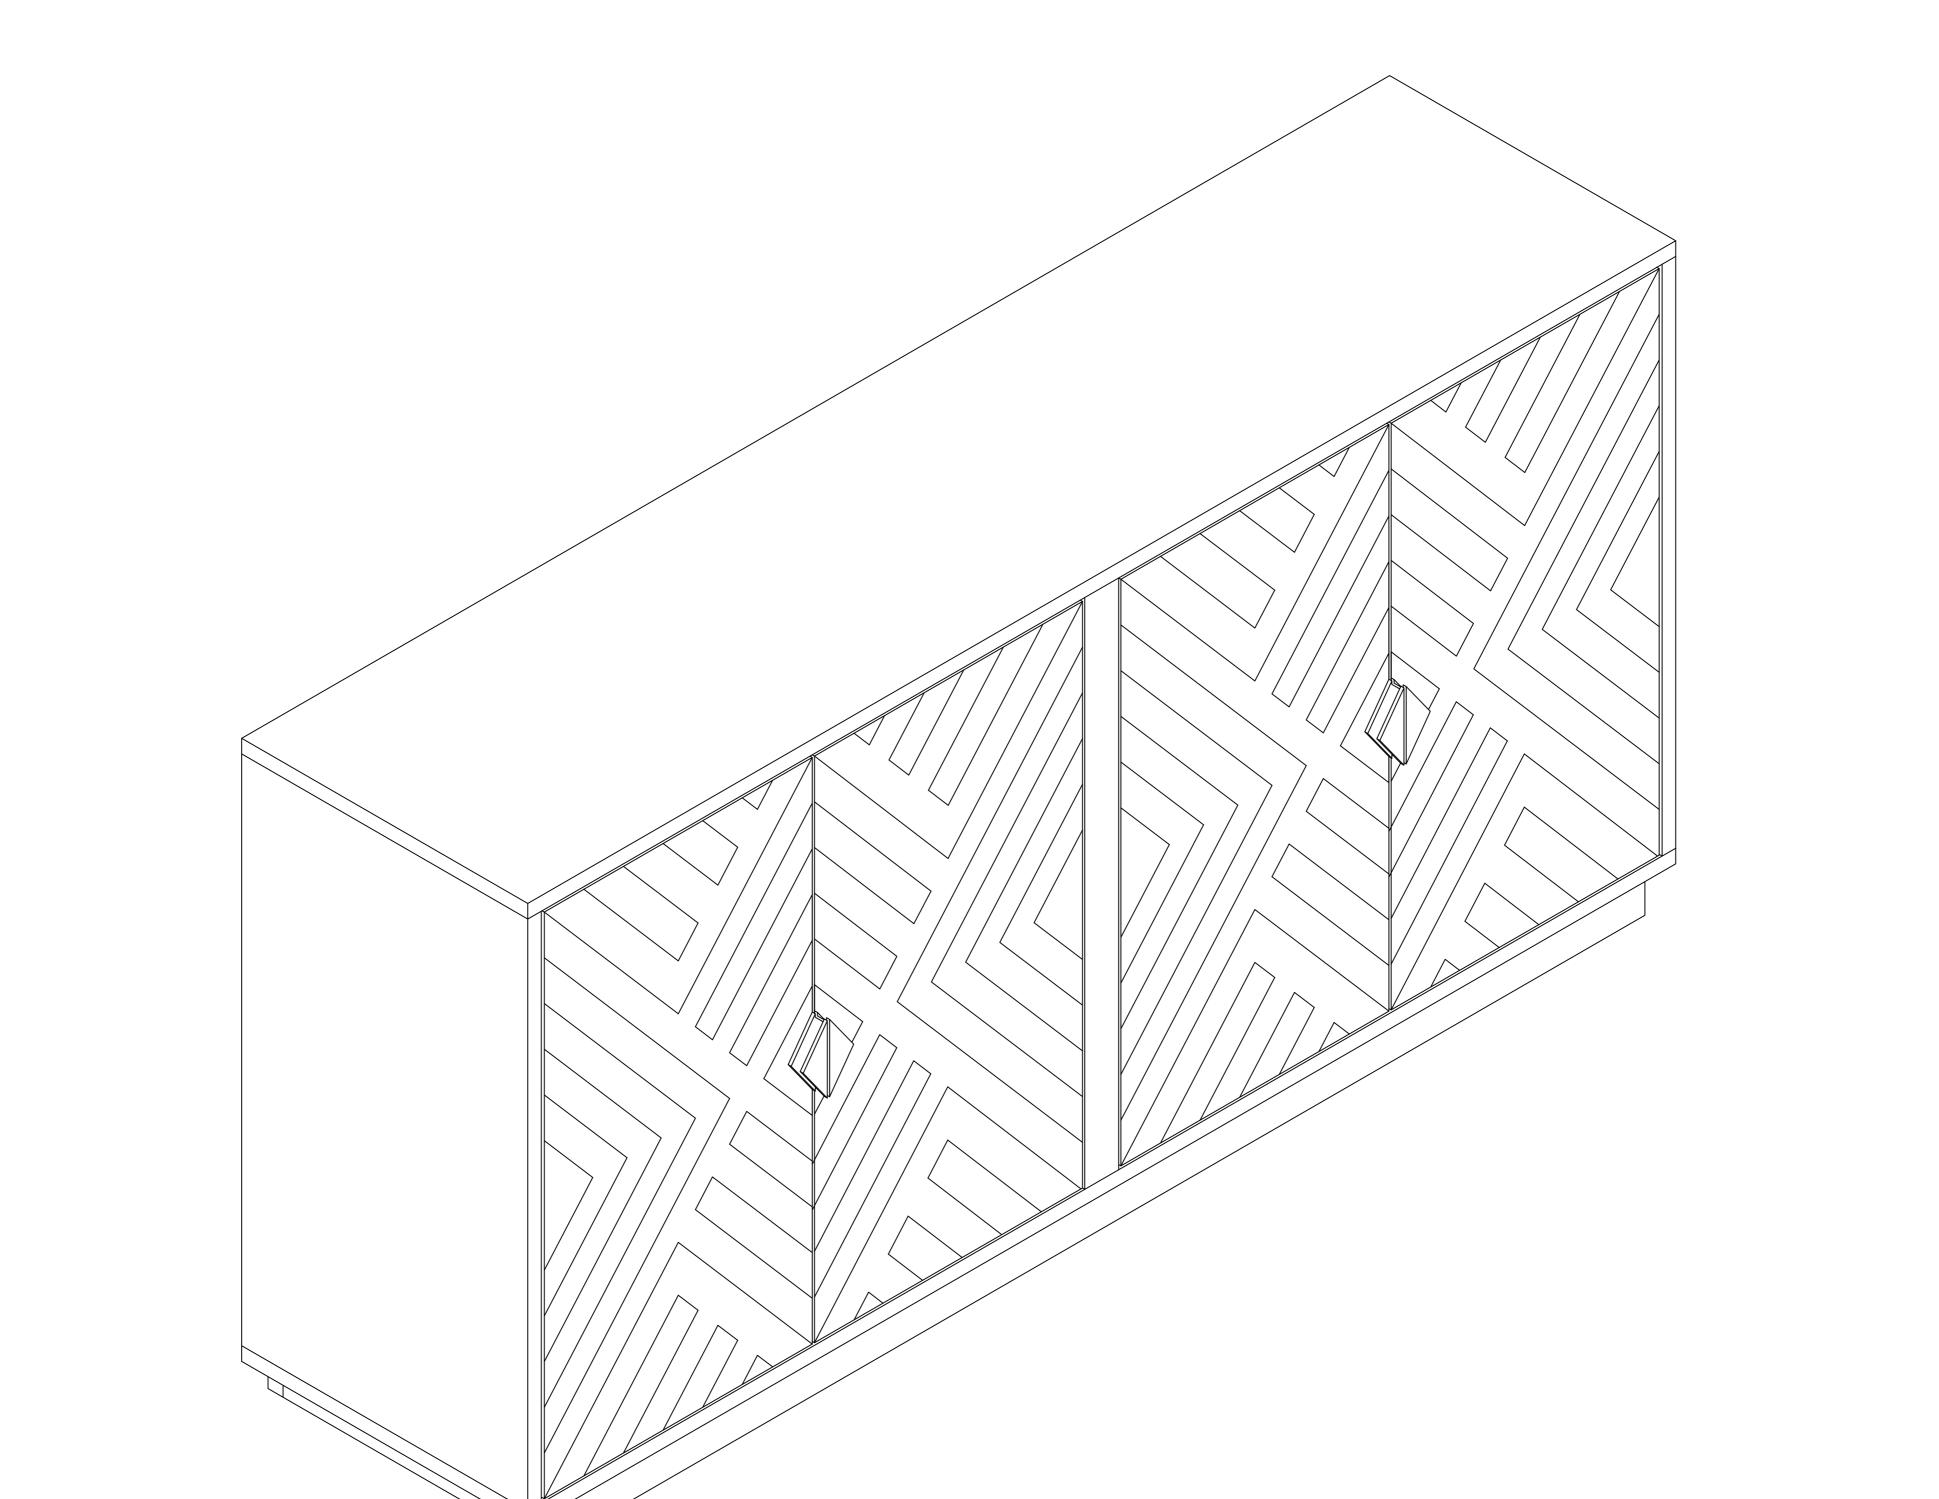




#### MADE IN MALAYSIA

# WF318154


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

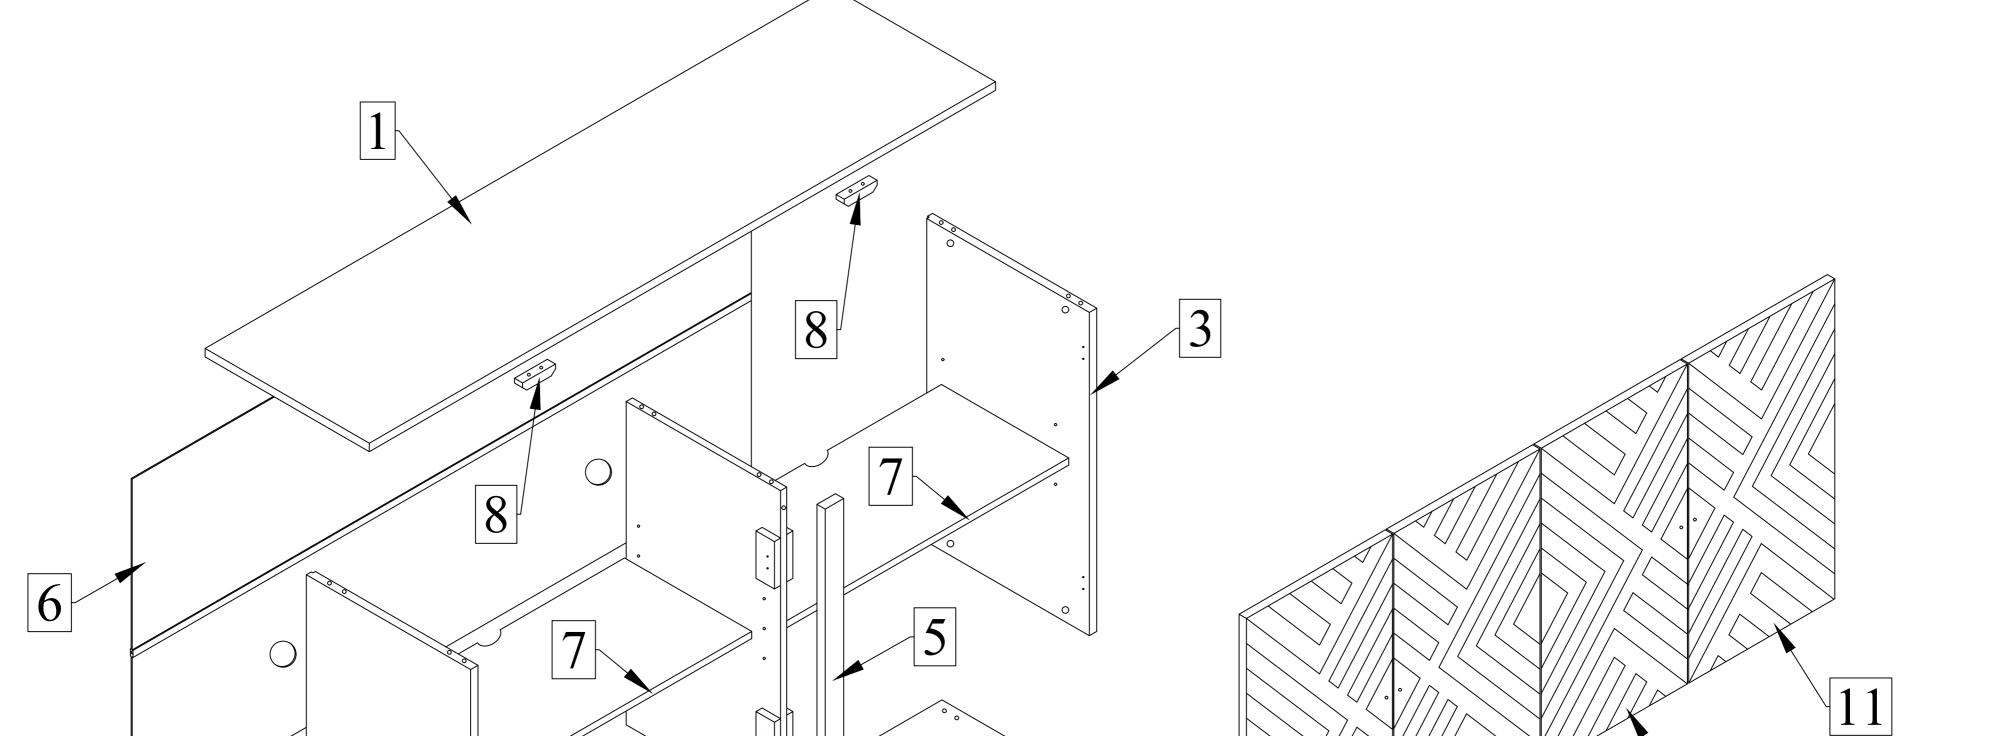


TOOLS REQUIRED (Not provided)         Screwdriver         Hardware List       Screwdriver         No.       Description       Sketch       Quantity       No.       Description       Sketch         A       Wood Dowel M8x30MM       Colspan="5">1       TooLS REQUIRED (Not provided)	etch Quanti
Hardware List     Part List       No.     Description     Sketch     Quantity     No.     Description     Sketch	٠tch Quanti
No.     Description     Sketch     Quantity     No.     Description     Sketch	etch Quanti
	etch Quanti
A       Wood Dowel M8x30MM       Image: Market M8x30MM       Image: Market M8x30MM       Image: Market	•
	1PC
B Minifix + Cap B1 - → B2 → 18SETS 2 Bottom Panel .	
C Metal Shelf Support 6 8 Side Panel	<b>2PCS</b>
D Screw M4 x 32MM <ccccccc 16pcs="" 4="" center="" panel<="" td=""><td> 1PC</td></ccccccc>	1PC
F Soft Close Hinges 7/8 8PCS 5 6 1 5 1	
F       Screw M3.5 x 16MM       Image: Contract of the second sec	2PCS
G         Screw M3 x 12MM          48PCS         7         Shelf         √°	
H     H Connector     1PC     8     Door Stopper	2PCS
I Handle with Screw 4SETS 9 Leg Frame	2PCS
Apply a battery screw machine for better 10 Leg Frame	
Apply a battery screw machine for better10Leg Hameassembly experience.11Door Panel	4PCS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.


Step 1 : Attach Wood Dowel (A) and Minifix (B1) to parts (1,2,3,4,5,9,10) accordingly. Attach Metal Shelf Support (C) to Center & Side Panels (3,4). Attach Door Stopper (8) to Top Panel (1) using Screw (D). Attach Hinges (E) to Doors (11) with Screw (F).

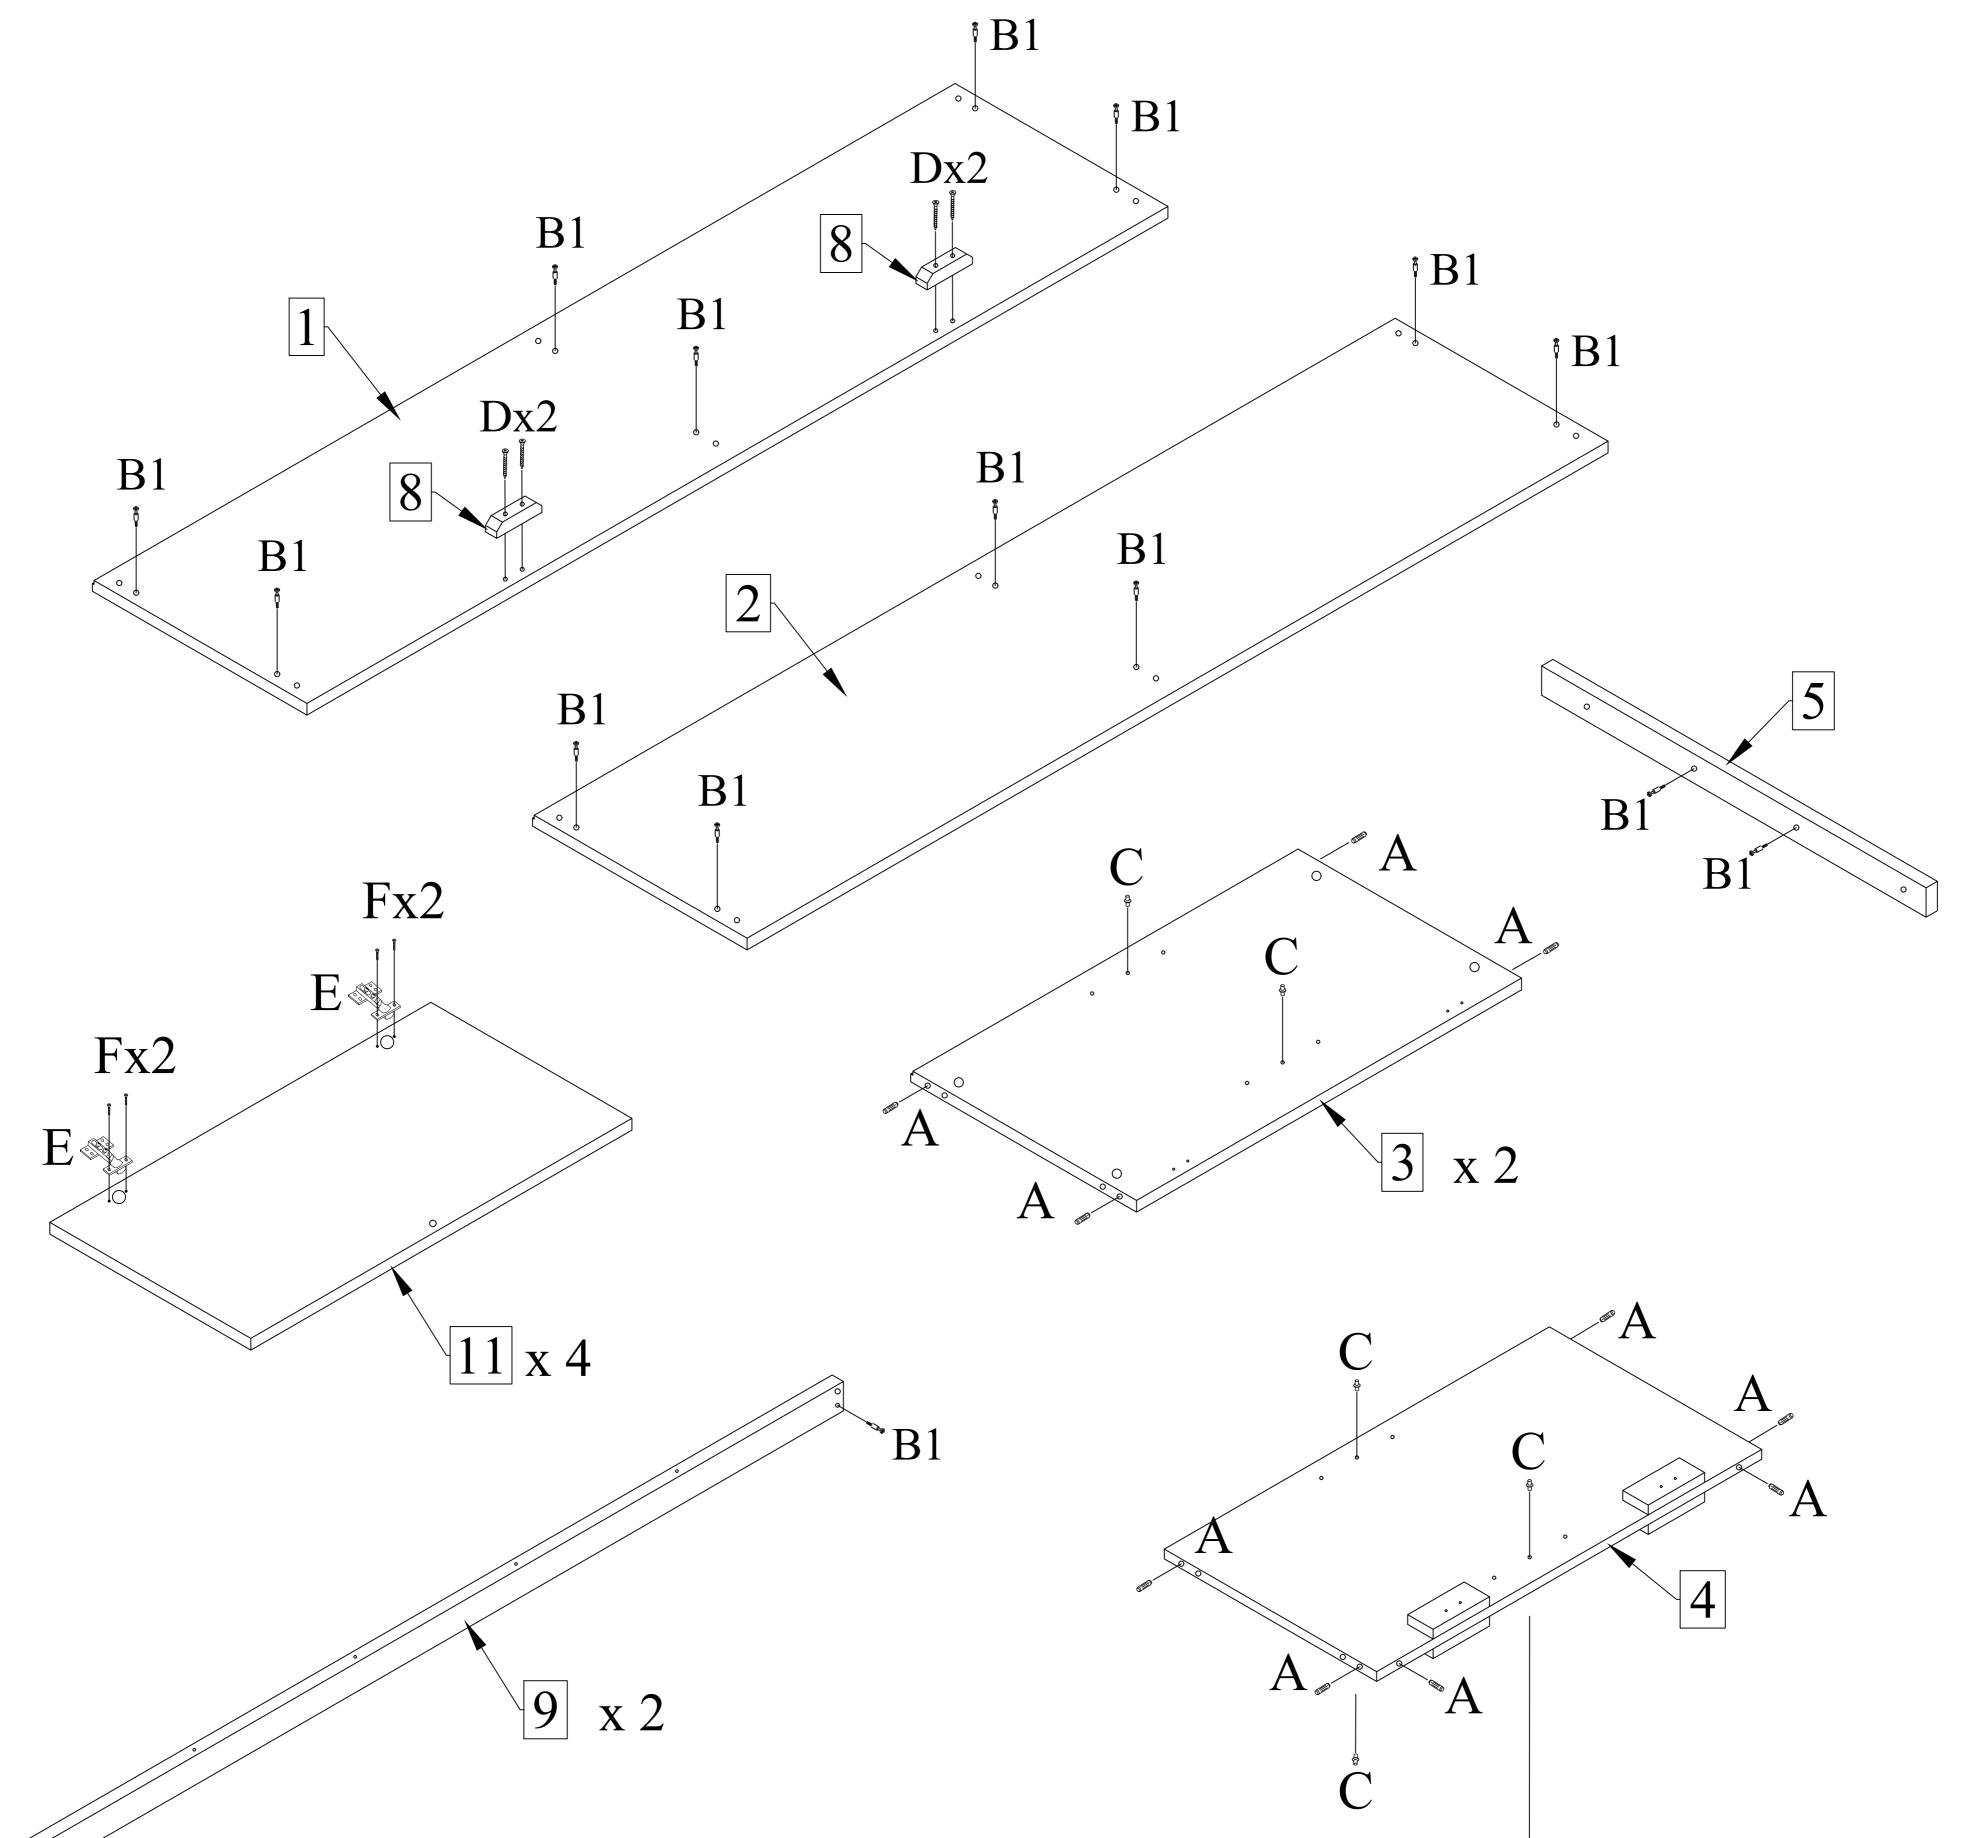

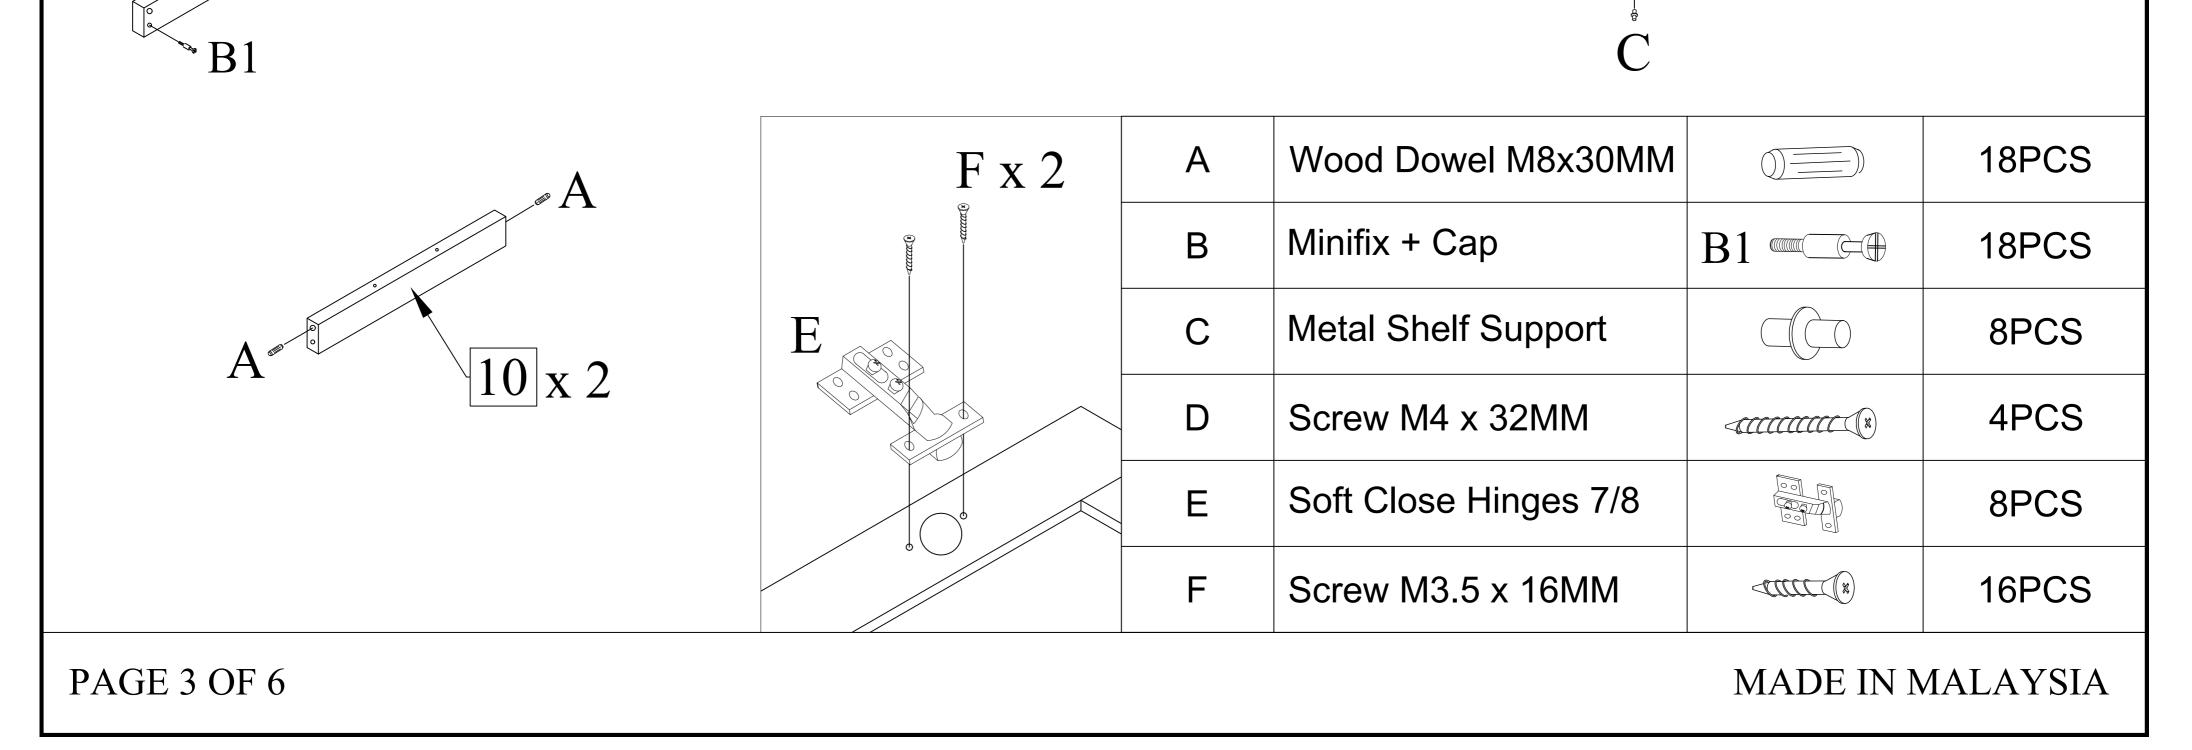


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 2 : Attach Center Rail (5) to Center Panel (4) and lock Minifix Cap (B2). Connect Leg Frame (9,10) and lock Minifix Cap (B2). Attach the frame onto Bottom Panel (2) using screw (D).

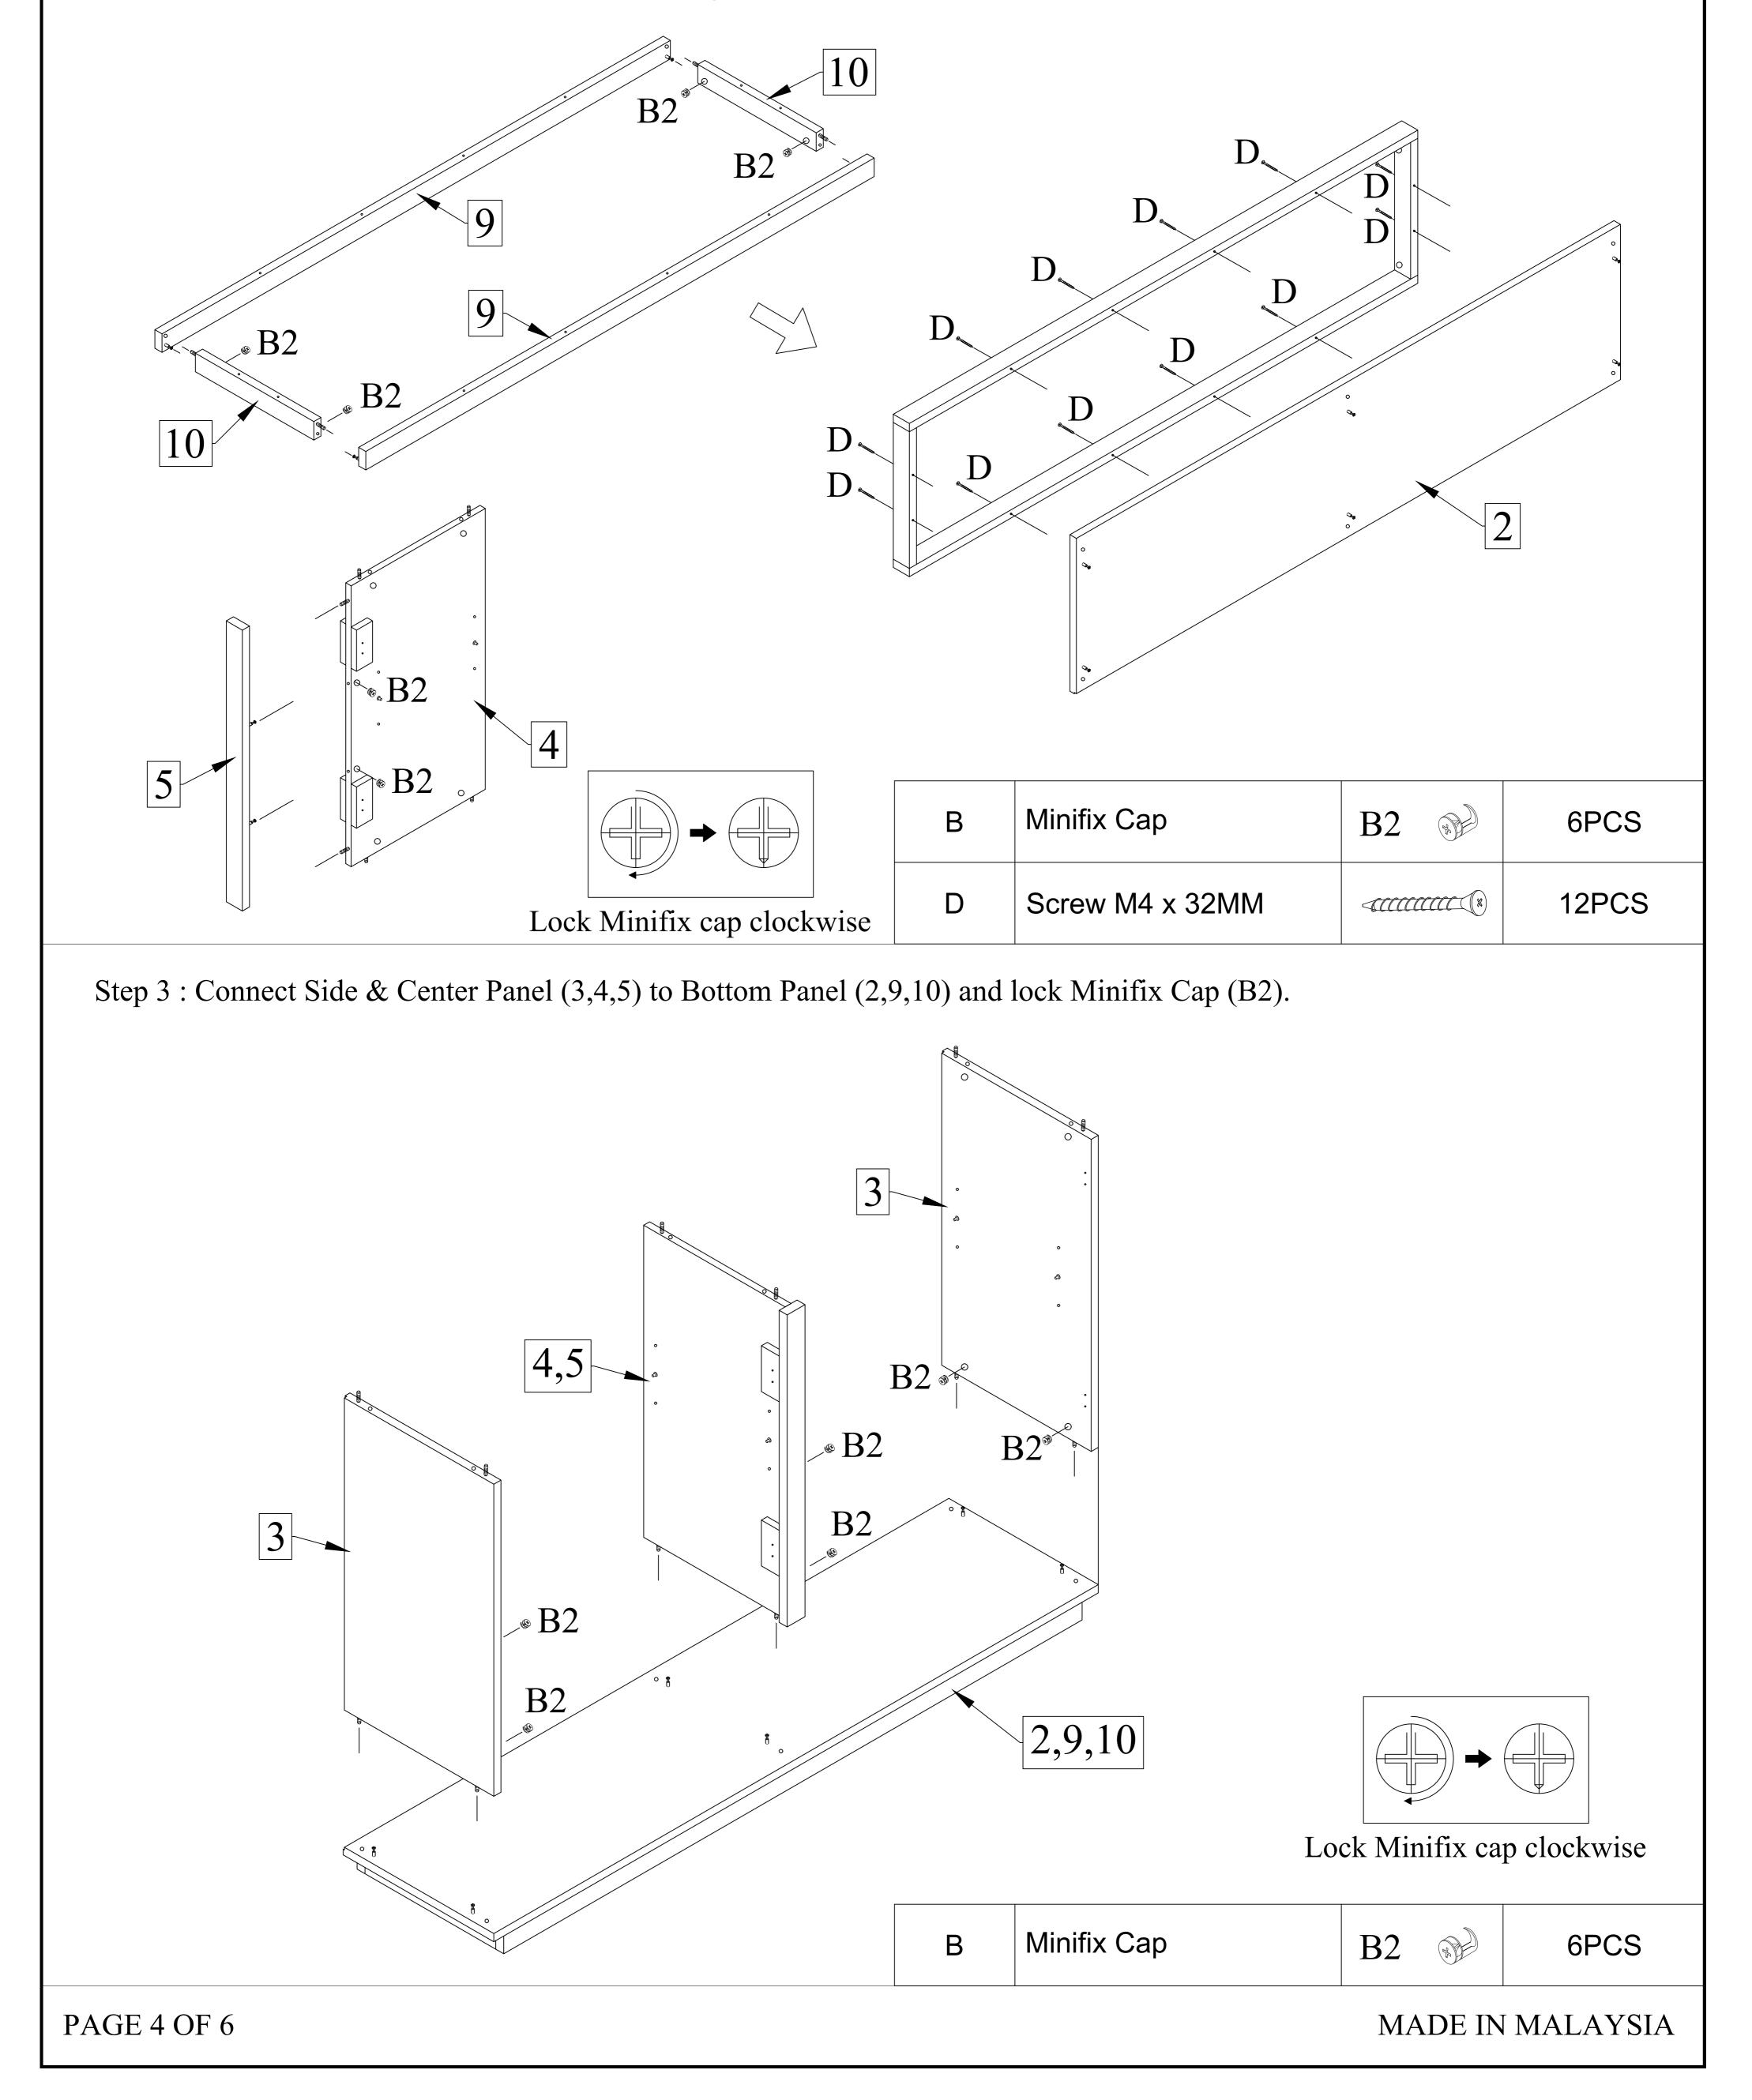

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 4 : Attach Top Panel (1,8) to the assembled parts and lock Minifix Cap (B2)

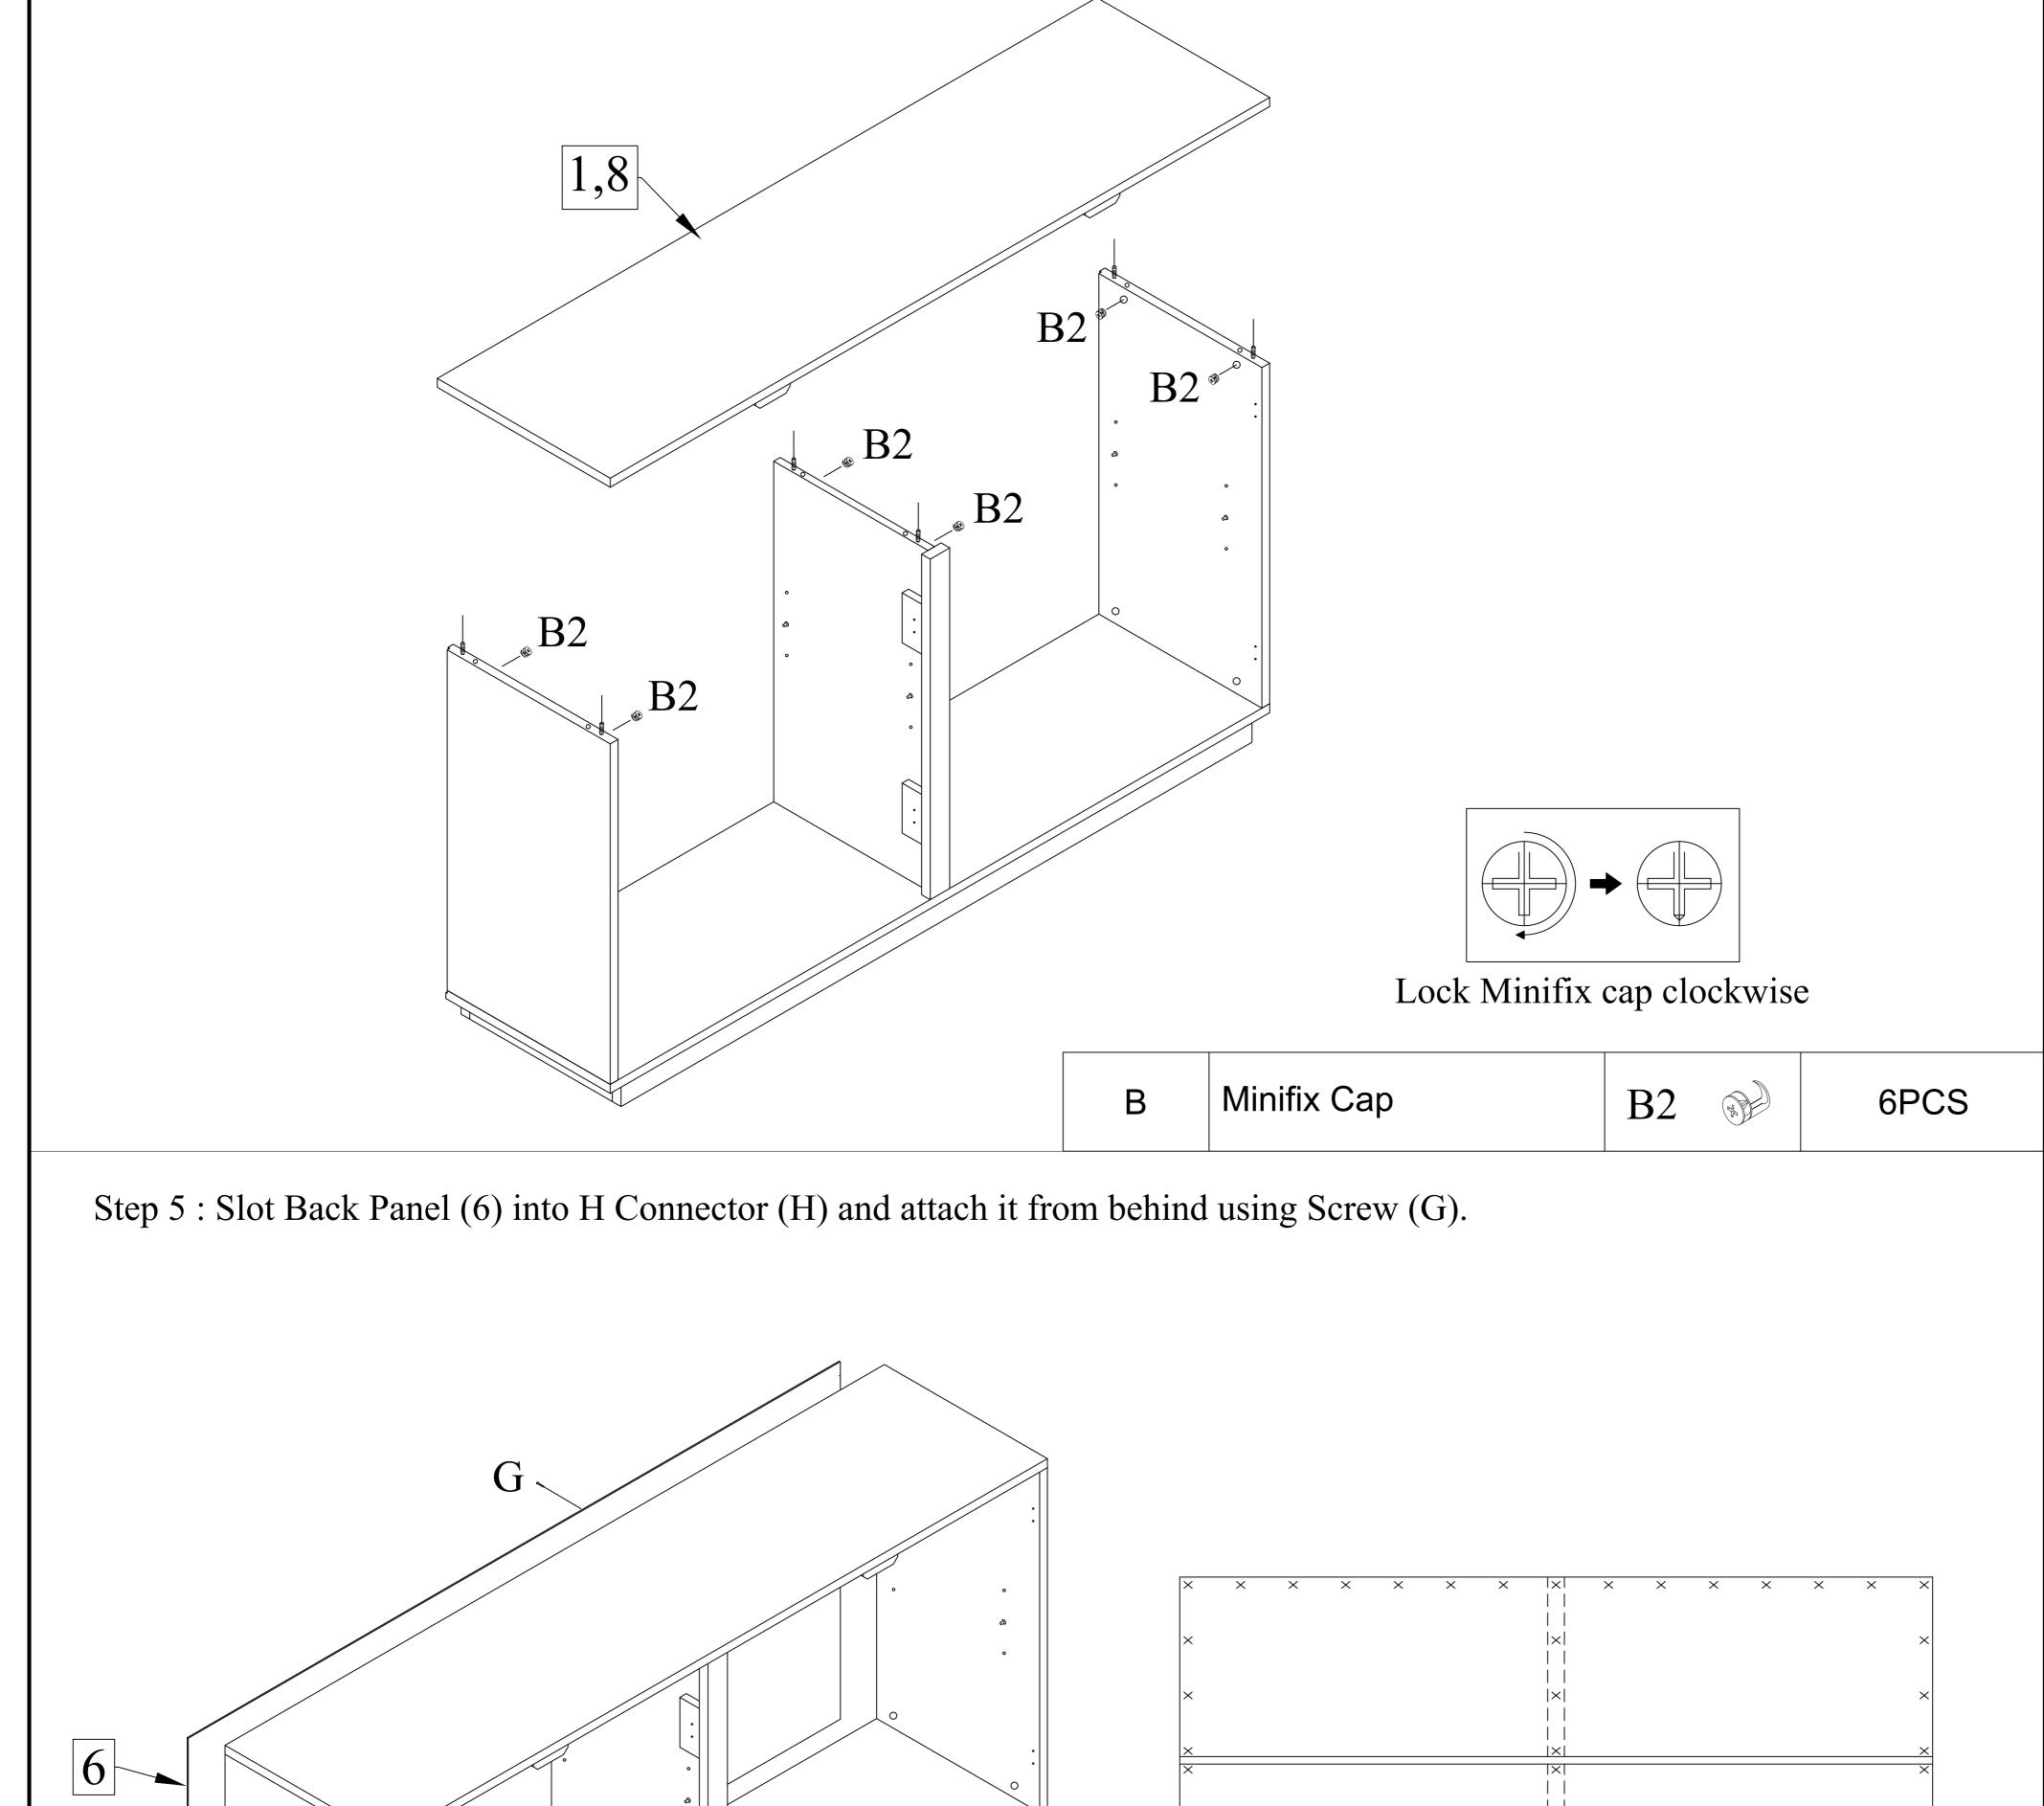

H .	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$ \begin{array}{c} & \times \\ & & \times \\ & & \times \\ \times & \times & \times & \times & \times$
6		
	G Screw M3 x 12MM	<i>&lt;</i>
	H H Connector	1PC
PAGE 5 OF 6		MADE IN MALAYSIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 6 : Insert Shelves (7).

