


CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Metal Frame		1x
B	Back Cushion		1x
C	Seat cushion		1x
D	L Angle Metal Plate		1x
H1	Allen Bolt	 1/4"x 3/4"	6x
H2	Allen Bolt	 1/4"x1"	4x
H3	Spring Washer	 1/4"	10x
H4	Flat Washer	 $\phi 16 \times 1.0$	10x
H5	Allen Key	 M4	1x

 **SAFAVIEH**
F U R N I T U R E

Model# ACH6200

Product Dimensions: 21"W x 24-1/2"D x 33"H

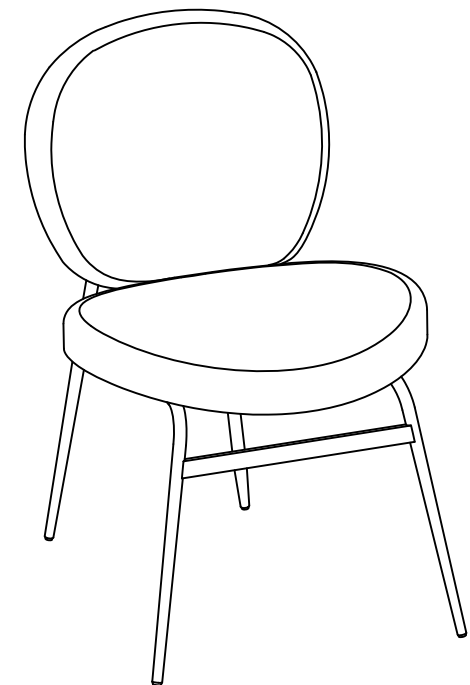


Weight capacity : 275 lbs
WARNING : DO NOT STAND ON THE CHAIR

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key

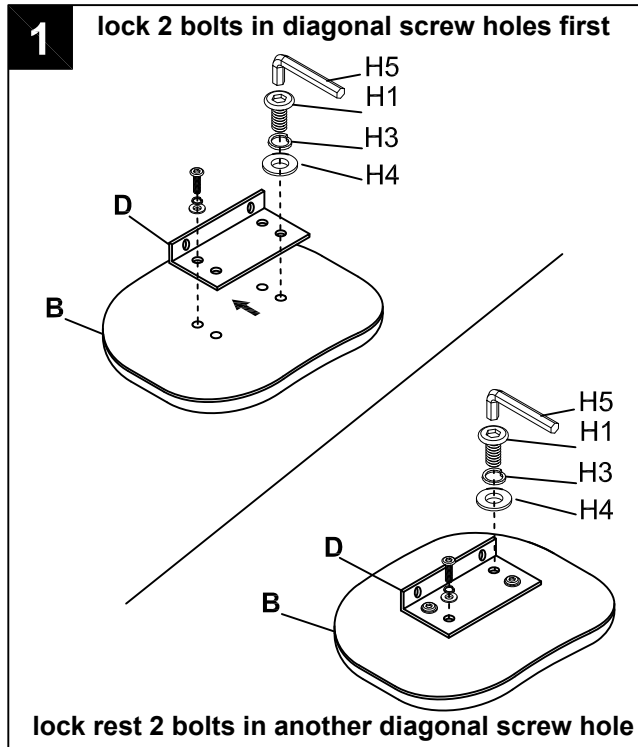


Step 1

Place the L angle metal plate (D) on reverse side of back cushion (B) be parallel with the top/bottom frame of the back cushion and also to be align with the screw holes, Use Allen Key (H5) to lock 2*Allen bolts (H1) with 2*Spring washers (H3) and 2*Flat washers (H4) in diagonal screw holes first, then lock rest 2*Allen bolts (H1) with 2*Spring washers (H3) and 2*Flat washers (H4) in another diagonal screw hole, as picture.

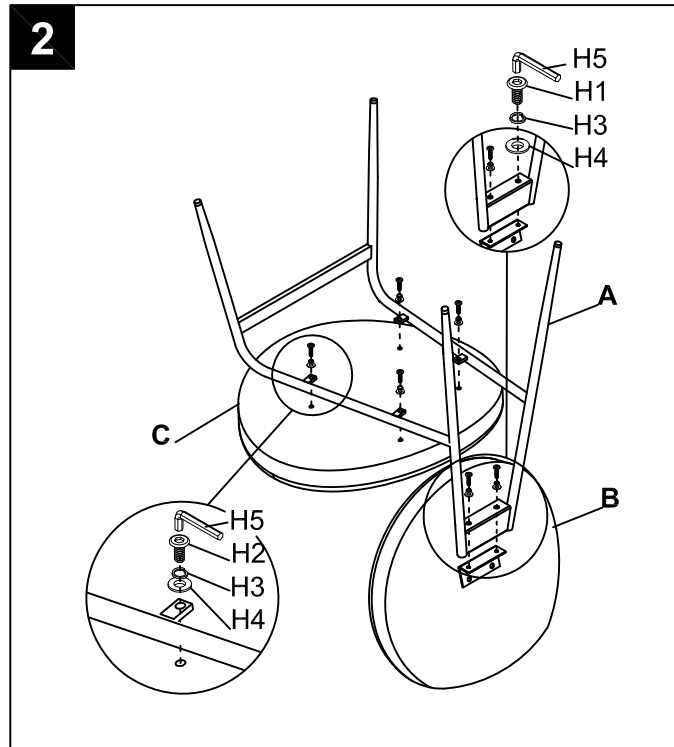

Step 2

Attach the seat cushion (C) on the metal frame (A) and align with the screw holes, Use Allen Key (H5) to lock 4*Allen bolts (H2) with 4*Spring washers (H3) and 4*Flat washers (H4). And then attach the assembled back cushion (B) (as step 1) on the metal frame (A) and align with the screw holes, use Allen Key (H5) to lock 2*Allen bolts (H1) with 2*Spring washers (H3) and 2*Flat washers (H4), as picture.

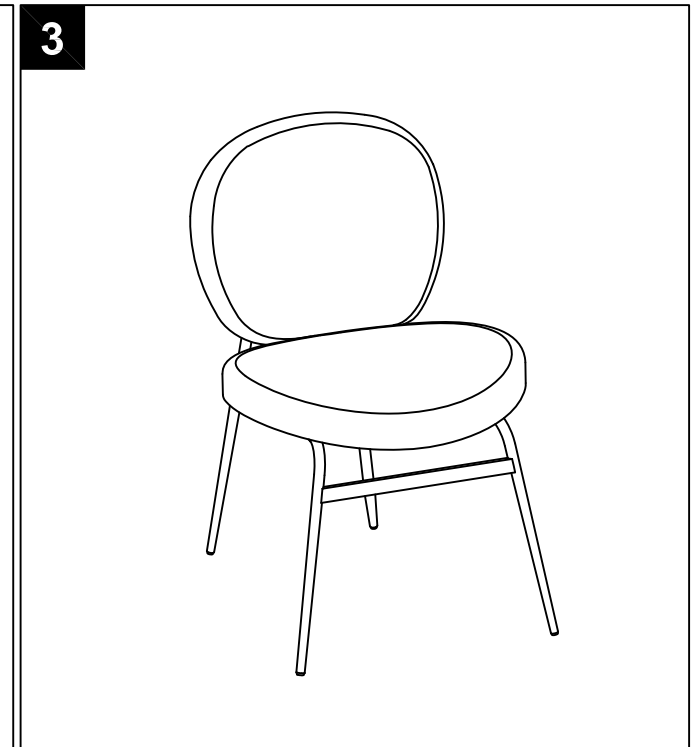

Step 3

Straighten up the assembled chair, Assembly is completed.

P.S. If the back cushion has improper angle (obliquity) after the assembly is completed, please loosen the bolts to make adjustment (as Step 1), adjust it well in properly angle and lock all bolts again.