




RELIABILT and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #253030
MODEL #U 9888-L

FLIP LOCK

Español p. 5



Serial Number _____

Purchase Date _____

Thank you for purchasing this RELIABILT product.

Questions, problems or missing parts?

Before returning, contact us on:

866-386-7941, 8 a.m. - 8 p.m., EST, Monday - Sunday or ascs@lowes.com.

SG24613

TABLE OF CONTENTS

Preparation	2
Package Contents	3
Hardware Contents.....	3
Installation Instructions	4

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 20 minutes

Tools Required for Assembly (not included):

Phillips Screwdriver, Drill, Drillbit


PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Flip lock	1

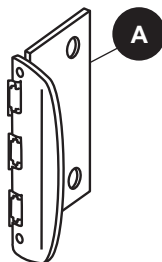

HARDWARE CONTENTS (shown actual size)

AA



#6 x 3/4 in.
Screw

Qty. 2

BB




#4 x 5/32 in.
Screw


Qty. 1

ASSEMBLY INSTRUCTIONS

1. Select desired location of flip lock (A) on inside of door jamb. Make sure beveled side of holes are facing out. Use 3/32 in. drill bit for mounting screws (AA). To lock: Lift movable leaf forward toward closed door and engage in locked position by dropping into notch.

Hardware Used


AA #6 x 3/4 in. Screw  x 2

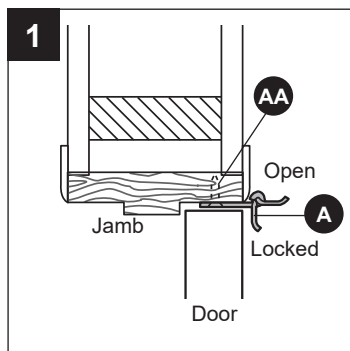

2. Anti-lockout screw: Install small screw (BB) in top hole to prevent locking. Install in bottom hole to store.

Hardware Used

BB #4 x 5/32 in. Screw  x 1

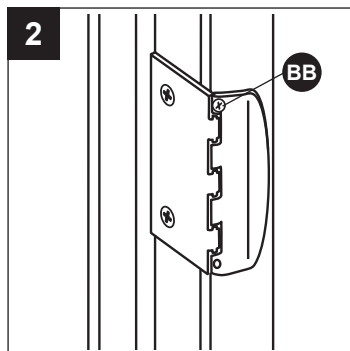


Printed in China



RELIABILT y el diseño del logotipo son marcas comerciales o marcas registradas de LF, LLC. Todos los derechos reservados.

ARTÍCULO #253030
MODELO #U 9888-L

CERRADURA DE TIRÓN



Número de serie _____

Fecha de compra _____

Gracias por comprar este producto RELIABILT.

¿Tiene preguntas, problemas o piezas faltantes?

Antes de volver a la tienda, póngase en contacto al:

866-386-7941, de lunes a domingo de 8 a.m. a 8 p.m., hora estándar del Este,
o escriba a **ascs@lowes.com**.

ÍNDICE

Preparación	2
Contenido del paquete	3
Aditamentos.....	3
Instrucciones de instalación	4

PREPARACIÓN


Antes de comenzar a ensamblar el producto, asegúrese de tener todas las piezas. Compare las piezas con la lista del contenido del paquete y la lista de aditamentos. No intente ensamblar el producto si falta alguna pieza o si estas están dañadas.

Tiempo estimado de ensamblaje: 20 minutos

Herramientas necesarias para el ensamblaje (no se incluyen): destornillador Phillips, taladro, broca para taladro


CONTENIDO DEL PAQUETE

PIEZA	DESCRIPCIÓN	CANTIDAD
A	Cerradura de tirón	1

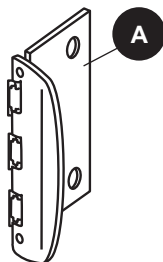

ADITAMENTOS (se muestran en tamaño real)

AA



Tornillo
#6 x 3/4 pulg.

Cant. 2

BB




Tornillo
#4 x 5/32 pulg.


Cant. 1

INSTRUCCIONES DE ENSAMBLAJE

1. Seleccione la ubicación deseada de la cerradura de tirón (A) en el interior de la jamba de la puerta. Asegúrese de que el lado biselado de los orificios quede hacia fuera. Use una broca para taladro de 3/32 pulg. para los tornillo de montaje (AA). Para bloquear: levante la hoja móvil hacia la puerta cerrada y engánchela en la posición de bloqueo, introduciéndola en la muesca.

Aditamentos utilizados

- AA** Tornillo #6 x 3/4 pulg.  x 2

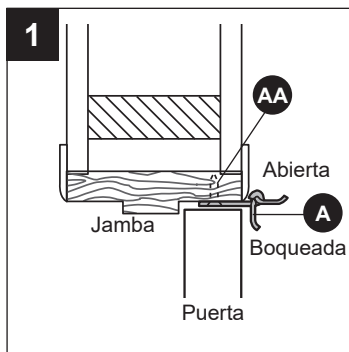

2. Tornillo antibloqueo: instale un tornillo pequeño (BB) en el orificio superior para evitar que se bloquee. Instálelo en el orificio inferior para guardarlo.

Aditamentos utilizados

- BB** Tornillo #4 x 5/32 pulg.  x 1

