



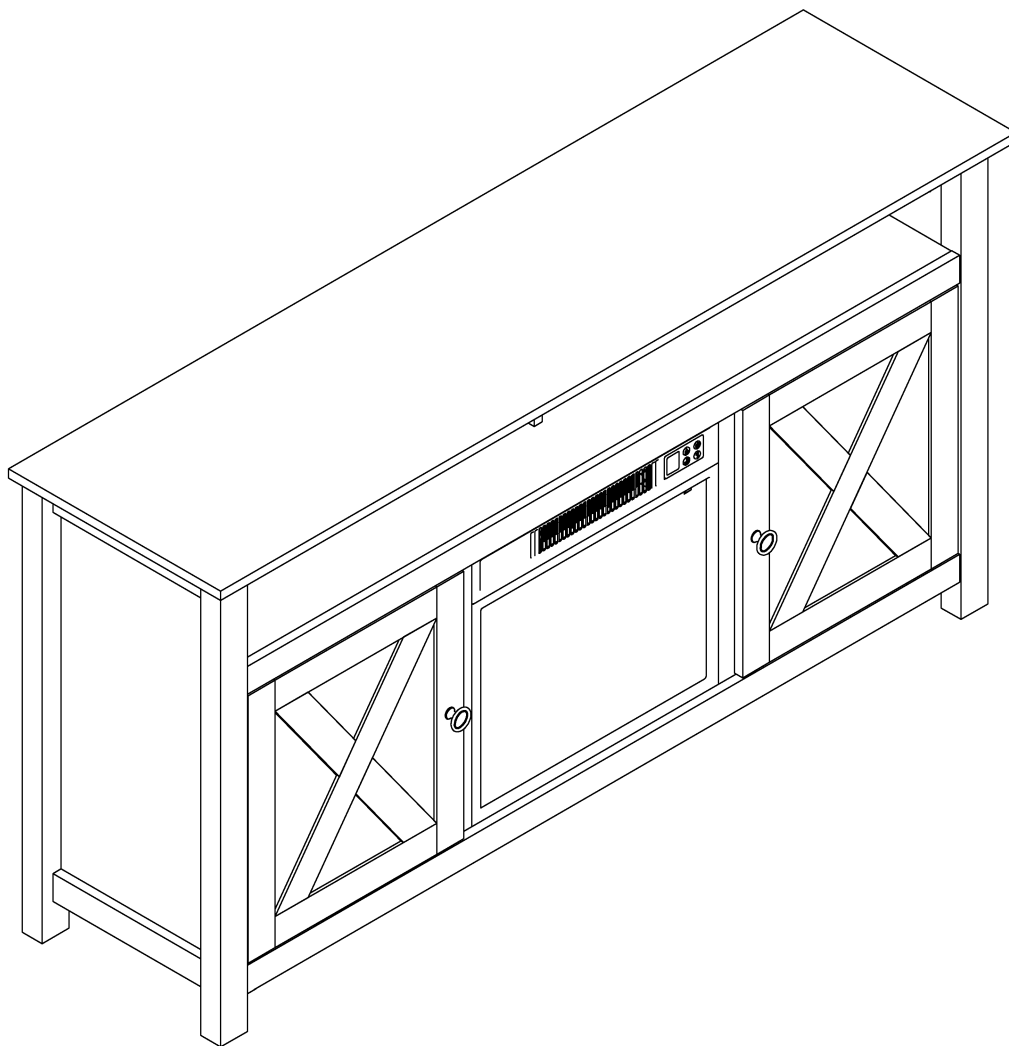

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.


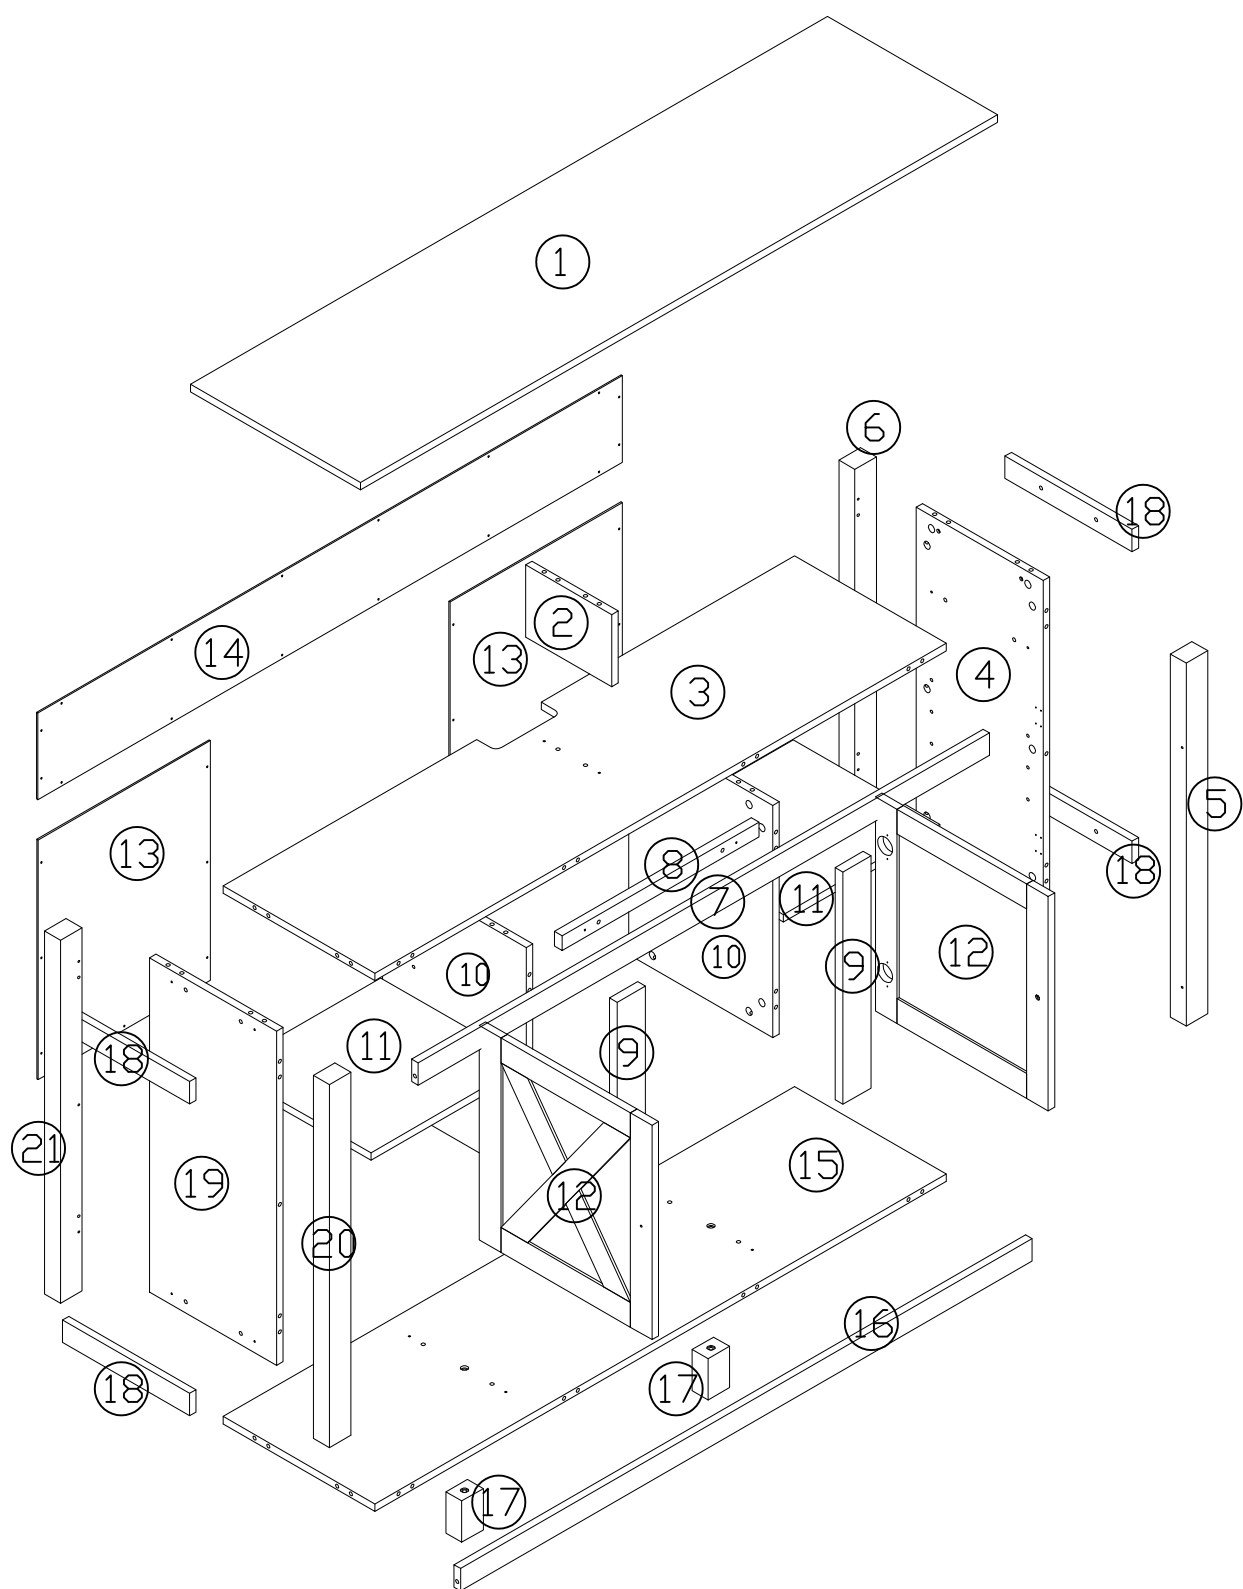


PACKAGE CONTENT		
CODR	DESCRIPTION	QTY
1	Panel	1
2	Upper neutral plate	1
3	Laminate	1
4	Right side plate	1
5	Right forefoot post	1
6	Right post post	1
7	Laminate baffle	1
8	The furnace core transverse block	1
9	Furnace core vertical block	2
10	Lower neutral plate	2
11	Active laminate	2
12	Door panels	2
13	Lower back panel	2
14	Upper back panel	1
15	Floor	1
16	Floor baffle	1
17	Center post	2
18	Side panel trim strip	4
19	Left side plate	1
20	Left forefoot post	1
21	Left post post	1

(A) 52X+2X	(B) ø8×30mm 44X+2X	(C) ø15 52X+2X	(D) 2X
(E) ø3.9× 15mm 24X+1X	(F) ø3.5×16mm 36X+1X	(G) Ø5/32" × 17mm 2X	(H) Ø1/4" × 30mm 2X
(I) 30X	(J) 4X	(K) 8X	(L) 2X+4X
(M) 2X+2X	(N) 6X	(O) ø8×20mm 10X	(P) ø3.9× 25mm 8X
(Q) ø3.9× 30mm 2X			



Step 1

A		4
B		4

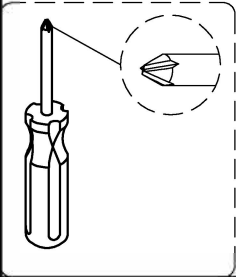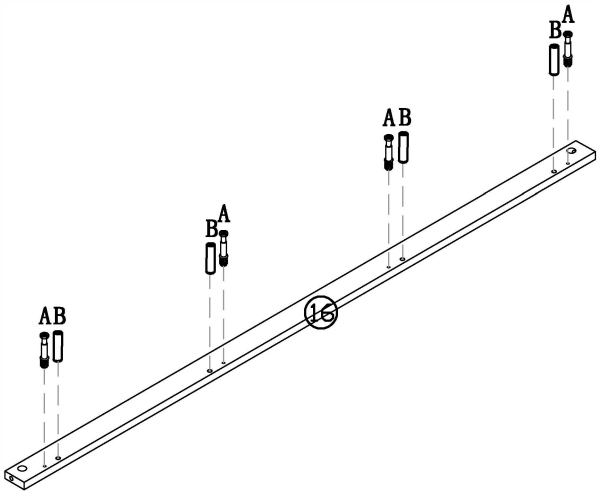



Step 2

C		4
---	---	---

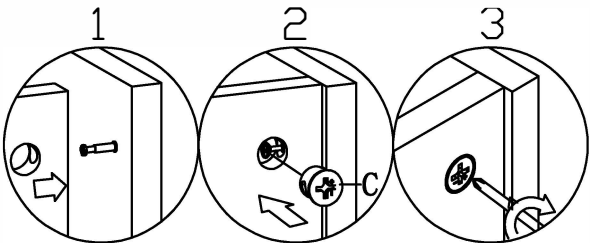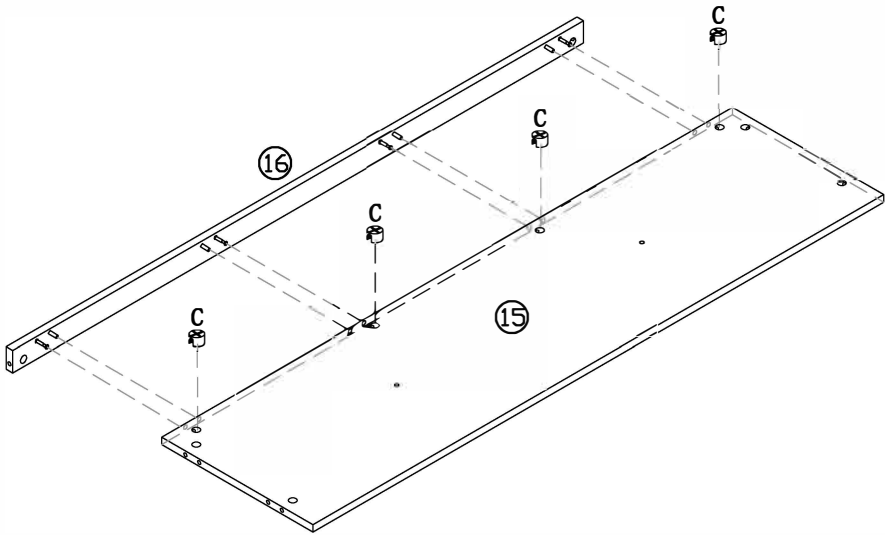



Step 3

A		4
B		4

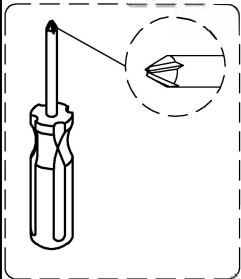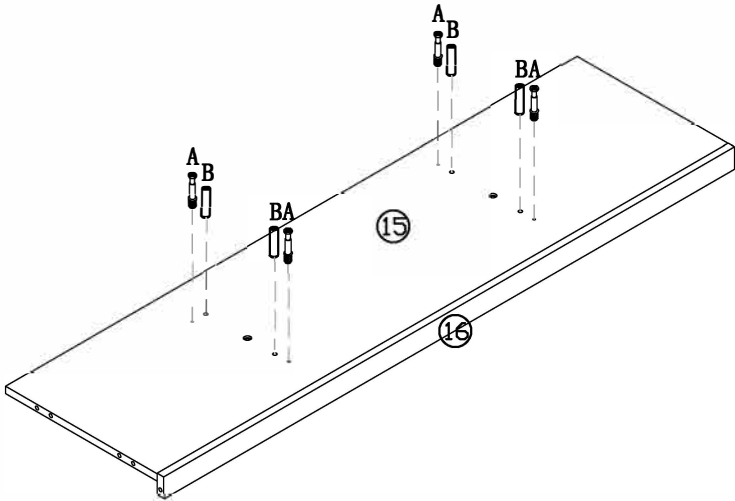



Step 4

H		2
N		2

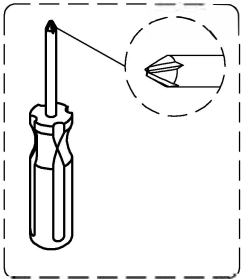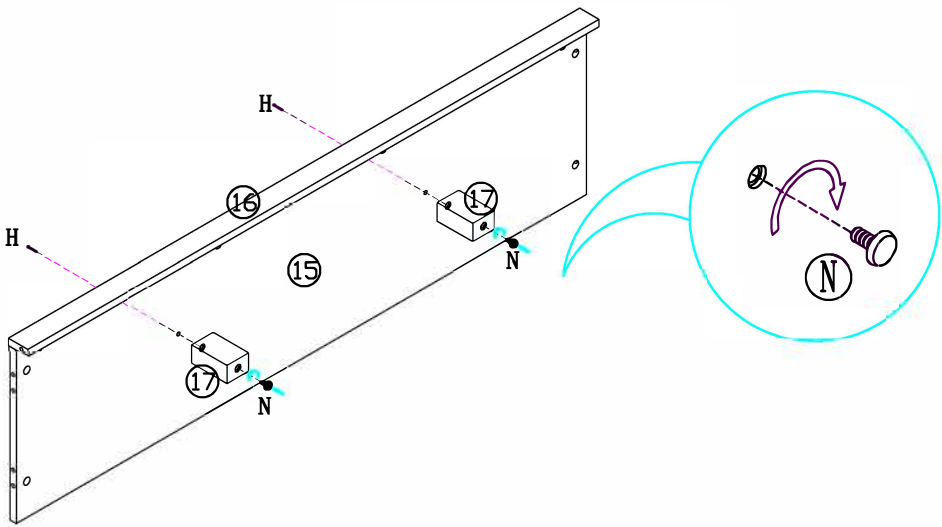




Step 5

A		4
B		4

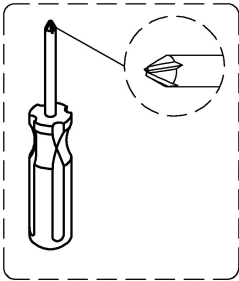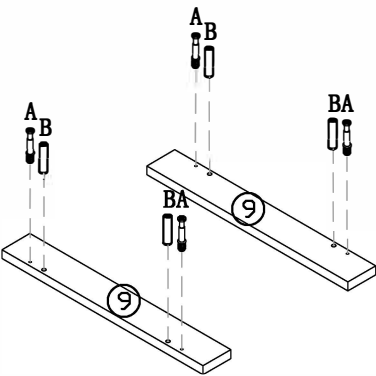



Step 6

C		4
---	---	---

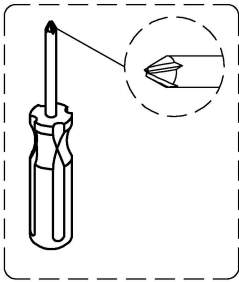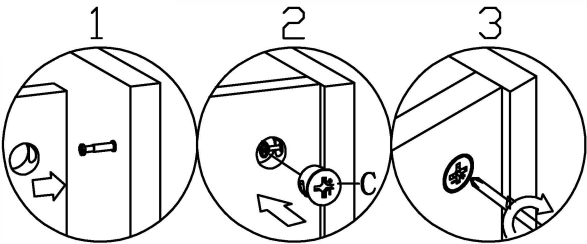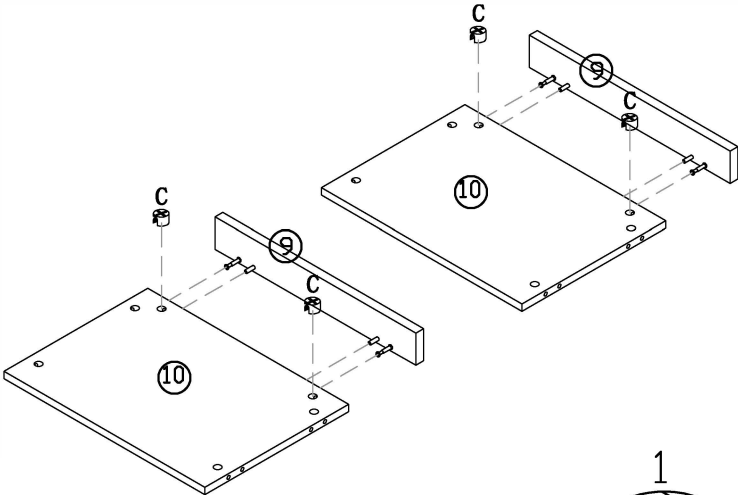



Step 7

C		4
---	---	---

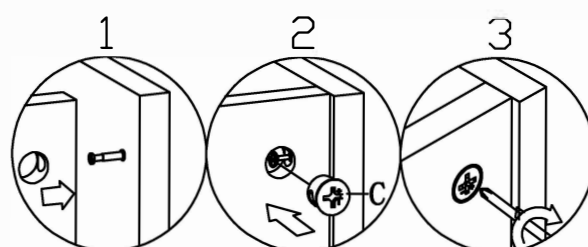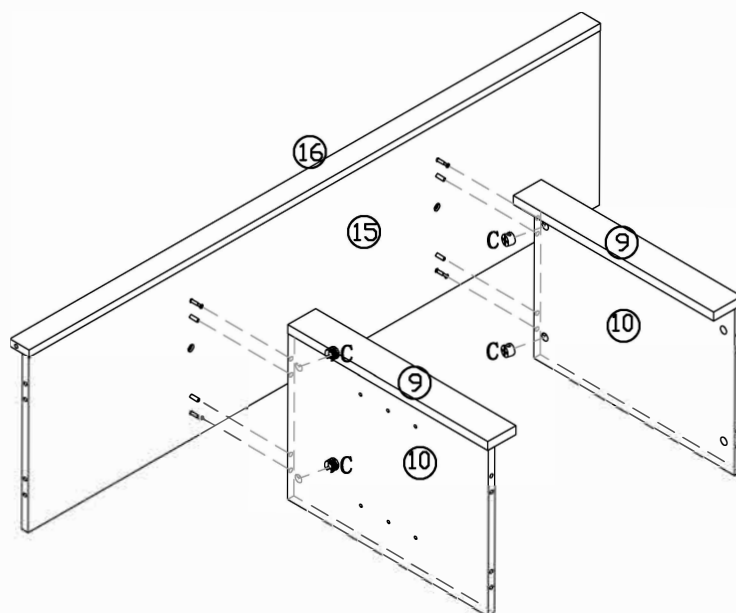



Step 8

A		4
B		4
		2

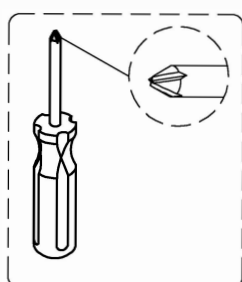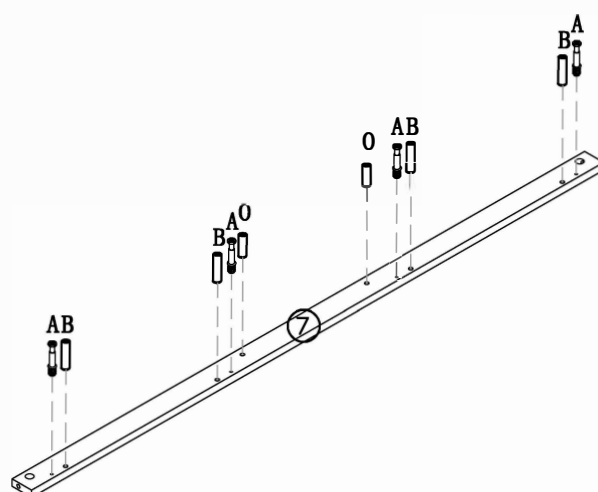



Step 9

Q		2
---	--	---

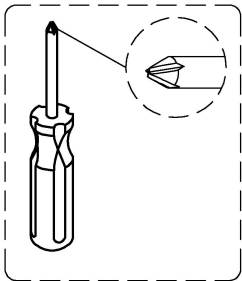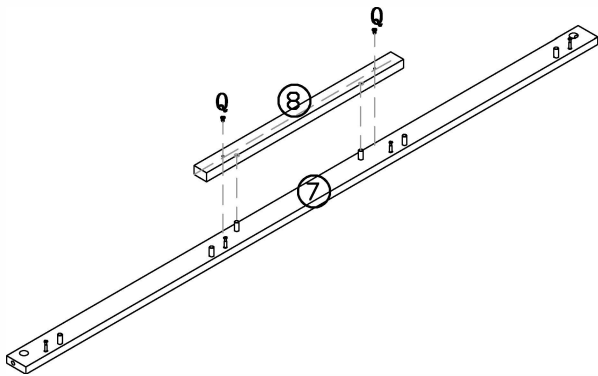



Step 10

C		4
---	---	---

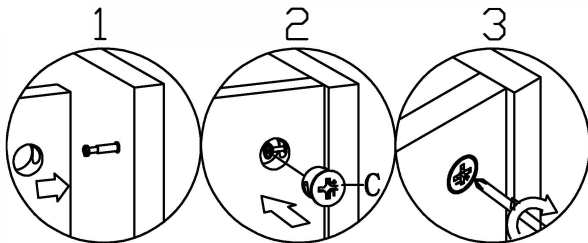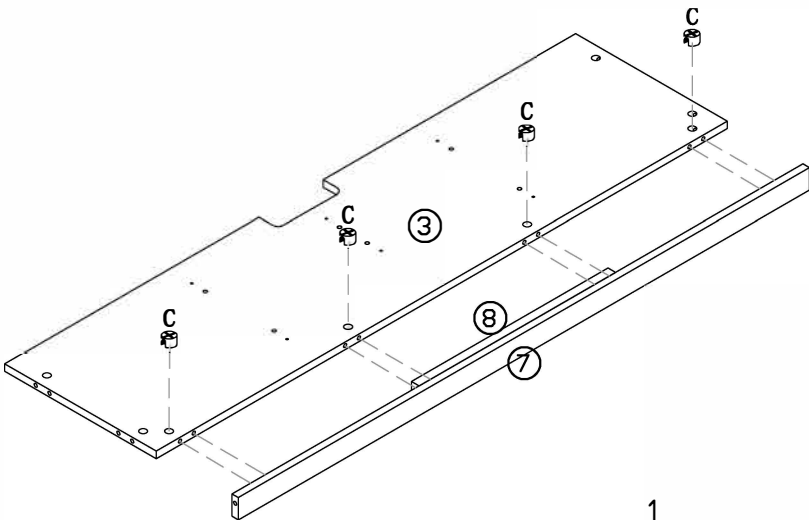



Step 11

A		4
B		4

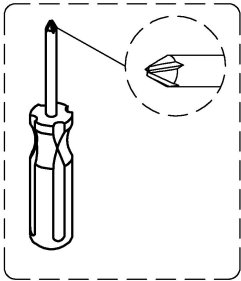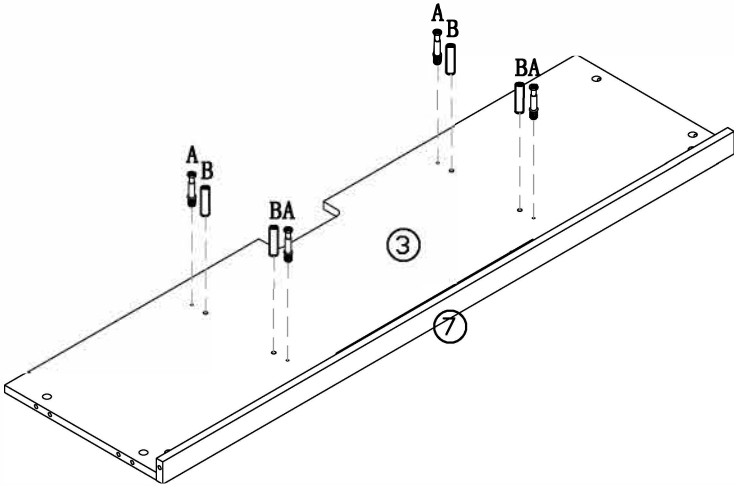




Step 12

A		2
B		2

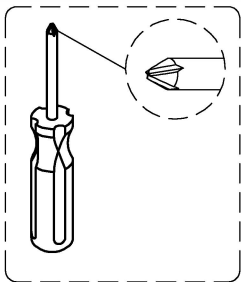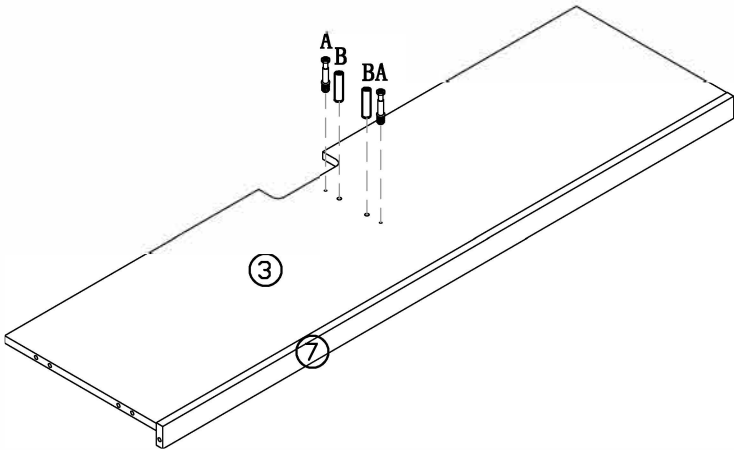



Step 13

C  2

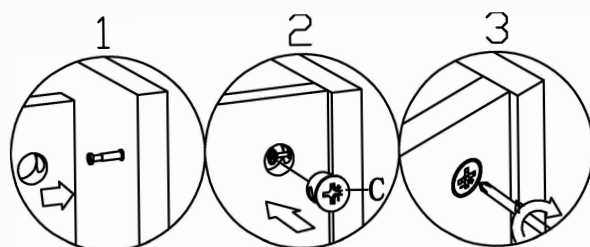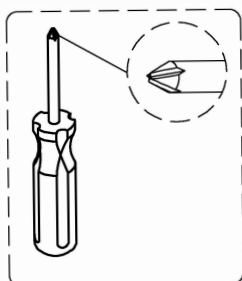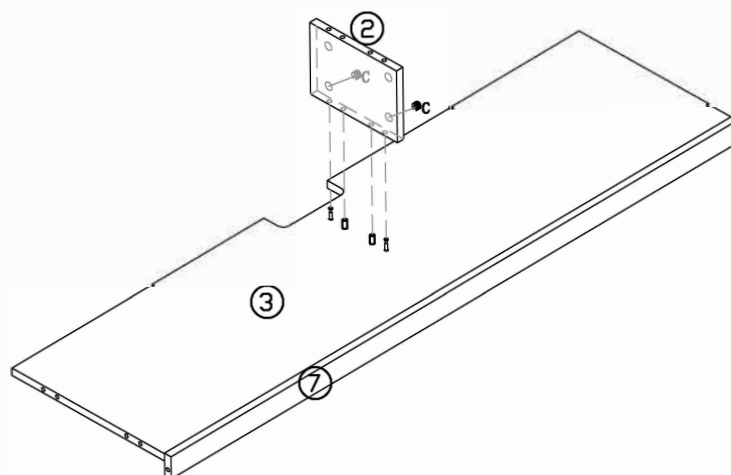



Step 14

C  4

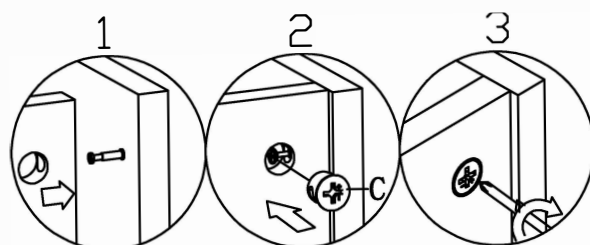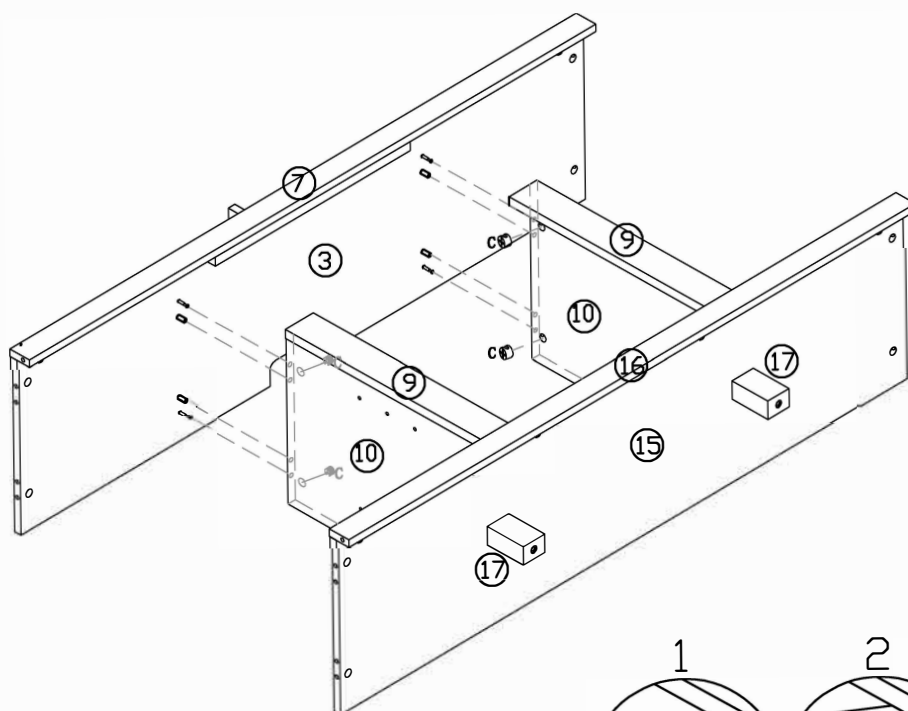



Step 15

A		8
B		4
N		2

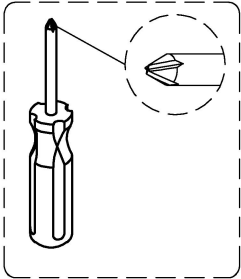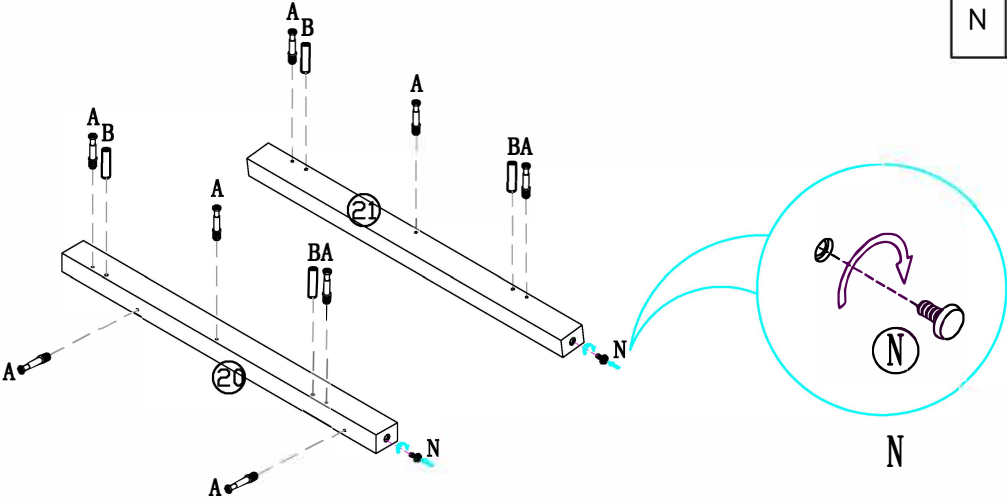



Step 16

A		8
B		4
N		2

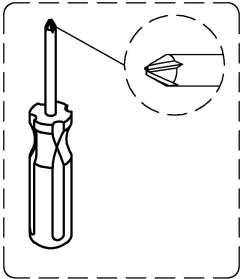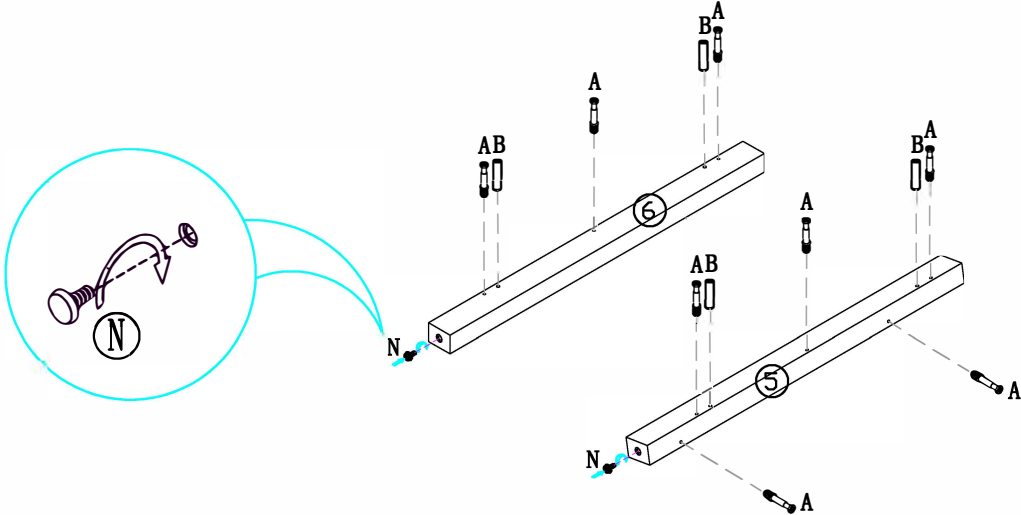


Step 17

		8
---	---	---

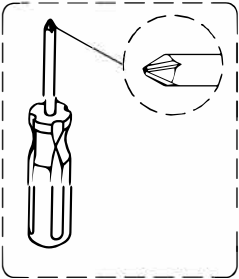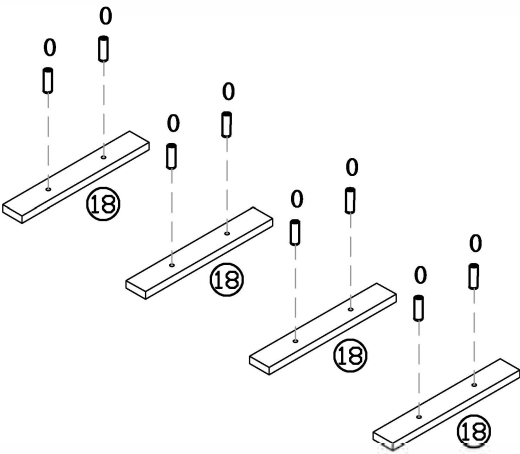



Step 18

P		4
---	---	---

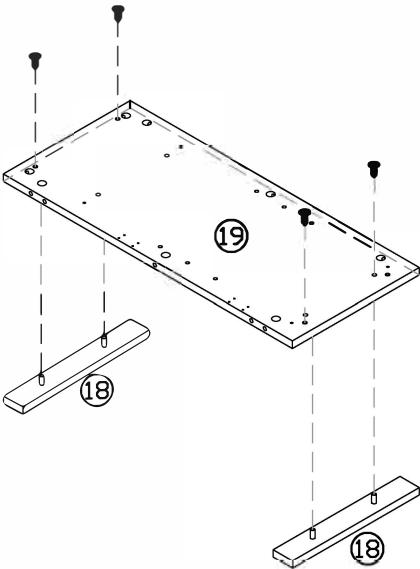




Step 19

P		4
---	---	---

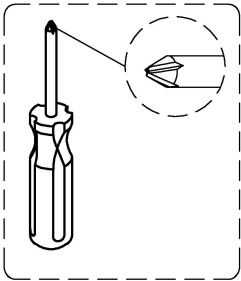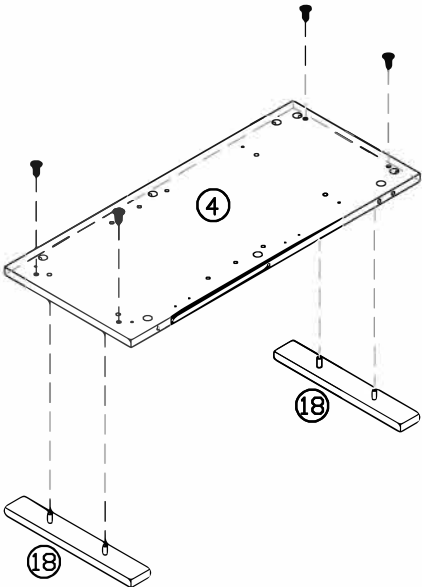




Step 20

A		4
B		4
C		6

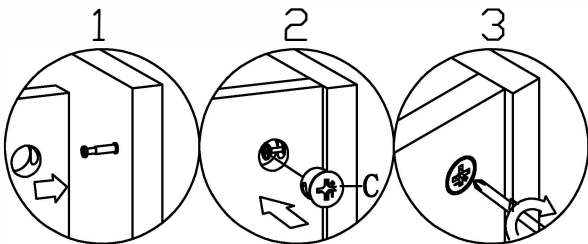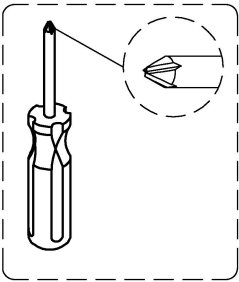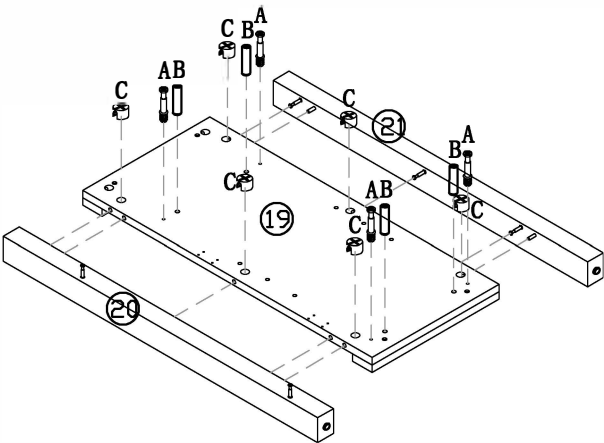



Step 21

A		4
B		4
C		6

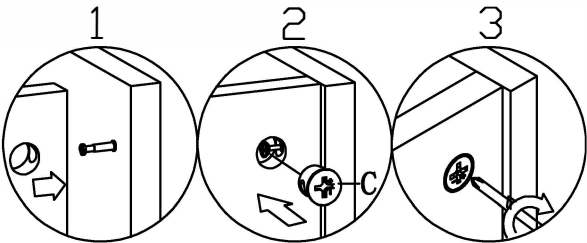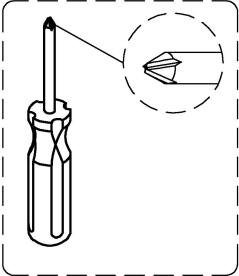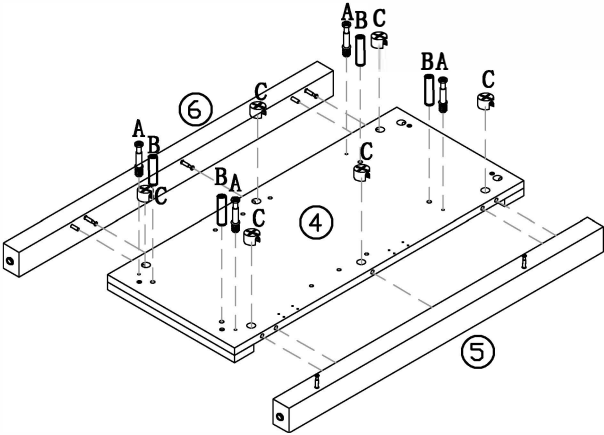



Step 22

C		8
---	---	---

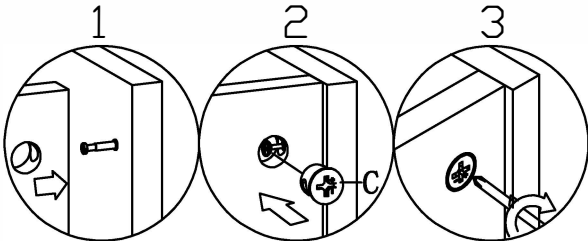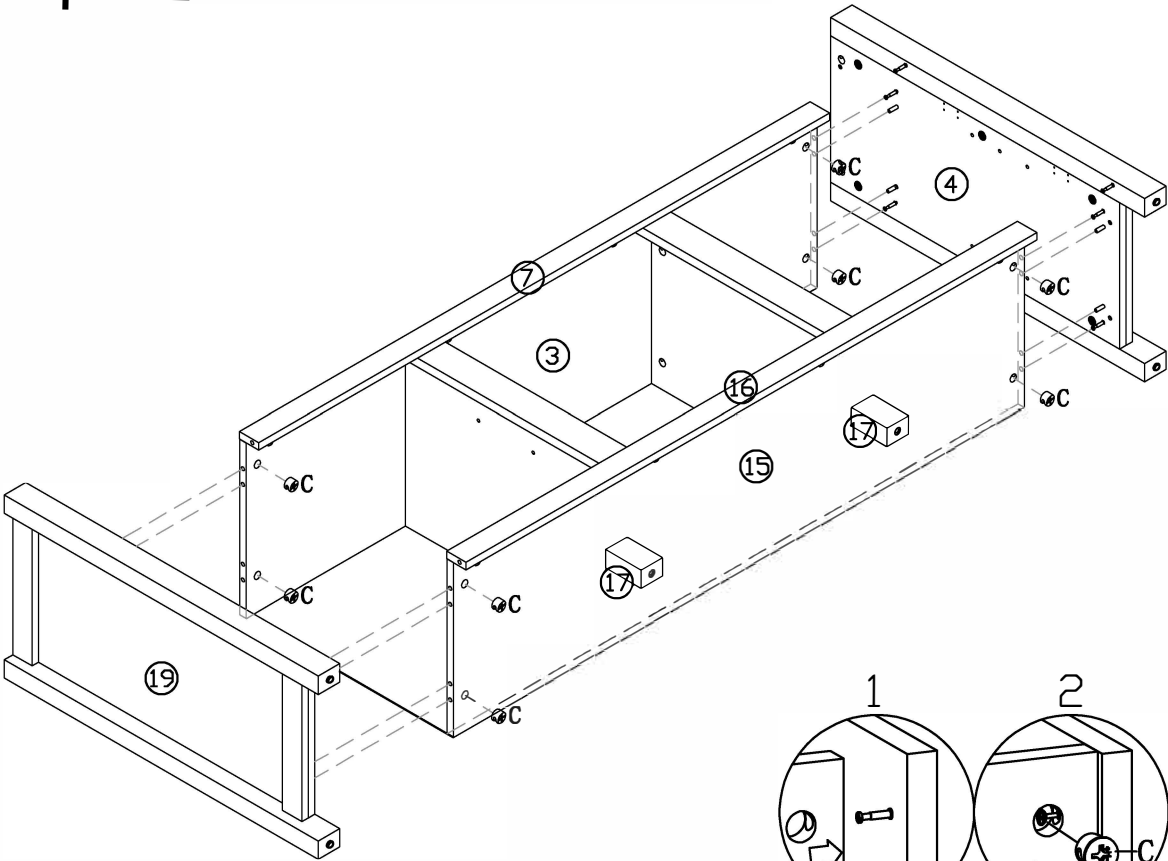



Step 23

A		6
B		6

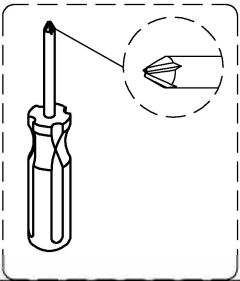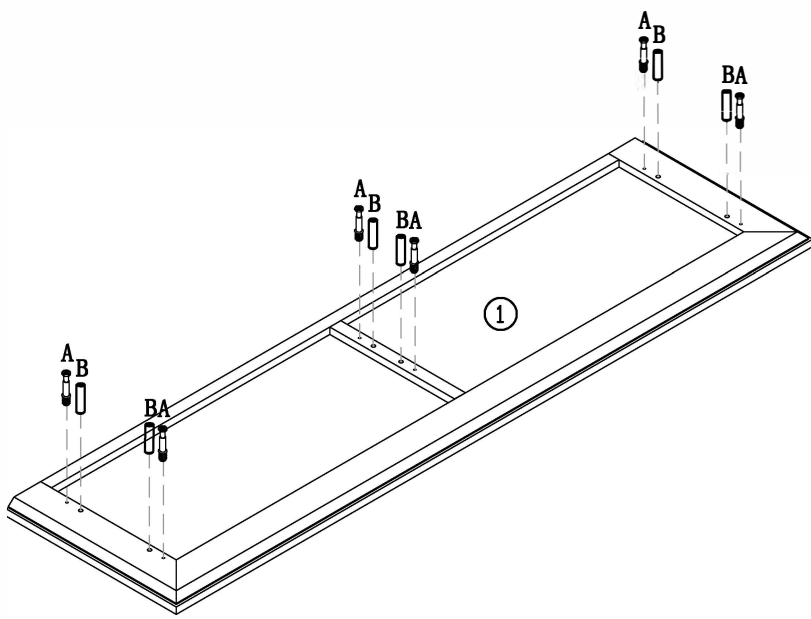


Step 24

C		6
---	---	---

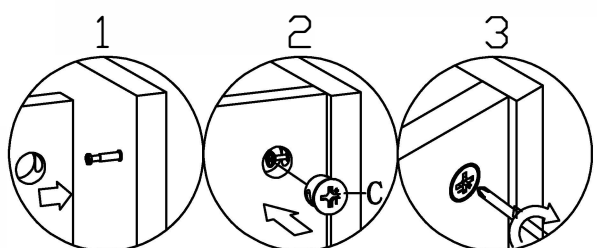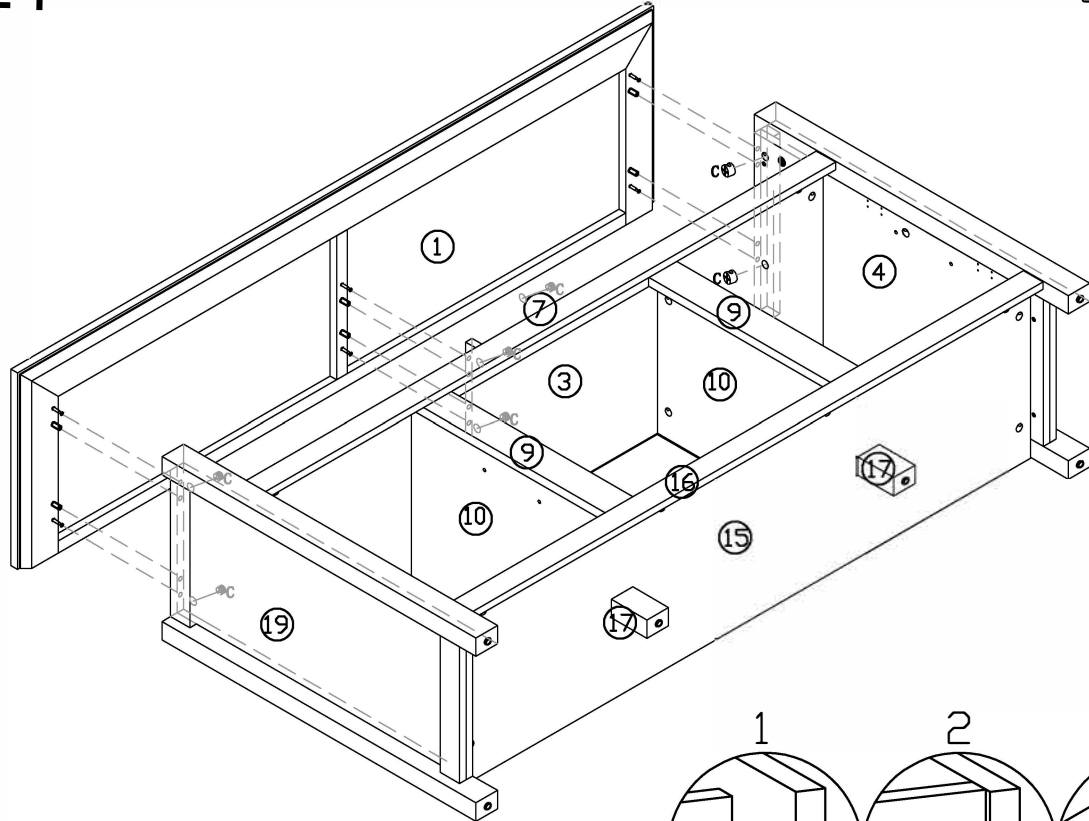


Step 25

F		34
---	---	----

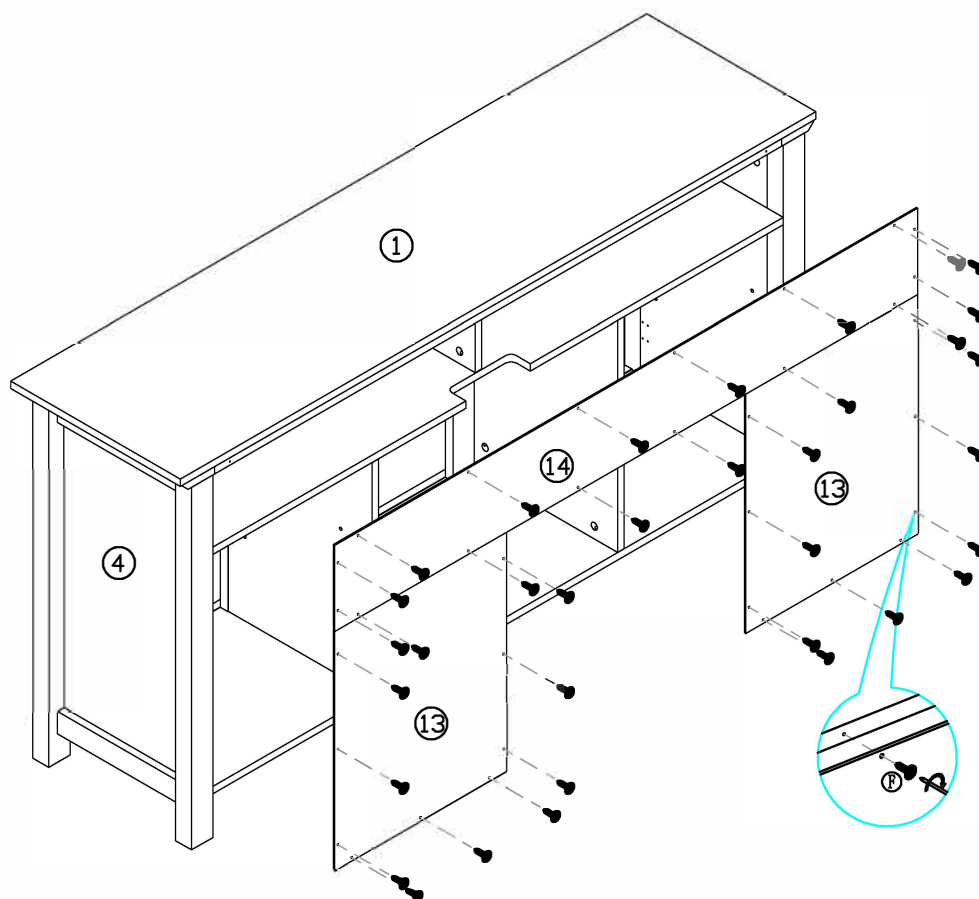


Step 26

I		30
---	---	----

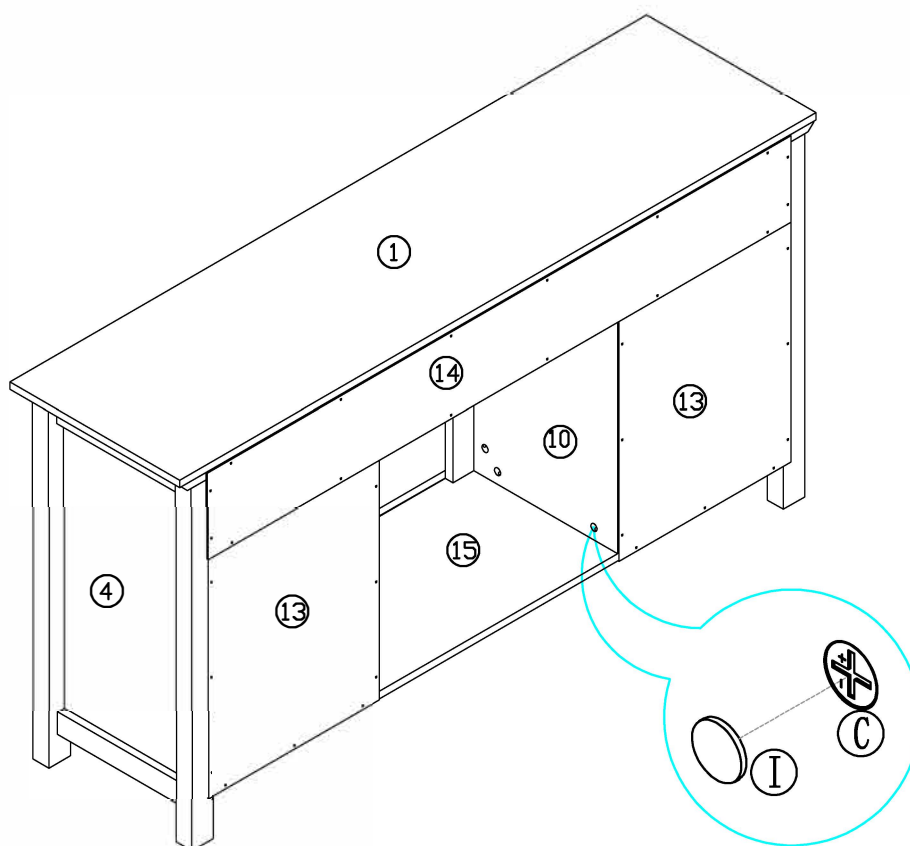


Step 27

K		8
---	---	---

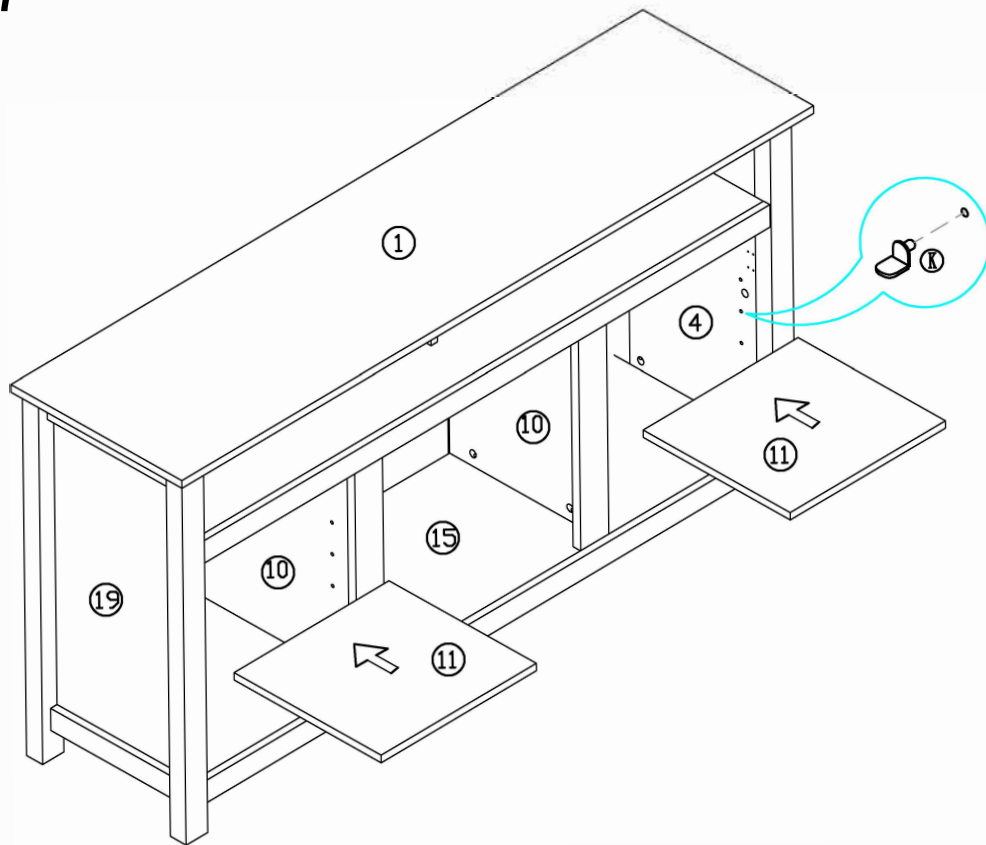

Step 28


J		4
E		8

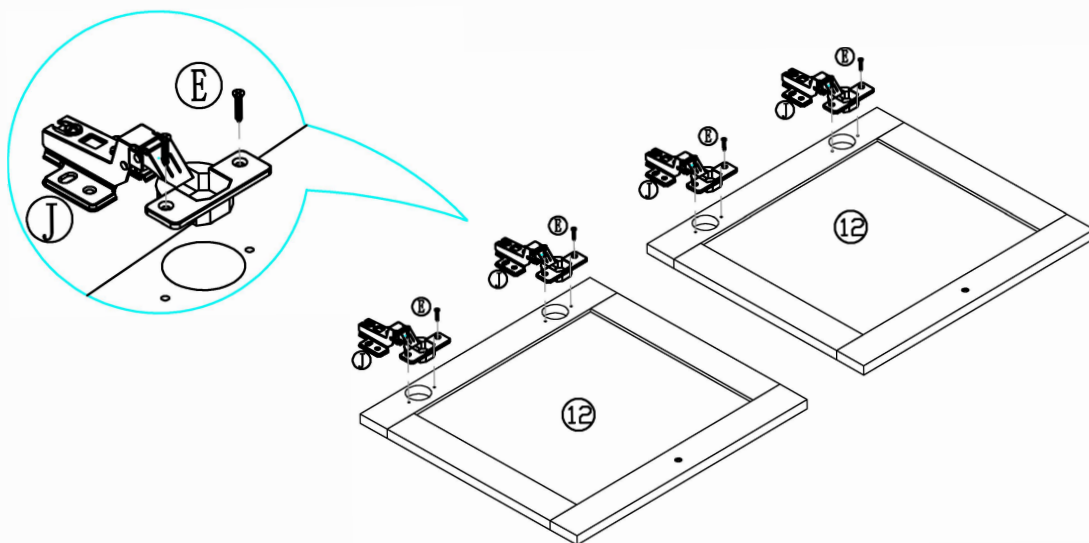

Step 29


Note: When installing the cabinet door, install the bottom hinge first, and then install the upper part of the hinge.

E		16
---	---	----

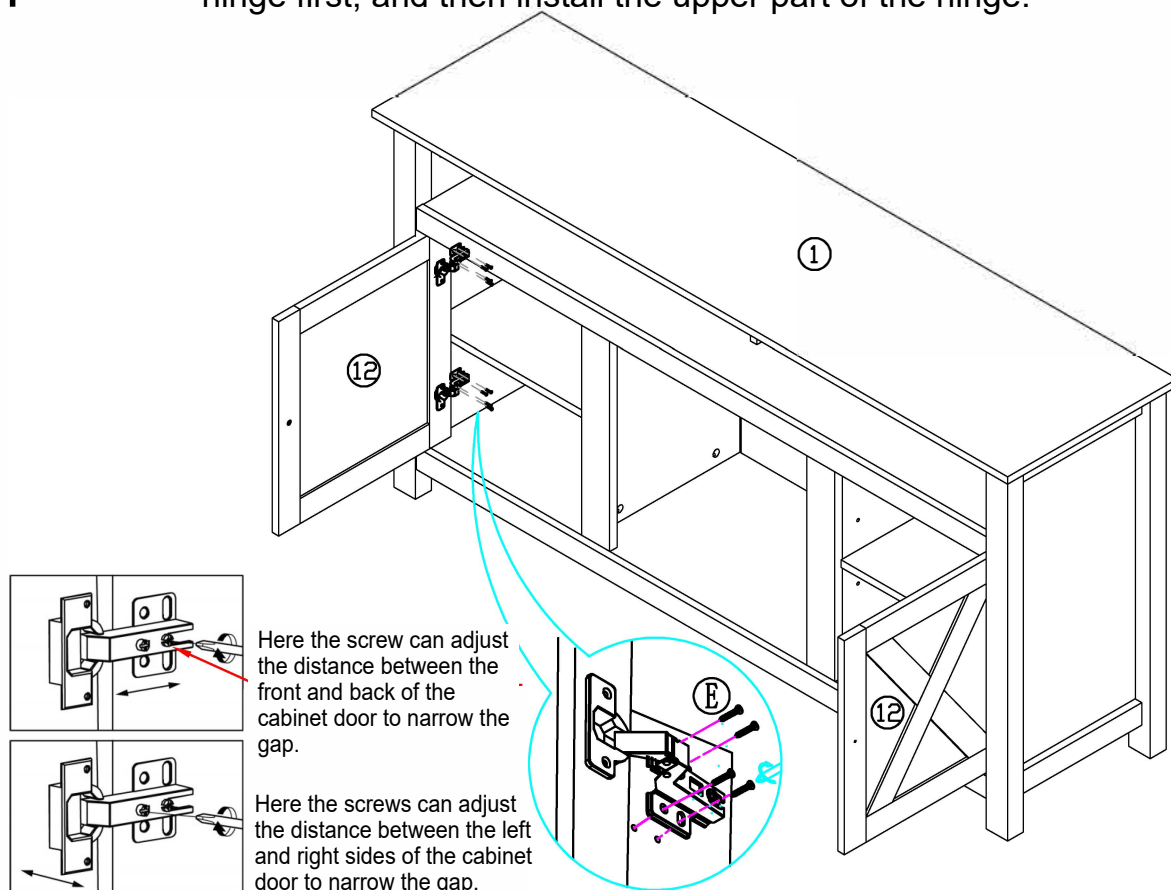


Step 30


D		2
G		2

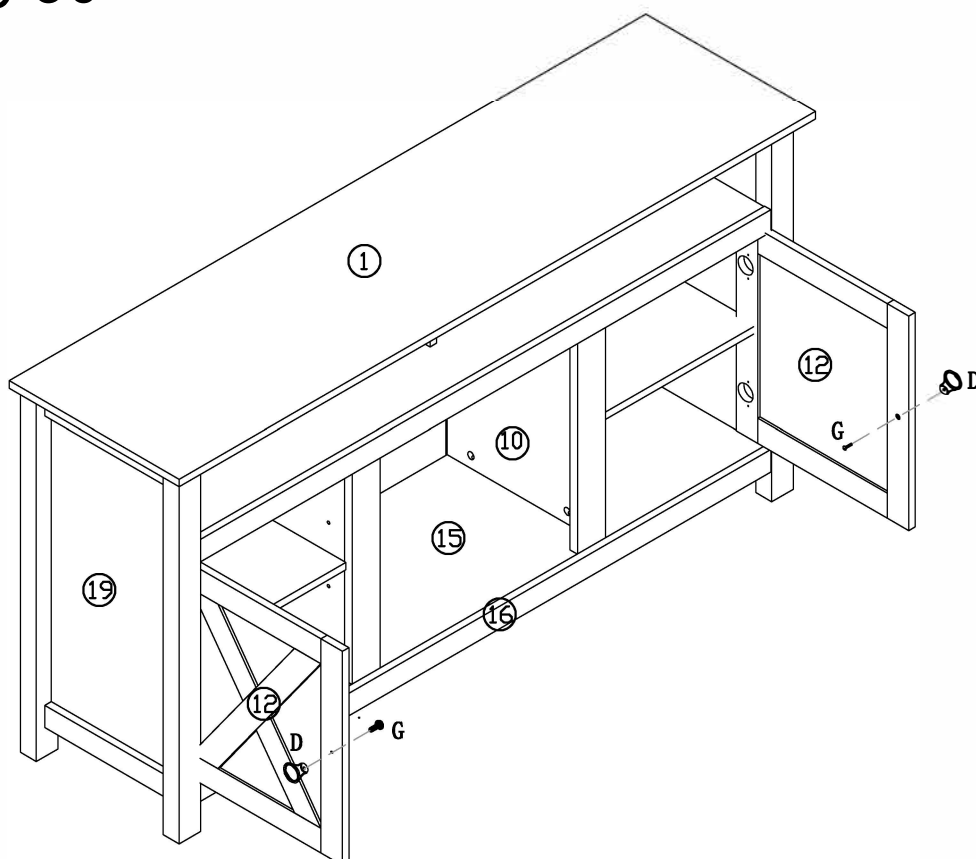


Step 31

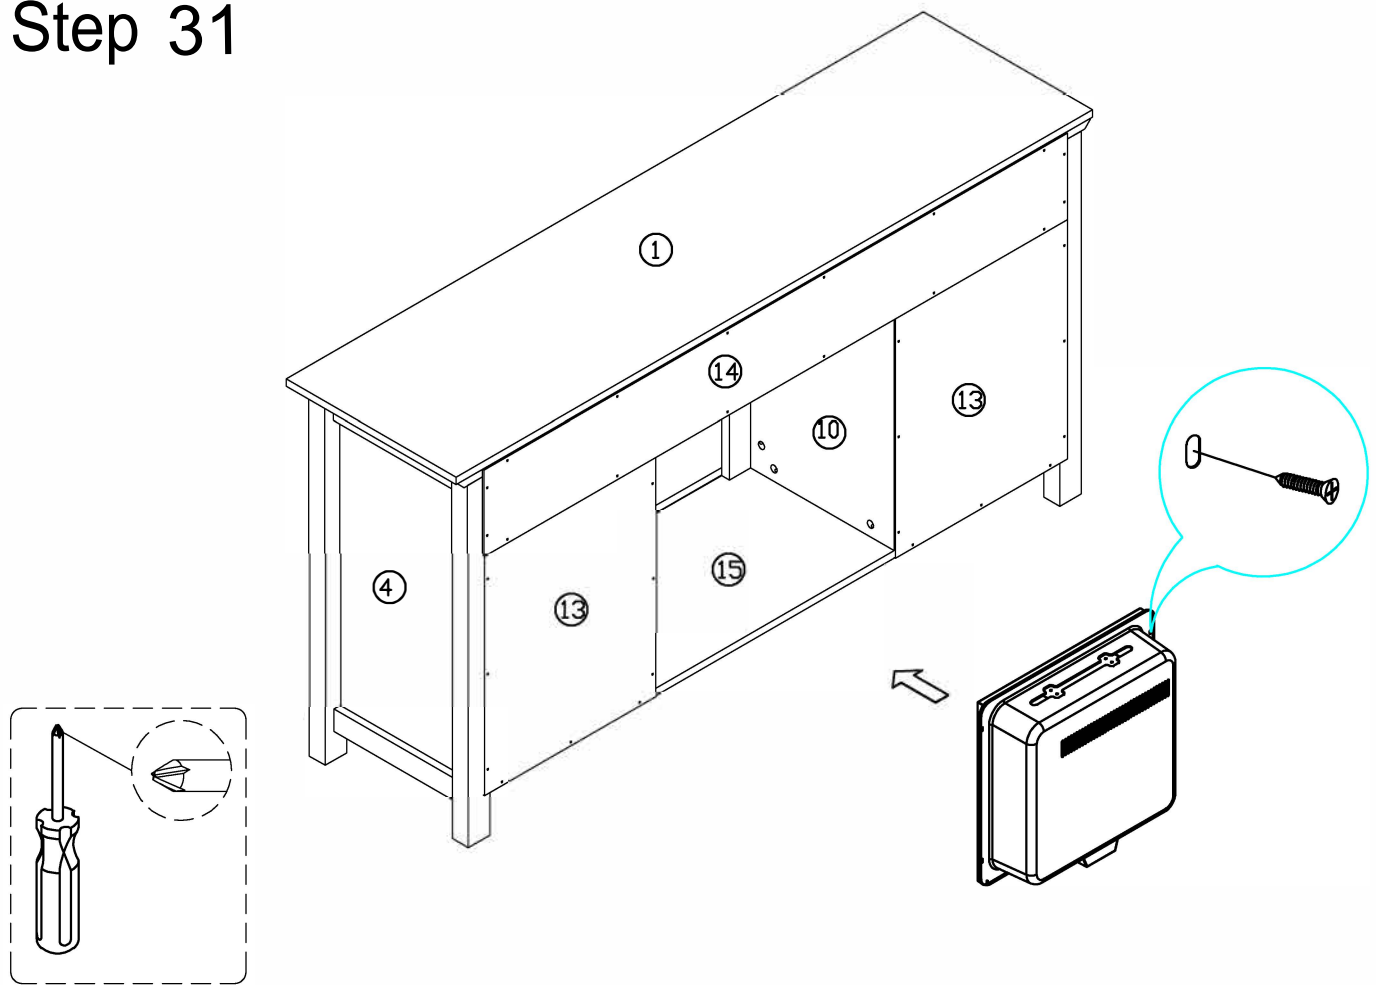





Step 32

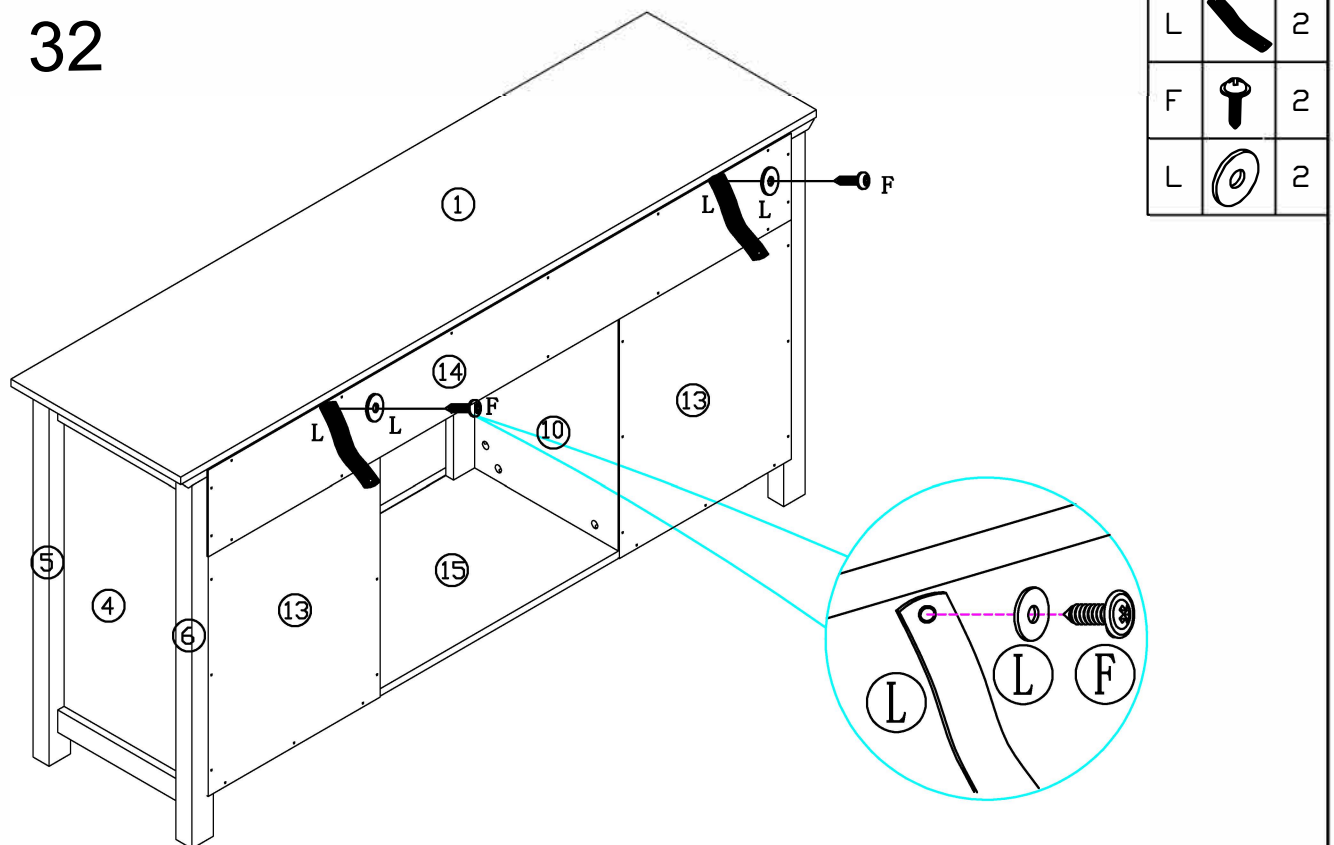


Step 33

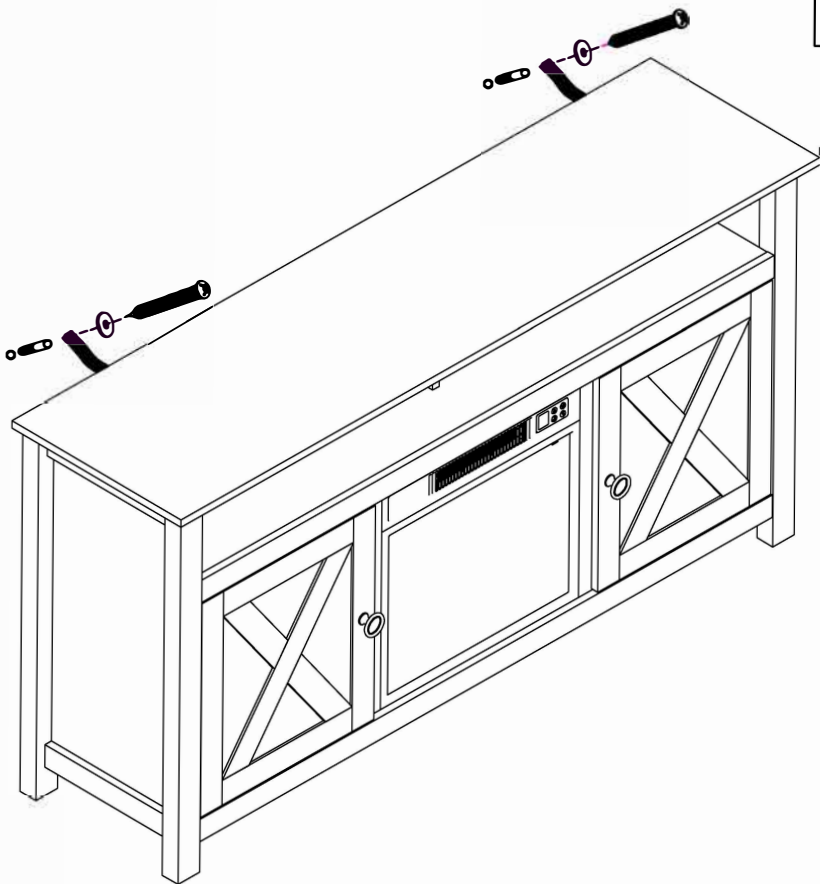

M		2+2
L		2

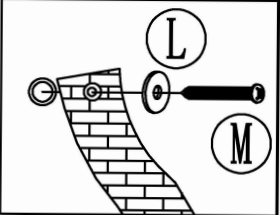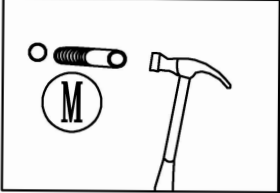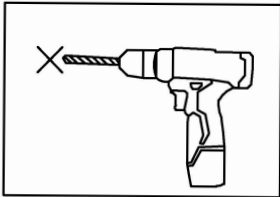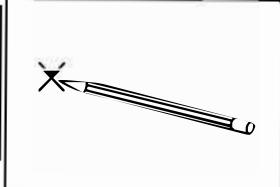

Step 34

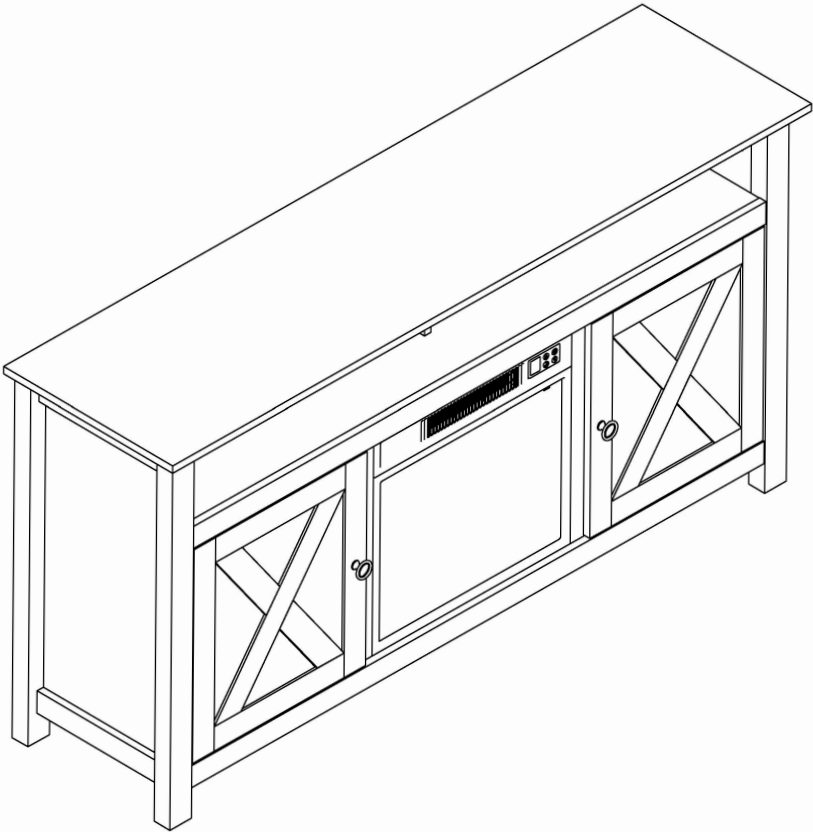

Thank you for choosing Clihome

Customer satisfaction is our eternal pursuit !
Every time you participate in, every suggestion,
let us excited, we constantly forth ahead.

If you had a pleased purchase experience,
we would be grateful.

Contact Phome Number:

303-747-4421

(951) 213-4743

Service Contact:

service@clihome.net

Cher(e) Monsieur/Dame,

La satisfaction du client est notre quête éternelle !
Chaque fois que vous participez, chaque
suggestion, laissez-nous nous enthousiasmer,
nous allons constamment de l'avant.

Si vous avez eu une expérience d'achat agréable,
nous vous en serions reconnaissants.

Cordialement
Clihome
