



# CONNECT RECTANGLE SHELF

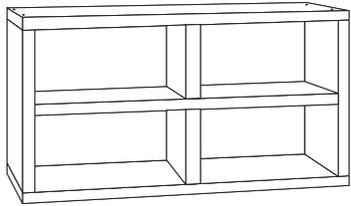

## Included



24 pins  
4 pins for connection




2 Vertical zBoards  
with grooves on 1 side  
adhesive strips on 2 edges




2 Center zBoards  
with grooves  
adhesive strips on 2 edges



4 Backer Boards  
thin and no adhesive

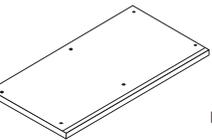

2 Horizontal zBoards  
top and bottom




1 Middle Horizontal zBoard  
holes on top and bottom



**WARNING: CHOKING HAZARD**  
Small parts NOT for children under 3 years

## Important

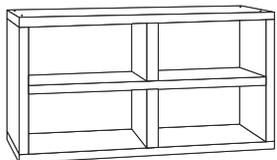


THIS SIDE UP

**CAUTION** placing unit on its side or back  
will compromise structural integrity. Use  
right side up.



- Assemble your unit on a flat even surface
- Make sure zBoard surfaces are clean and dry

- When moving your Way Basics unit, lift from the bottom
- Indoor use only. Not in bathroom.

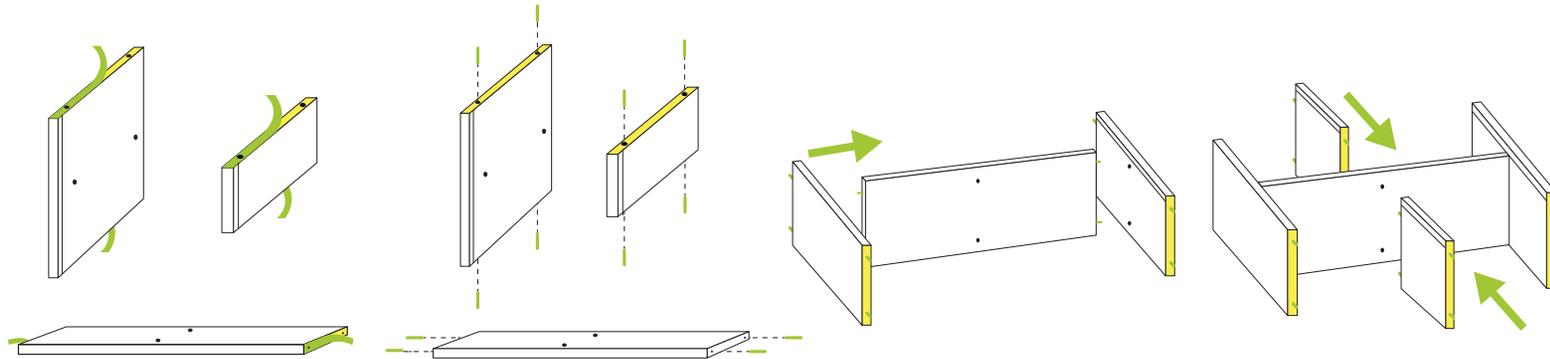


**1** Carefully remove the protective layer on the Vertical zBoards, Center zBoards and Middle Horizontal zBoard, making sure not to remove the 3M adhesive.


**2** Insert pins as shown.

**3** Align Middle Horizontal zBoard to holes in Vertical zBoards as shown.


**4** Align Central zBoards to holes in Middle zBoard.

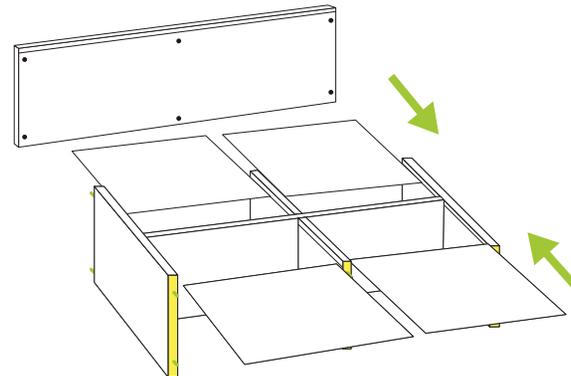

**5** Fit Backer Boards in grooves. Align Bottom zBoard as shown.

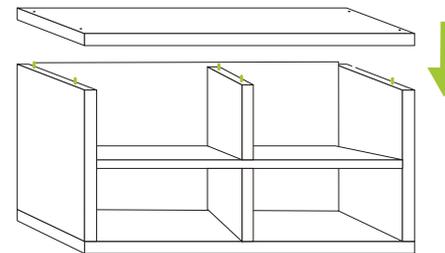

**6** Align Top zBoard to unit as shown. Press down firmly to secure.

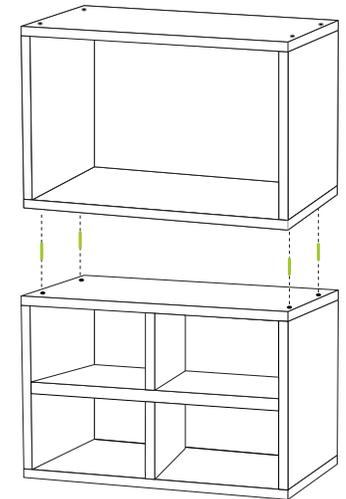

**7** Stack other Connect Rectangles with connecting pins for your perfect configuration.

Enjoy building possibilities!

