


## TRIM & MOLDING PROFILES

SMARTCORE by COREtec Floors Natural Bevel trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each piece varies in size and features a waterproof core wrapped in vinyl.

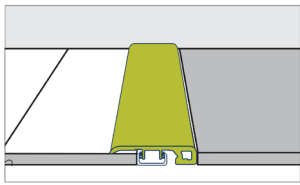


### BABY THRESHOLD

Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. Can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

#### INSTALLATION INSTRUCTIONS:

Cut **Baby Threshold** and track to same desired length. Secure the track to the floor with glue, molding tape, or nails, then press the **Baby Threshold** into the track to the desired depth using a rubber mallet.

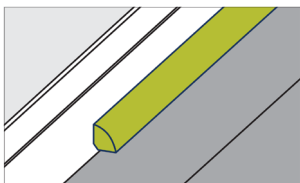


### QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

#### INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

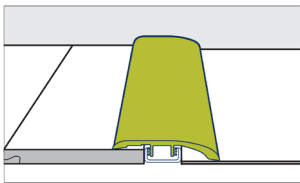


### REDUCER

Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile carpet).

#### INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.

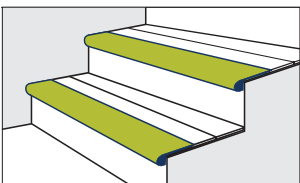


### FLUSH STAIRNOSE

Used to provide the finishing touch to the front stair edge when installing SMARTCORE on stairs.

#### INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Flush Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

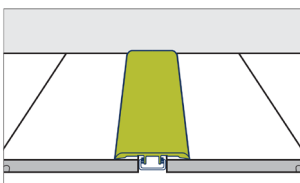


### T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.

#### INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

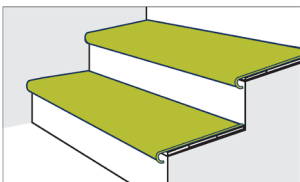







### STAIR TREAD

Used to cap an existing stair tread with a matching finish to the flooring.

#### INSTALLATION INSTRUCTIONS:

Cut **Stair Tread** to desired length. Secure in place using quality construction adhesive recommended for plastic (PVC).

# TRIM INSTRUCTIONS & DETAILS

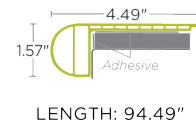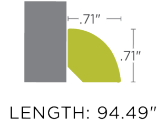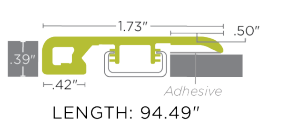

		BABY THRESHOLD		QUARTER ROUND		REDUCER		FLUSH STAIRNOSE		STAIR TREAD		T-MOLDING	
COLOR	PRODUCT #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #
Caldwell Oak	6013778	6570523	LX50202077	6570507	LX50502077	6570527	LX50302077	6570512	LX50602077	6570517	LX50702077	6570505	LX50402077
Harvest Oak	6013779	6570521	LX50202078	6570508	LX50502078	6570528	LX50302078	6570513	LX50602078	6570518	LX50702078	6570502	LX50402078
Lakeshore Oak	6013781	6570522	LX50203038	6570509	LX50503038	6570530	LX50303038	6570515	LX50603038	6570520	LX50703038	6570504	LX50403038
Franklin Oak	6013780	6570525	LX50204060	6570510	LX50504060	6570529	LX50304060	6570514	LX50604060	6570519	LX50704060	6570501	LX50404060
Andover Oak	6013777	6570524	LX50205083	6570506	LX50505083	6570526	LX50305083	6570511	LX50605083	6570516	LX50705083	6570503	LX50405083