




User Manual

6 Inch Showerhead

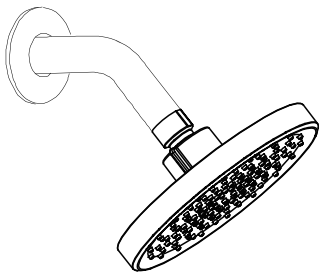


To begin your shower experience we want to give you all of the proper tools to make installation easy and quick. This way you are that much closer to enjoying an invigorating shower with your new shower head.

- Gather the tools to install the shower head.




Adjustable Wrench (not included)³

DRAWING

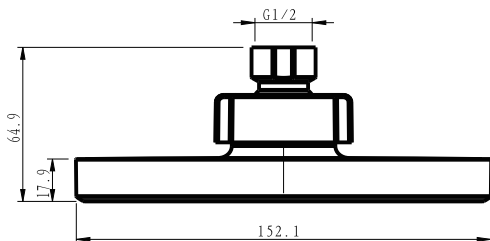


INSTALLATION


6 Inch Rainfall Shower Head

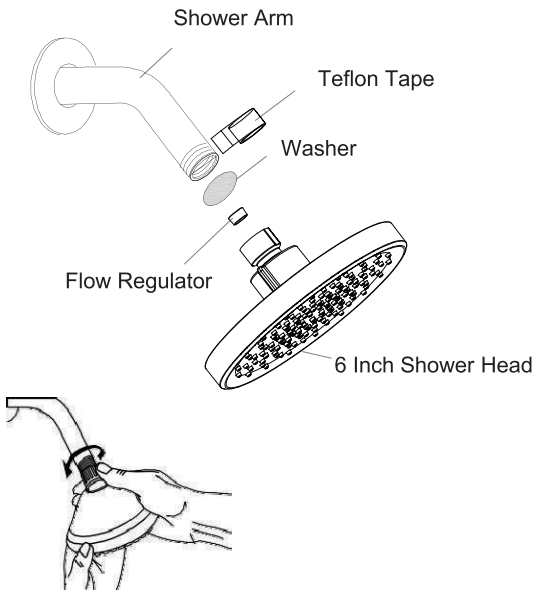


- 1 Remove your old shower head and pipe.

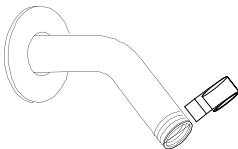

2 Wrap a layer of teflon tape (provided) around threads of shower arm.

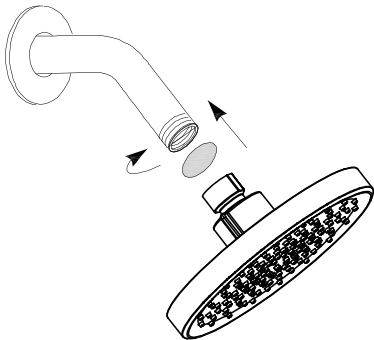

3 Install new rainfall shower head by threading clockwise onto shower arm. Use a wrench to tighten shower head nut to a snug fit. Do not over tighten. Wrap shower head nut with a cloth if you are using pliers.

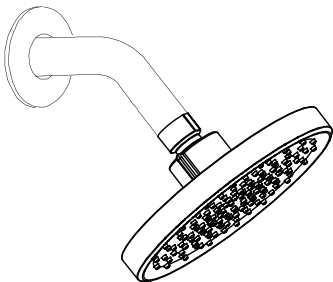

4 Point all shower heads away from you and turn on the water full force. Check for leaks. Re-tighten all connectors if necessary. Then, Enjoy!

WARNINGS:

- To avoid hot water dangers and conserve even more energy, make sure your water heater is set at 120°F (48.9°C) or below.
- Test the shower water with your hand before bathing.
- For external use only. The potentially deadly amoeba, *Naegleria fowleri*, may be present in some tap water or unchlorinated well water.

CARE AND CLEANING

- To maintain proper working conditions cleaning is required when mineral deposits appear on the spray orifices. To clean mineral deposits, gently rub the silicone nozzles on the face of the shower head to dislodge.
- Do not clean or rinse any part with harsh chemicals, heavy duty cleaners, or abrasives; this may damage parts or finish and will void warranty.
- Clean Filter screen by back flushing to remove particles.

Website: www.boyelliving.com

Tel: 909-297-5794

Email: service@boyelliving.com