




Fixed Post Thumb Screw

DIRECTIONS:

- Remove all components from strainer body.
- Apply plumber's putty between strainer body and sink.
- Insert strainer body firmly in place while installing under sink - first rubber washer and paper washer, next steel pressure ring, with the flat side against the paper washer. Hand-tighten firmly.
- Screw triangular retainer onto the threaded shank of the strainer body. Hand-tighten firmly.
- Hand-tighten the three thumbscrews on the triangular retainer.
- Place flanged tailpiece washer onto tailpiece and install slip nut with threads upward on tailpiece. Screw slip nut onto threaded shank of strainer body. Tighten firmly with wrench.

REQUIRED TOOLS:

Wrench
Plumber's putty

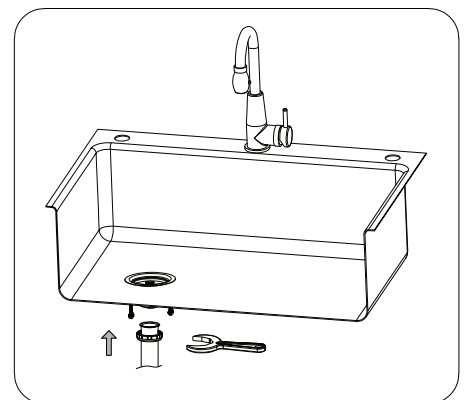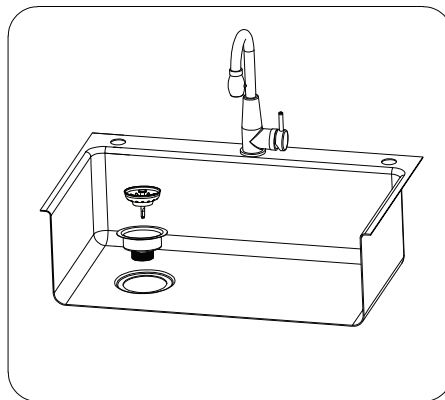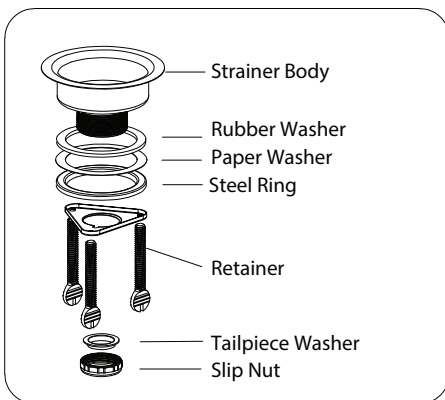

ALLEN + ROTH and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

Thank you for purchasing this **ALLEN+ROTH** product. Questions, problems or missing parts? Before returning, contact us on: **866-439-9800**, 8 a.m. - 8 p.m., EST, Monday - Sunday or **ascs@lowes.com**.