

# Home Office Desk with Drawers

## Instruction Manual

D-F02BC-47IN

D-F02BC-55IN



✉ HJ-Customer-Service@outlook.com


☎ (909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM

# 1 Component List


---

**A** X1

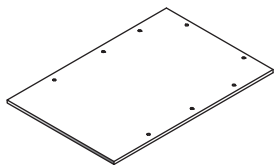


Desktop Board

**B** X1

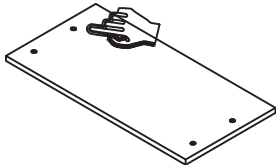


Splice Board

**C** X1

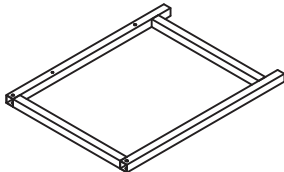


Left Leg Frame

**D** X1

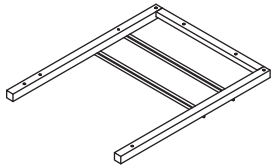


Drawer Left Frame

**E** X1

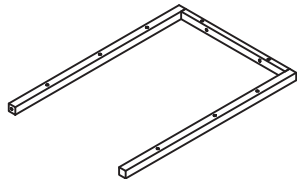


Fixed Frame

**F** X2

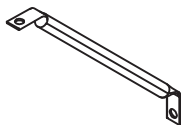


Inclined Reinforcement  
Tube

**G** X1

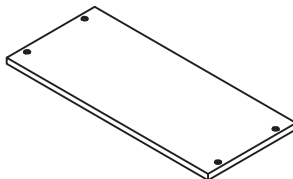


Lower Panel

**H** X4




Connector Tube

**I** X1

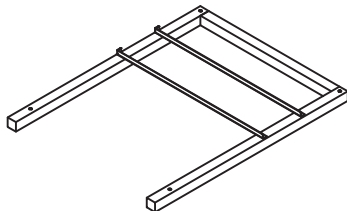


Drawer Right Frame

**J** X2

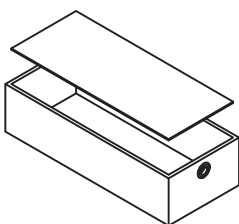

Drawer

**K** X1

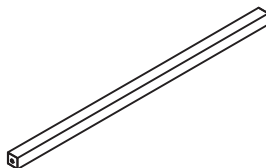


Rear Reinforcement Tube

# 2 Supplied Parts and Hardware

---

**1** X30




Screws

**2** X3



Screws

**3** X1




Hook


**4** X1



Wrench

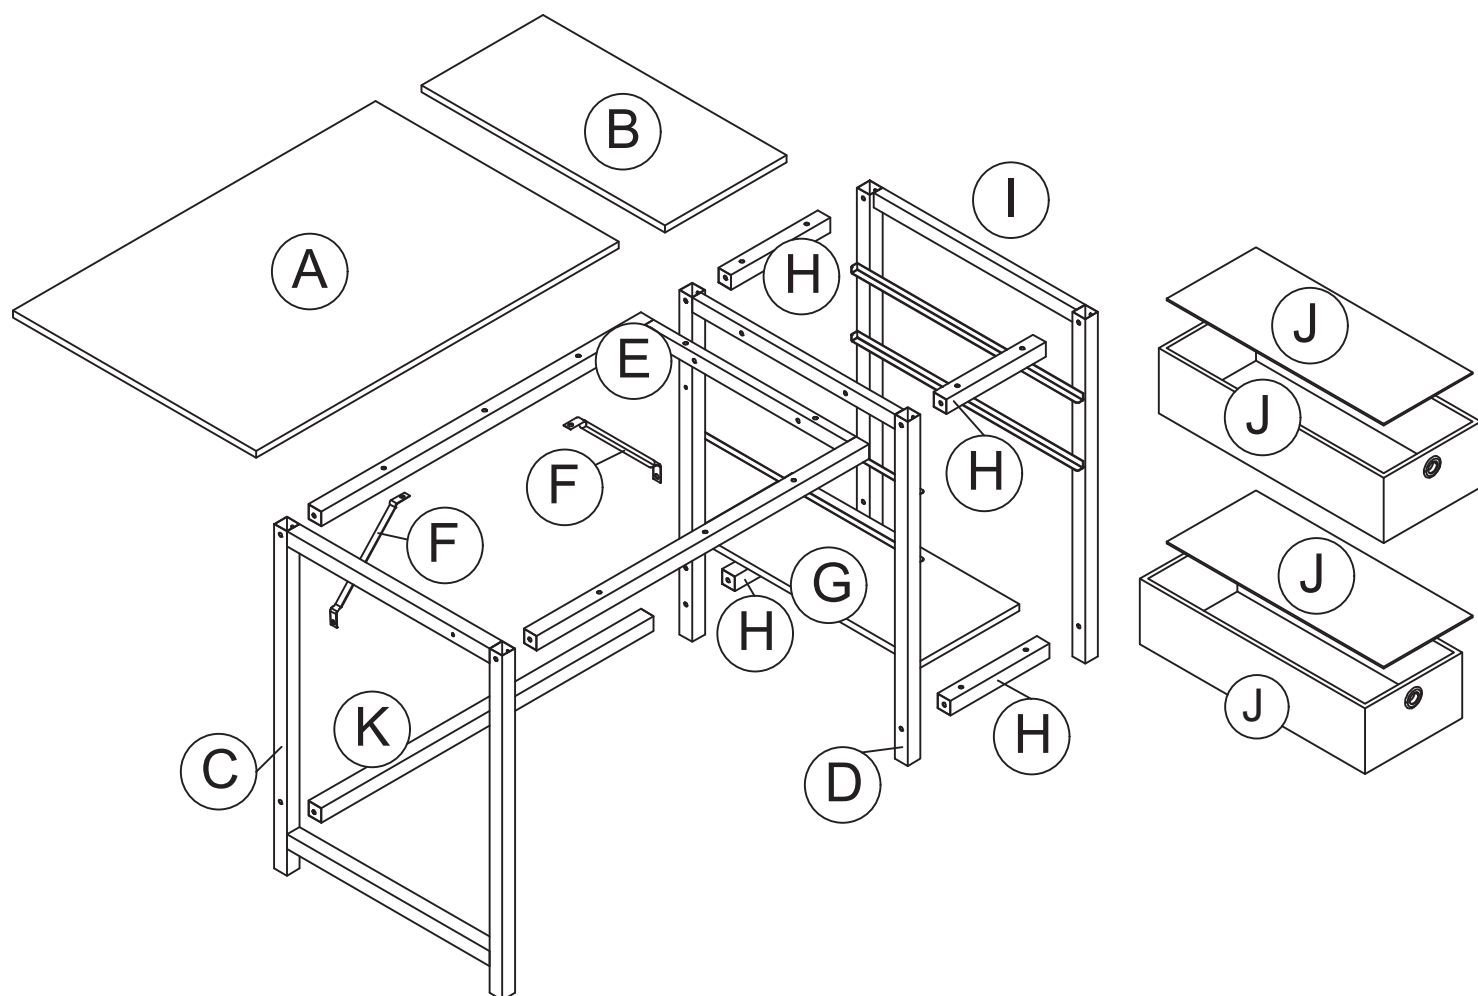


## Step 1

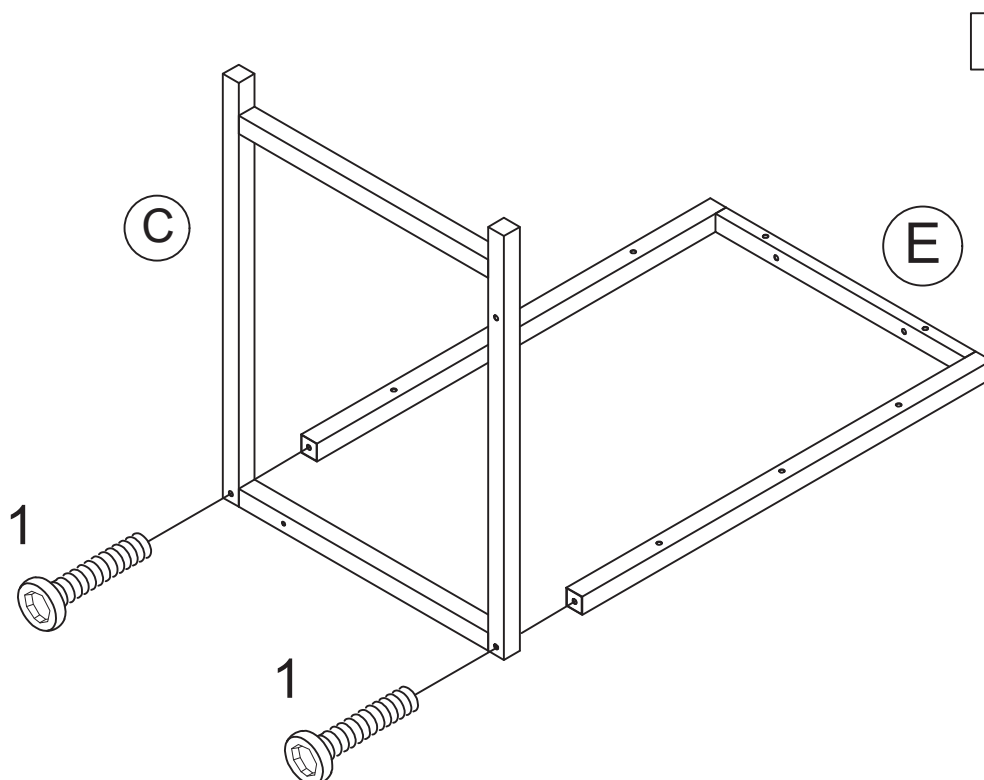

1		X 2
---	---------------------------------------------------------------------------------------	-----


Install Fixed Frame **(E)** to the Left Leg Frame **(C)** with Screws **(1)\*2**.

## Step 2

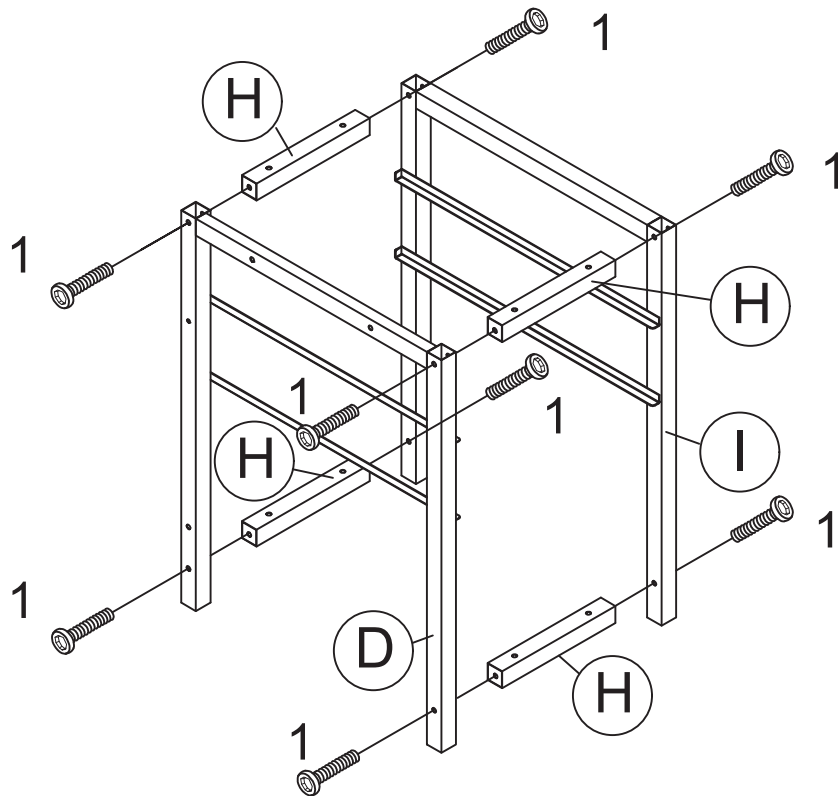


Install Connector Tube **(H)\*4** to the Drawer Frames **(D&I)** with Screws **(1)\*8**.

## Step 3

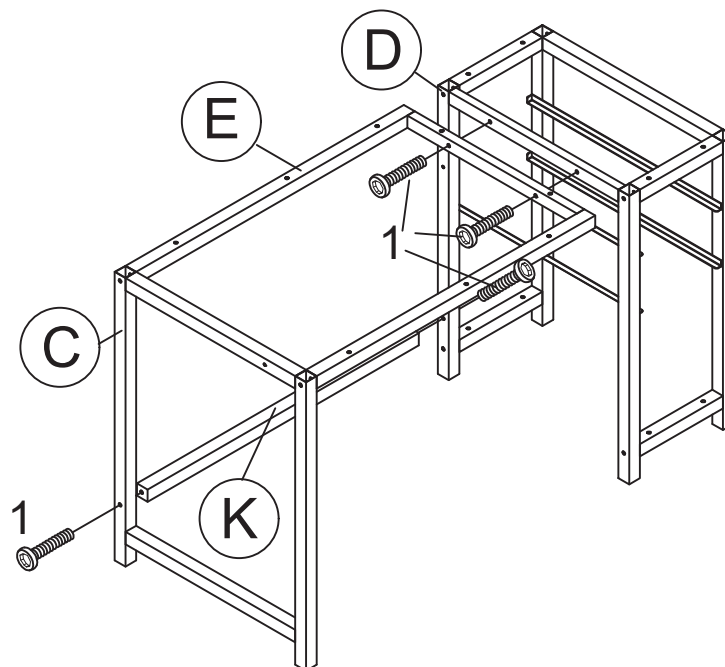

With Screws **(1)\*4**, install Fixed Frame **(E)** Part to the Drawer Left Frame **(D)** Part, and then install Rear Reinforcement Tube **(K)** to the bottom of the Left Leg Frame **(C)** and Drawer Left Frame **(D)**.


## Step 4

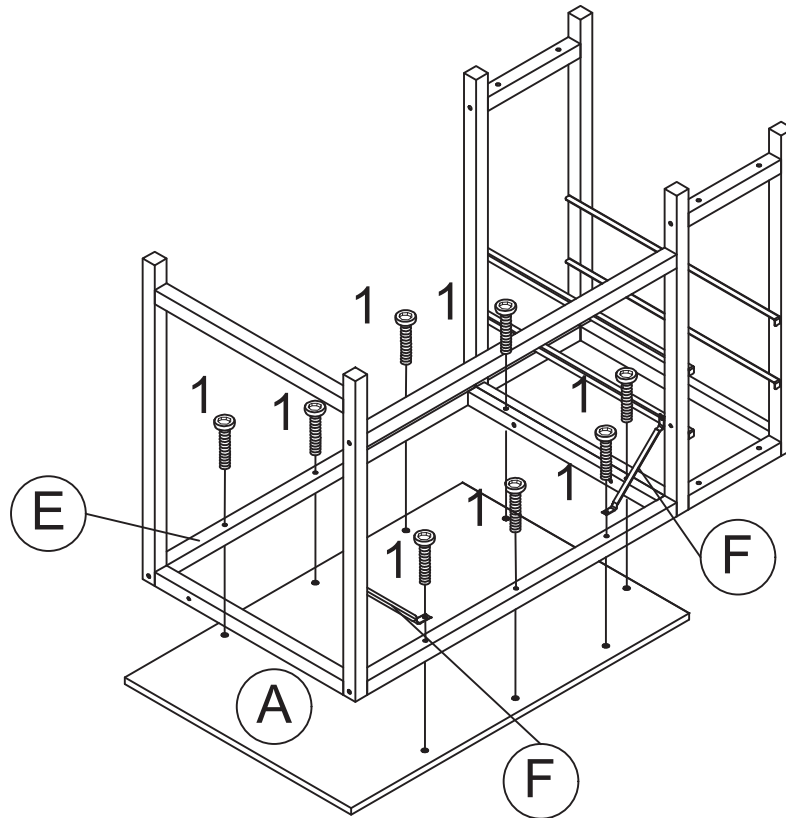



1		X 8
---	-------------------------------------------------------------------------------------	-----

Install Desktop Board **(A)** to the installed frame with Screws **(1)\*8**.  
Two Screws **(1)\*2** need to pass through the Inclined Reinforcement Tube **(F)\*2** before installation.
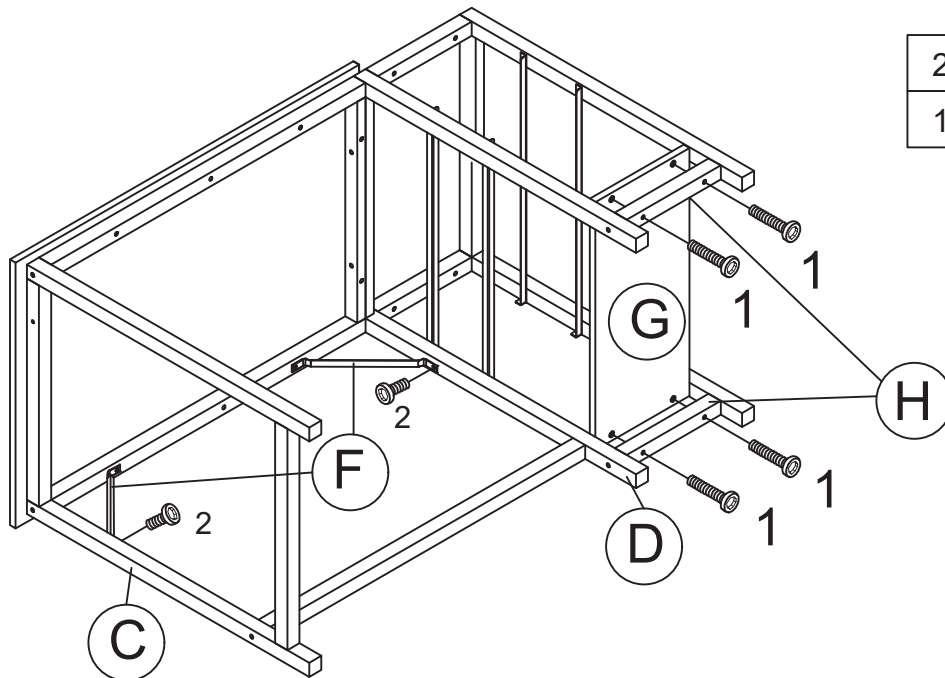
## Step 5




2		X 2
1		X 4

Install Inclined Reinforcement Tube **(F)\*2** to the Left Leg Frame **(C)** and Drawer Left Frame **(D)** with Screws **(2)\*2** and install Lower Panel **(G)** to the Connector Tube **(H)\*2** with Screws **(1)\*4**.


## Step 6

1		X 4
---	-------------------------------------------------------------------------------------	-----

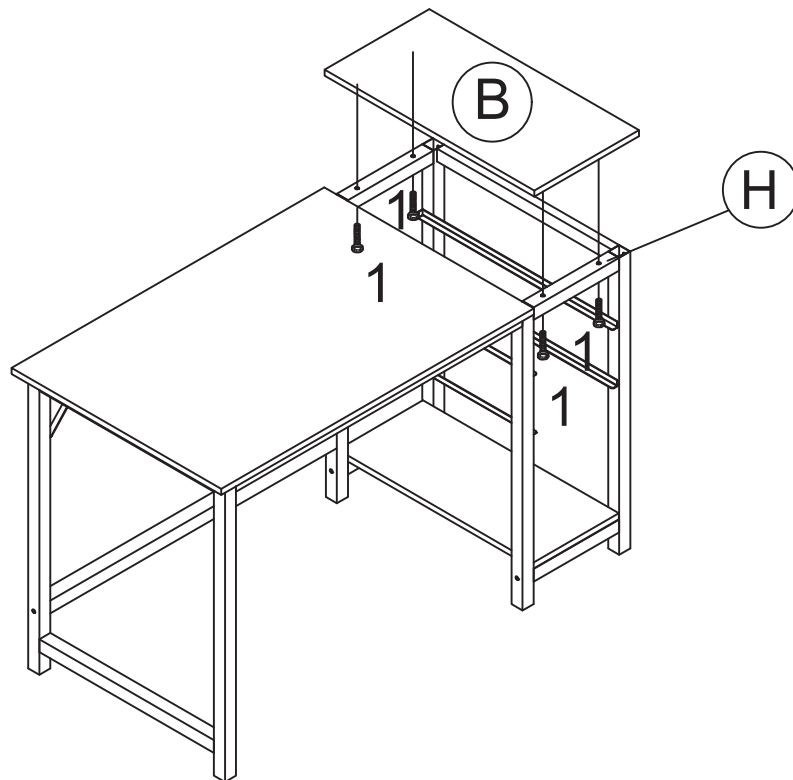

With Screws **(1)\*4**, install Splice Board **(B)** to the Connector Tube **(H)\*2**

## Step 7

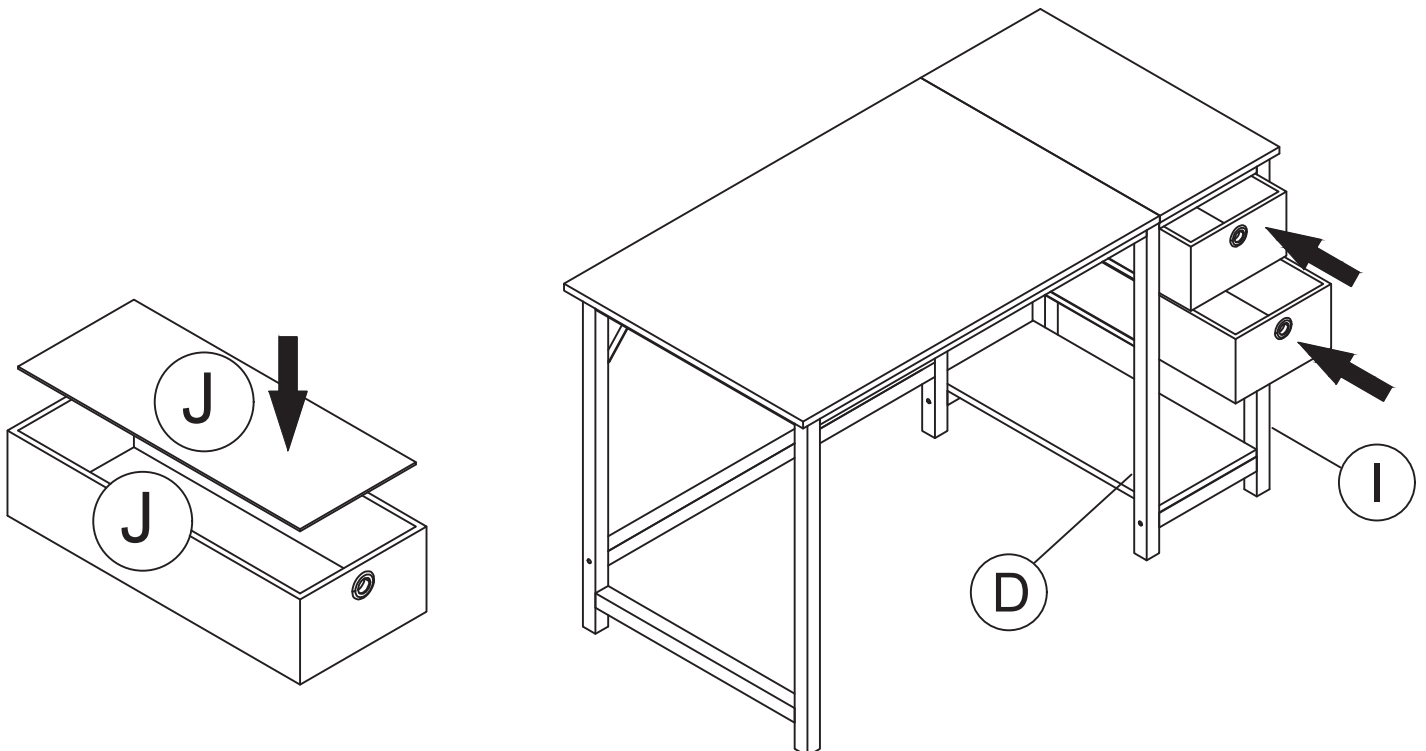


Put Drawer **(J)\*2** into Drawer Frames **(D&I)**.

## Step 8


2



X 1

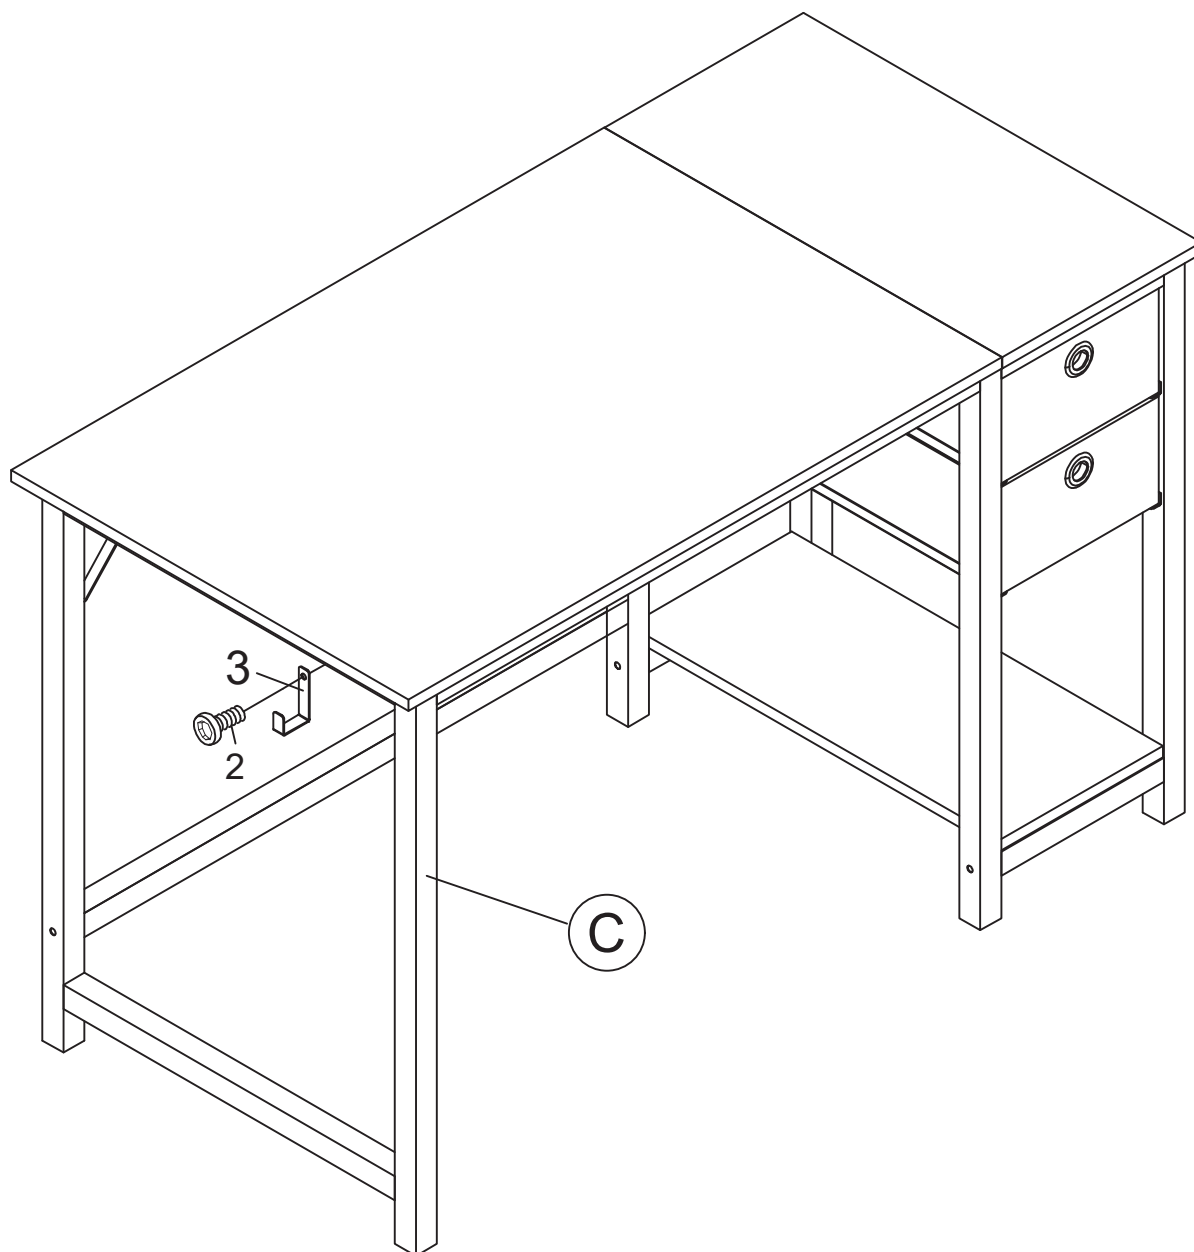

Attach Hook **(3)** to the Left Leg Frame **(C)** with Screw **(2)**.

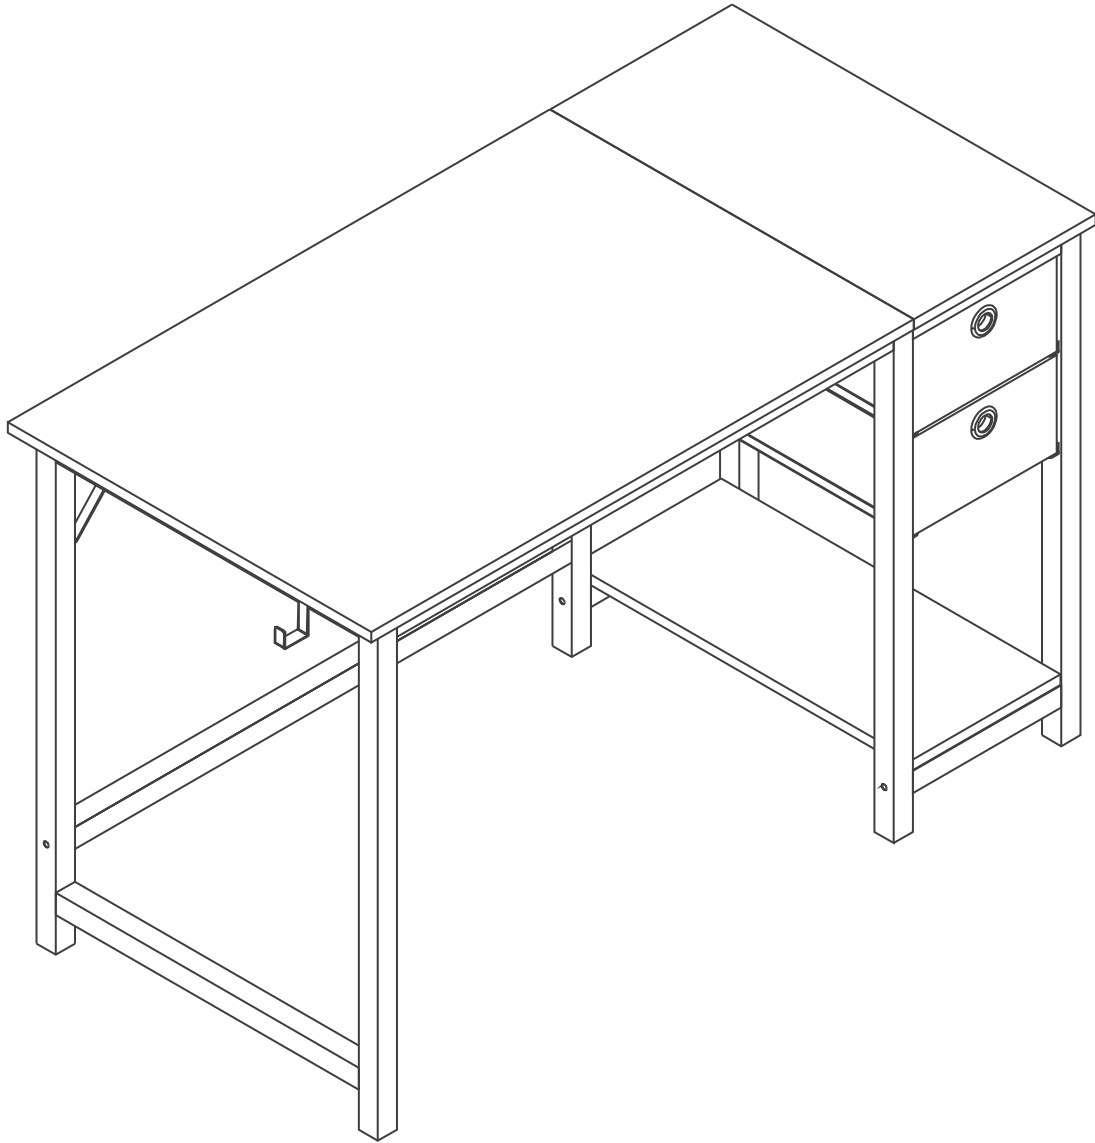

## **Technical Support**

(909)637-7665 | (909)637-7593

## **Other Info**

[HJ-Customer-Service@outlook.com](mailto:HJ-Customer-Service@outlook.com)

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.