


Nightstand

Assembly Instructions

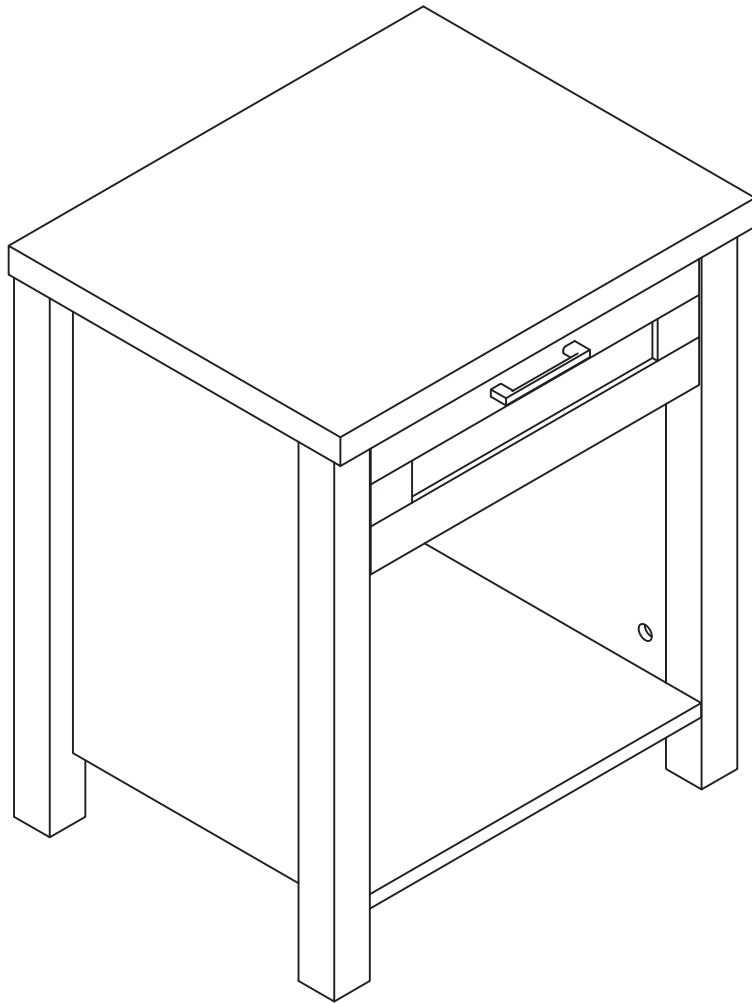

Product Refs-HM-ST003-001

Imported By: Forward Industries, 33401. U.S.A

Issue 1 -02/12/20

Safety and Care Advice

1. The maximum weight that can be placed on this product is 50 lbs.
2. This product must not be used as a seat.
3. Check carefully to ensure correct and complete assembly before using.
4. Don't allow children to play near the table as their behaviour is unpredictable. The manufacturer is not responsible for loss, injury, or damage due to improper actions or use.
5. Do not use corrosive or abrasive materials near the product. Please ensure that the cleaner used will not pollute the environment.
6. Cleaning should not be attempted by children without supervision.
7. Please make sure there are no hazard sources in your operating environment. e.g., do not leave tools around. Always be careful to dispose of the packaging materials in order to avoid any possible danger, e.g. plastic bags may lead to choking hazard to children.
8. We recommend you keep the original packaging of the item in case of the need for return or future transportation.
9. Do not use outdoors. SAVE THESE INSTRUCTIONS. For Household use only.




2 PERSON ASSEMBLY




**APPROXIMATE 1 HOUR
ASSEMBLY TIME**

Main Components


Please check you have all the parts listed below

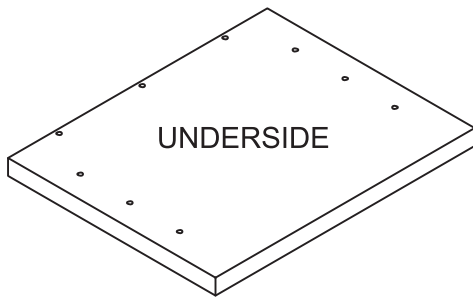


1 Top Panel Qty 1
(19.68x15.43x1.18")

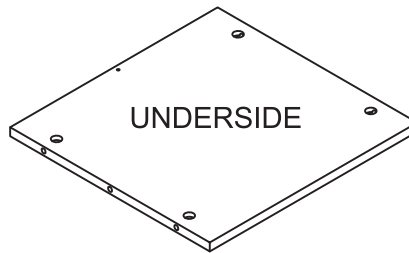


2 Base Panel Qty 1
(15.74x15.03x0.59")

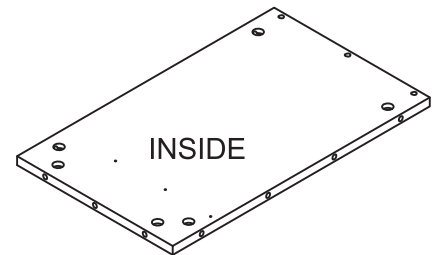


3 Side Panel (left) Qty 1
(19.52x11.69x0.59")

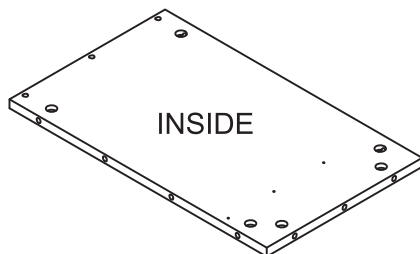


4 Side Panel (Right)
Table Qty 1
(19.52x11.69x0.59")

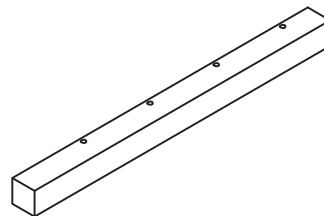


5 Corner Post (Front-Left &
Back-Right) Qty 2
(22.44x1.69x1.69")

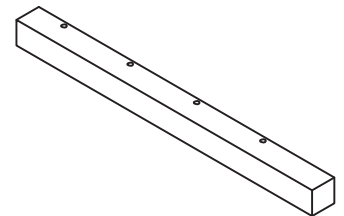


6 Corner Post (Back-Left
& Front-Right) Qty 2
(22.44x1.69x1.69")

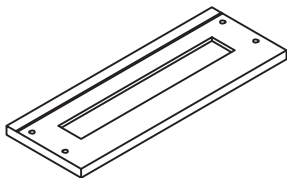


7 Drawer Front
Qty 1
(15.43x5.66x0.59")

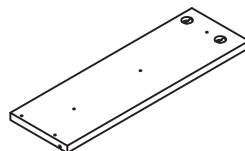


8 Drawer Side Panel (left)
Qty 1
(13.77x4.33x0.47")

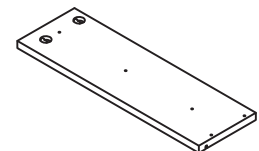


9 Drawer Side Panel (Right)
Qty 1
(13.77x4.33x0.47")

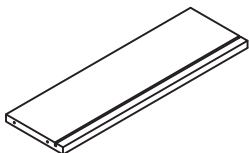

10 Drawer Back Panel Qty 1
(13.93x4.33x0.47")

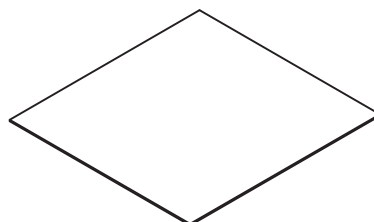

11 Drawer Base Qty 1
(14.4x13.7x0.1")

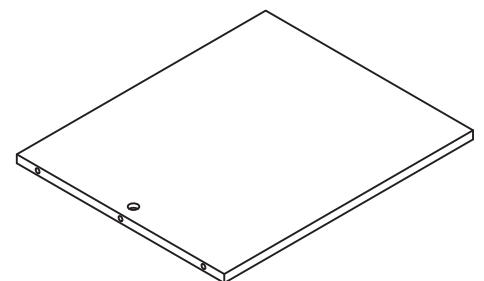











12 Back Panel Qty 1
(18.89x15.66x0.59")

Fixings, Fittings And Tools

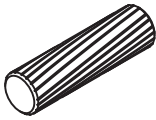Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>A</p>  <p>Cam nut x 21</p>	<p>B</p>  <p>Cam Dowel x 21</p>	<p>C</p>  <p>Wooden Dowel x 16</p>	<p>D</p>  <p>Wooden Screw 1.57" x 5</p>
<p>E</p>  <p>Screw M4x0.78" x 2</p>	<p>F</p>  <p>Screw M3.5x0.47" x 12</p>	<p>G</p>  <p>Drawer Handle 3.93x0.78" x 1</p>	<p>H</p>  <p>Hole Cover Qty 4</p>
<p>J</p>  <p>Drawer Runner 13.77x1.06" x 1 Pair</p>		<p>K</p>  <p>Foot Pad 1.49x1.49" x 4</p>	

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.



Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Assembly Steps

STEP 1

Screw cam dowels **B** into the underside of top **1** and inside of drawer front **7**.

Fit wood dowels **C** into the underside of top **1**.

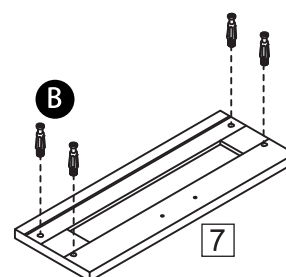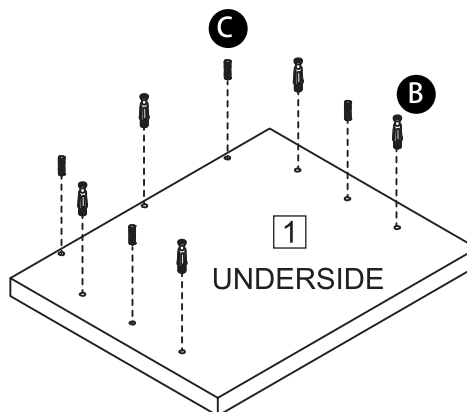


B



Cam Dowel x 9

C





Wooden Dowel x 4

STEP 2

Screw cam dowels **B** into the corner posts **5** and **6**.

Fit wood dowels **C** into the corner posts **5** and **6**.

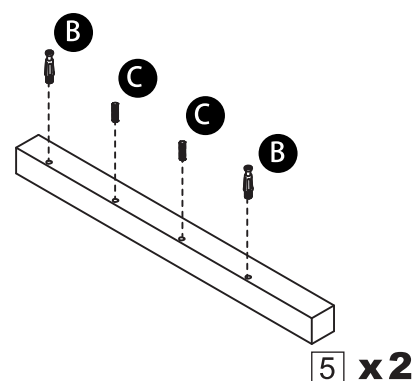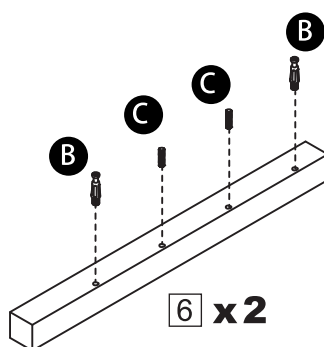


B



Cam Dowel x 8

C





Wooden Dowel x 8

Assembly Steps

STEP 3

Insert cam nuts **A** into side panels **3** and **4**.

Locate corner posts into position and secure by tightening cam nuts **A**.

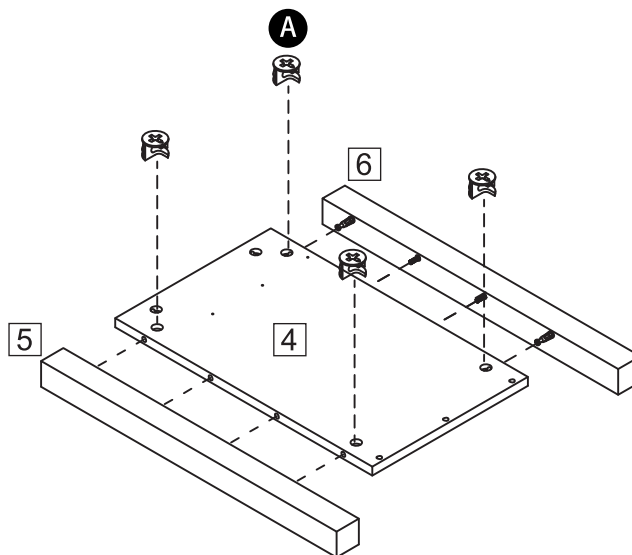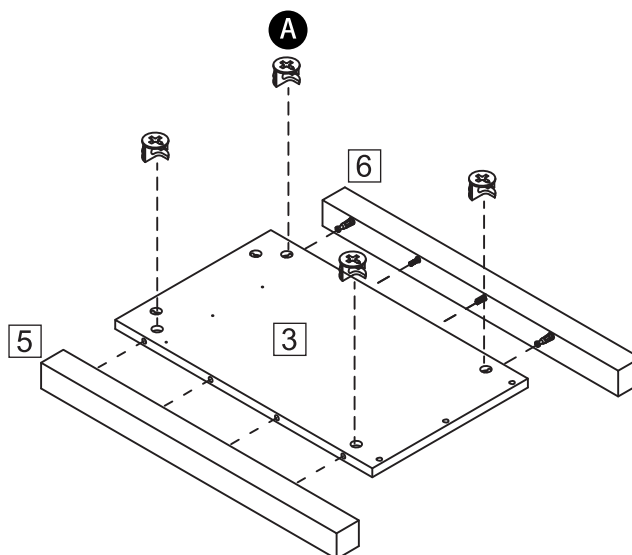

A



Cam nut x 8

Assembly Steps

STEP 4

Separate drawer runners **J** as shown.


Assemble one half of drawer runners to side panels **3** and **4** using screws **F**.

Screw cam dowels **B** into side panels **3** and **4**.





Insert wood dowels **C** into side panels **3** and **4**.

Assemble the other halves of runners **J** to drawer side panels **8** and **9** using screws **F**.

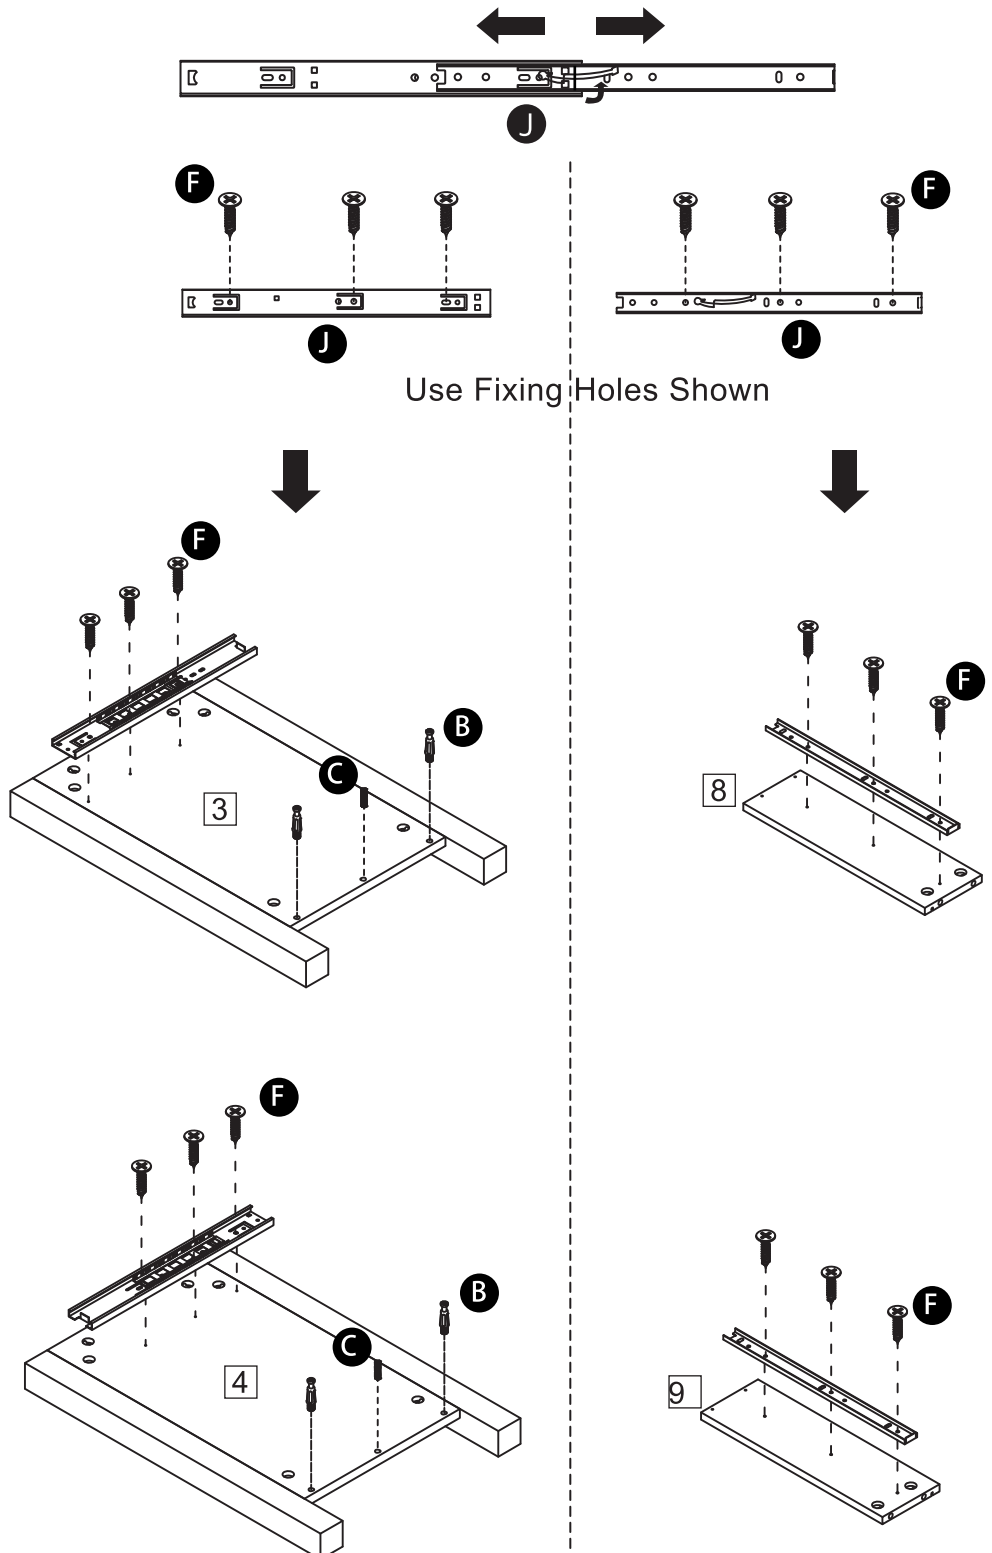Important Separate drawer runner into two sections by releasing the trigger and pulling apart.



Use Fixing Holes Shown


B  Cam Dowel x 4	C  Wooden Dowel x 2	F  Screw M3.5x12mm x 12	J  Drawer Runner 13.77x1.06" x 1 Pair
--	---	--	---

STEP 5

Insert cam nuts **A** into base panel **2**.

Locate base panel **2** in between the side panels.

Secure by tightening cam nuts **A**.

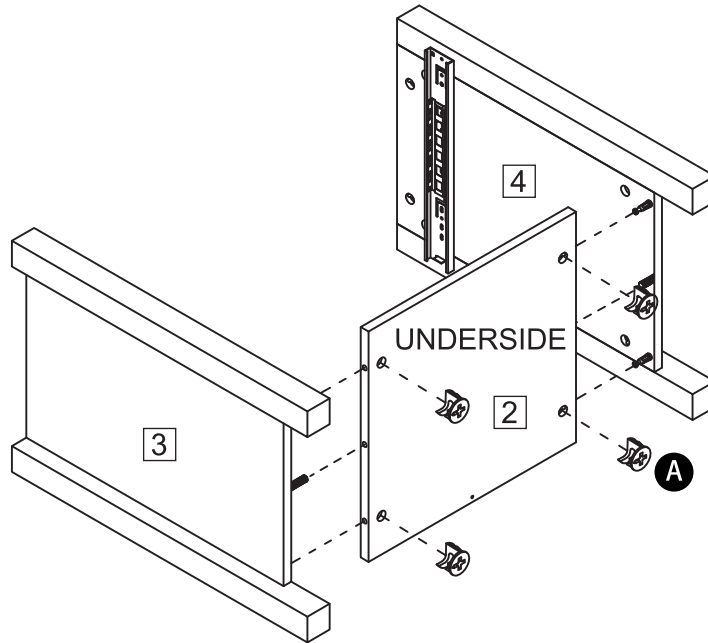


STEP 6

Place top panel **1** upside down on a clean flat surface.


Insert cam nut **A** into back panel **12**.

Locate back panel **12** into position and secure by tightening cam nut **A**.

Fit wood dowels **C** into back panel **12**.

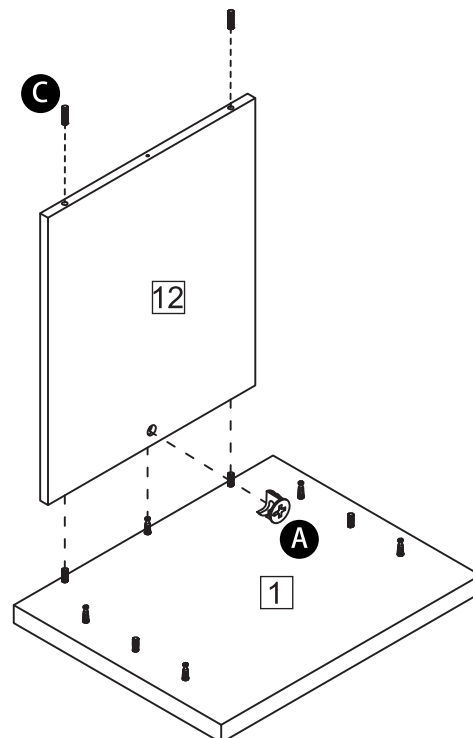

Shown upside down

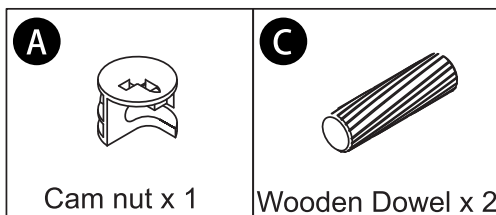


STEP 7

Fit cam nuts **A** into side panels **3** and **4**.

Locate side panel assembly into position and secure by tightening cam nuts **A**.

Secure base panel using screw **D**.

Stick foot pads **K** onto corner posts.

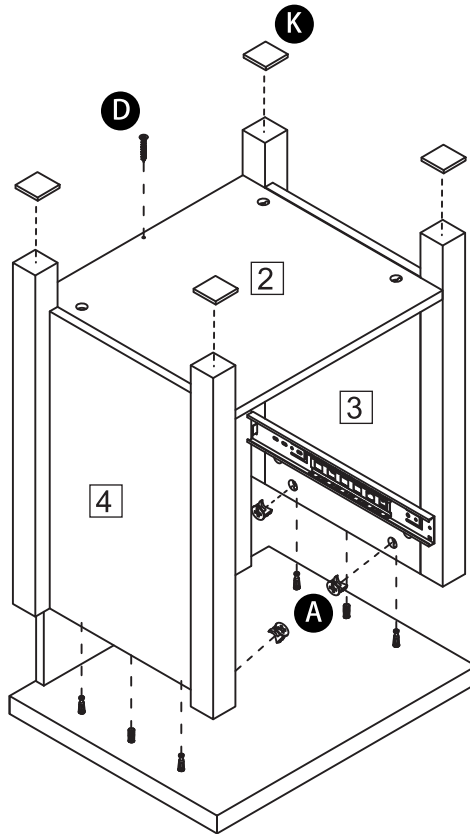

A



Cam nut x 4

D



Wooden Screw x 1


K




Foot Pad
1.49x1.49" x 4

STEP 8


Assemble drawer back panel **10** and side panels **8** and **9** using screws **D**.

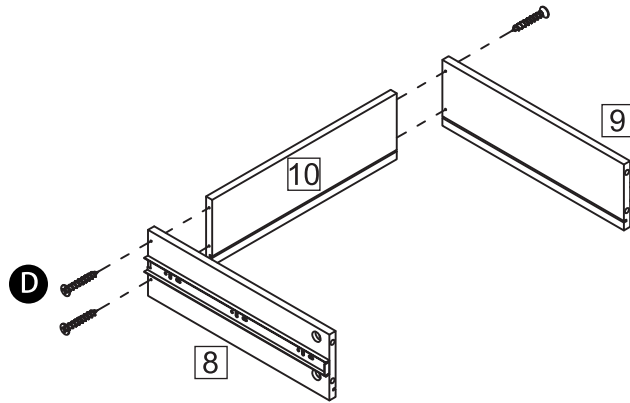

Slide drawer base **11** into grooves.

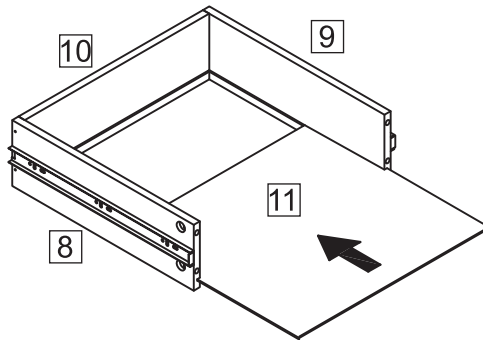


Fit cam nuts **A** into drawer side panels **8** and **9**.

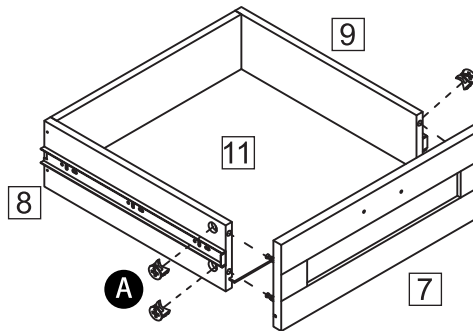

Locate drawer front **7** into position.

Secure by tightening cam nuts **A**.

Assemble drawer handle **G** to drawer front **7** using screws **E**.

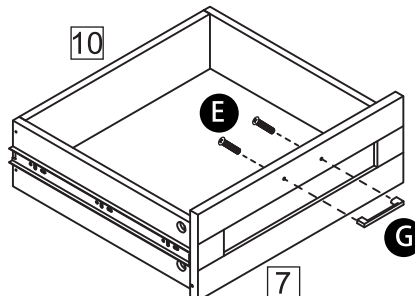

A




Cam nut x 4

D



Wood Screw x 4

G



Drawer Handle x 1

E




Allen Screw x 2

STEP 9

With help stand the main body upright.


Engage the drawer runners and push the drawer until the runners click.

Two people required !

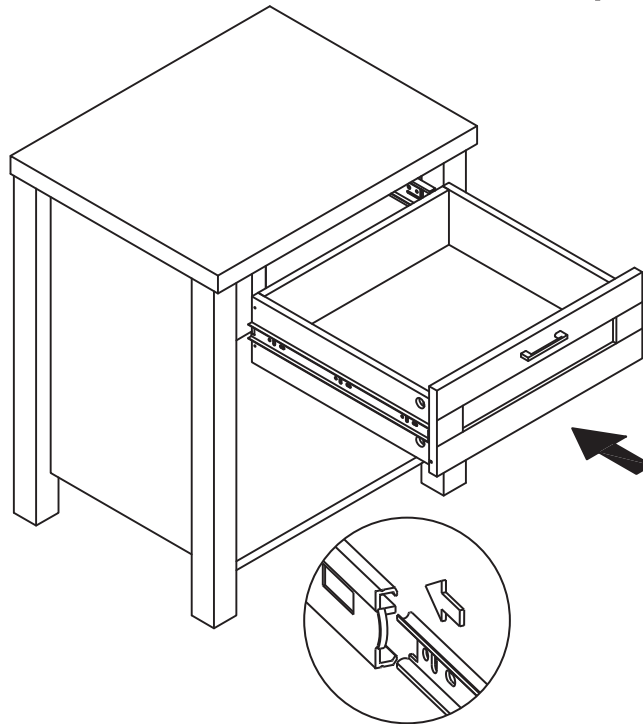

STEP 10

Use stickers **H** to cover fixing holes.

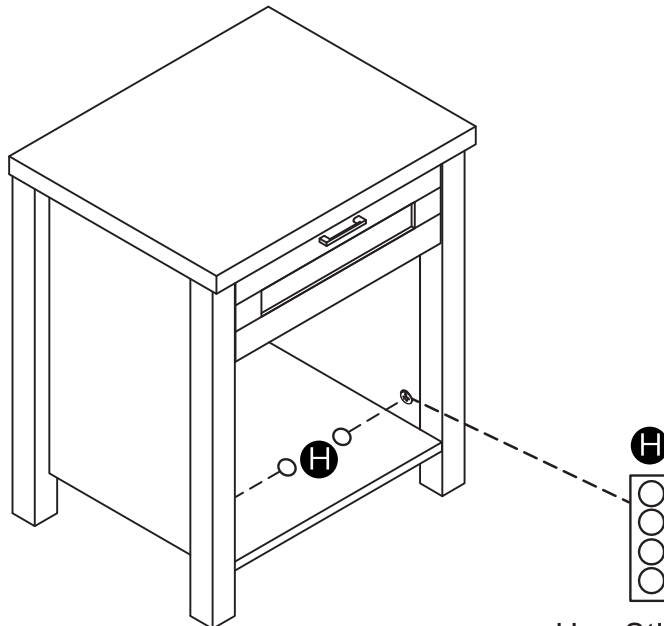

Use Stickers To Cover Holes

H



Hole Cover Qty 4

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at **customerservice@forwardindustries.com**, or **561-465-0030, Option 0**.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401