


Assembly Instructions

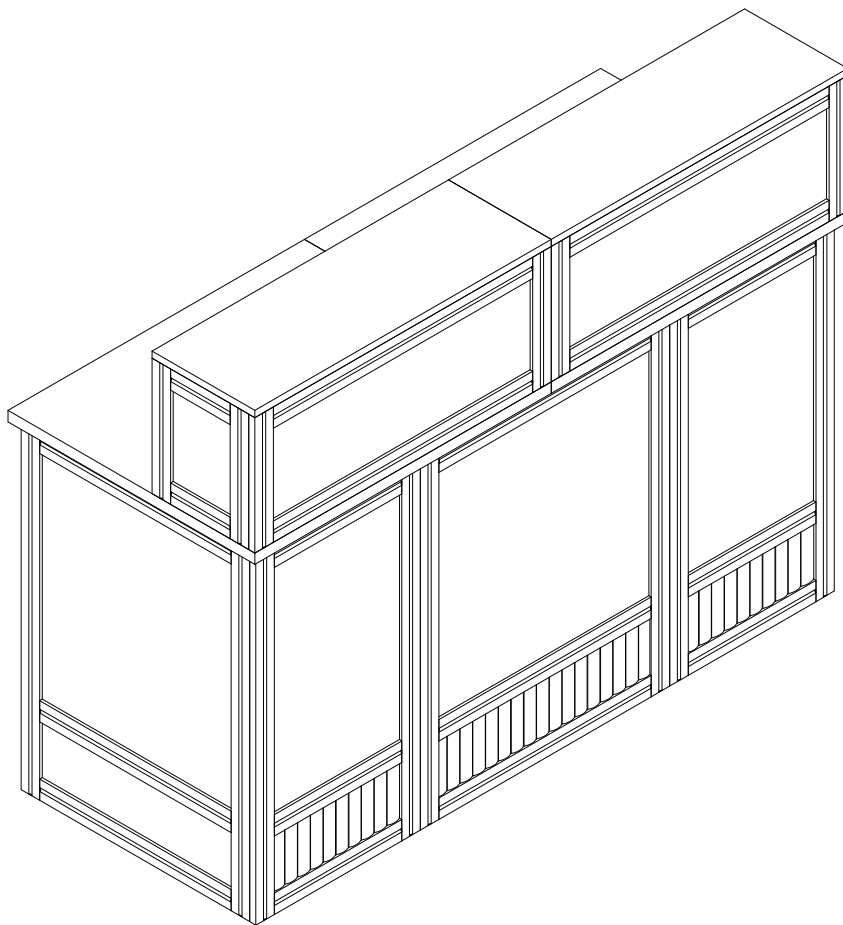


Reception Desk

Model No.
HOGA-YS0172X
HOGA-YS0216
HOGA-YS0306

Contact Us




We're here to help you.

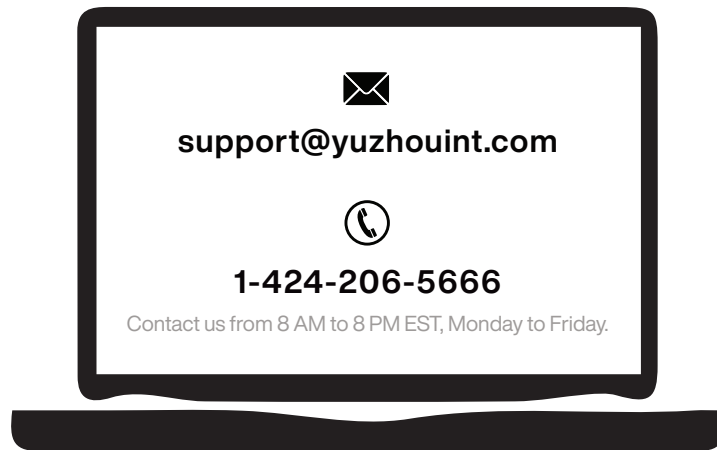

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

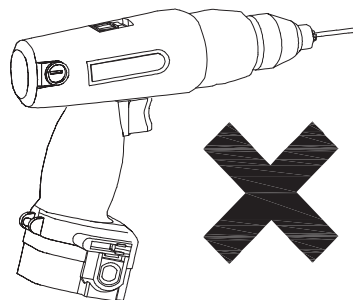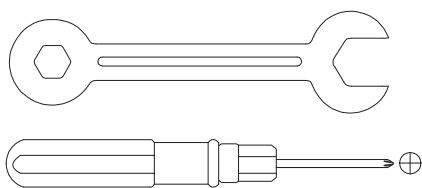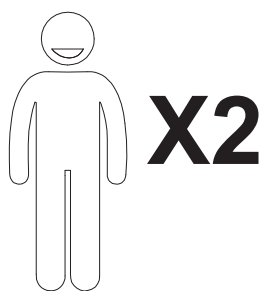



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

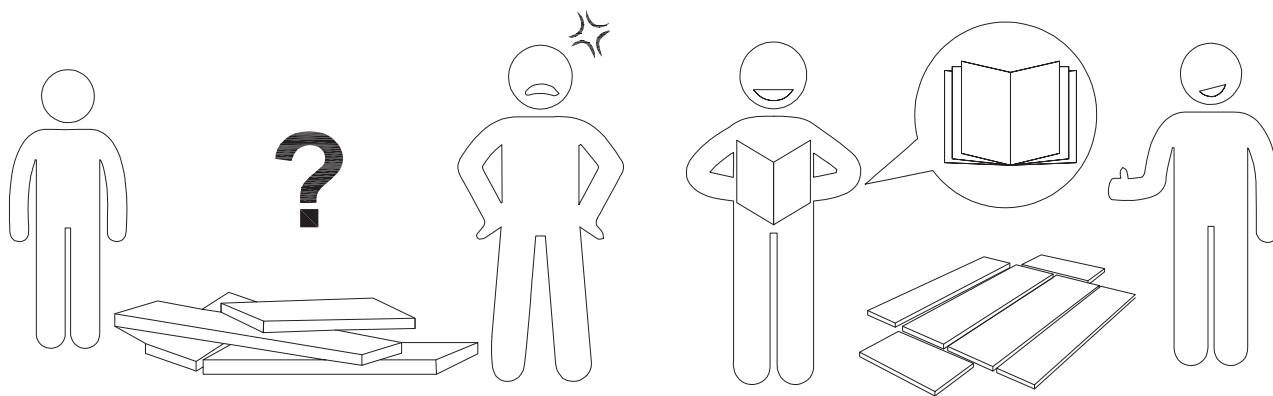

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.






















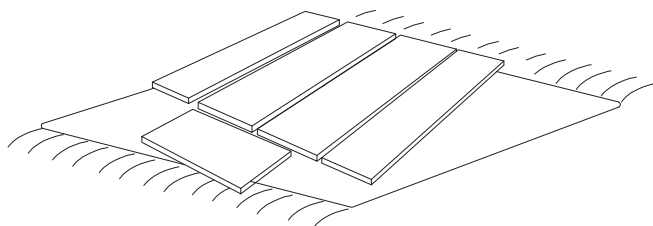
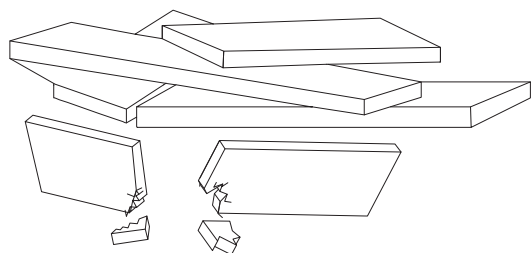


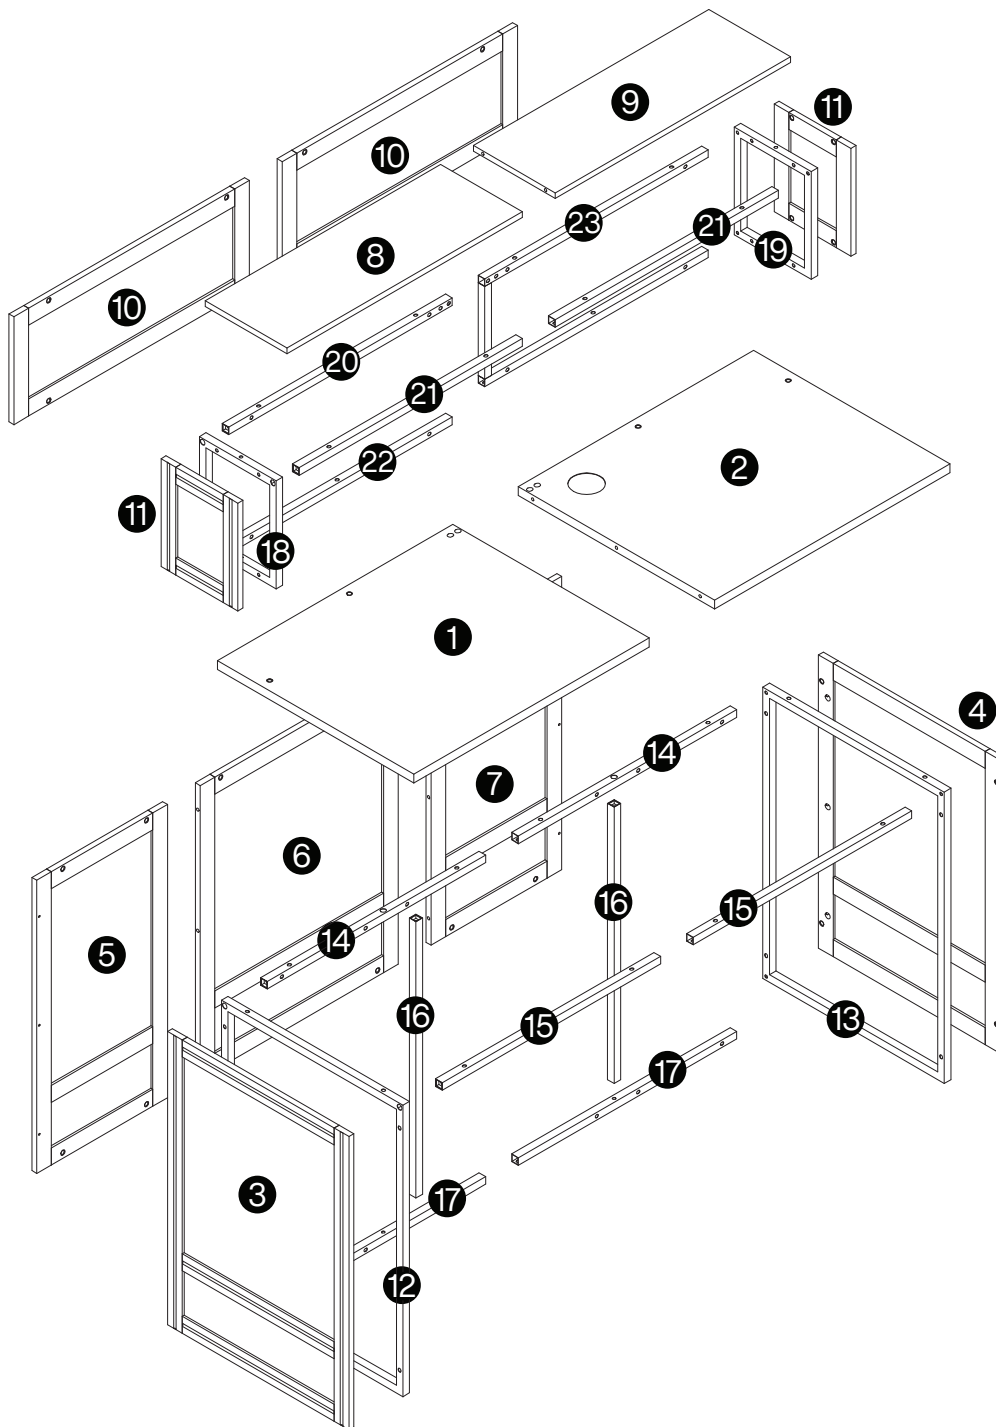


⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

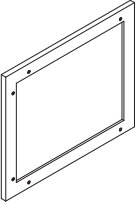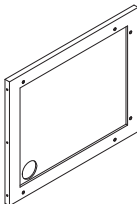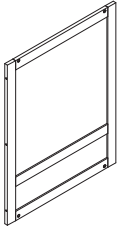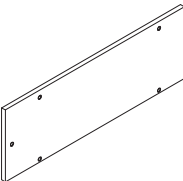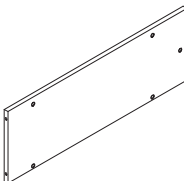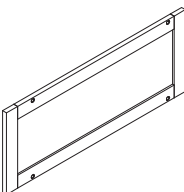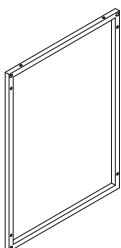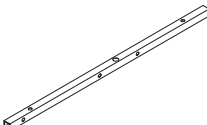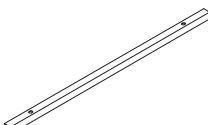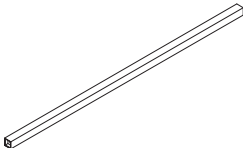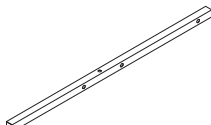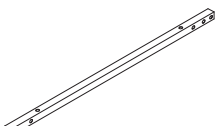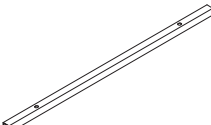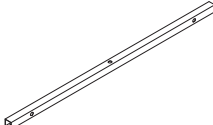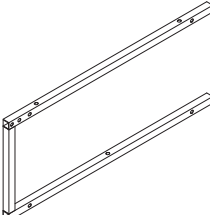1  1 pc	2  1 pc	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  2 pcs
11  2 pcs	12  1 pc	13  1 pc	14  2 pcs	15  2 pcs
16  2 pcs	17  2 pcs	18  1 pc	19  1 pc	20  1 pc
21  2 pcs	22  1 pc	23  1 pc		



Hardware List

A	B	C	D	E	F
 M6x12mm	 M6x30mm	 M6x40mm			 Φ8x30mm
20 pcs	76 pcs	2 pcs	6 pcs	6 pcs	11 pcs


G	H	I	J	K	
 6 pcs	 4mm 1 pc	 6 pcs	 M6x12mm 4 pcs	 1 pc	

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

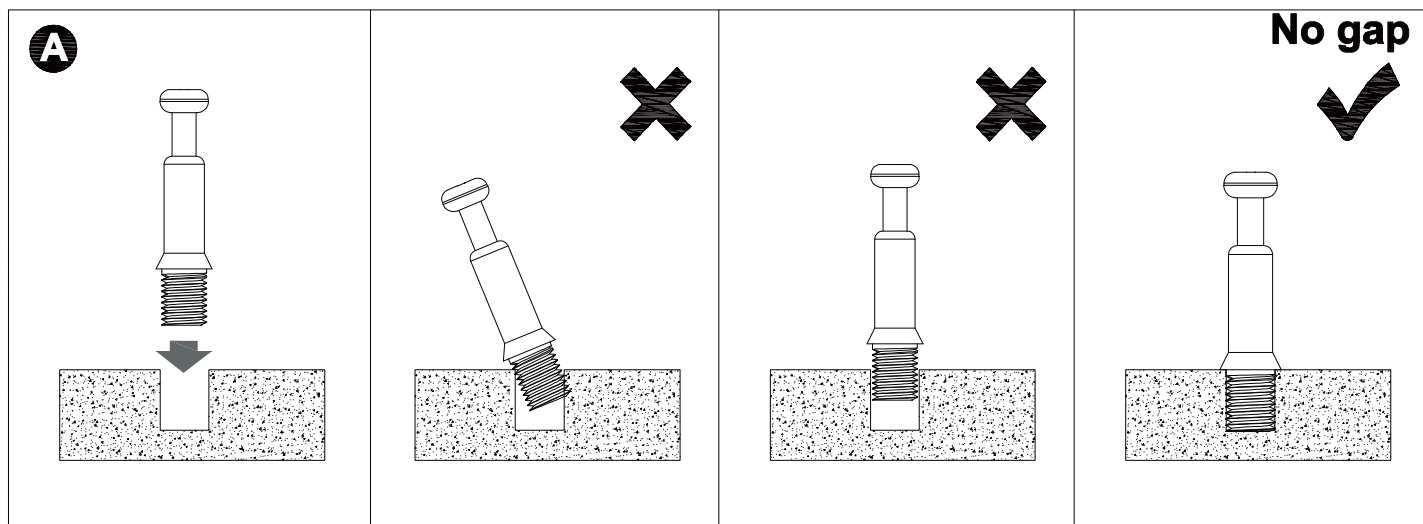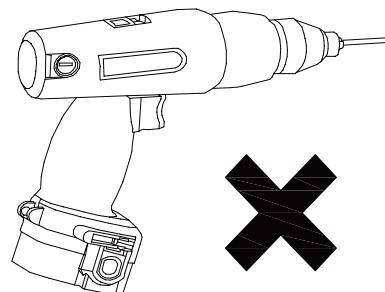


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

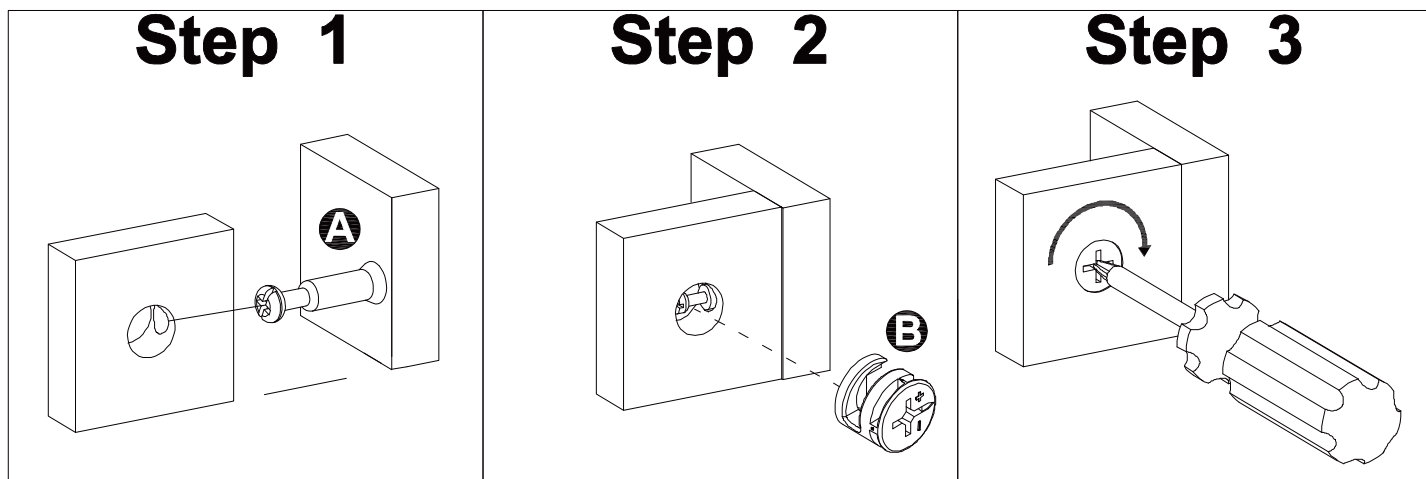


1

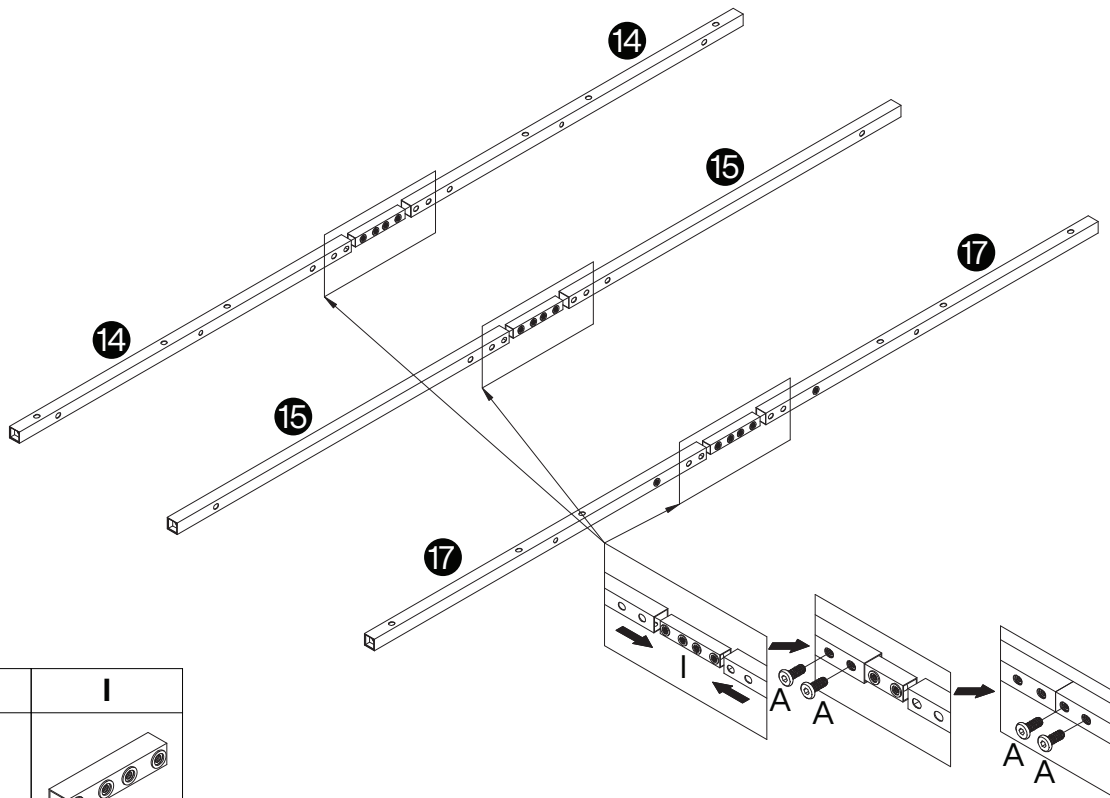


A	I
	
M6x12mm	
12 pcs	3 pcs

2

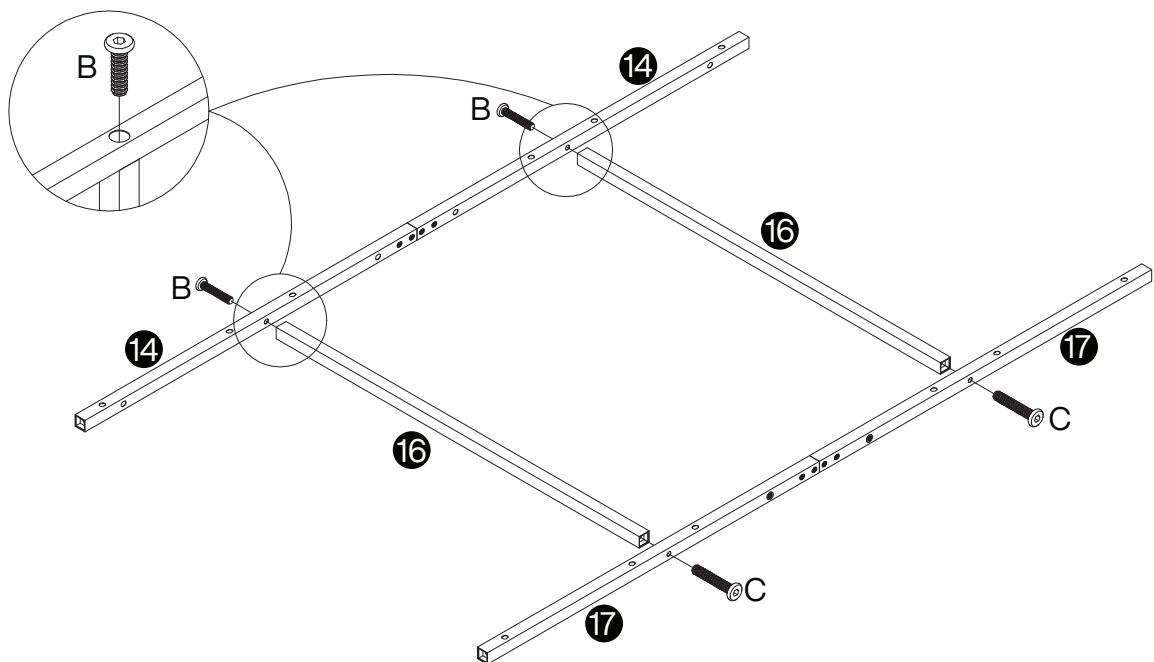

B	C
	
M6x30mm	M6x40mm
2 pcs	2 pcs



3

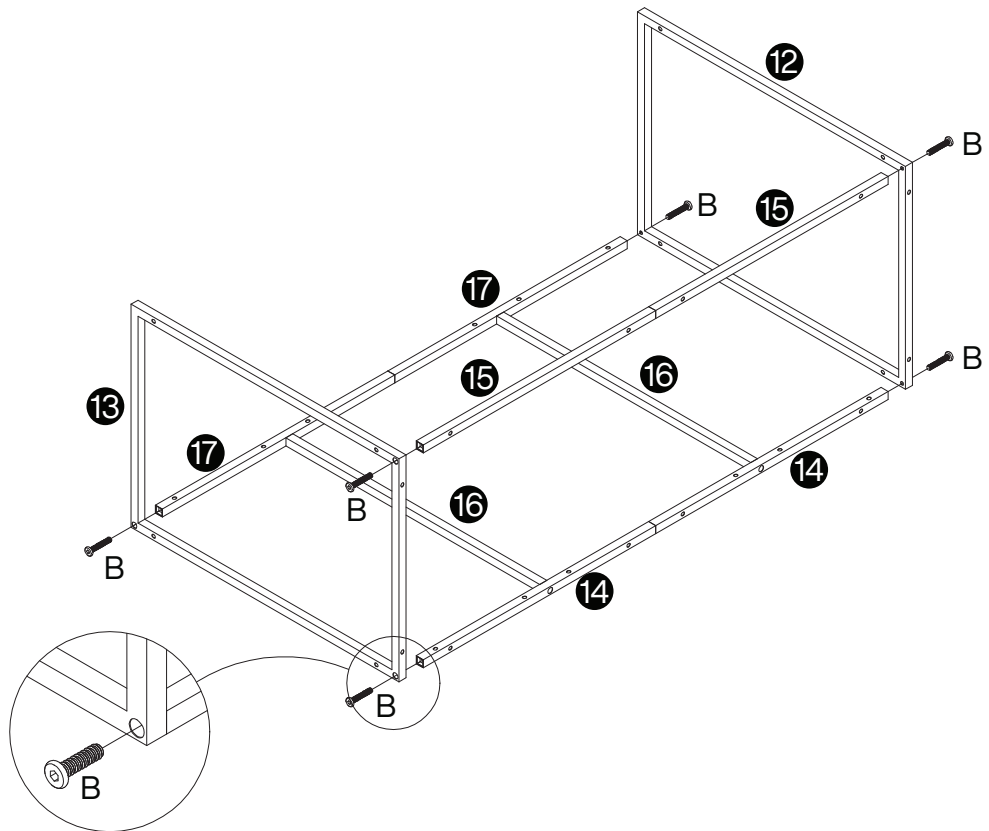

B

M6x30mm
6 pcs


4

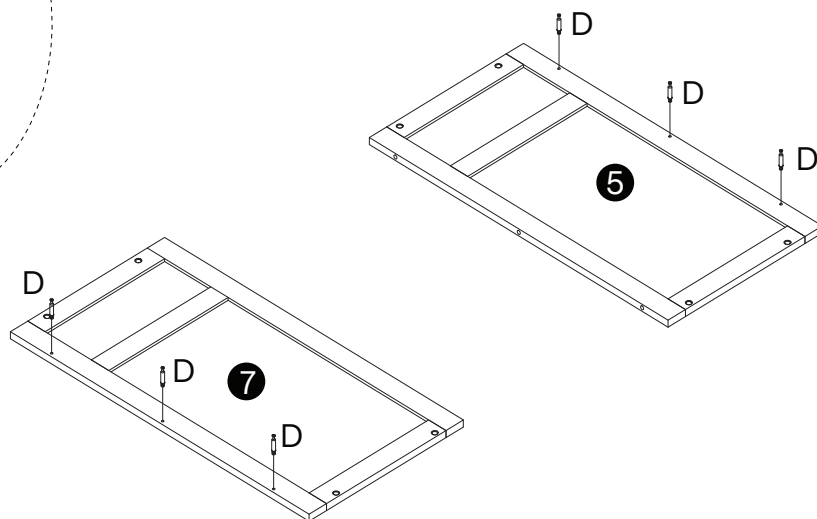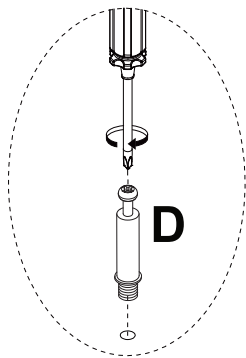

D


6 pcs

5

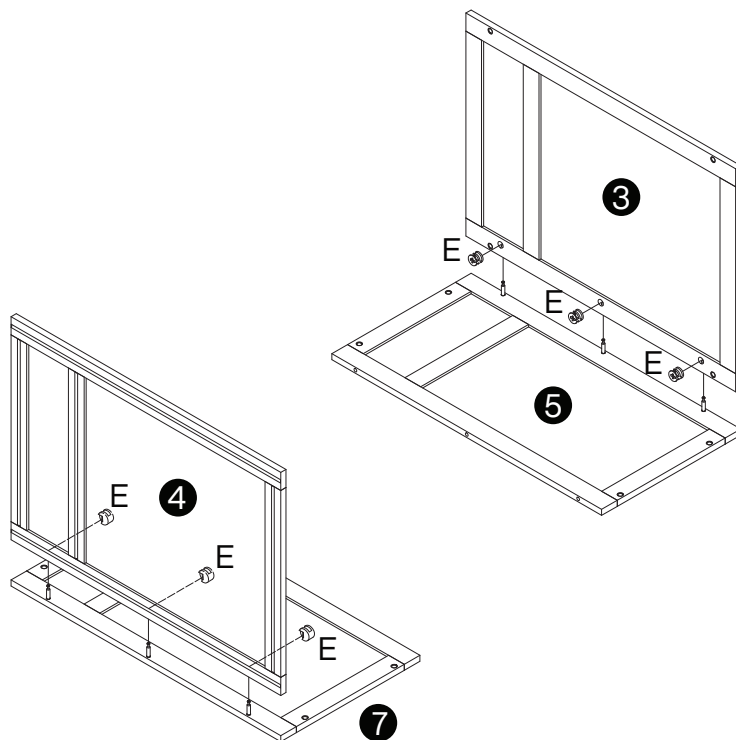


E

6 pcs

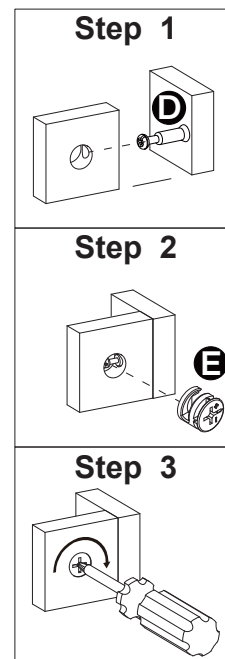



6

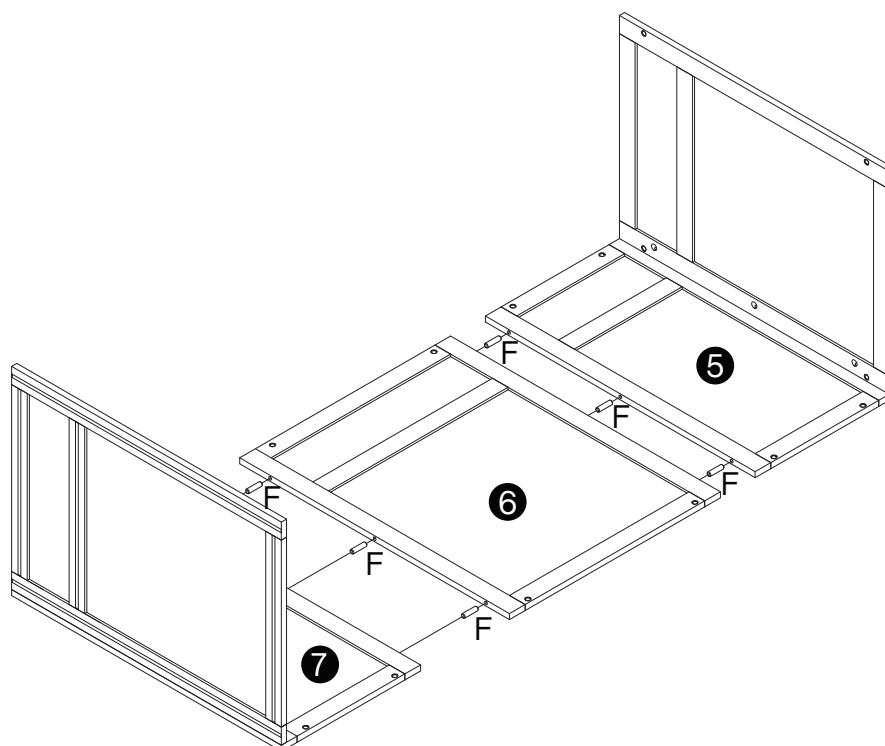



F

Φ 8x30mm
6 pcs


7

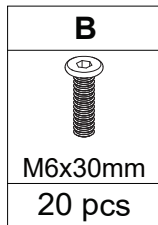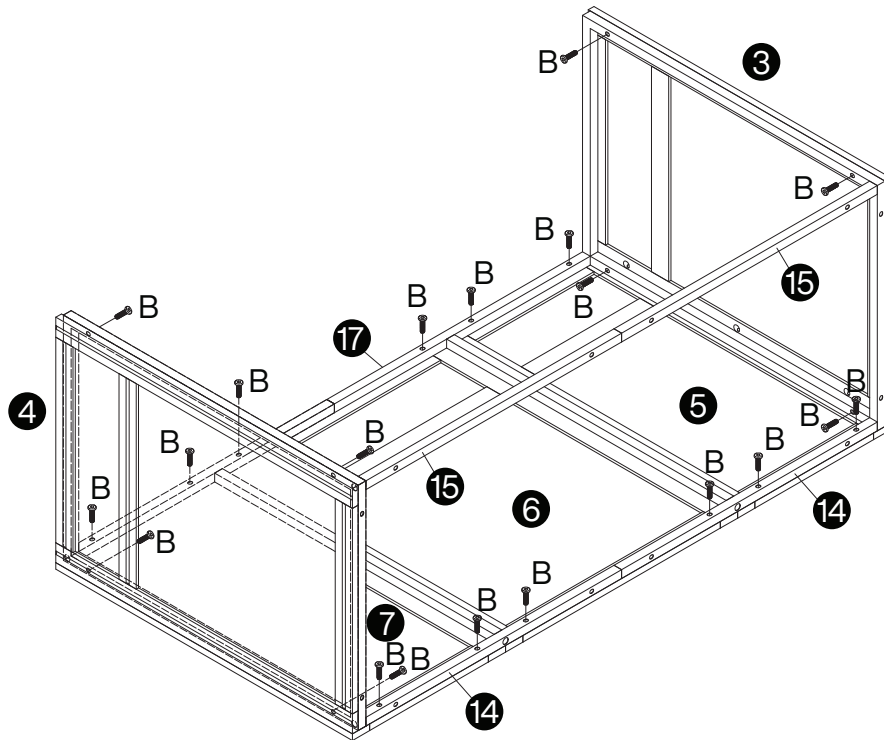

8

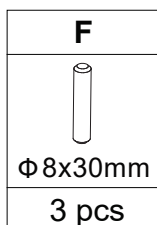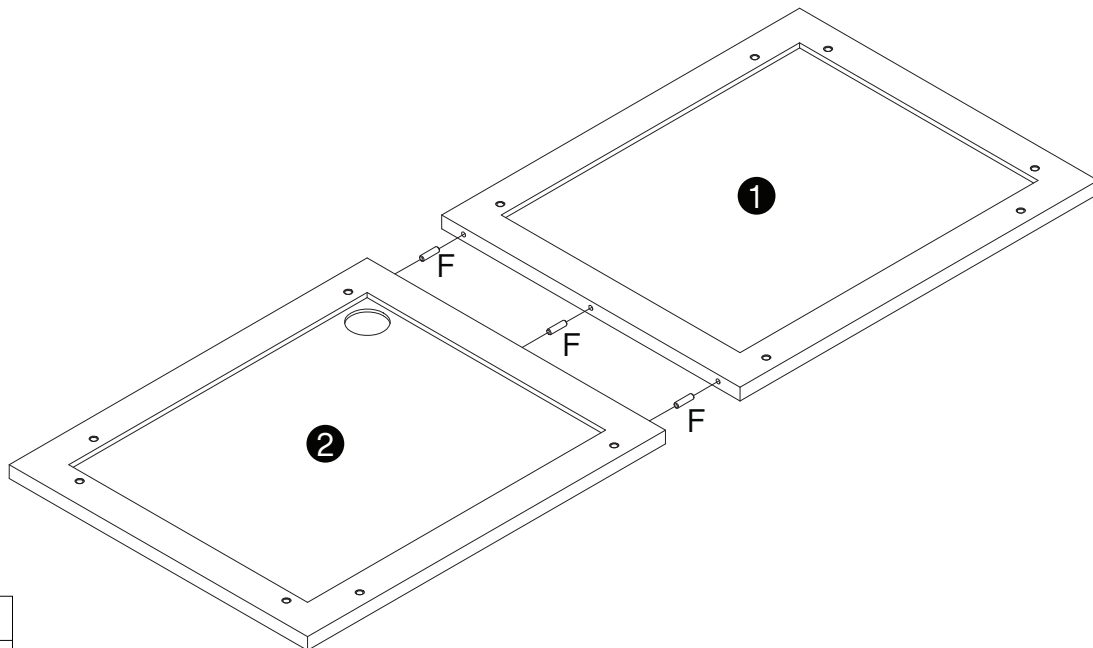



9

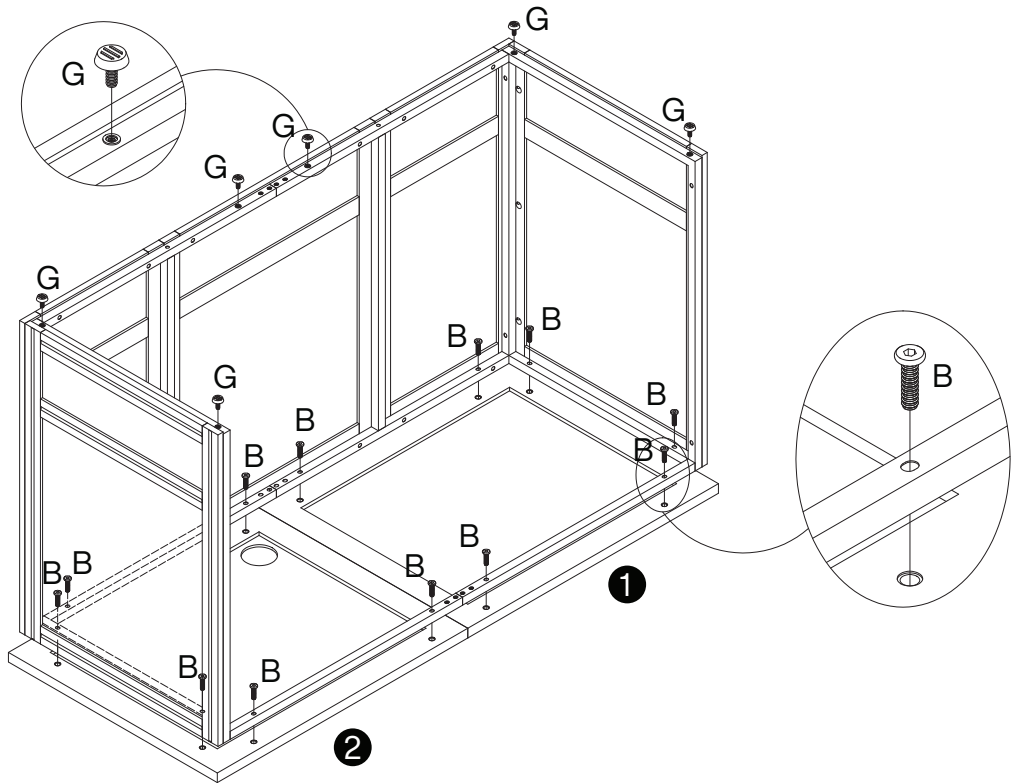



B	G
	
M6x30mm	
12 pcs	6 pcs

10


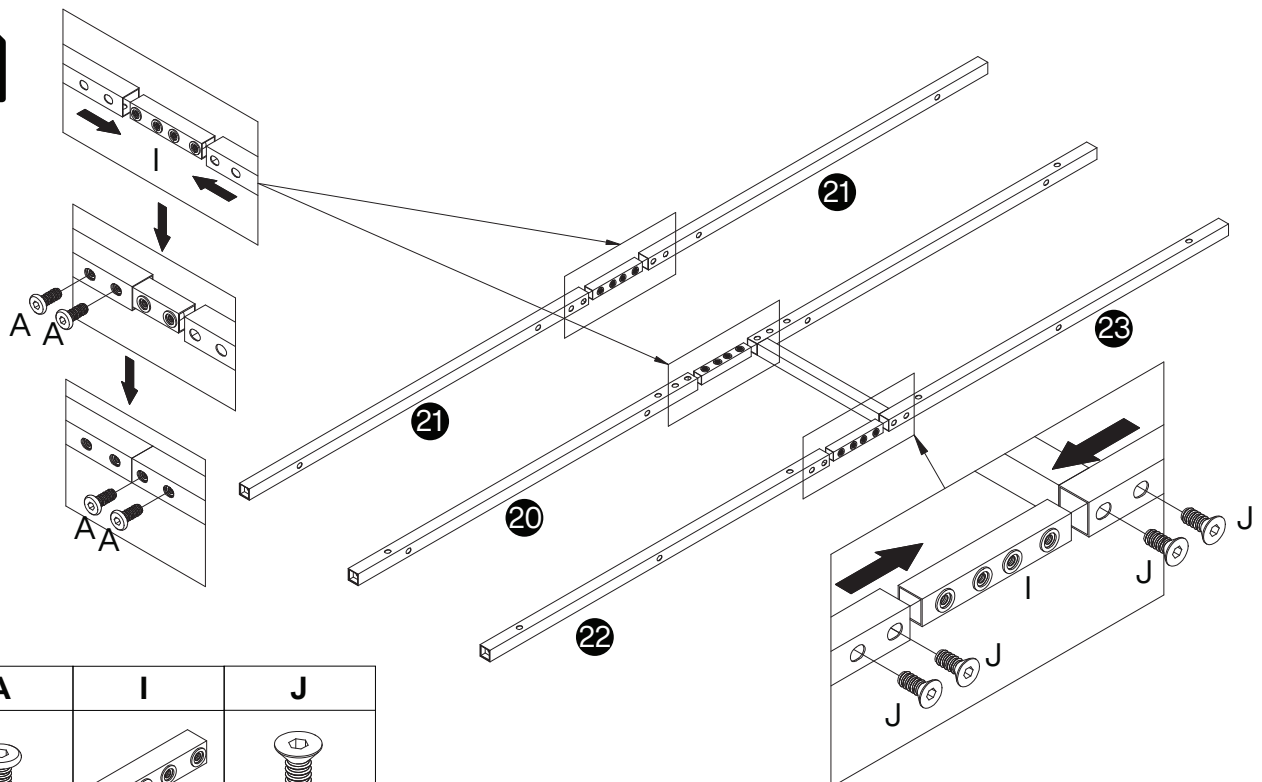


A	I	J
		
M6x12mm		M6x12mm
8 pcs	3 pcs	4 pcs



11

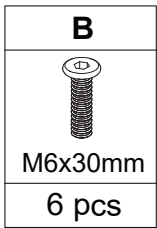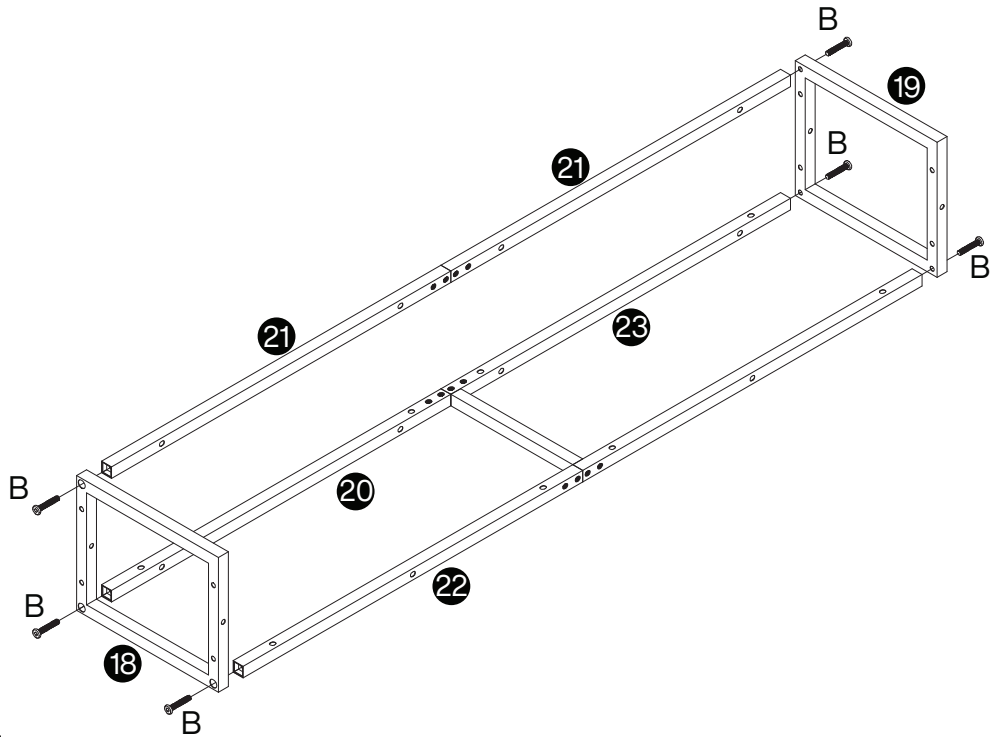



12

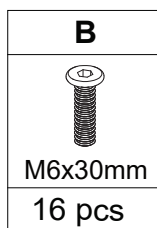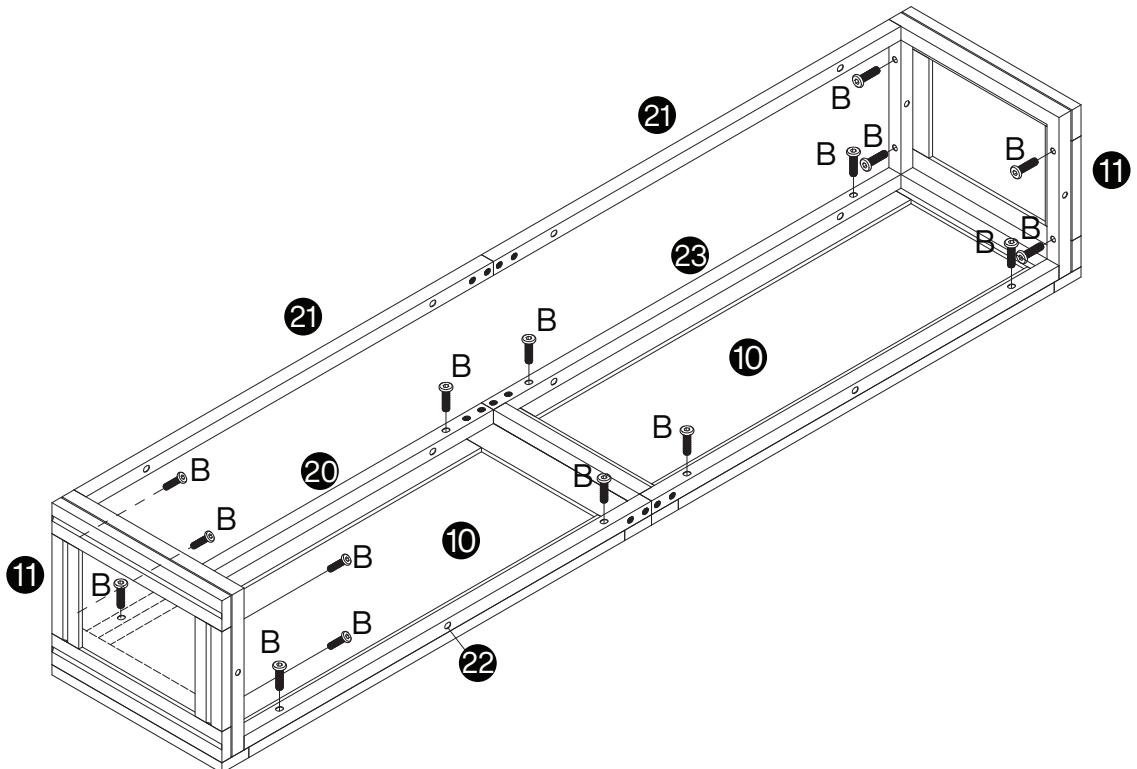


13

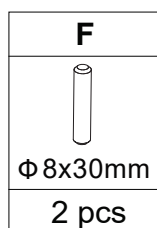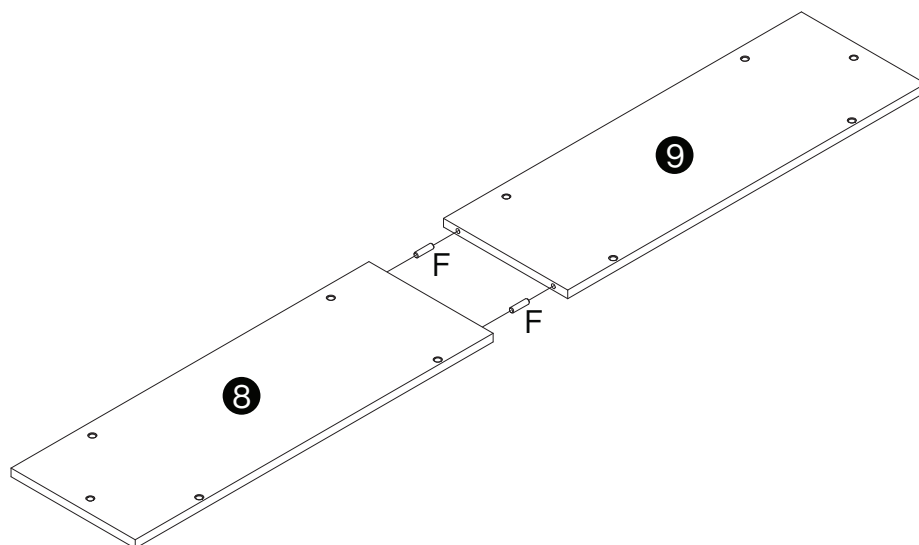

14

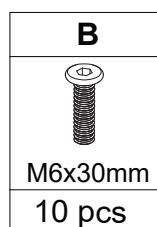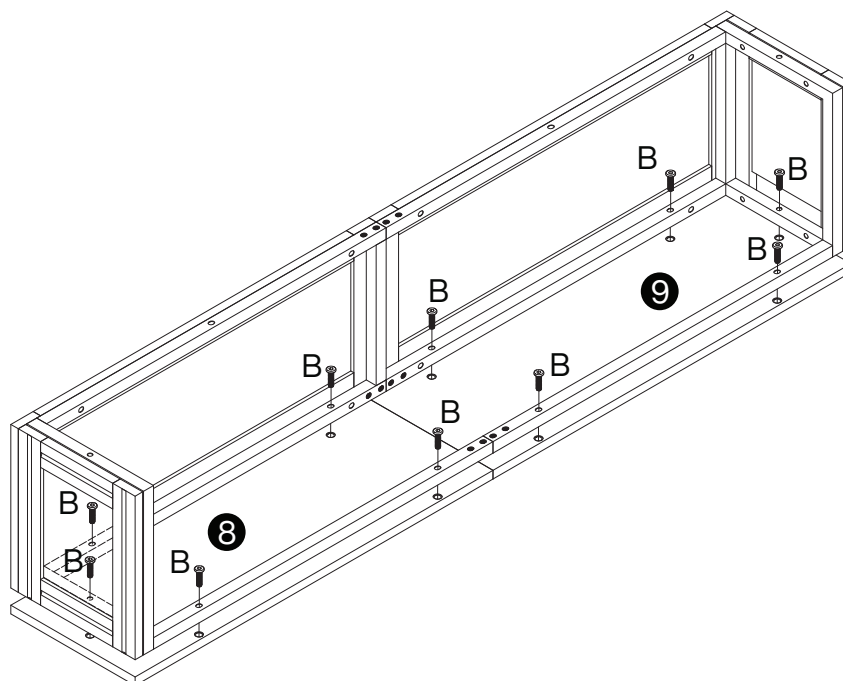


15

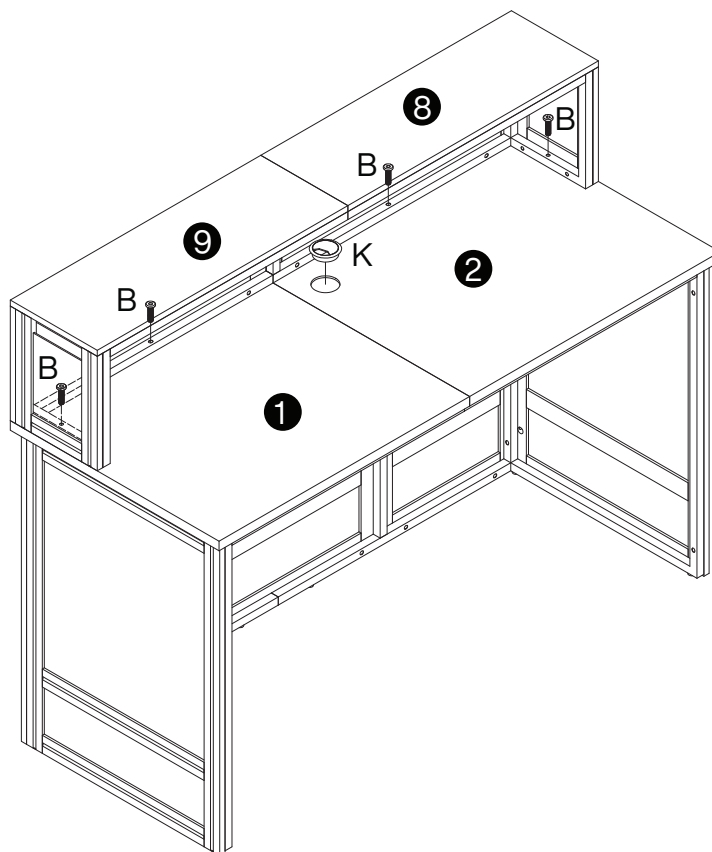

B	K
	
M6x30mm	
4 pcs	1 pc

16

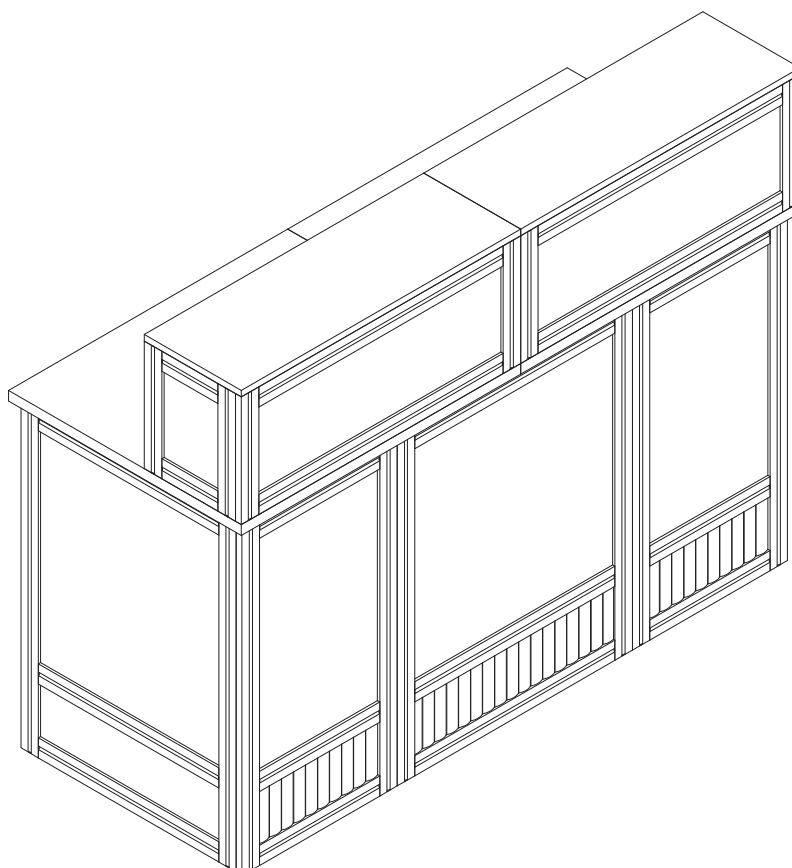

Thank you for your support!

