

Shoe Cabinet

Assembly Instructions - Please keep for future reference


If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com

Dimensions

Width-24.4inch

Depth-13inch

Height-73.6inch

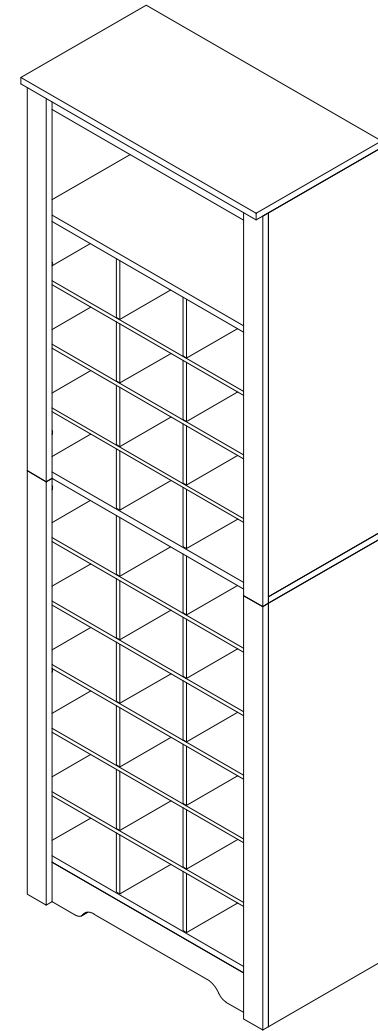

Important-Please read these instructions fully before starting assembly

1. Thank you for choosing **our products**.



- Read instructions, cover to cover



- Have 2-4 adults on hand for assembly **depending on product size**



- Do not assemble **directly** on flooring or carpet



- Assemble on a clean non-marring surface (**example**: packing foam)



- Save all packaging until finished

3. Assembly Notice:

- If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the parts of the product stored in a safe place and contact us immediately so we may assist you further.
- Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- IMPORTANT: When setting up your product, DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING. Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

Care & Maintenance



- Do not put hot items directly on furniture surface



- Do not clean furniture with harsh cleansers or polish



- Do not place furniture under direct sunlight



- Do not place furniture near heating or cooling vents



- Do not write on furniture without a padded barrier to protect the surface



- Do not place furniture outside. For indoor use only



- Not for commercial use. For residential use only



- Stains may be removed with mild soap solution and damp cloth



- Children should not climb or jump on the furniture




- Dust and pick-up spills using a clean, non-colored, lint-free cloth

Caution

- This product contains small components. Please ensure that they are kept away from small children.

- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

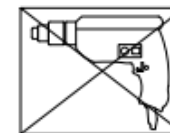


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1

DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

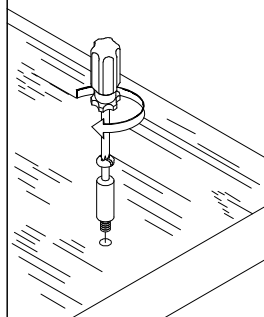


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.


3

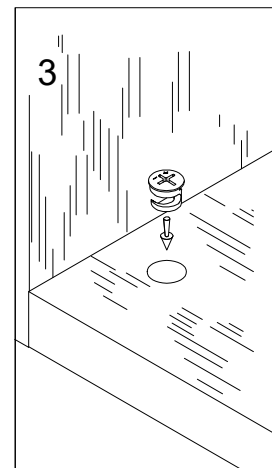

Step 2

Push the male camlock into the entry hole.

2

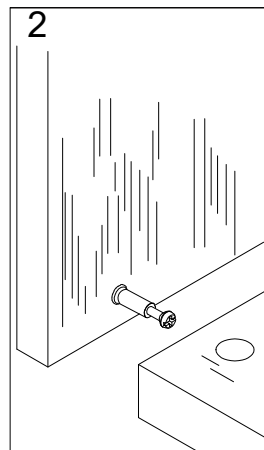


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.


4

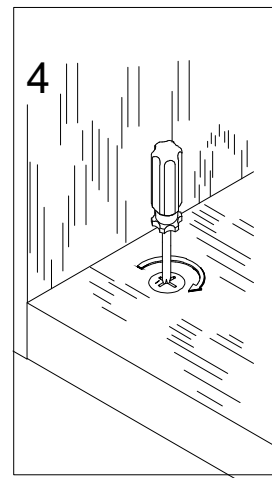

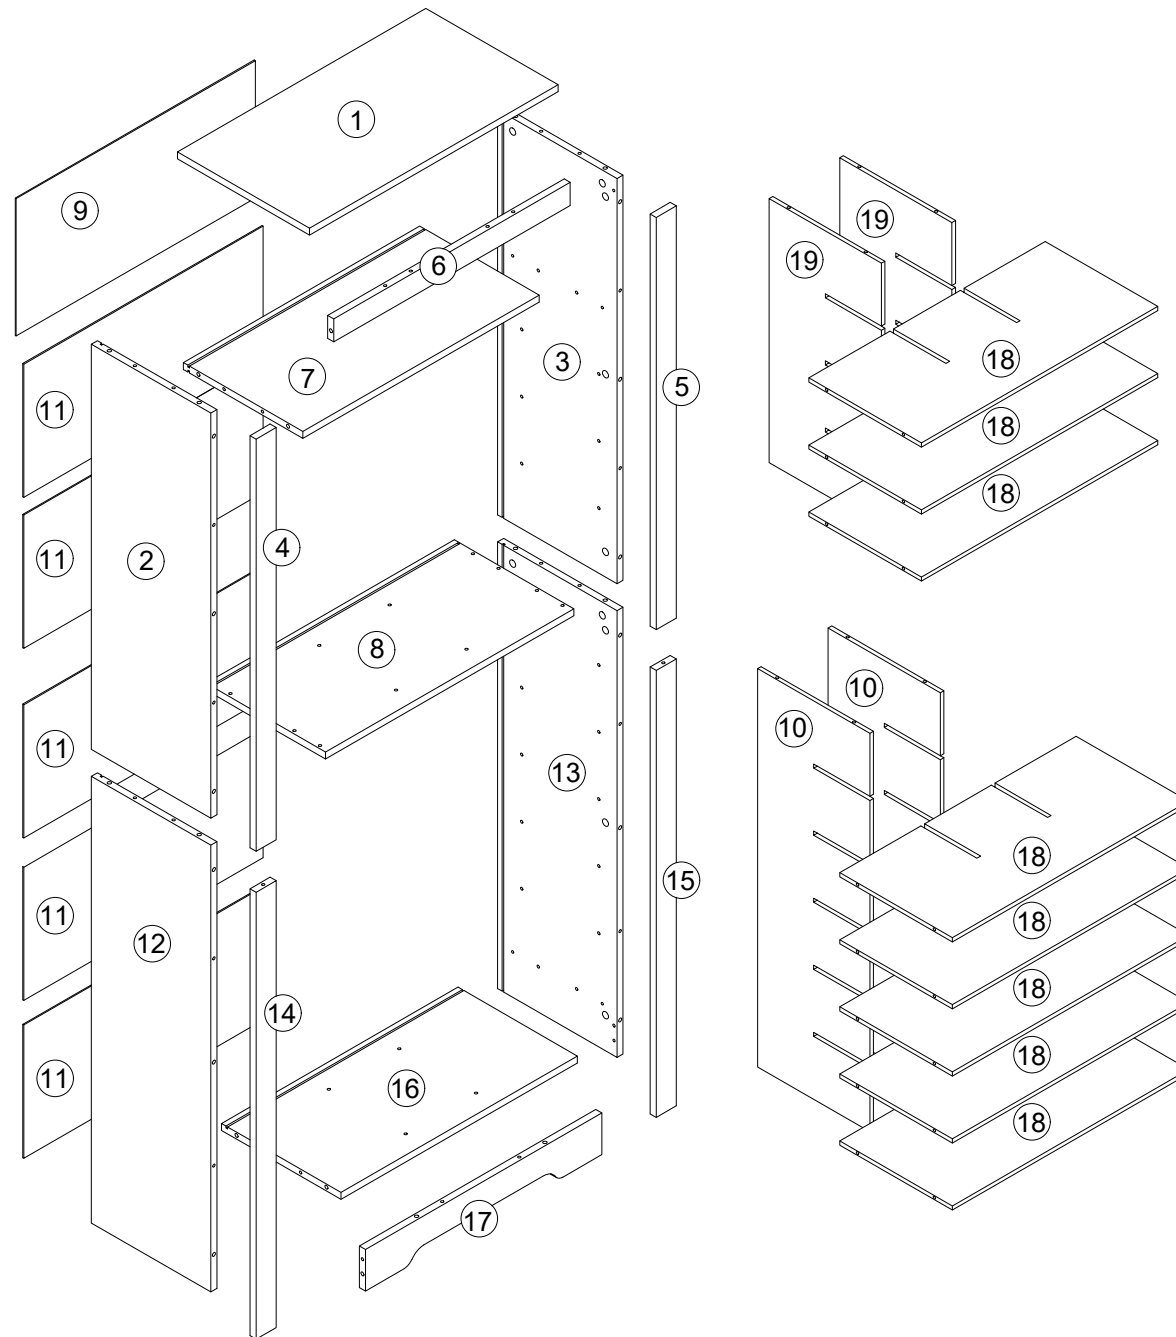


UNIT:MM
PACKAGE-A

① x1




620x330x15mm

② x1




876x298x15mm

③ x1



876x298x15mm

④ x1



891x50x15mm

⑤ x1




891x50x15mm

⑥ x1



590x50x15mm

⑦ x1



590x298x15mm

⑧ x1



620x298x15mm

⑨ x1



597x297x2.5mm

⑩ x2




861x280x9mm

⑪ x5




597x288x2.5mm

⑫ x1



966x298x15mm

⑬ x1



966x298x15mm

⑭ x1



966x50x15mm

⑮ x1



966x50x15mm

⑯ x1




590x298x15mm

⑰ x1




590x90x15mm

⑱ x8




590x281x9mm

⑲ x2




571x280x9mm

PACKAGE-B




UNIT:MM




Ø6*35mm
A x34+2



Ø15*9mm
B x34+2




Ø4*40mm
C x6+1



Ø6*30mm
D x76+2



Ø20mm
E x20+2



Ø4*35mm
F x2



G x6+1



Ø3*14mm
H x16+2



I x14+2




J x4



Ø6*30mm
K x2





L x2



Ø6*50mm
M x4+1





588mm
N x3



Phillips screwdriver
(medium large)

STEP1

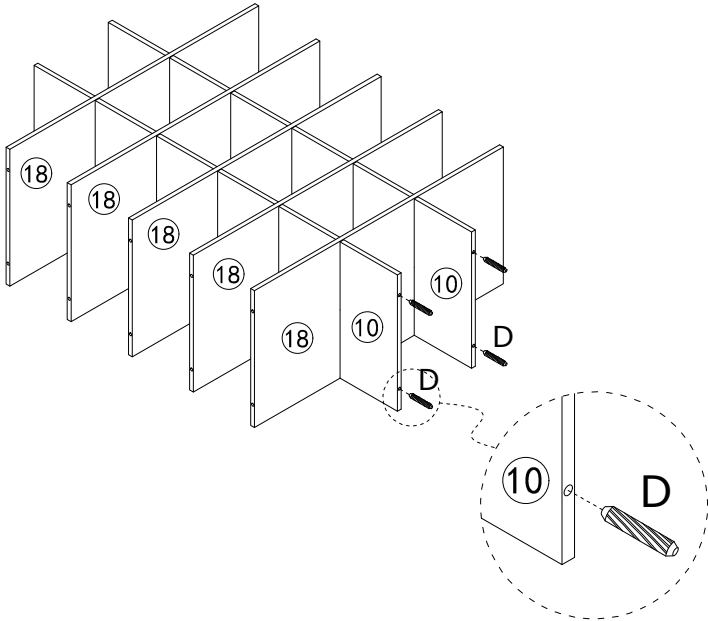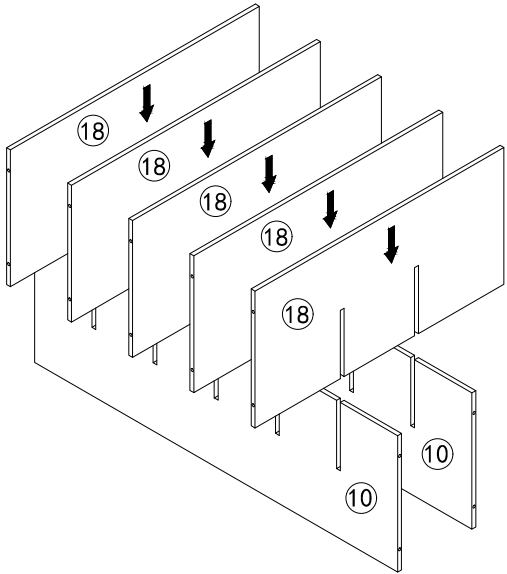





D 4pcs



Ø6*30mm

2

STEP2

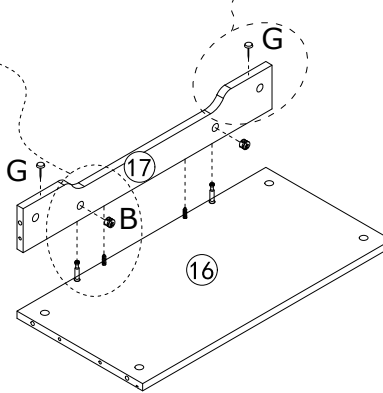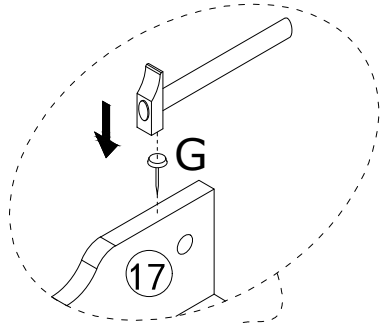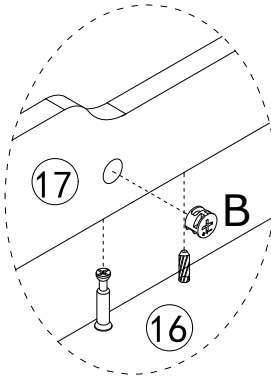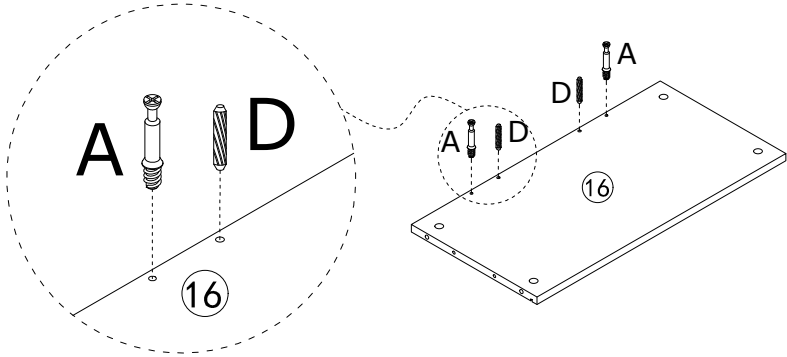

A 2pcs



Ø6*35mm

B 2pcs



Ø15*9mm

D 2pcs




Ø6*30mm

G 2pcs




3


STEP3

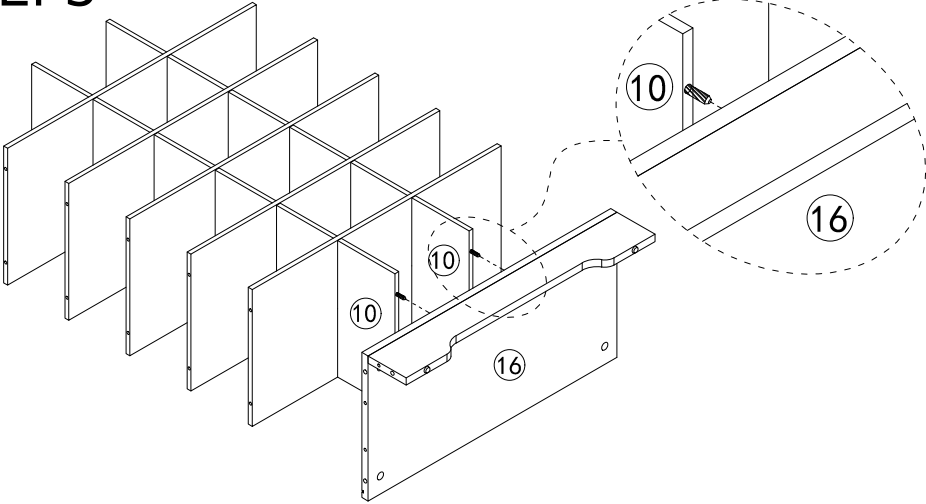



STEP4

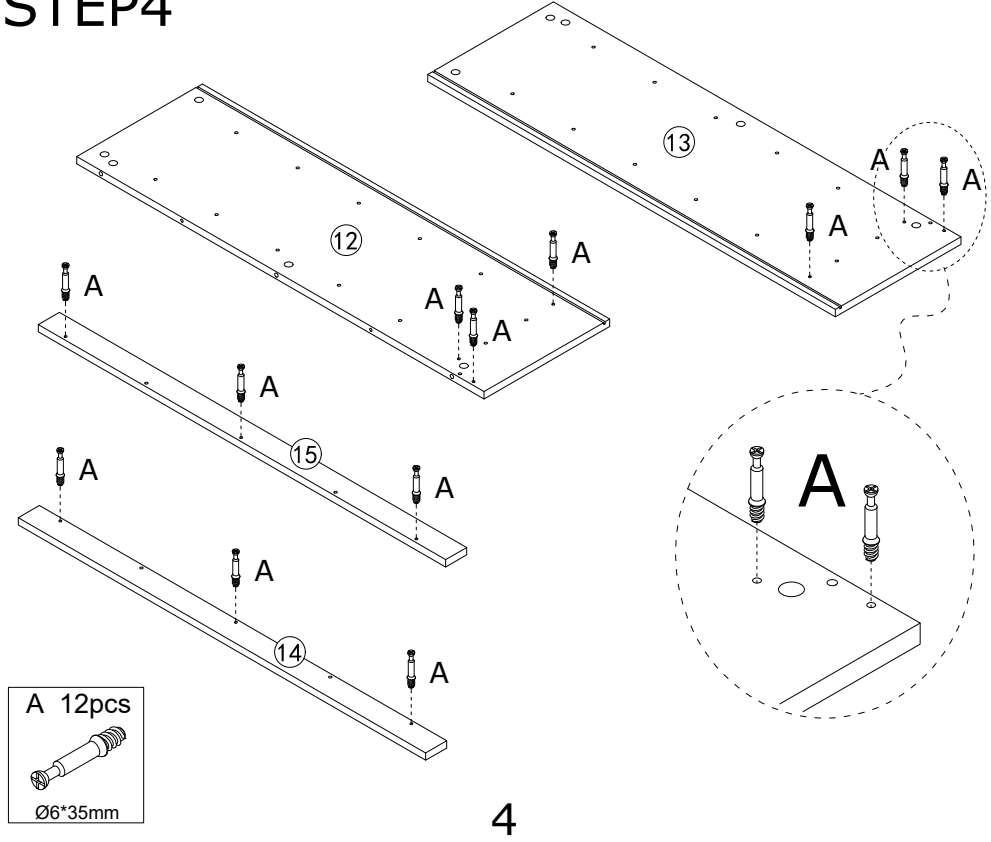

STEP5

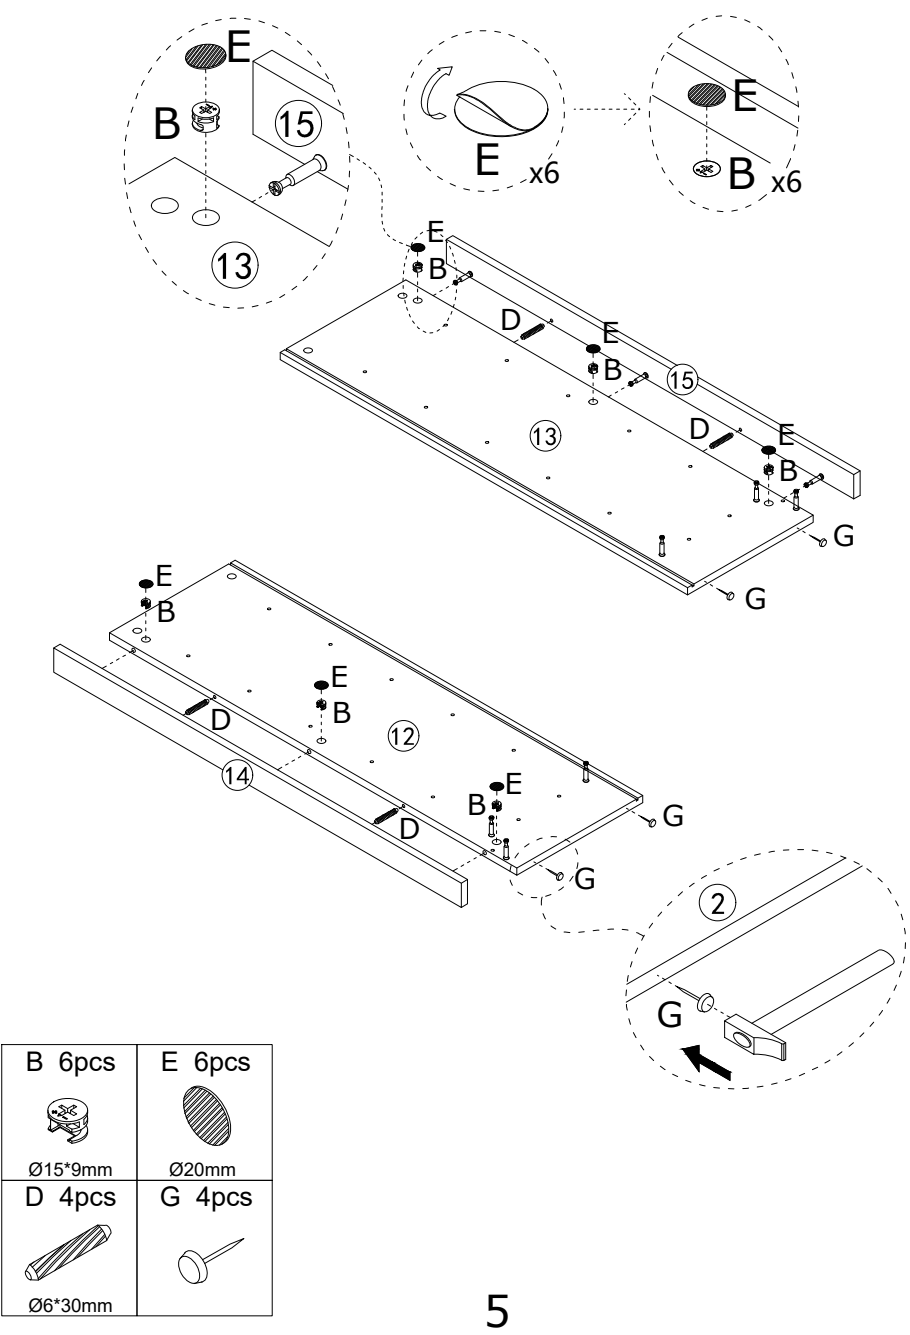



STEP6

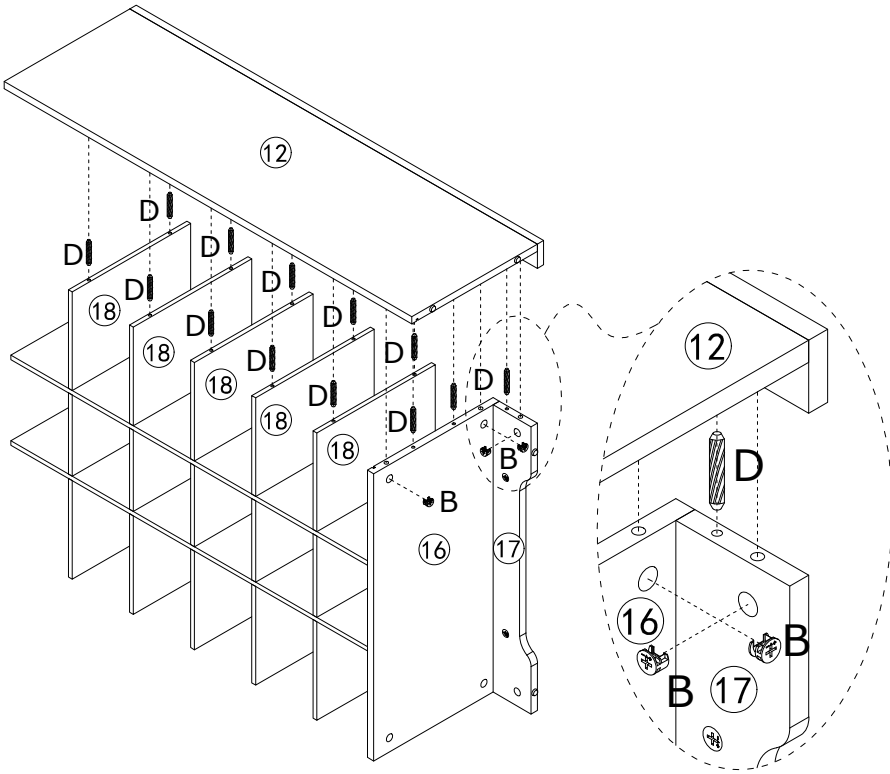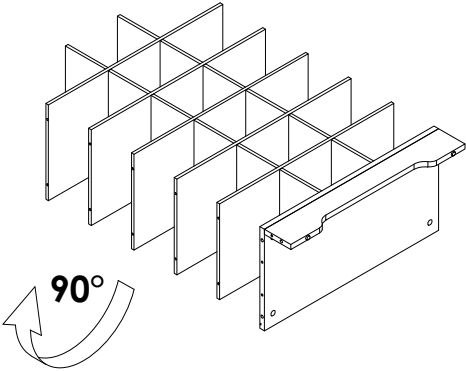

B 3pcs	D 13pcs
	
Ø15*9mm	Ø6*30mm

6


STEP7

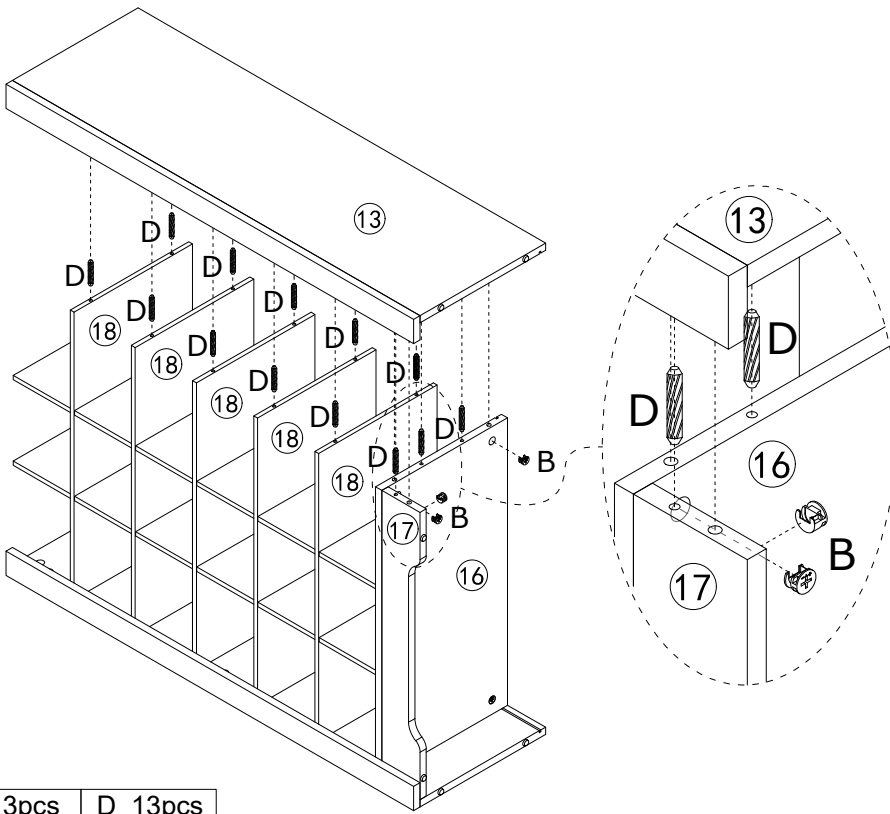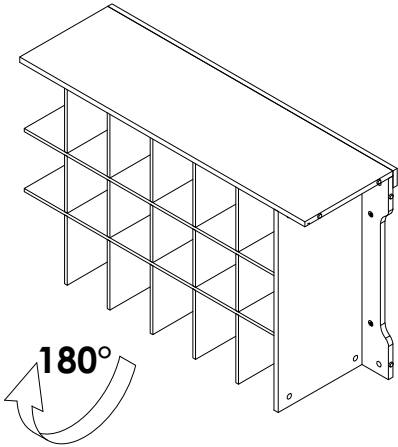

B 3pcs	D 13pcs
	
Ø15*9mm	Ø6*30mm

7


STEP8

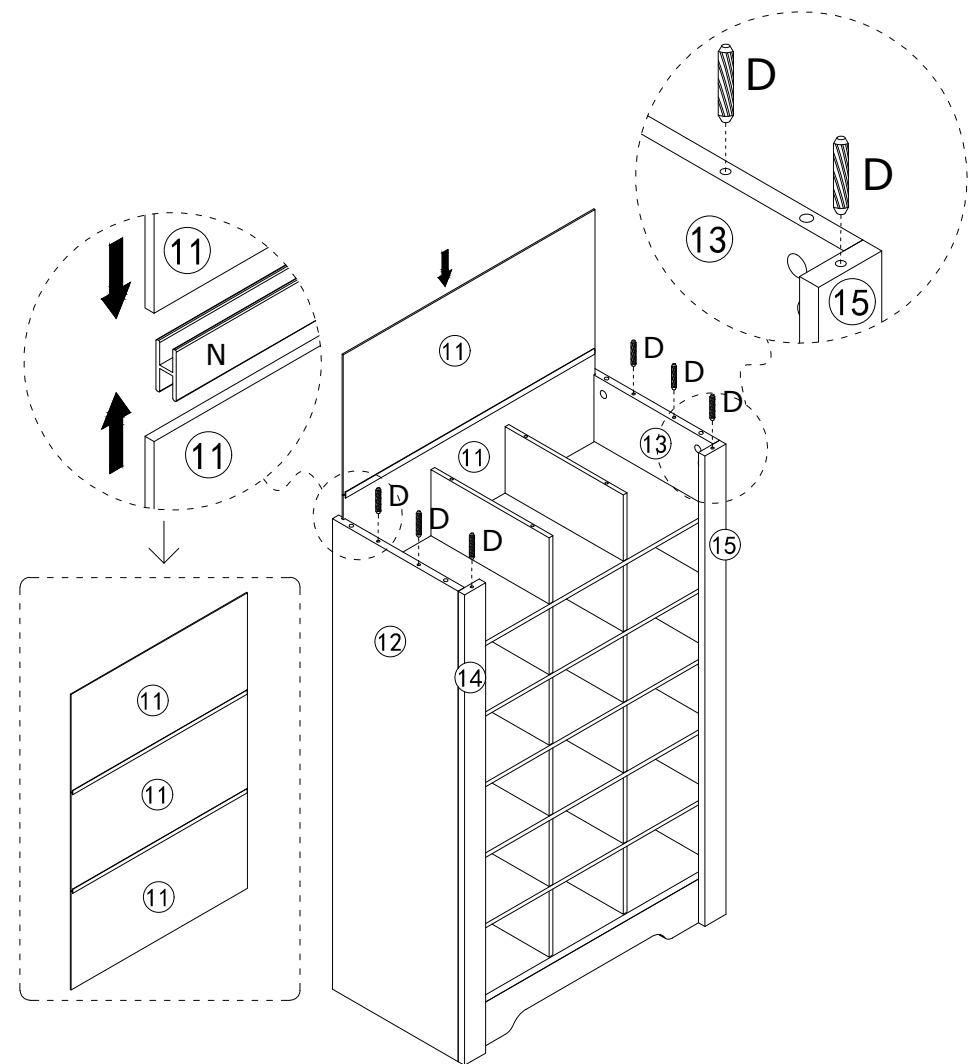

D 6pcs	N 2pcs
	
Ø6*30mm	588mm

8


STEP9

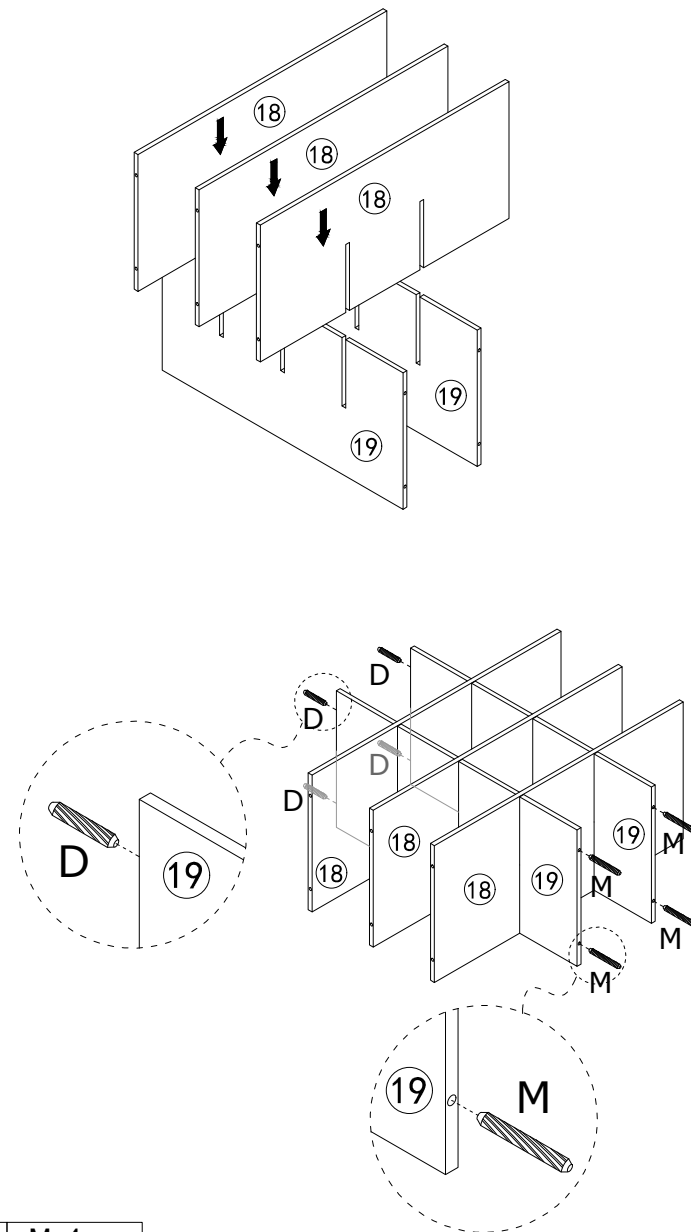


D 4pcs	M 4pcs
	
Ø6*30mm	Ø6*50mm

9


STEP10

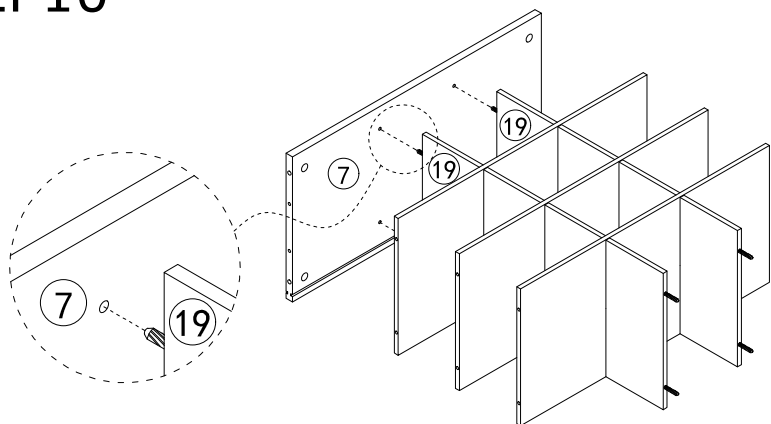


STEP11

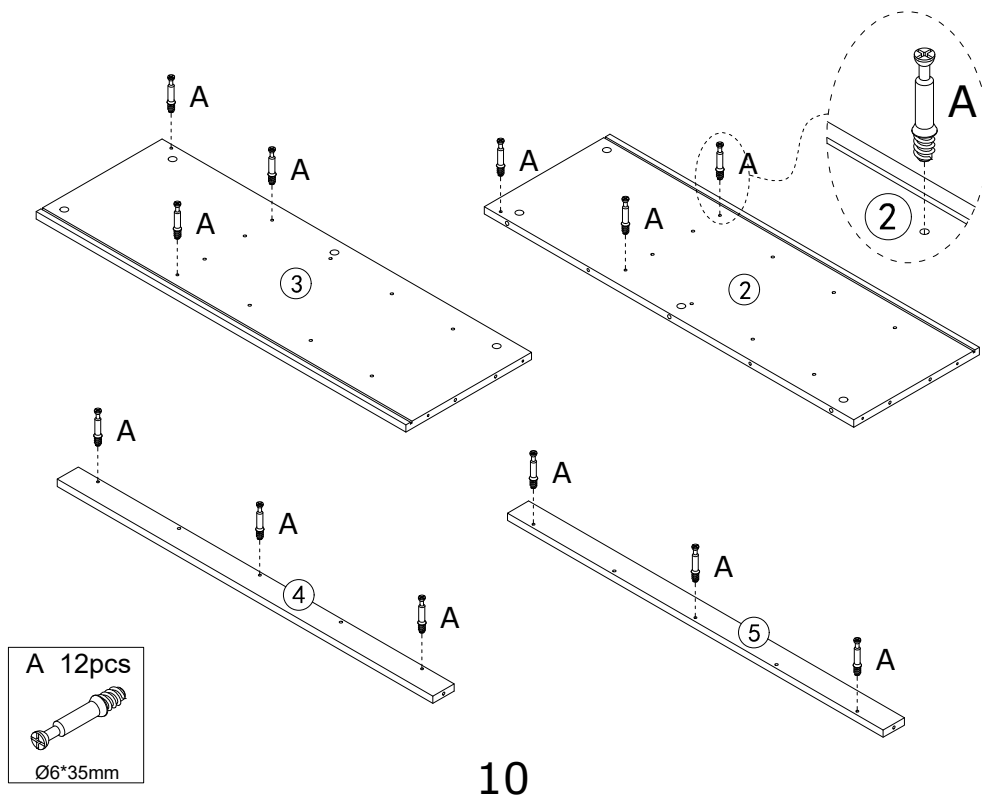


STEP12

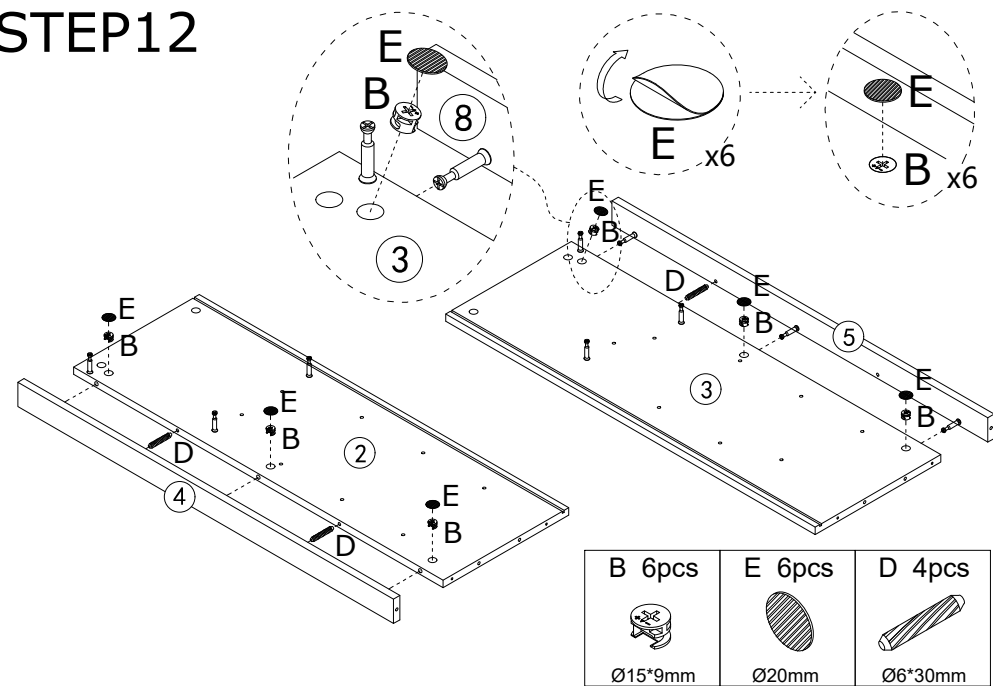


STEP13

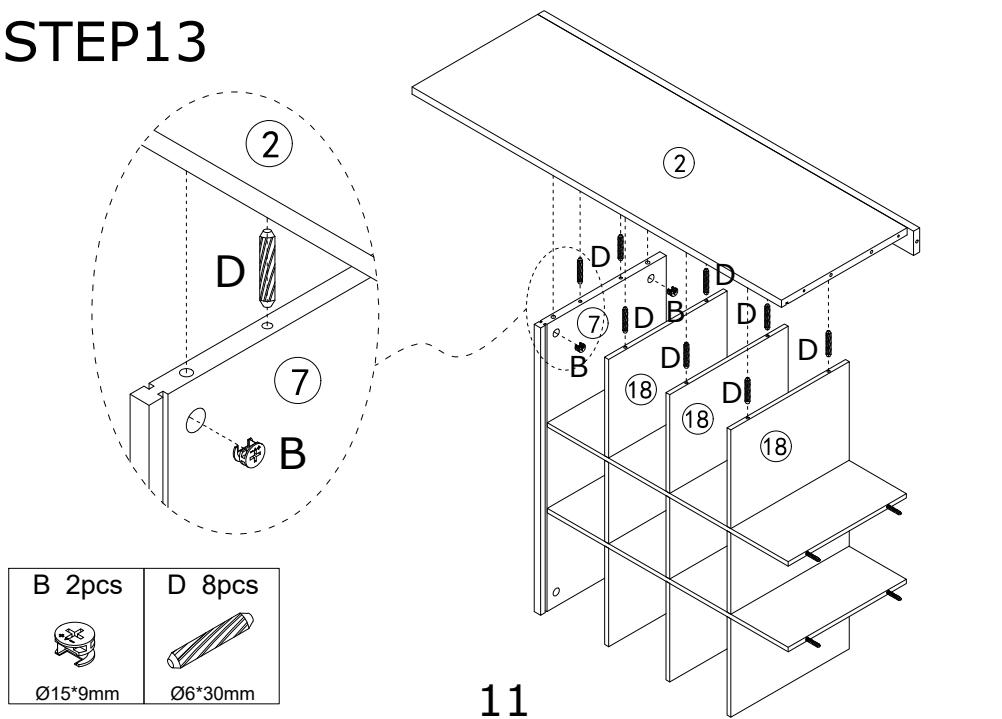


STEP14

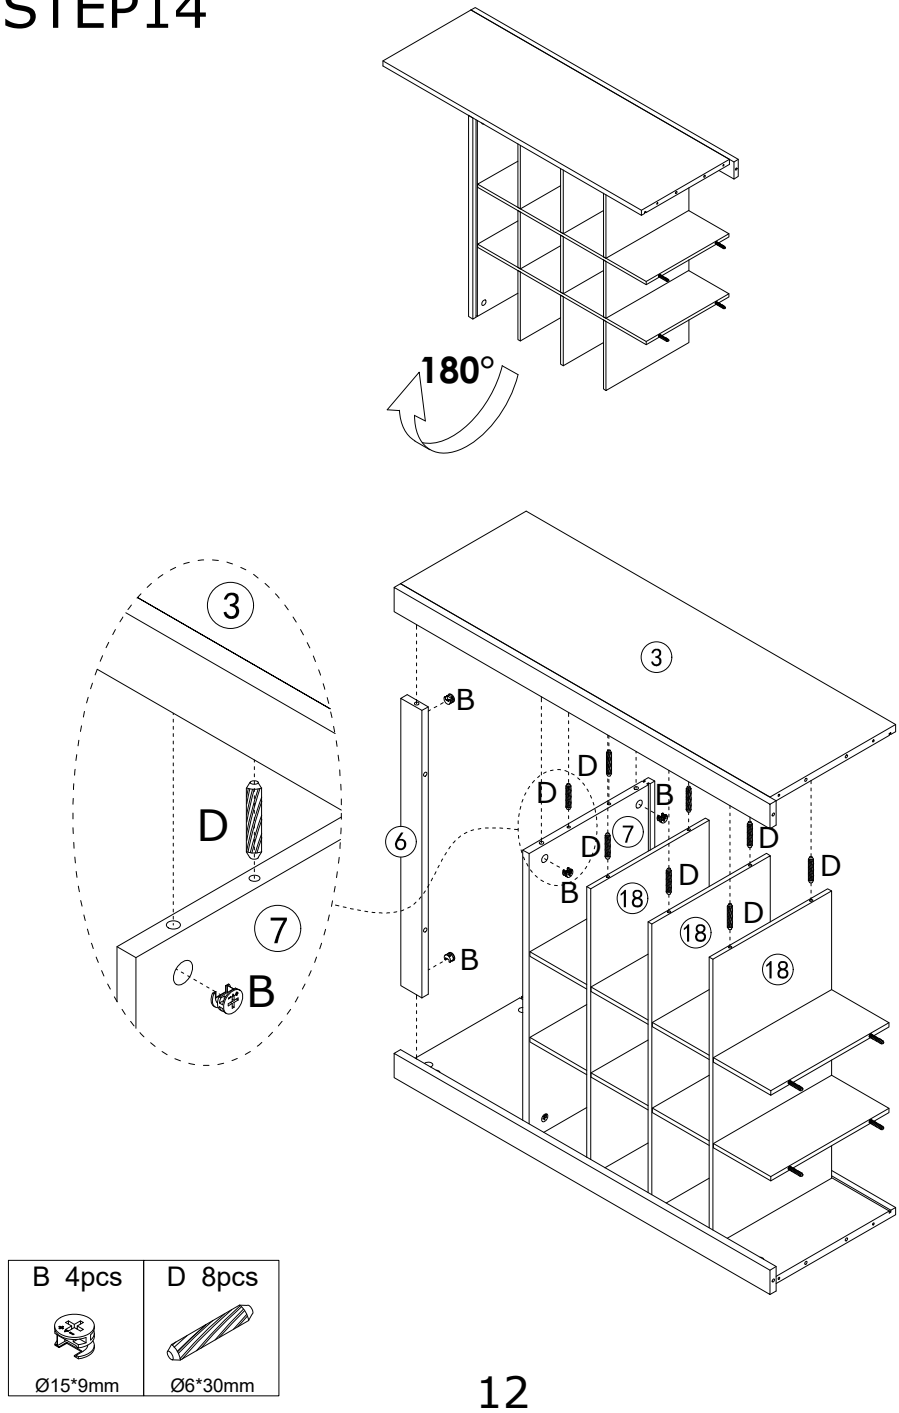


STEP15

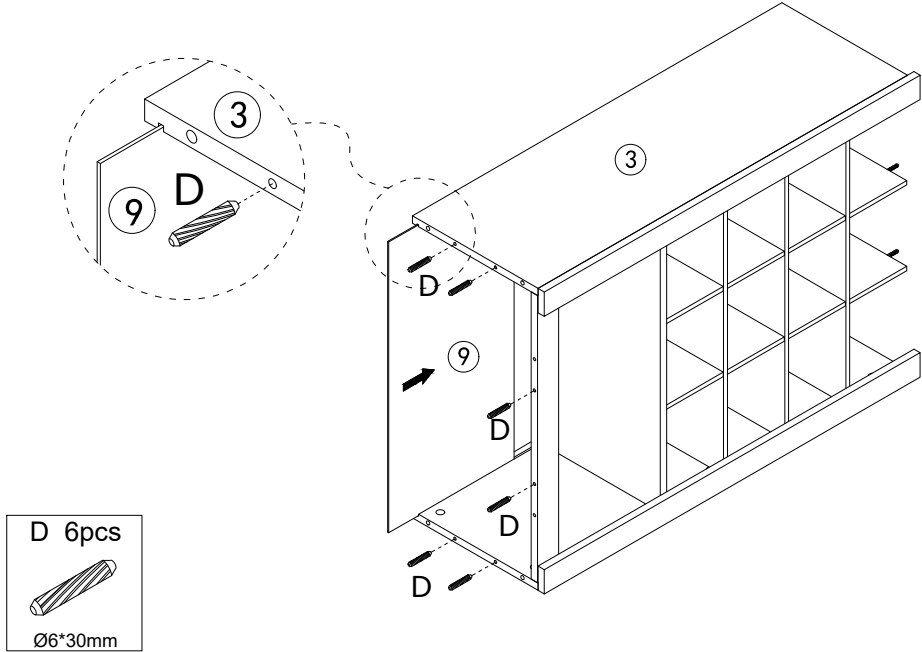

STEP16

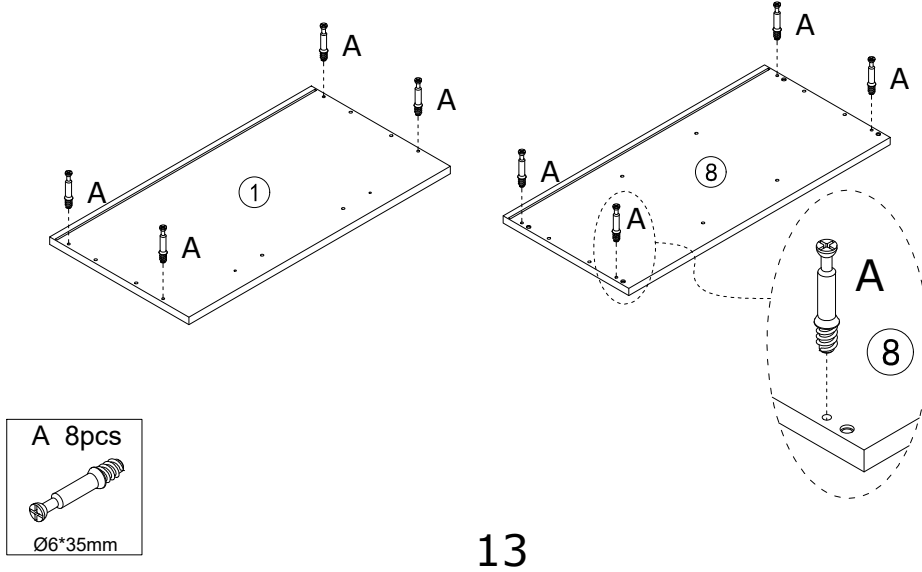


STEP17

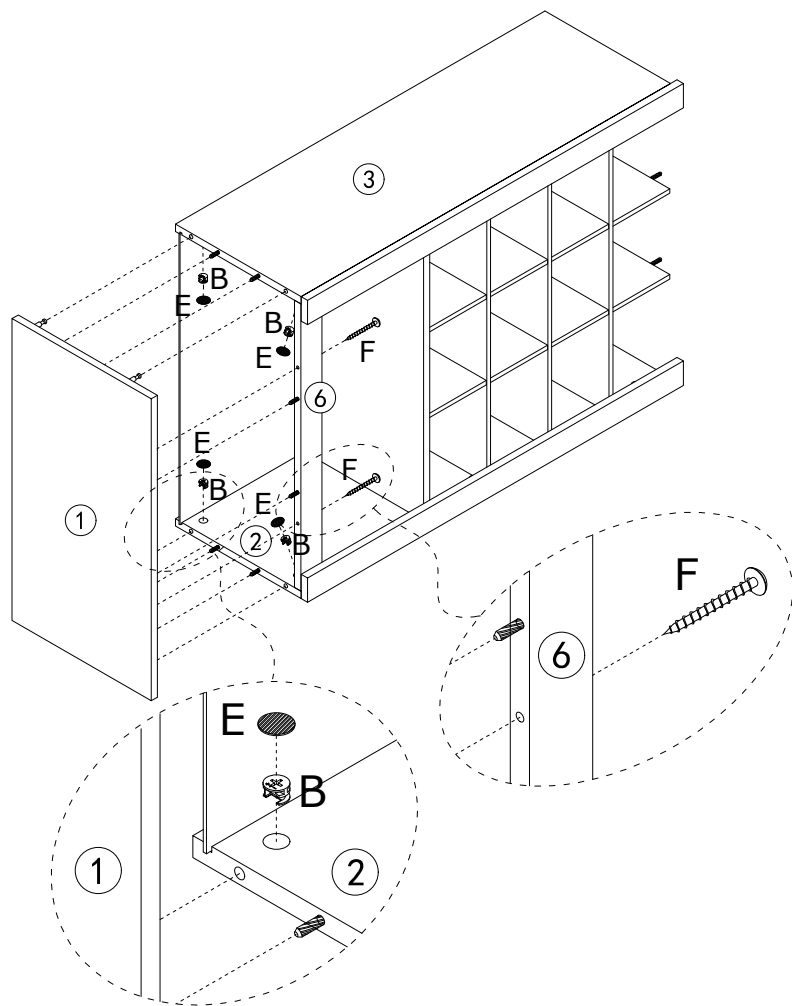

B 4pcs	E 4pcs	F 2pcs
		
Ø15*9mm	Ø20mm	Ø4*35mm

14


STEP18

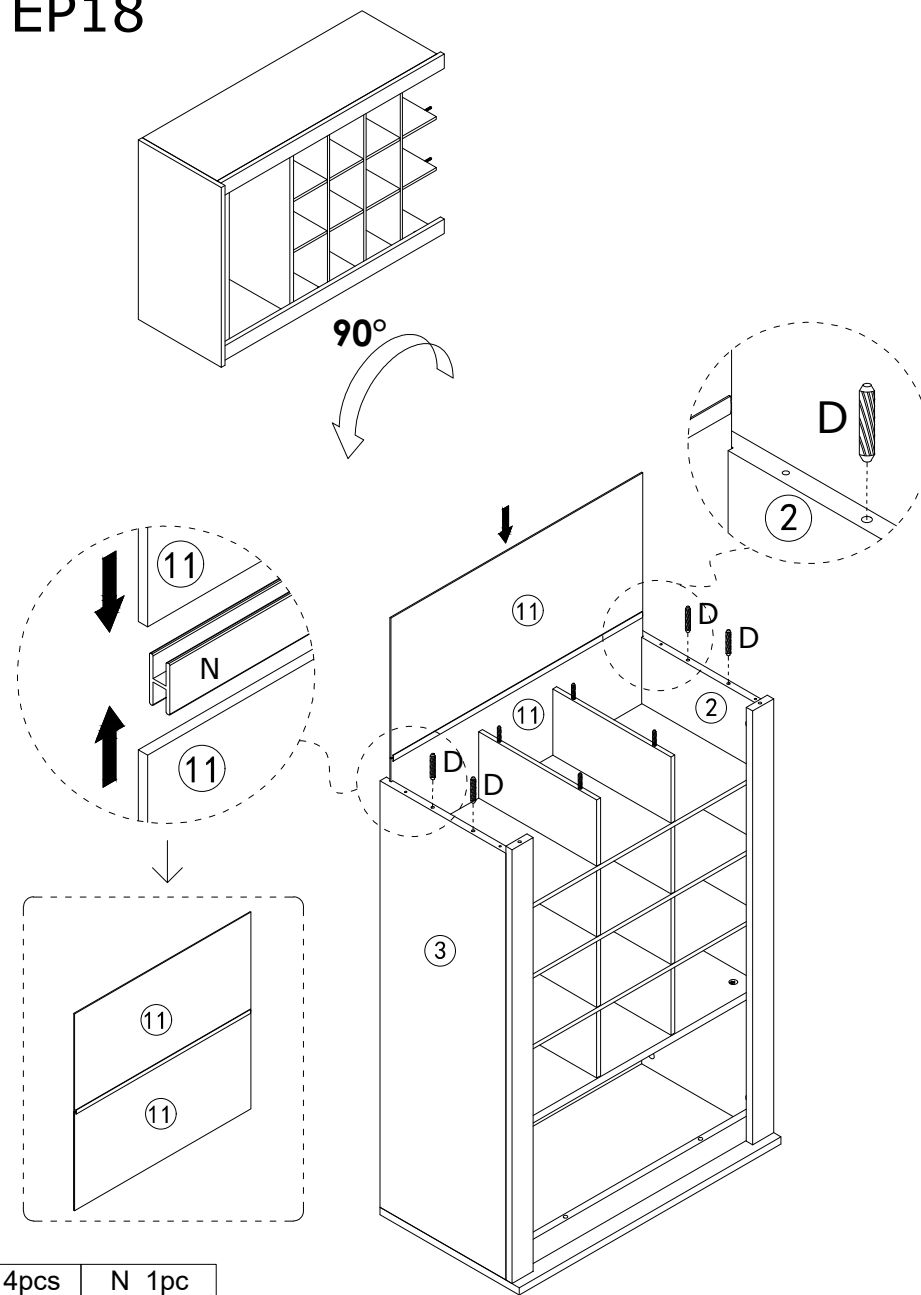

D 4pcs	N 1pc
	
Ø6*30mm	588mm

15


STEP19

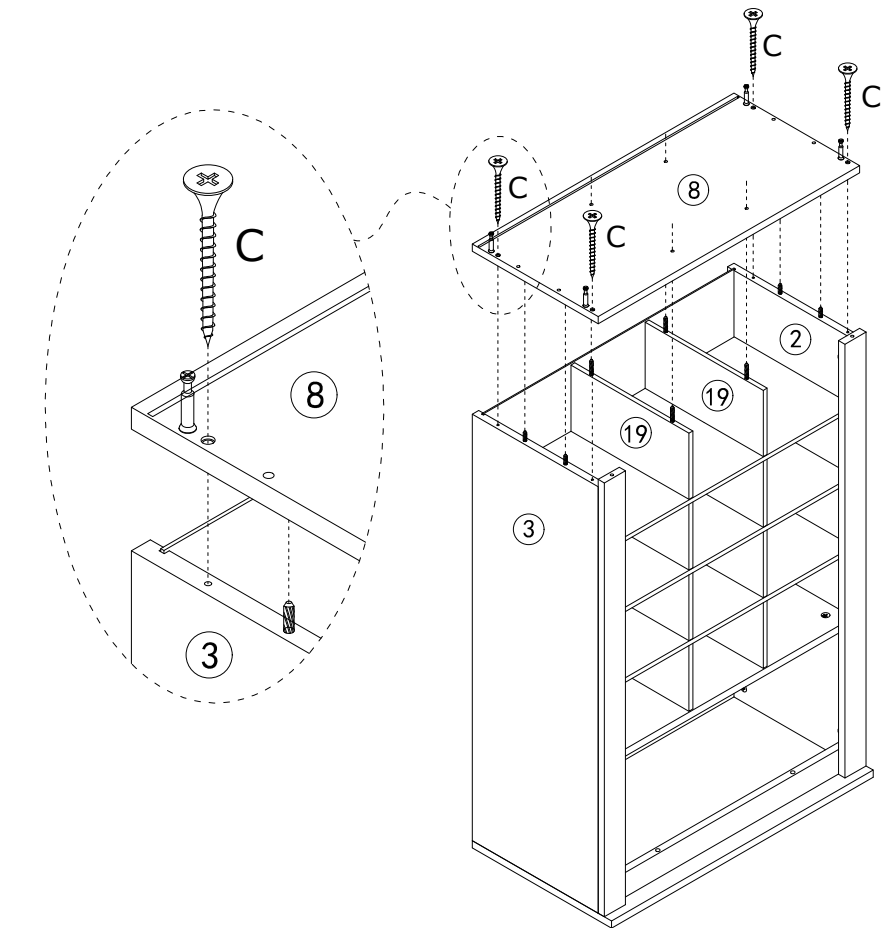

C 4pcs
Ø4*40mm

16


STEP20

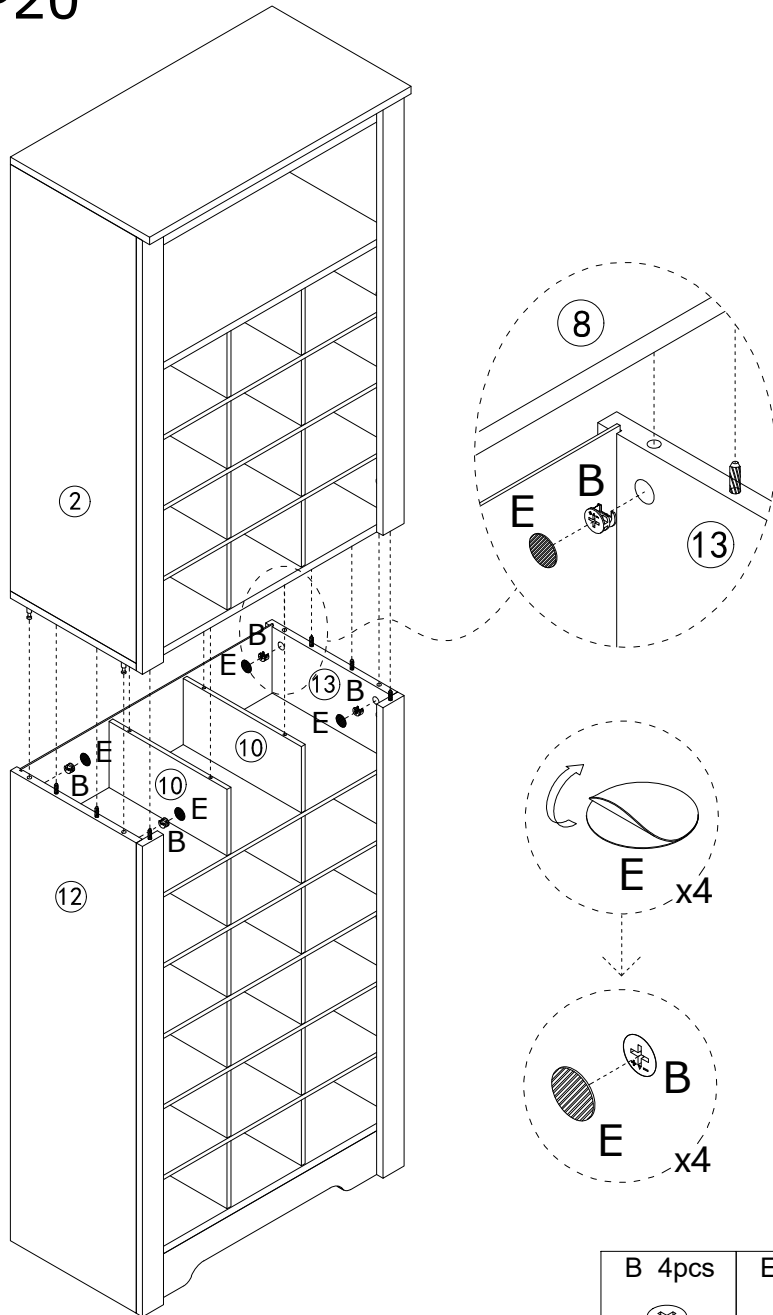

B 4pcs Ø15*9mm	E 4pcs Ø20mm
-------------------	-----------------

17


STEP21

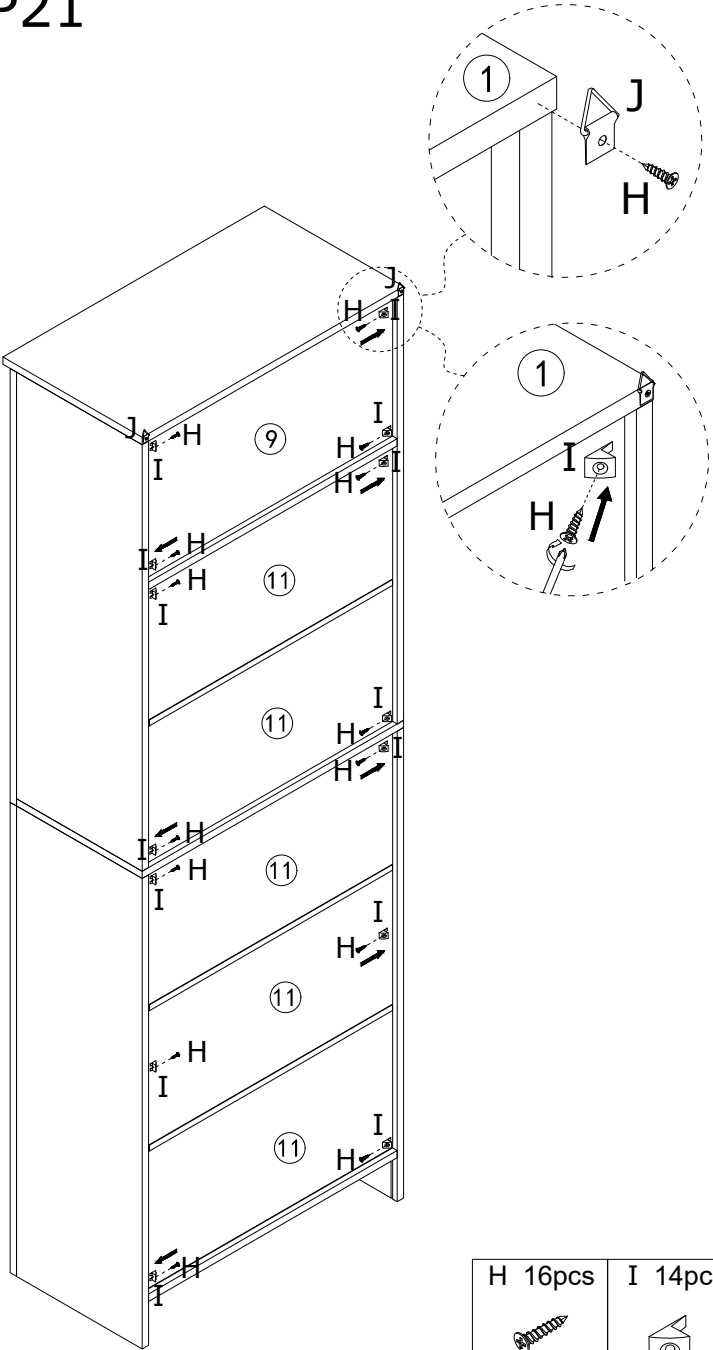

18

H 16pcs  Ø3*14mm	I 14pcs 	J 2pcs 
---	--	--


STEP22

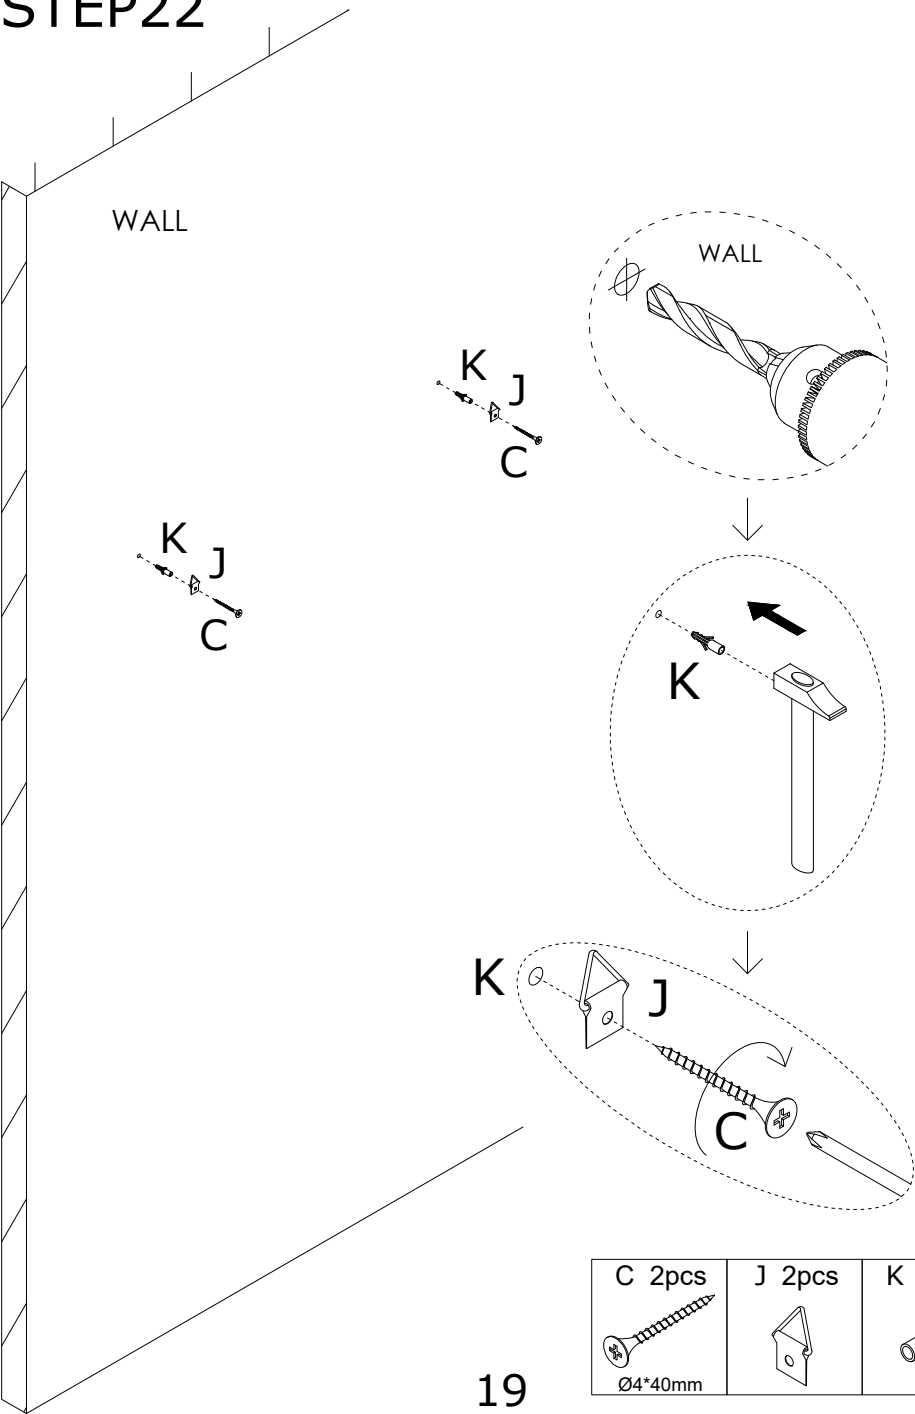

19

C 2pcs  Ø4*40mm	J 2pcs 	K 2pcs 
--	---	---

STEP23

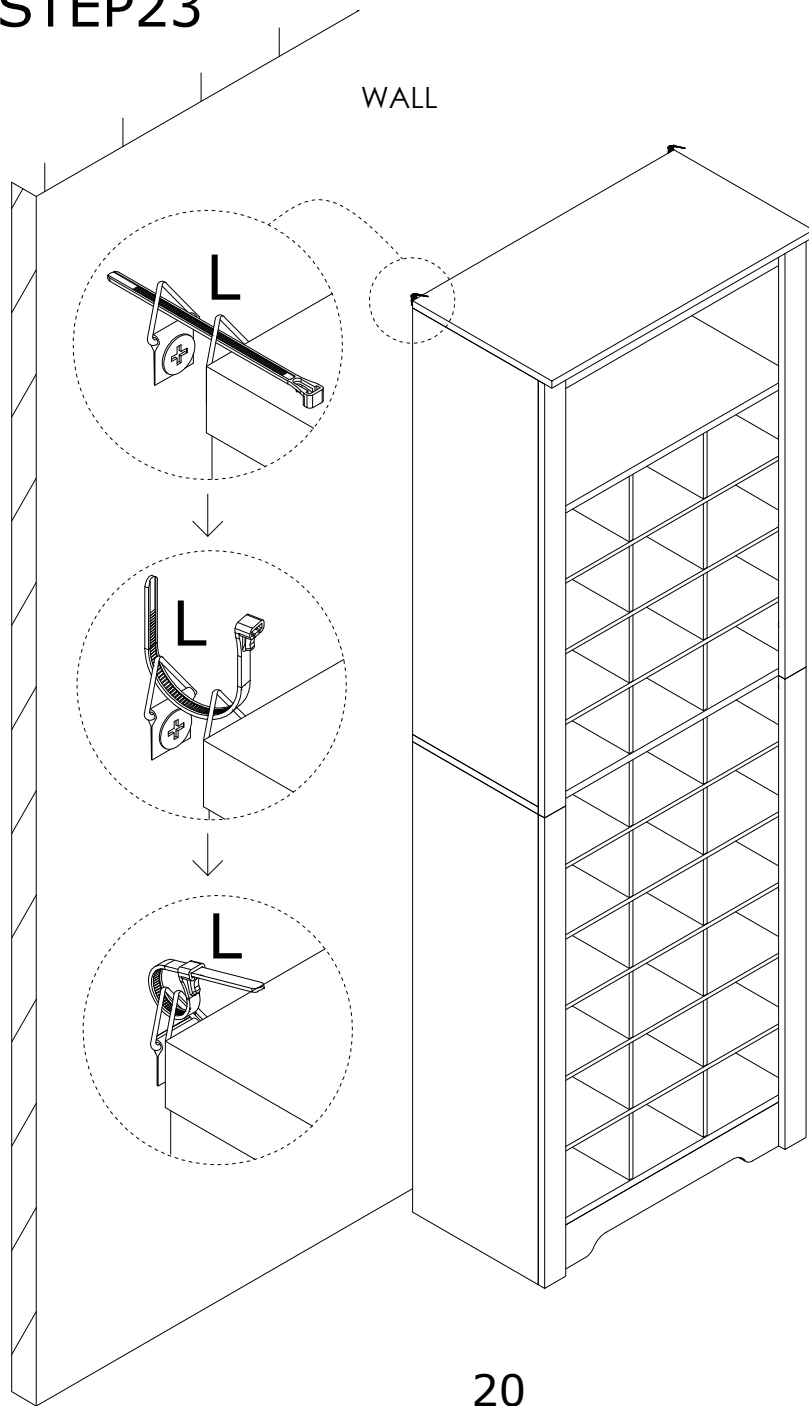

L 2pcs



FINISH

