


ASSEMBLY INSTRUCTION

PATIO FURNITURE SETS

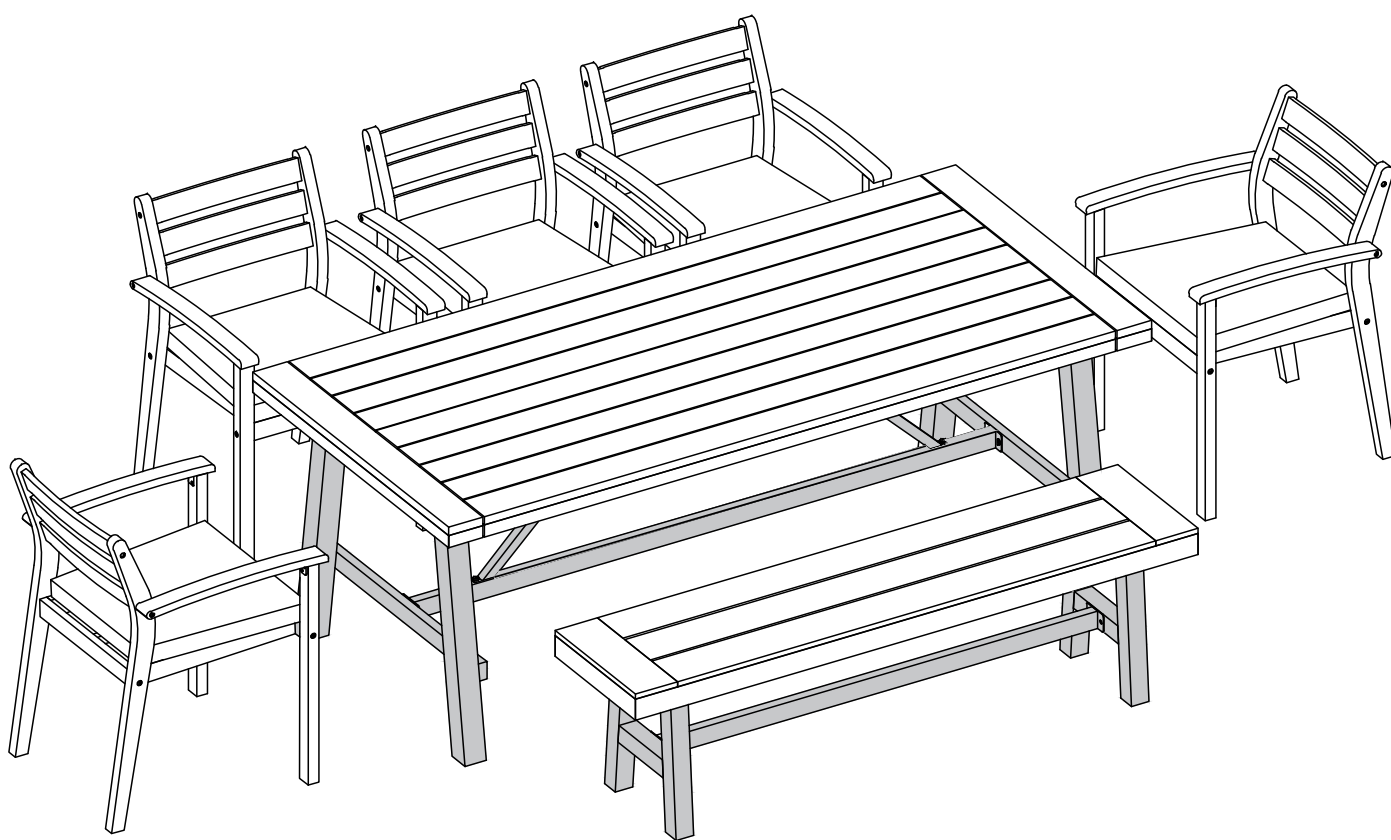


If you have any questions, please feel free to contact us.


Email: lowesteam@animalife.com

WF316738; WF316739; WF316740


X1

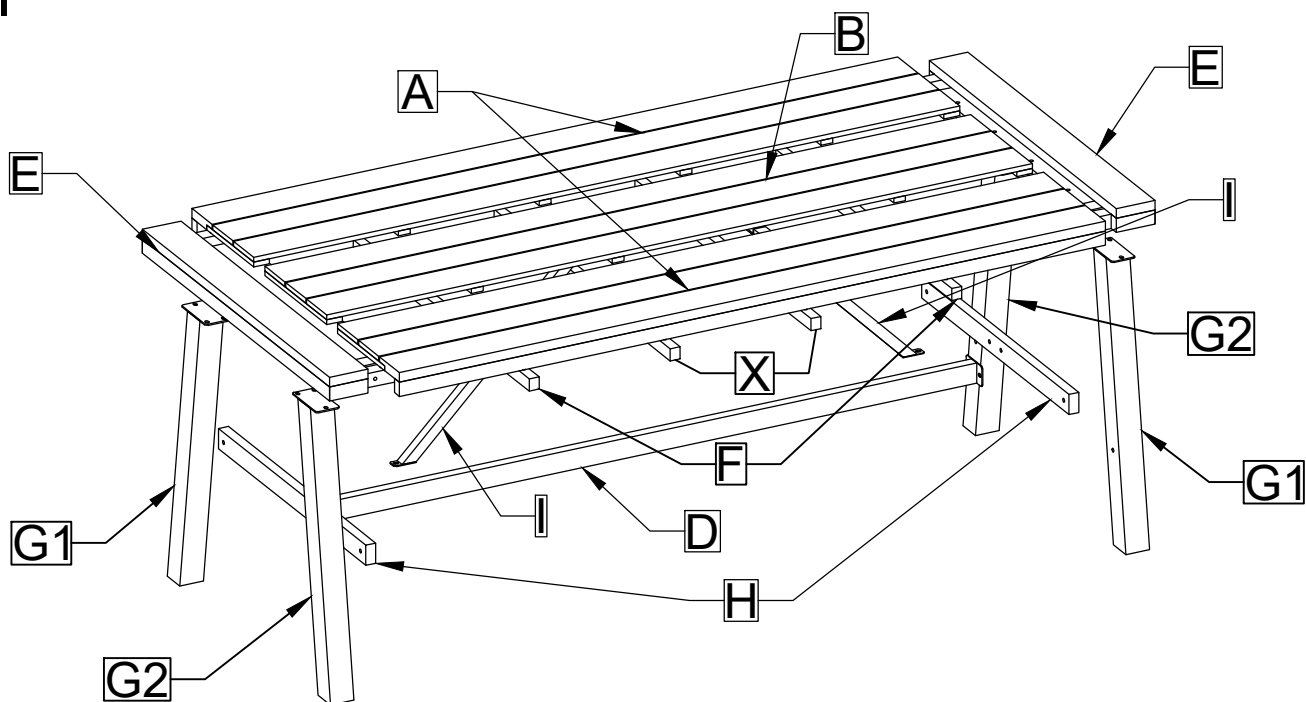

X1

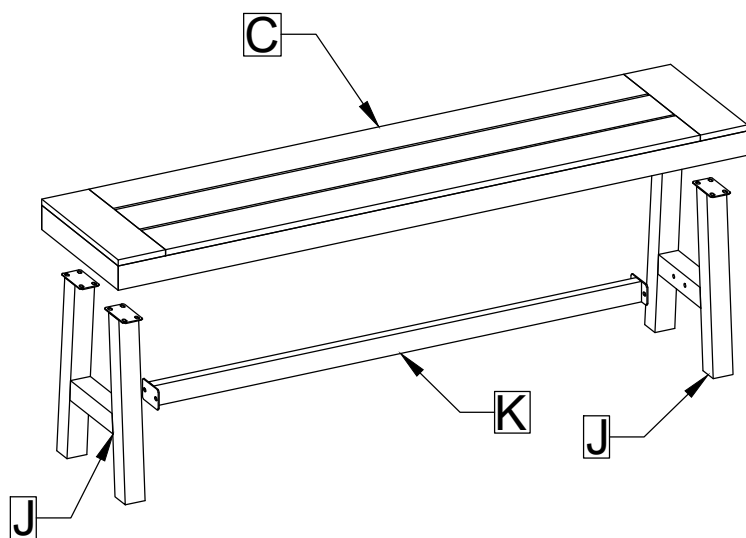

X5

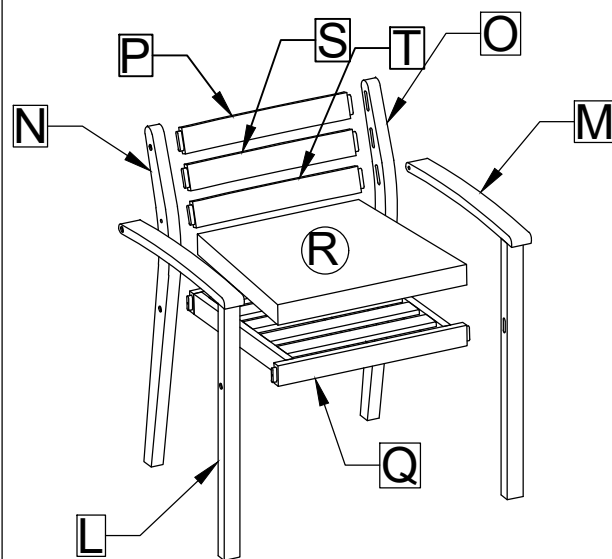


Note:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

CARTON CONTENT:


WF316738

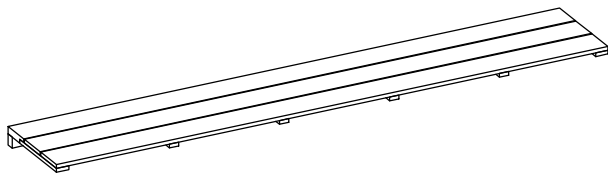


(A) x2

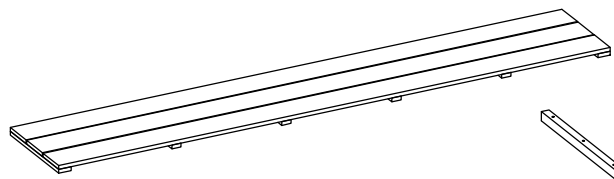


(B) x1

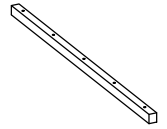


(X) x2

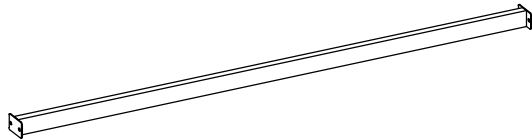


(D) x1

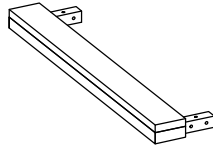

(E) x2

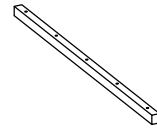


(F) x2



(G1) x2



(G2) x2




(H) x2




(I) x2




(T) x5



(K) x1



(N) x1




(O) x1



Hardware

WF316739

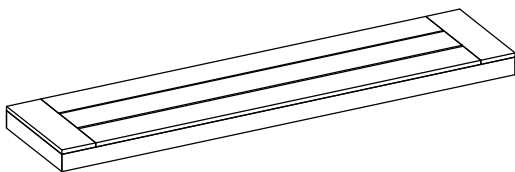

(C) x1



(N) x4




(O) x4




(P) x5


WF316740

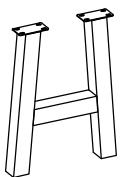


(J) x2

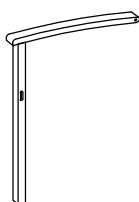


(L) x5

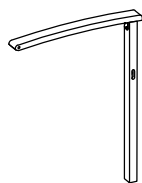


(M) x5



(Q) x5













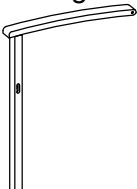
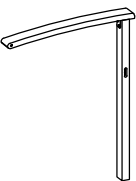


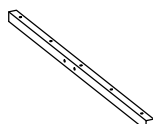



















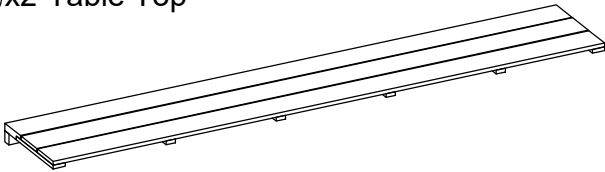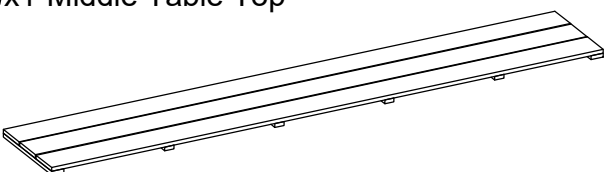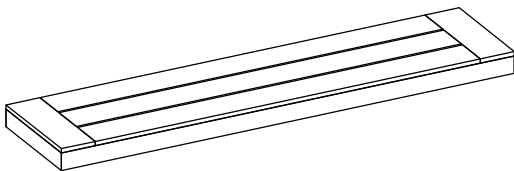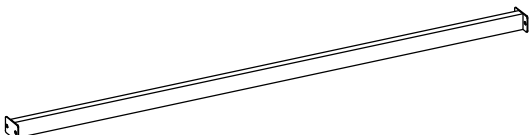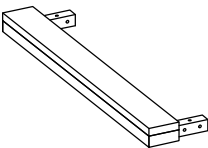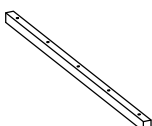(R) x5



(S) x5

Part List & Hardware List:


A x2-Table Top 		B x1-Middle Table Top 			
C x1-Seat Bench 		D x1-Bottom Table 			
E x2-Side Table Top 	F x2-Support Table Top 	G1 x2-Right Table Leg 	G2 x2-Left Table Leg 	H x2-Front Table Leg 	
I x2- Support Table Leg 	J x2-Bench Leg 	K x1-Support Bench Leg 	L x5-Arm Right 		
M x5-Arm Left 	N x5-Right Back Leg 	O x5-Left Back Leg 	X x2-Support Middle Table Top 		
Q x5-Seat 	R x5-Seat Cushion 	S x5-Back Middle 	P x5-Back Top 	T x5-Back Bottom 	
1 x38-Bolt M6 x 20MM extra (3) 	2 x4-Bolt M6 x 45MM extra (1) 	3 x46 Flat Washer extra (4) 	4 x4-Screw Bolt M6 x 20MM extra (1) 	5 x8- Screw Bolt M6 x 30MM extra (1) 	6 x12-Screw Bolt M6 x 45MM extra (2) 
7 x10-Screw Bolt M6 x 90MM extra (1) 	8 x2-Allen Key 	9 x10-Screw Bolt M6 x 60MM extra (1) 	10 x10-Screw Bolt M7 x 60MM extra (1) 	11 x10-Screw Bolt M7 x 90MM extra (1) 	12 x24-Screw Bolt M6 x 50MM extra(3) 

Ax2

Bx1


Ex2

5x8

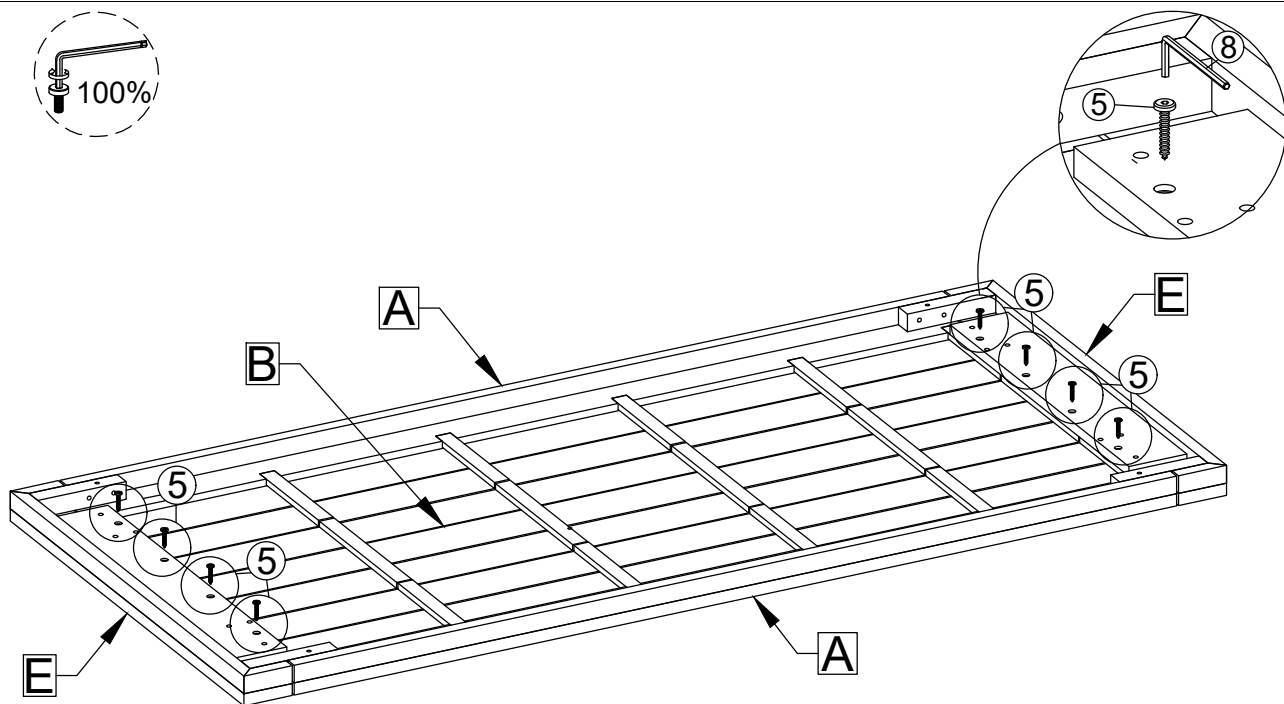



Step 1: Connect Table Top (A) & Middle Table Top (B), Side Table Top (E), tighten Screw Bolt (5) with Allen Key (8).

6x12

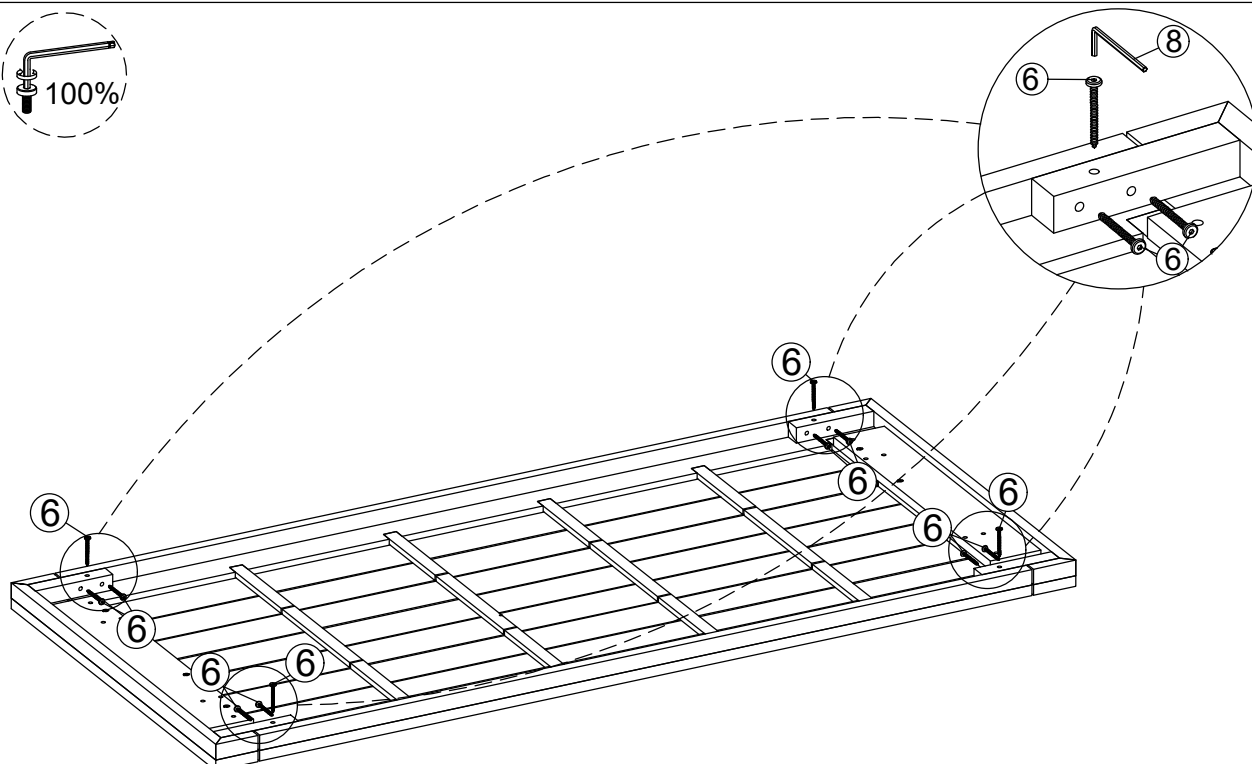



Step 2: Connect The Part from Step 1, tighten Screw Bolt (6) with Allen Key (8).

Fx2
Xx2
12x24

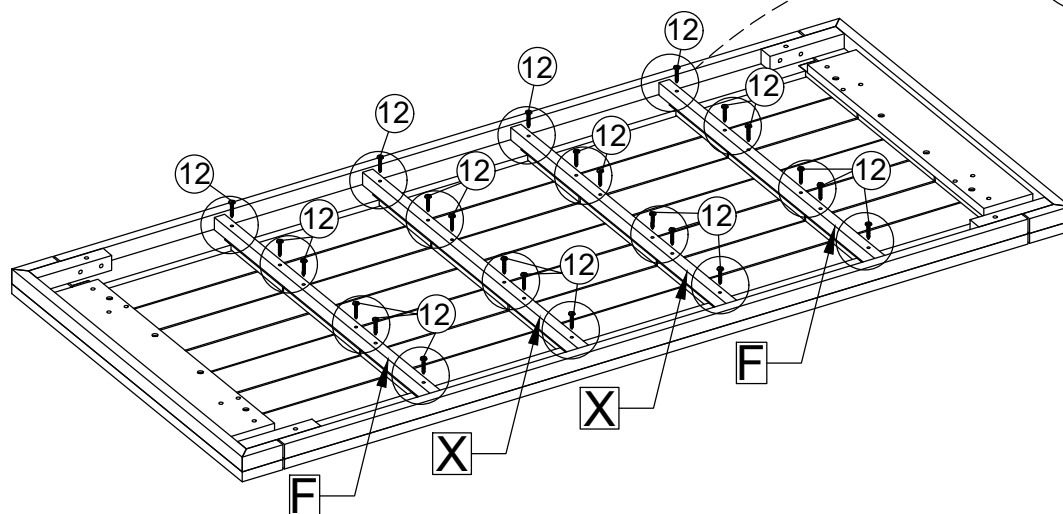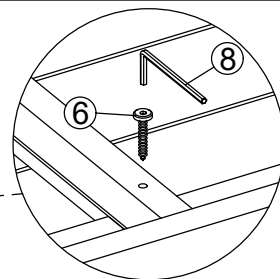


Step 3: Connect The Part from Step 2 & Support Table Top (F), Support Middle Table Top (X), tighten Screw Bolt (12) with Allen Key (8).

G1x2
G2x2
1x12
3x12

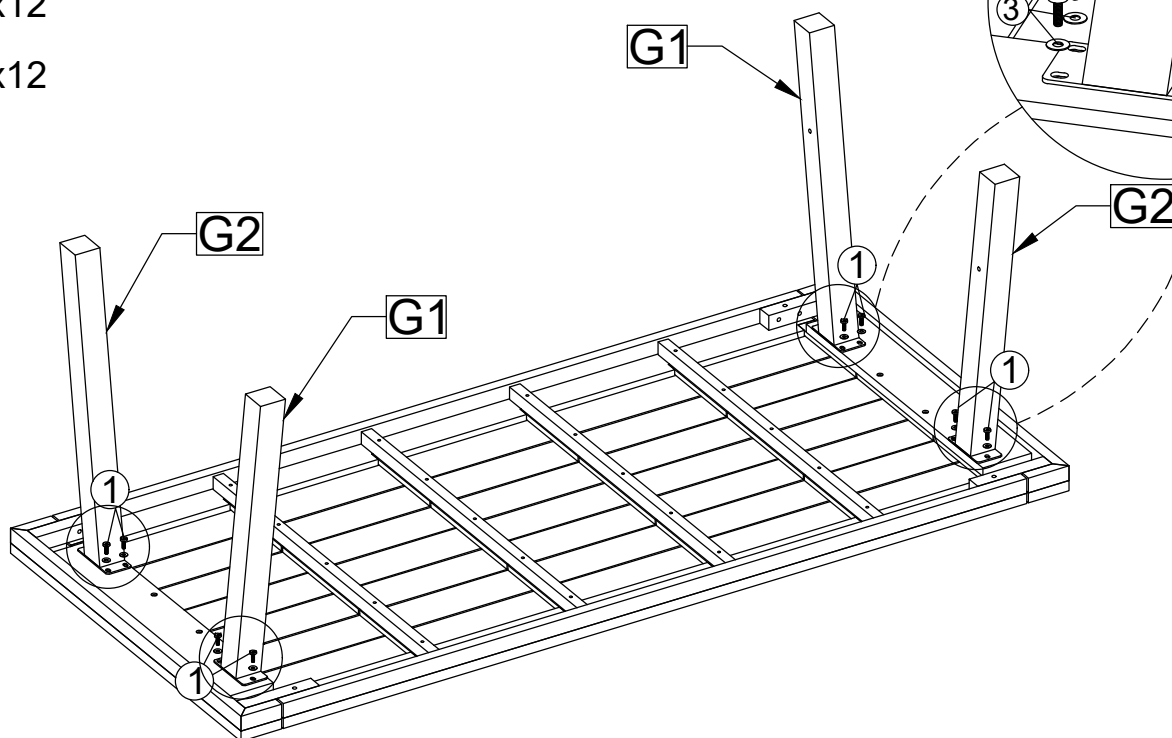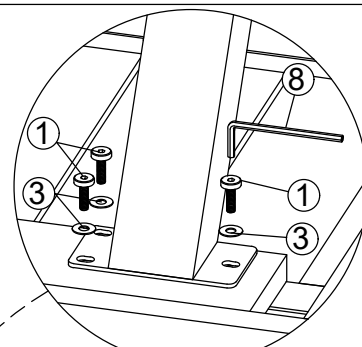


Step 4: Connect The Part from 3 & Right Table Leg (G1), Left Table Leg (G2) tighten Bolt (1), Flat Washer (3) with Allen Key (8).

Hx2
2x4
3x4

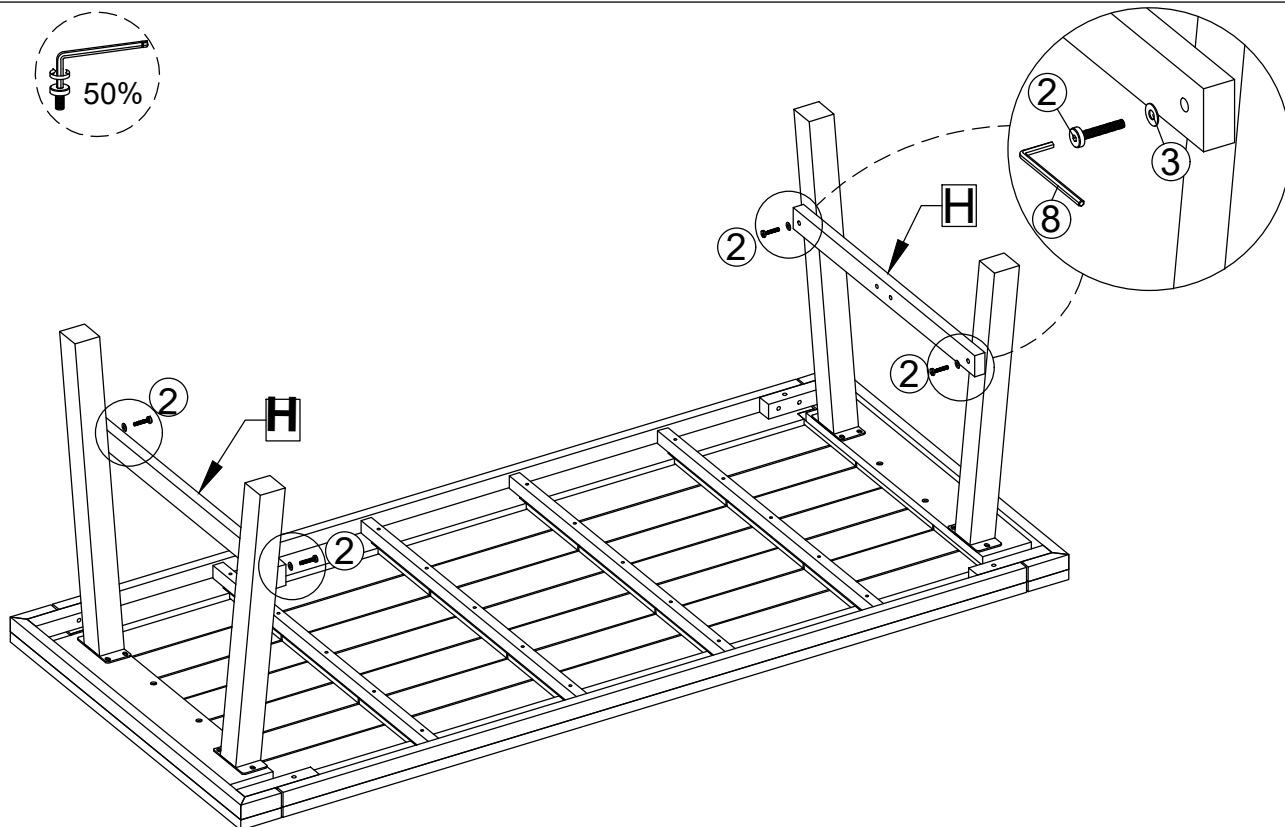


Step 5: Connect The Part from Step 4 & Front Table Leg (H), tighten Bolt (2), Flat Washer (3) with Allen Key (8).


Dx1
1x4
3x4

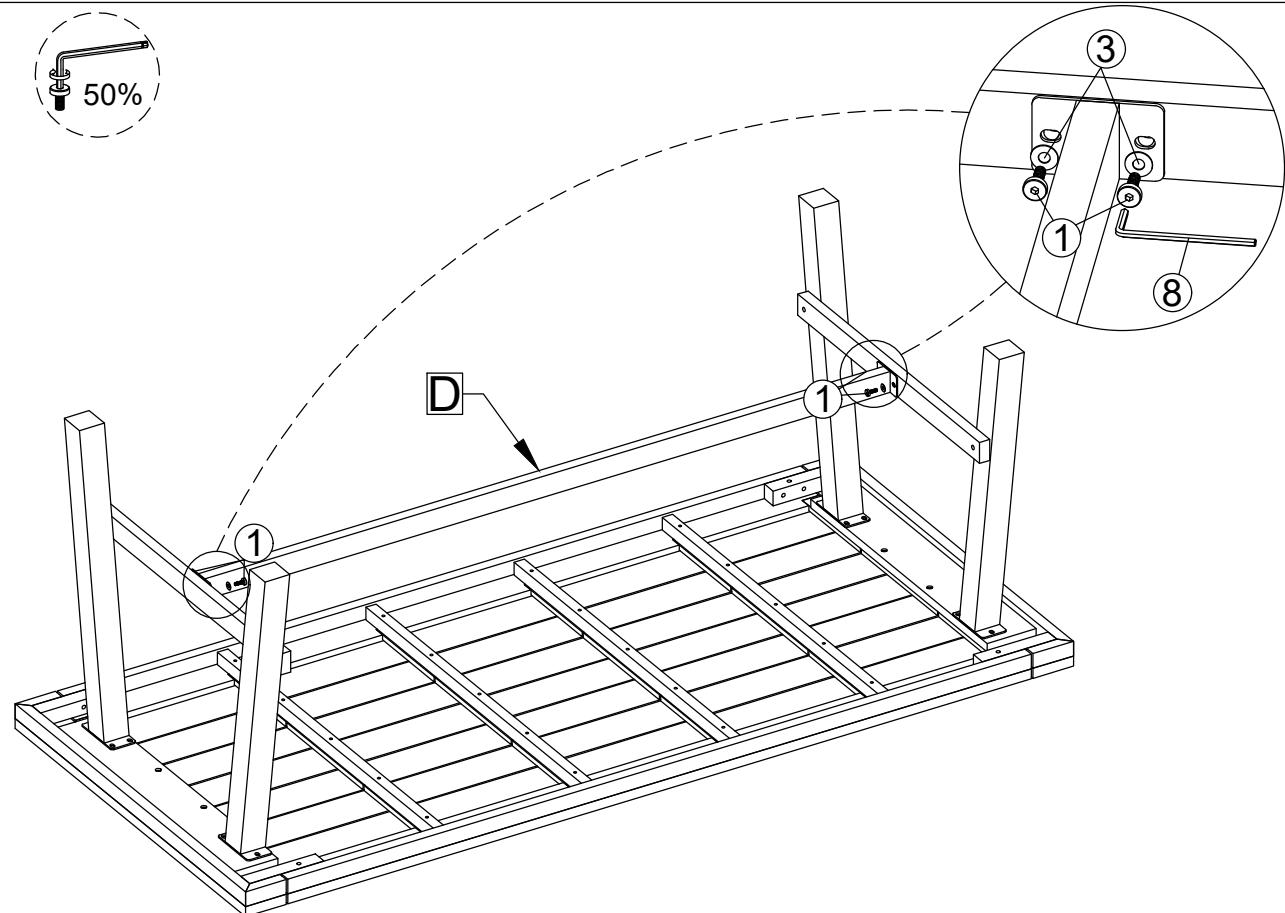



Step 6: Connect The Part from Step 5 & Bottom Table (D), tighten Bolt (1), Flat Washer (3) with Allen Key (8).

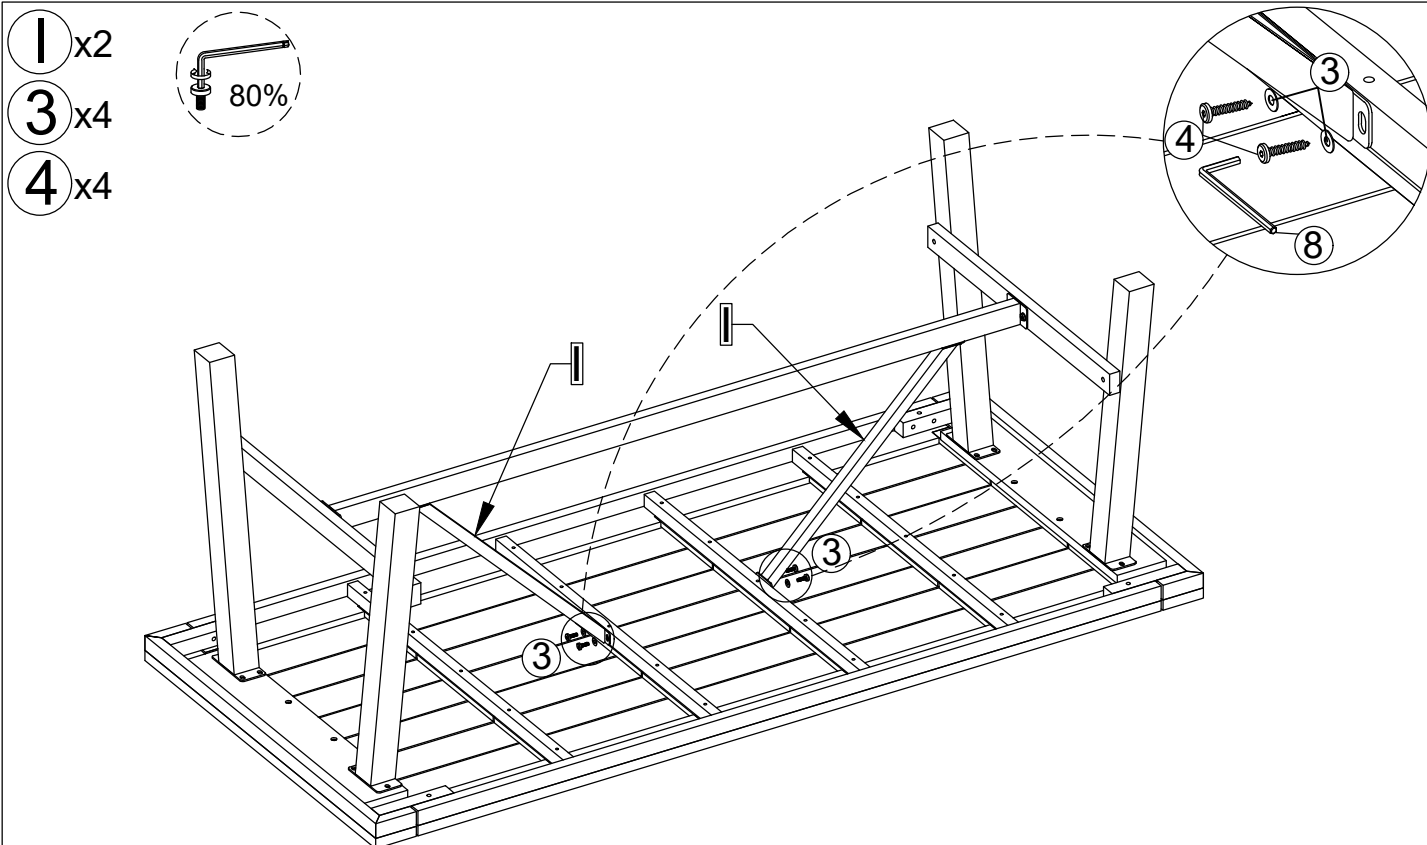

Step 5: Connect The Part from Step 4 & Support Table Leg (1), tighten Screw Bolt (4), Flat Washer (3) with Allen Key (8).

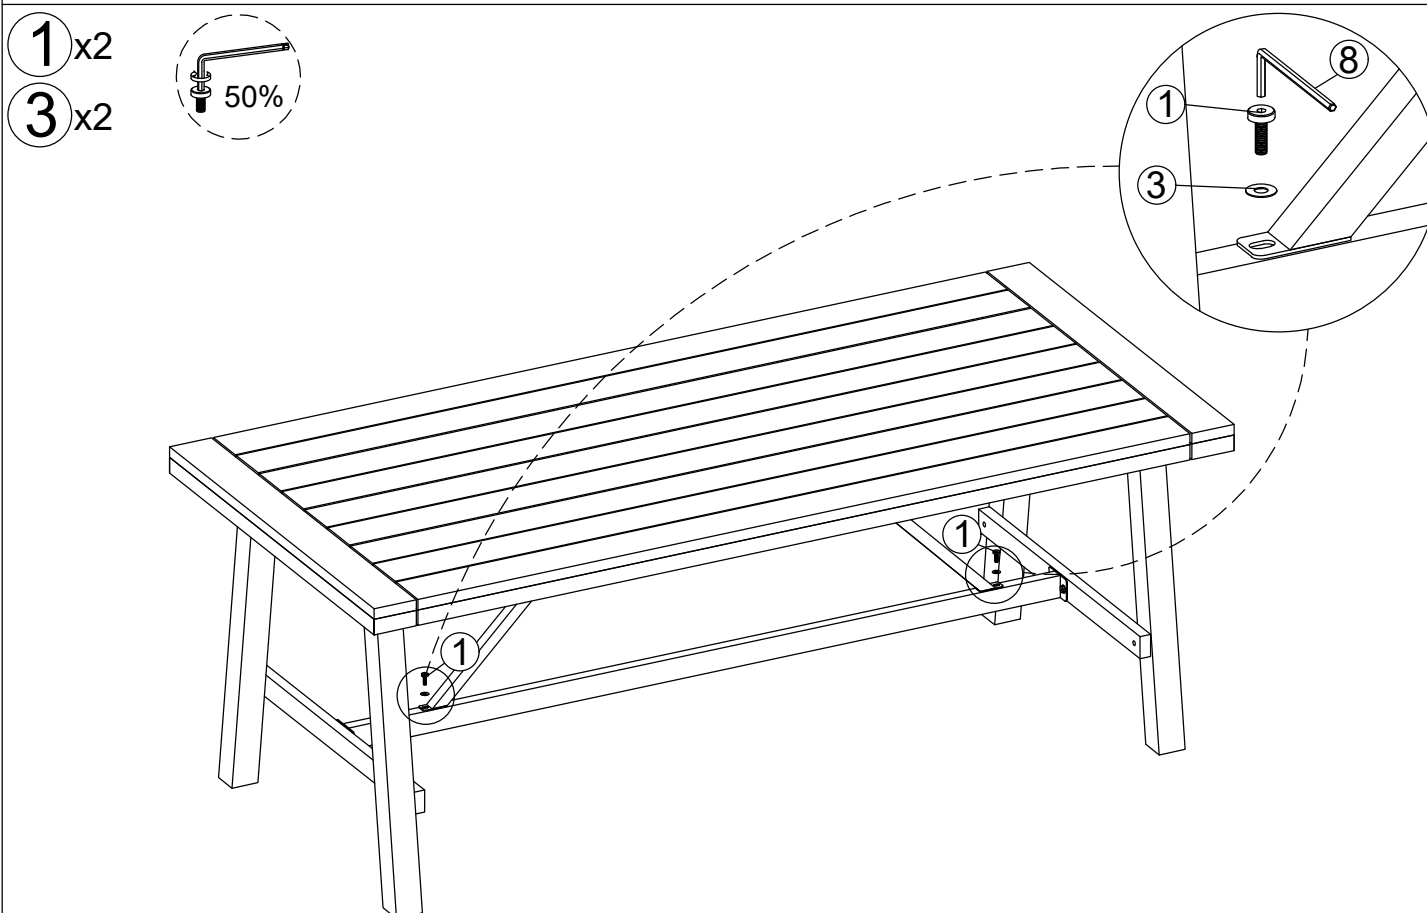

Step 6: Connect The Part from Step 5 , tighten Bolt (1), Flat Washer (6) with Allen Key (8).

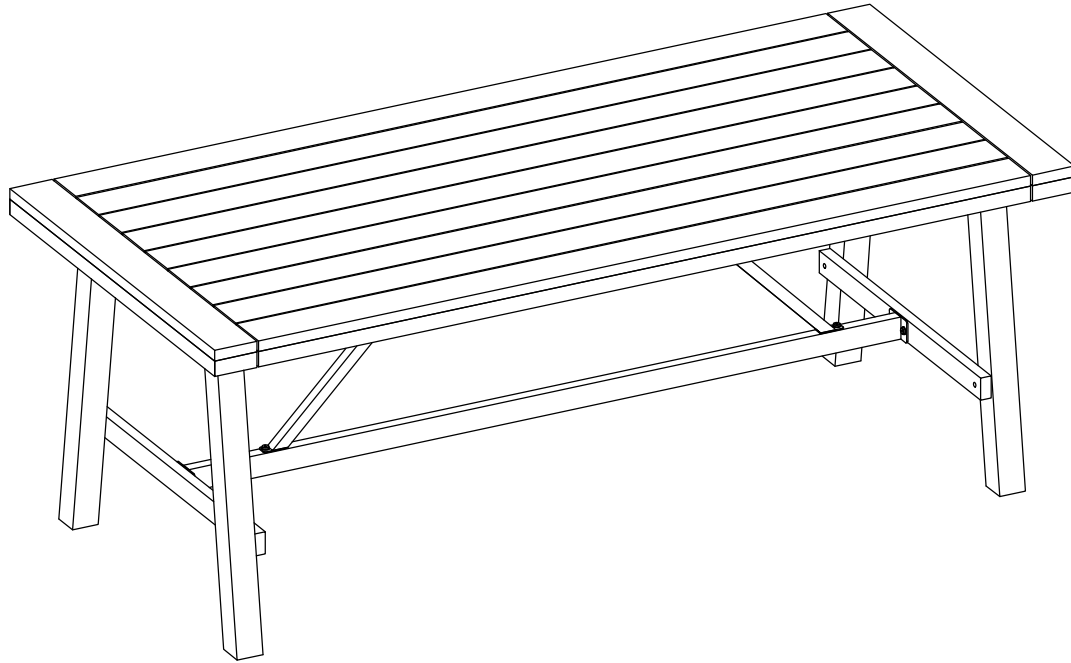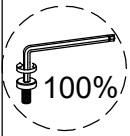


Step 7: Put the Table upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (8).

C x1

J x2


1 x 16

3 x 16

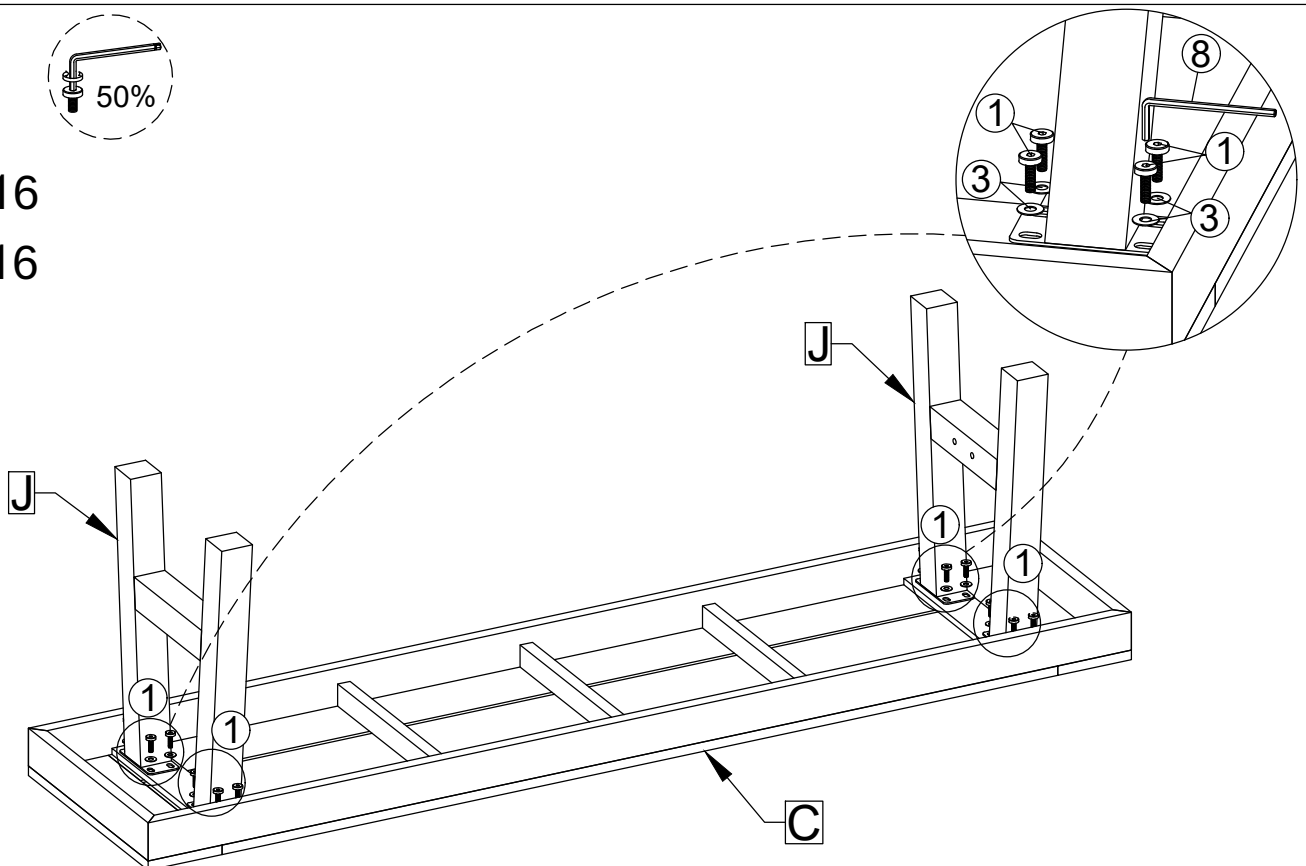


Step 8: Connect seat Bench (C) & Bench Leg (J), tighten Bolt (1), Flat Washer (3) with Allen Key (8).


Kx1
1x4
3x4

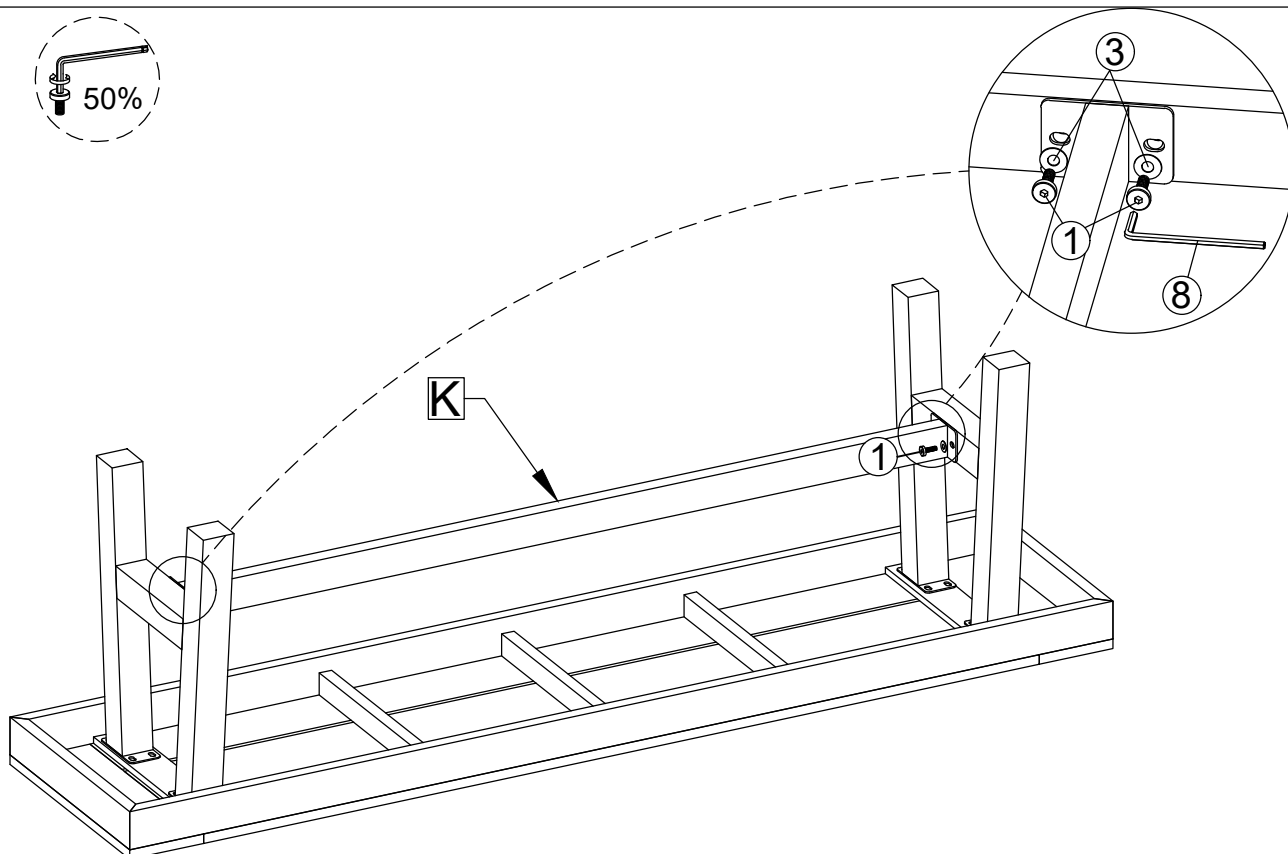


Step 9: Connect The Part from Step 8 & Support Bench Leg (K), tighten Bolt (1), Flat Washer (3) with Allen Key (8).

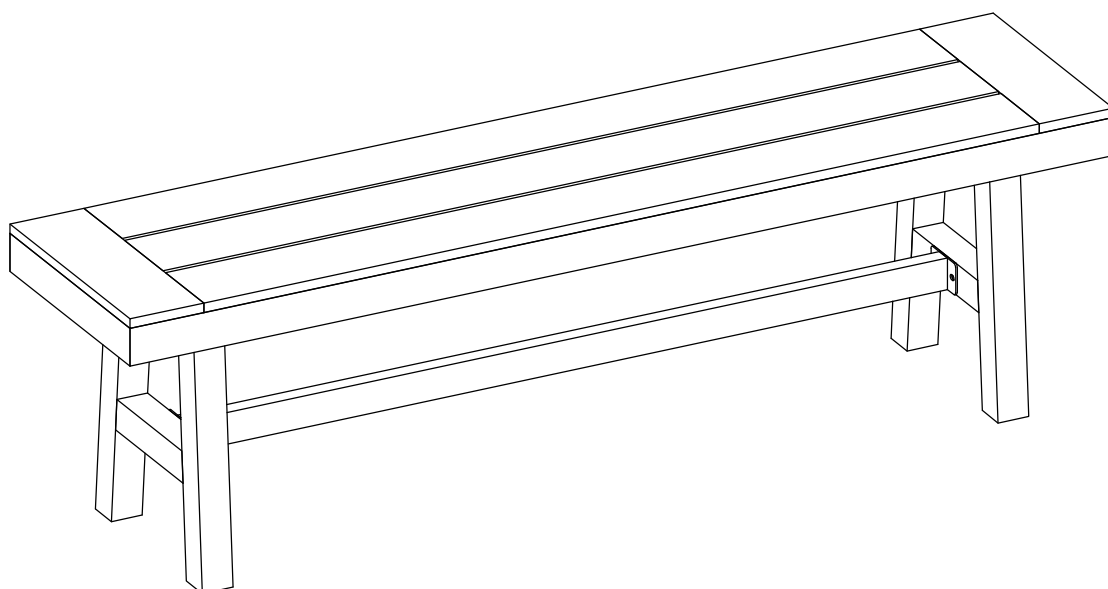


Step 10: Put the Bench upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (8).

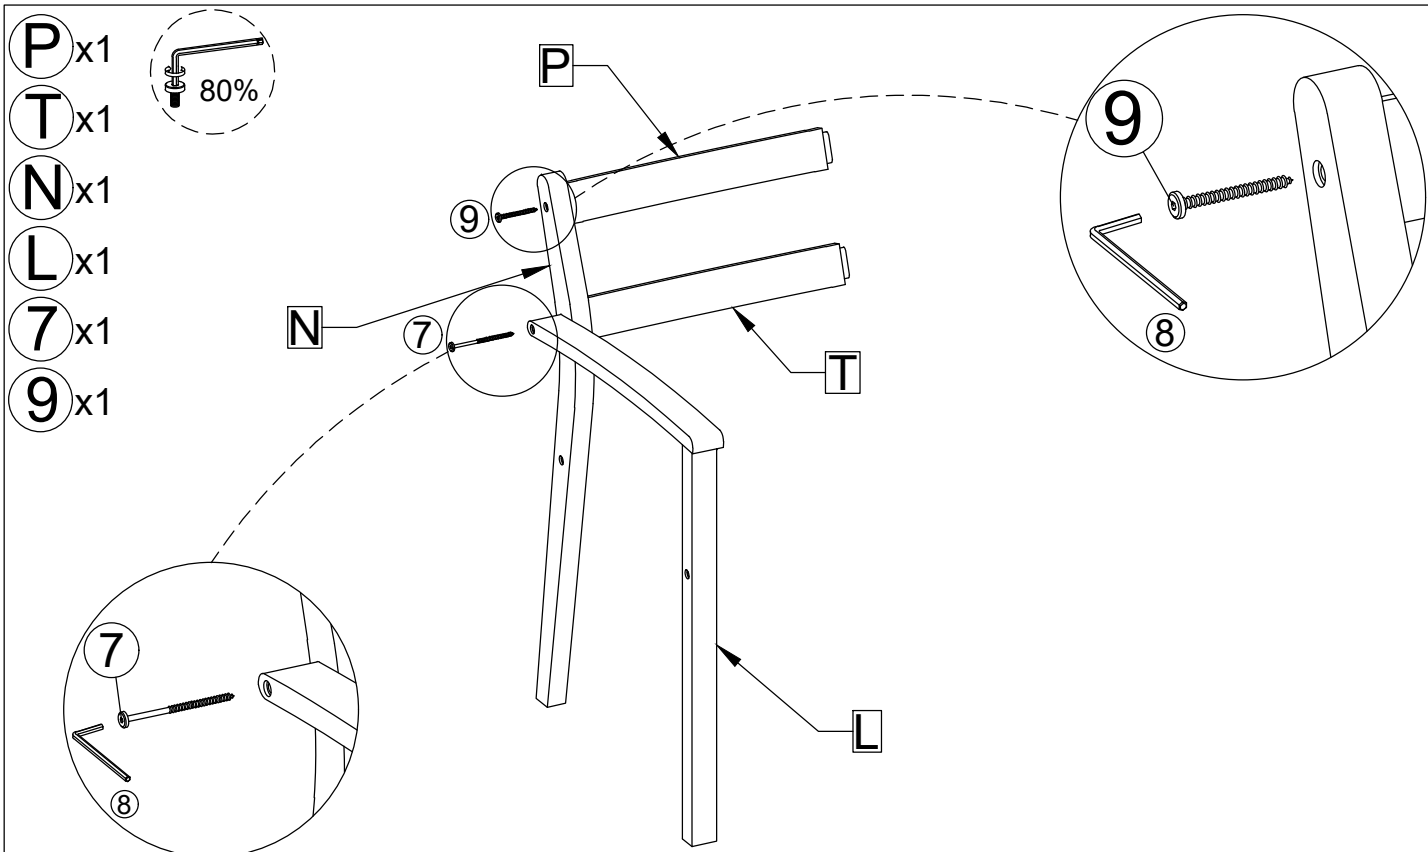


Step 11: Connect Arm Right (L) & Right Back Leg (N), Back Top (P), Back Bottom (T), tighten Screw Bolt (7),(9) with Allen Key (8).

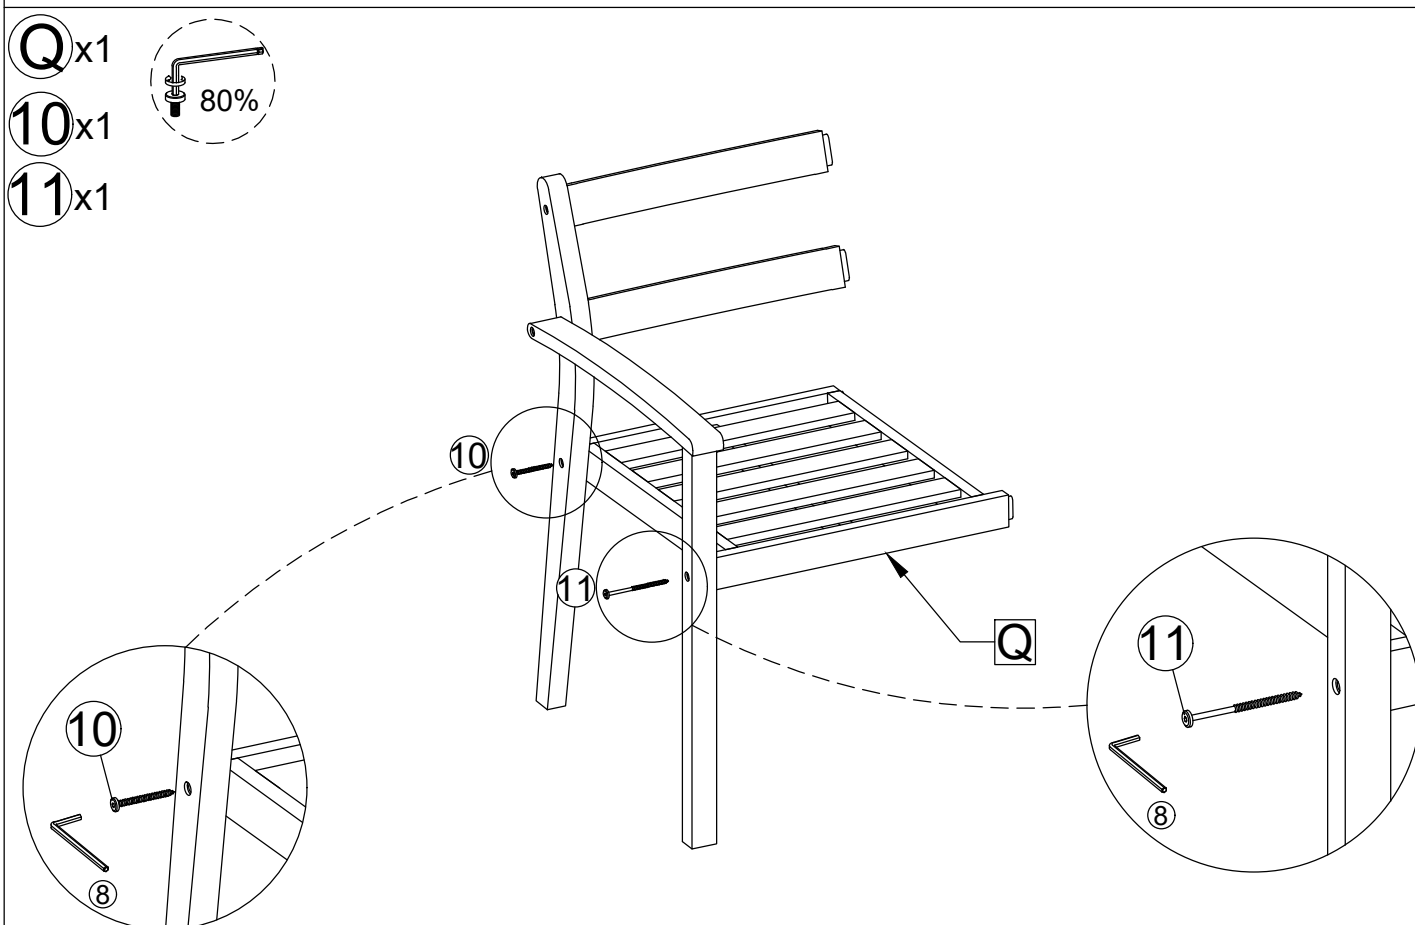



Step 12: Connect The Part from Step 11 & Seat (Q), tighten Screw Bolt (10),(11) with Allen Key (8).

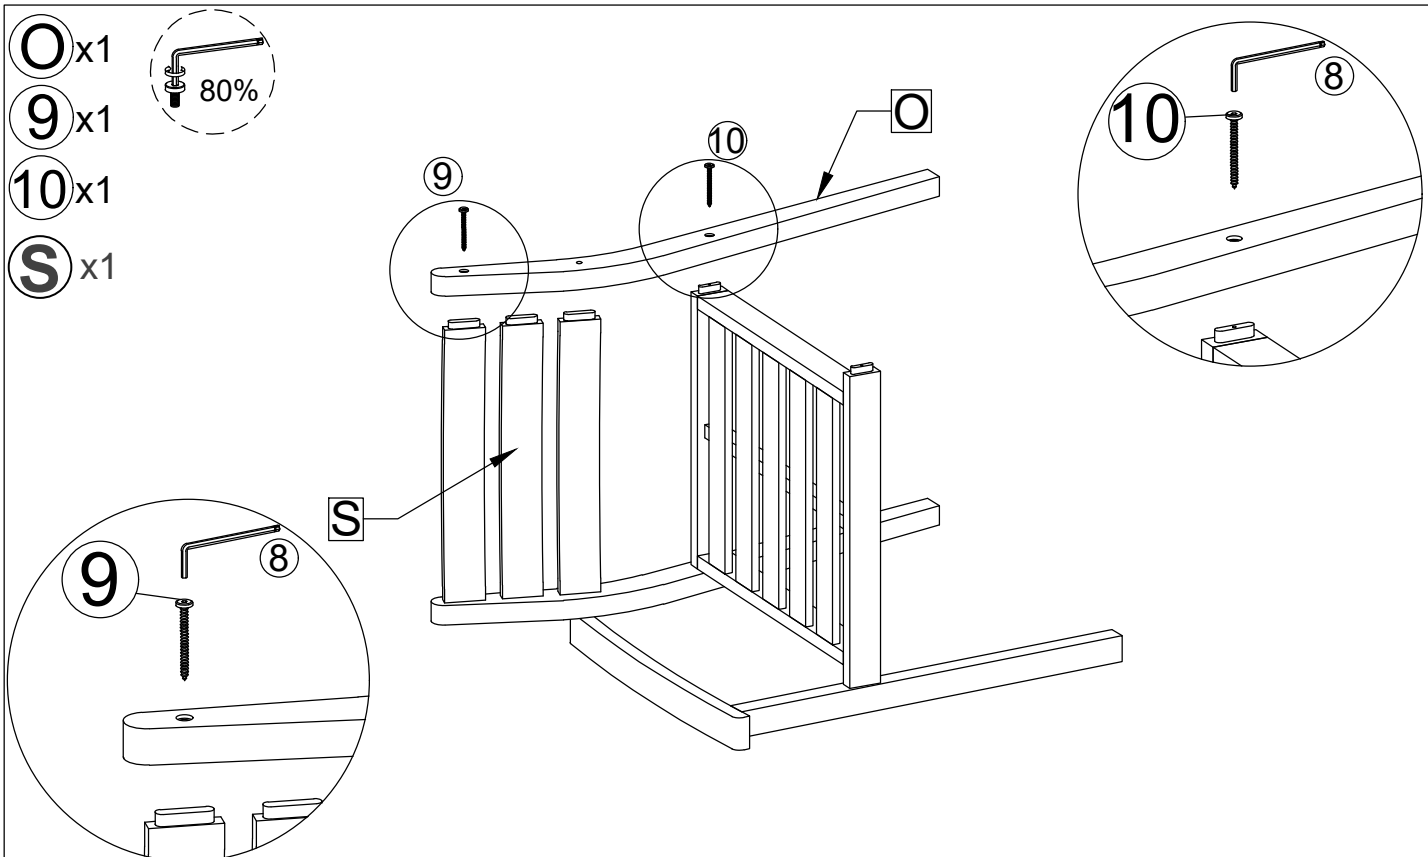

Step 13: Connect The Part from Step 12 & Left Back Leg (O), Back Middle (S), tighten Screw Bolt (9),(10) with Allen Key (8).

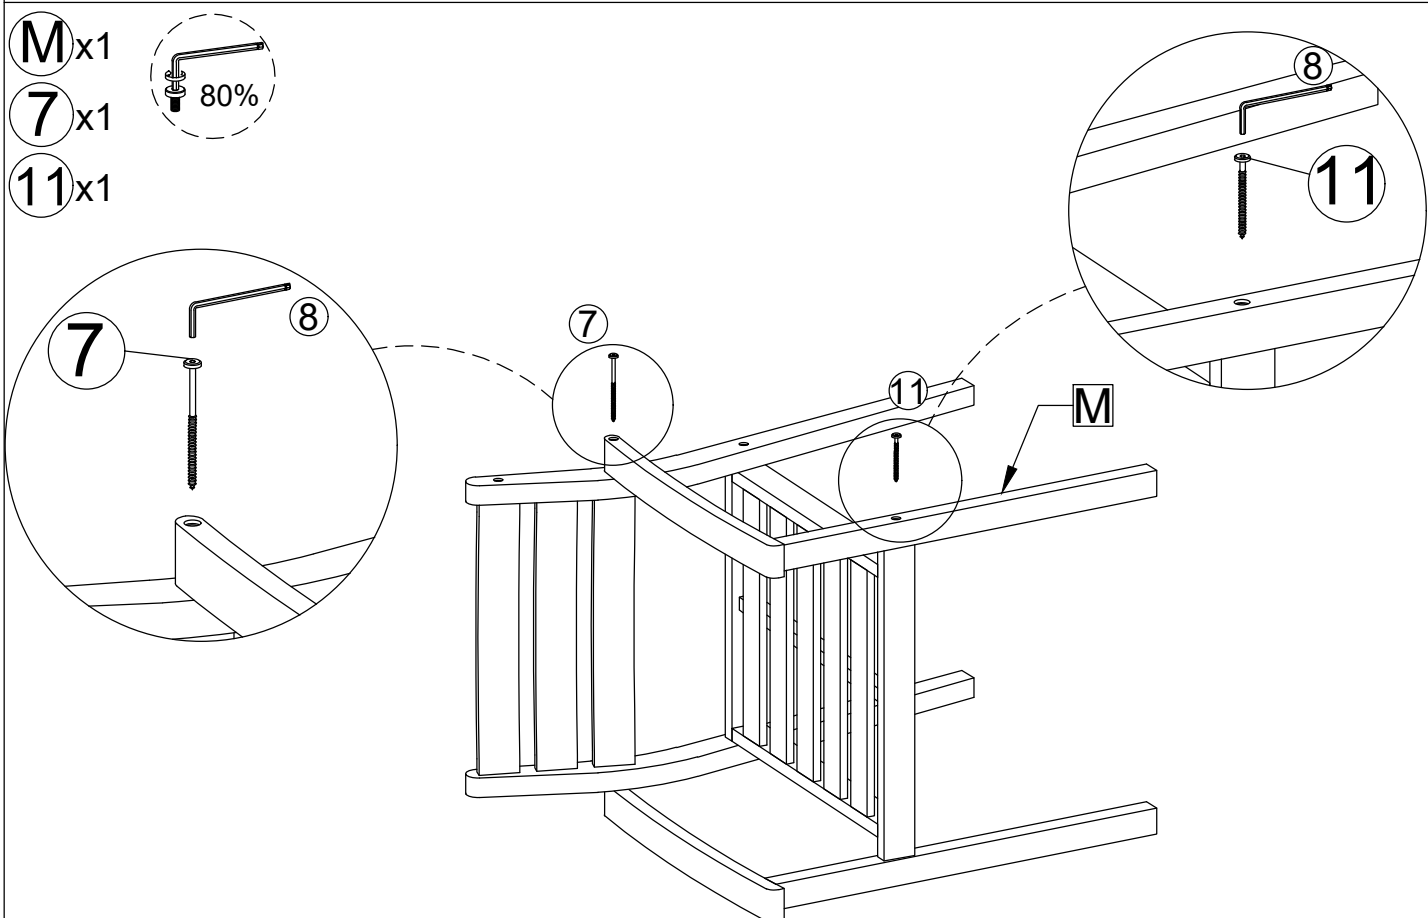


Step 14: Connect The Part from Step 13 & Arm Left (M), tighten Screw Bolt (10),(11) with Allen Key (8).

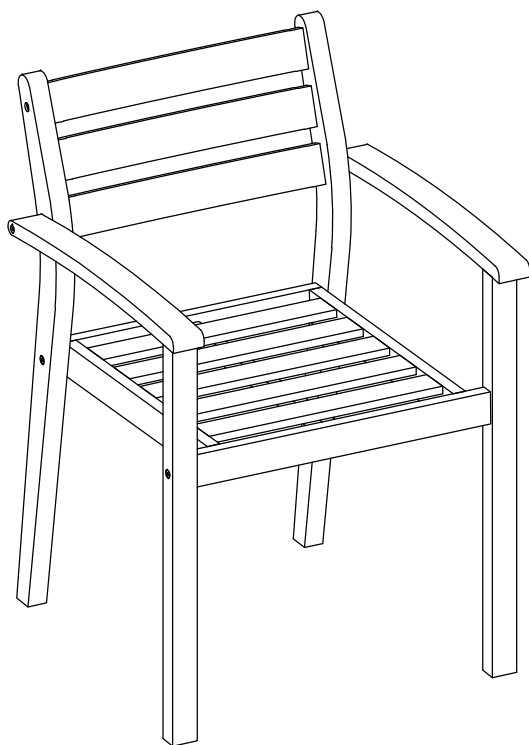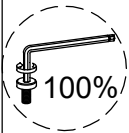

Step 14: Put the Chair upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (8).

Rx1

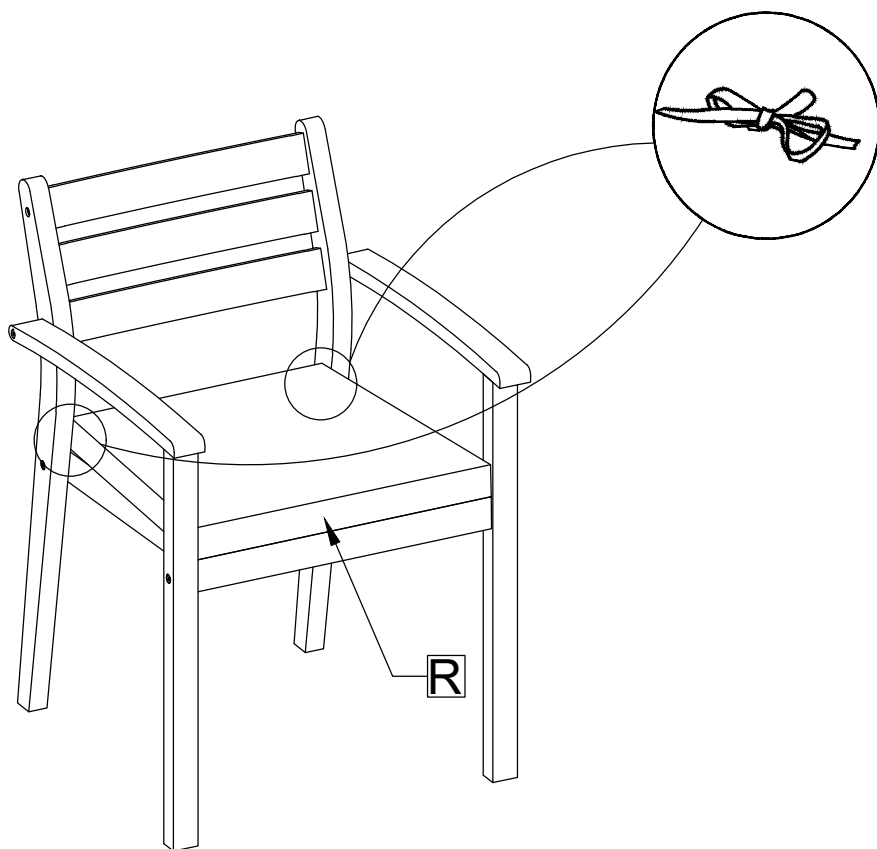

Step 15: Put on Seat Cushion (K) to finish Chair.