


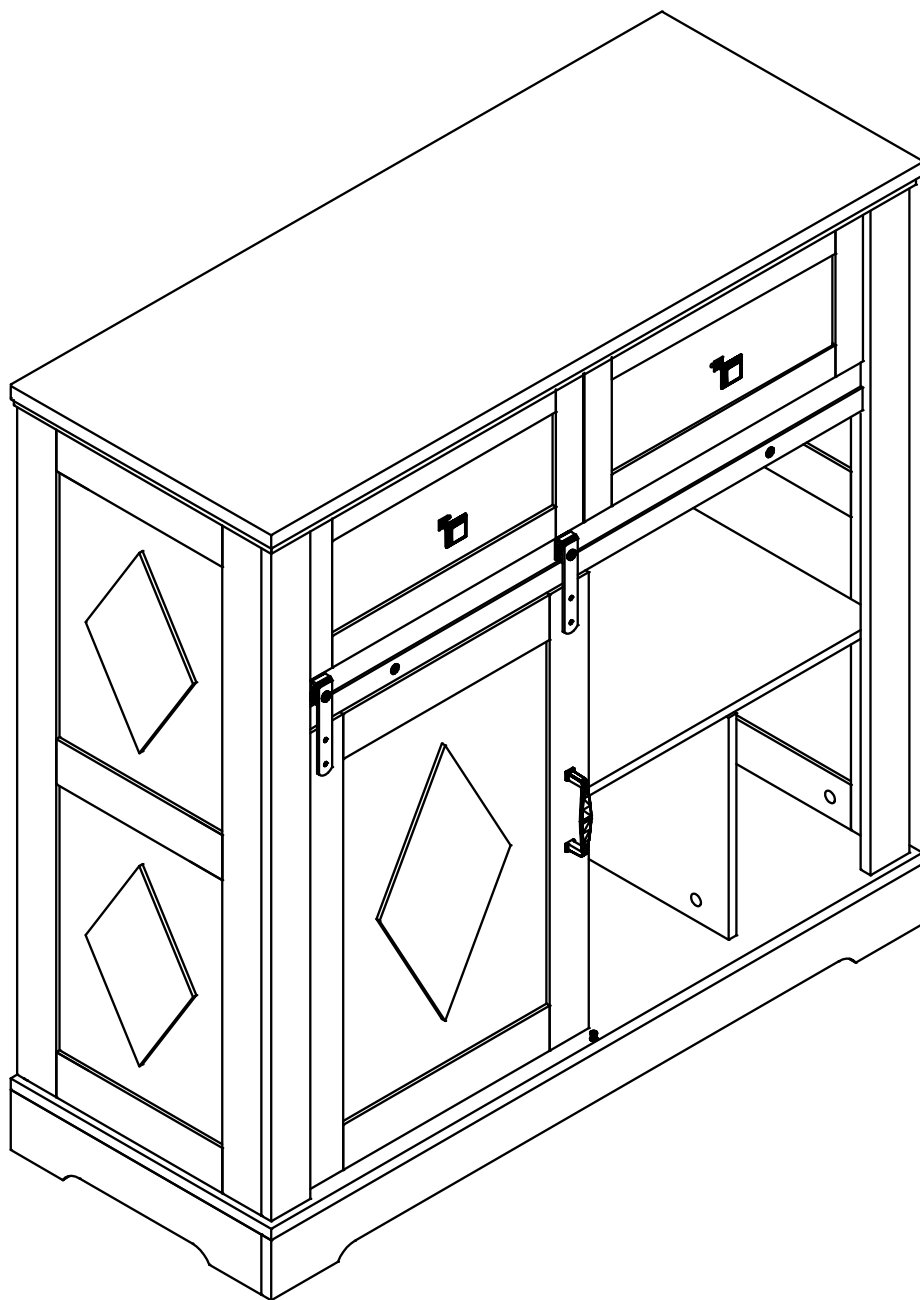
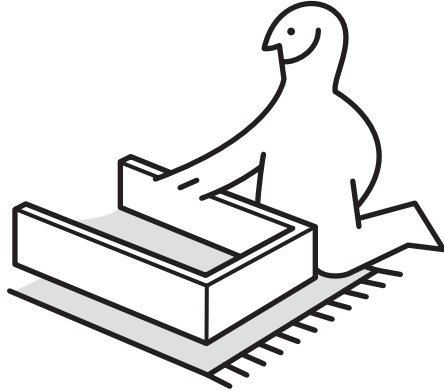


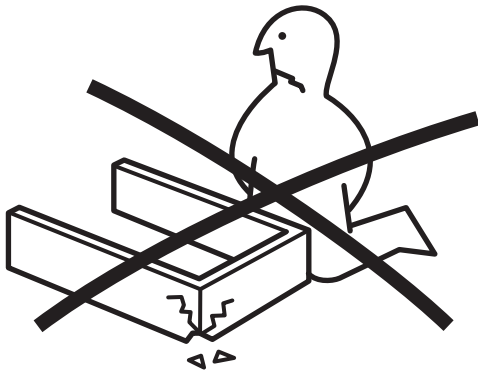

Thanks for purchasing one of our products,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

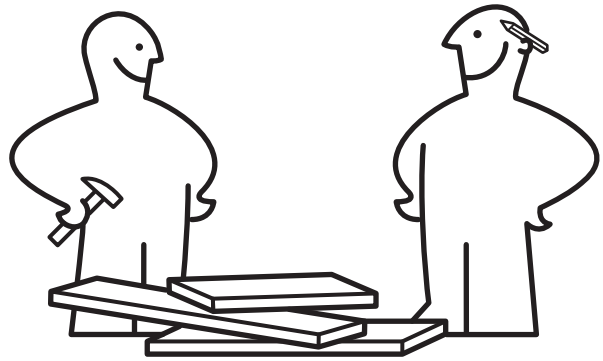


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer



To Assemble the Unit
Wooden Hammer




PAGE1


Exploded View

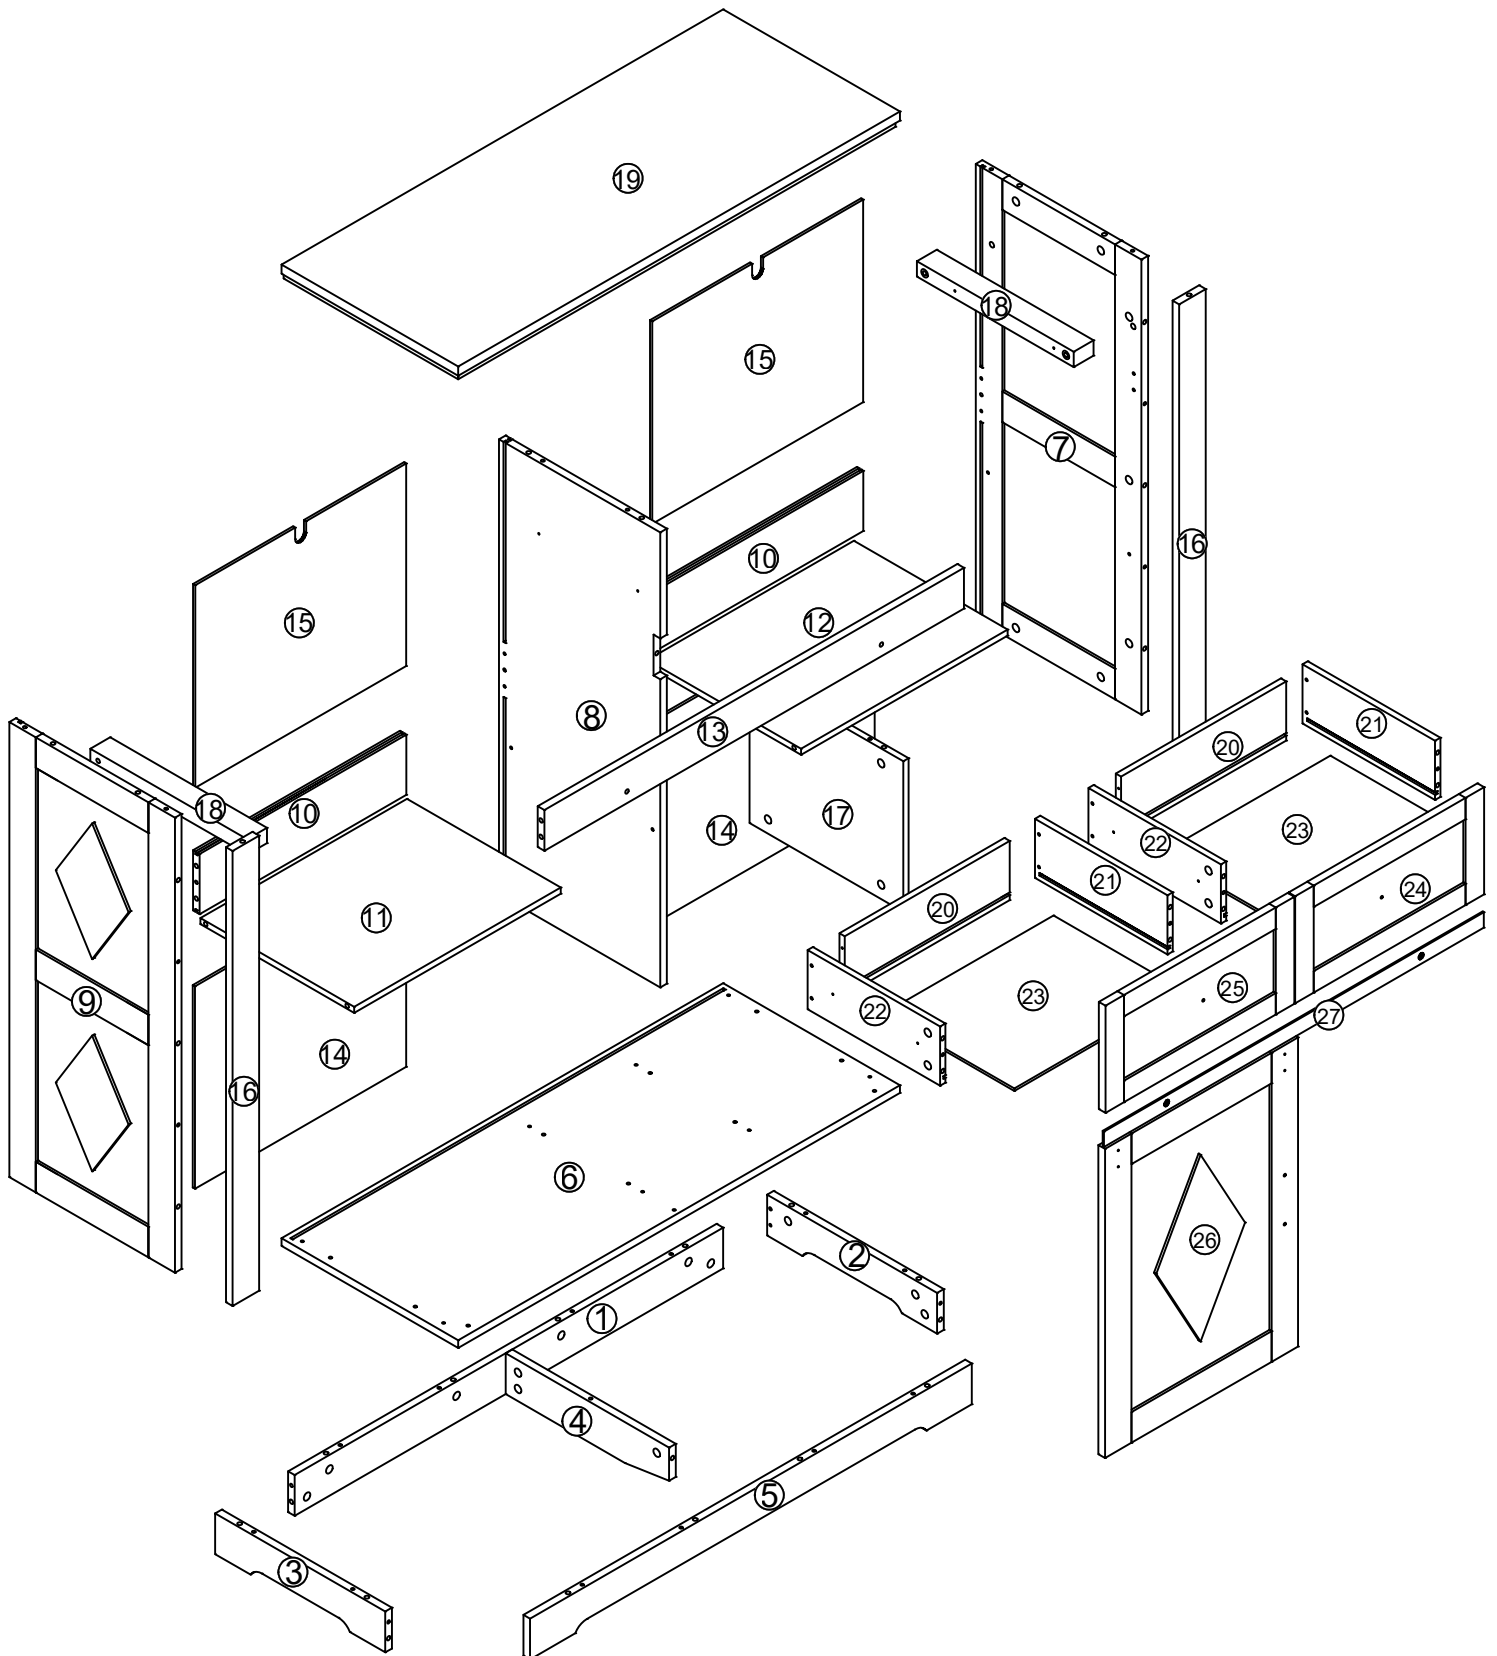

PAGE2


will require these parts

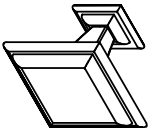A  70+2PCS	B  70+2PCS	C  M6X30MM 53+2PCS	D  M3.5X12M 16+2PCS
E  M3.5X30M 8+2PCS	F  M6X25M 4PCS	G  1PC	H  2PCS
I  M4X18M 2PCS	J  M4X8M 2PCS	K  1PC	L  2PCS
M  2PCS	N  M6X45M 2PCS	O  2PCS	P  1PC
Q  M3.5X16M 4+1PCS	R  2PCS	S  (3*16MM) 8PCS	T  L=290mm 4PCS
U  2PCS	V  2PCS	W  M3.5X25M 2PCS	X  4PCS
Y  M3.5X14M 2PCS			

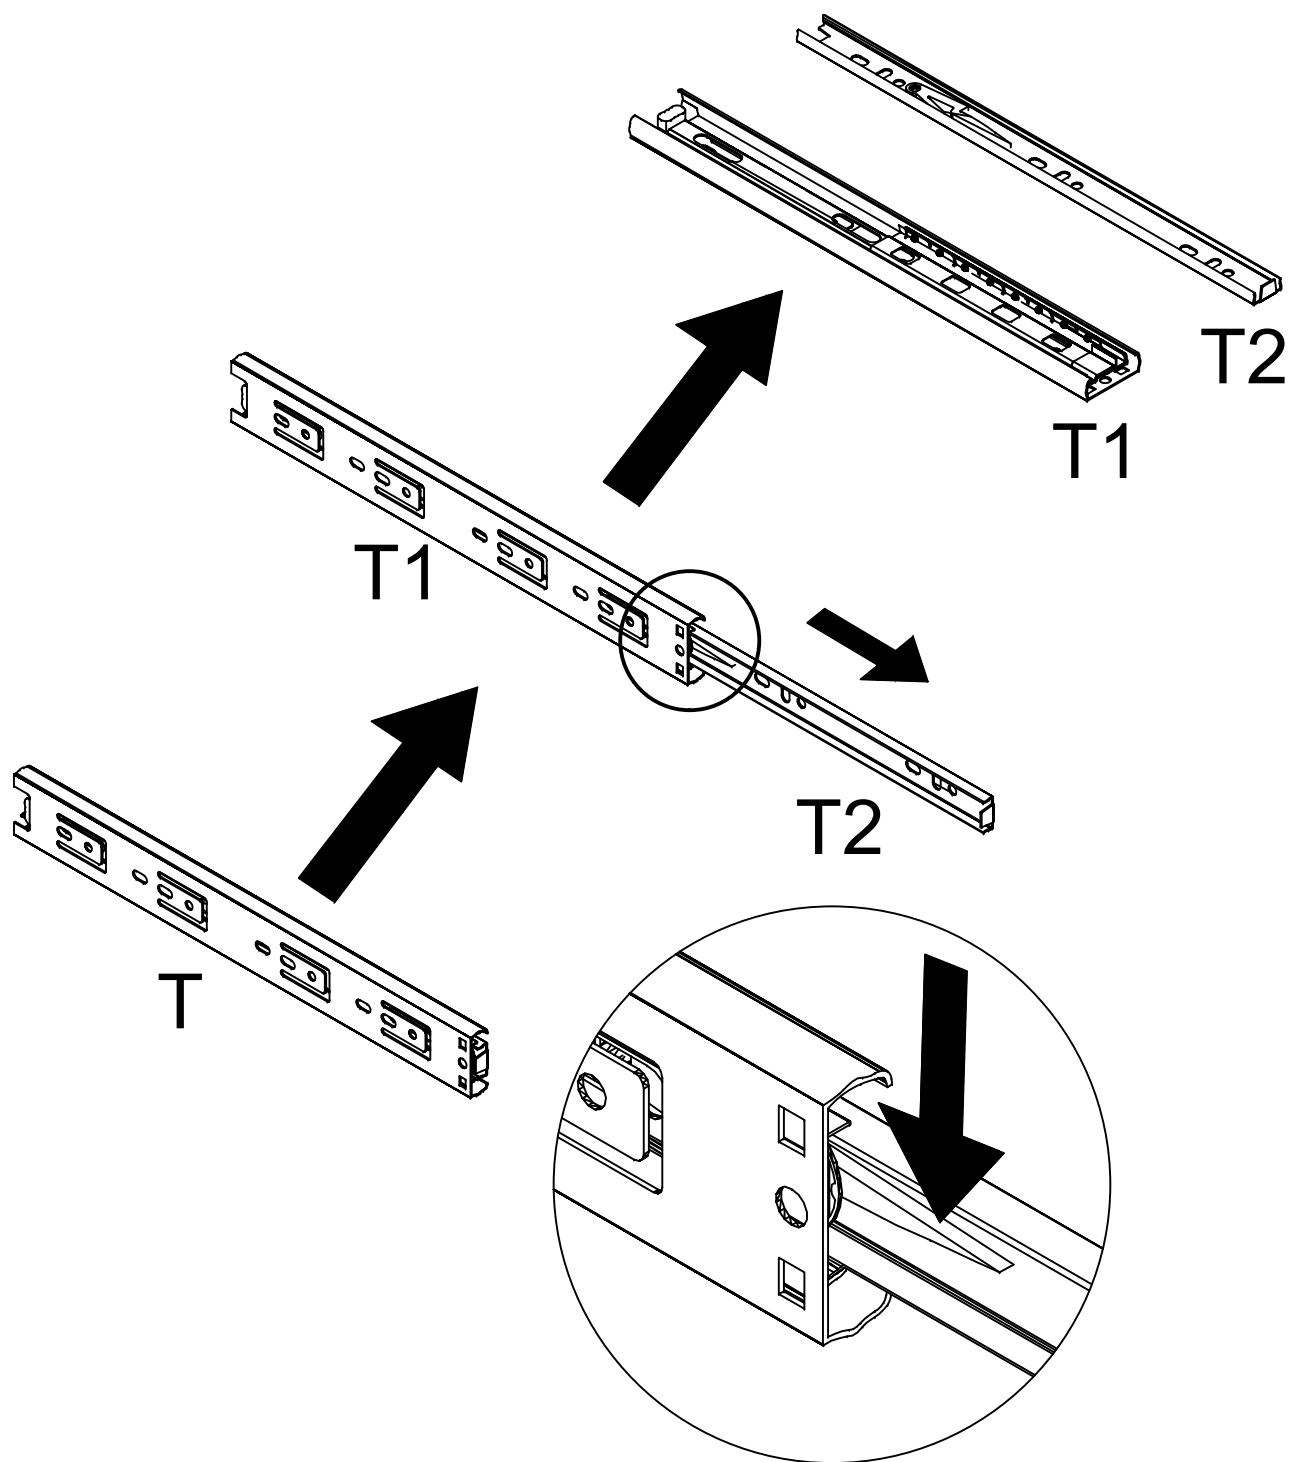


STEP1

will require these parts

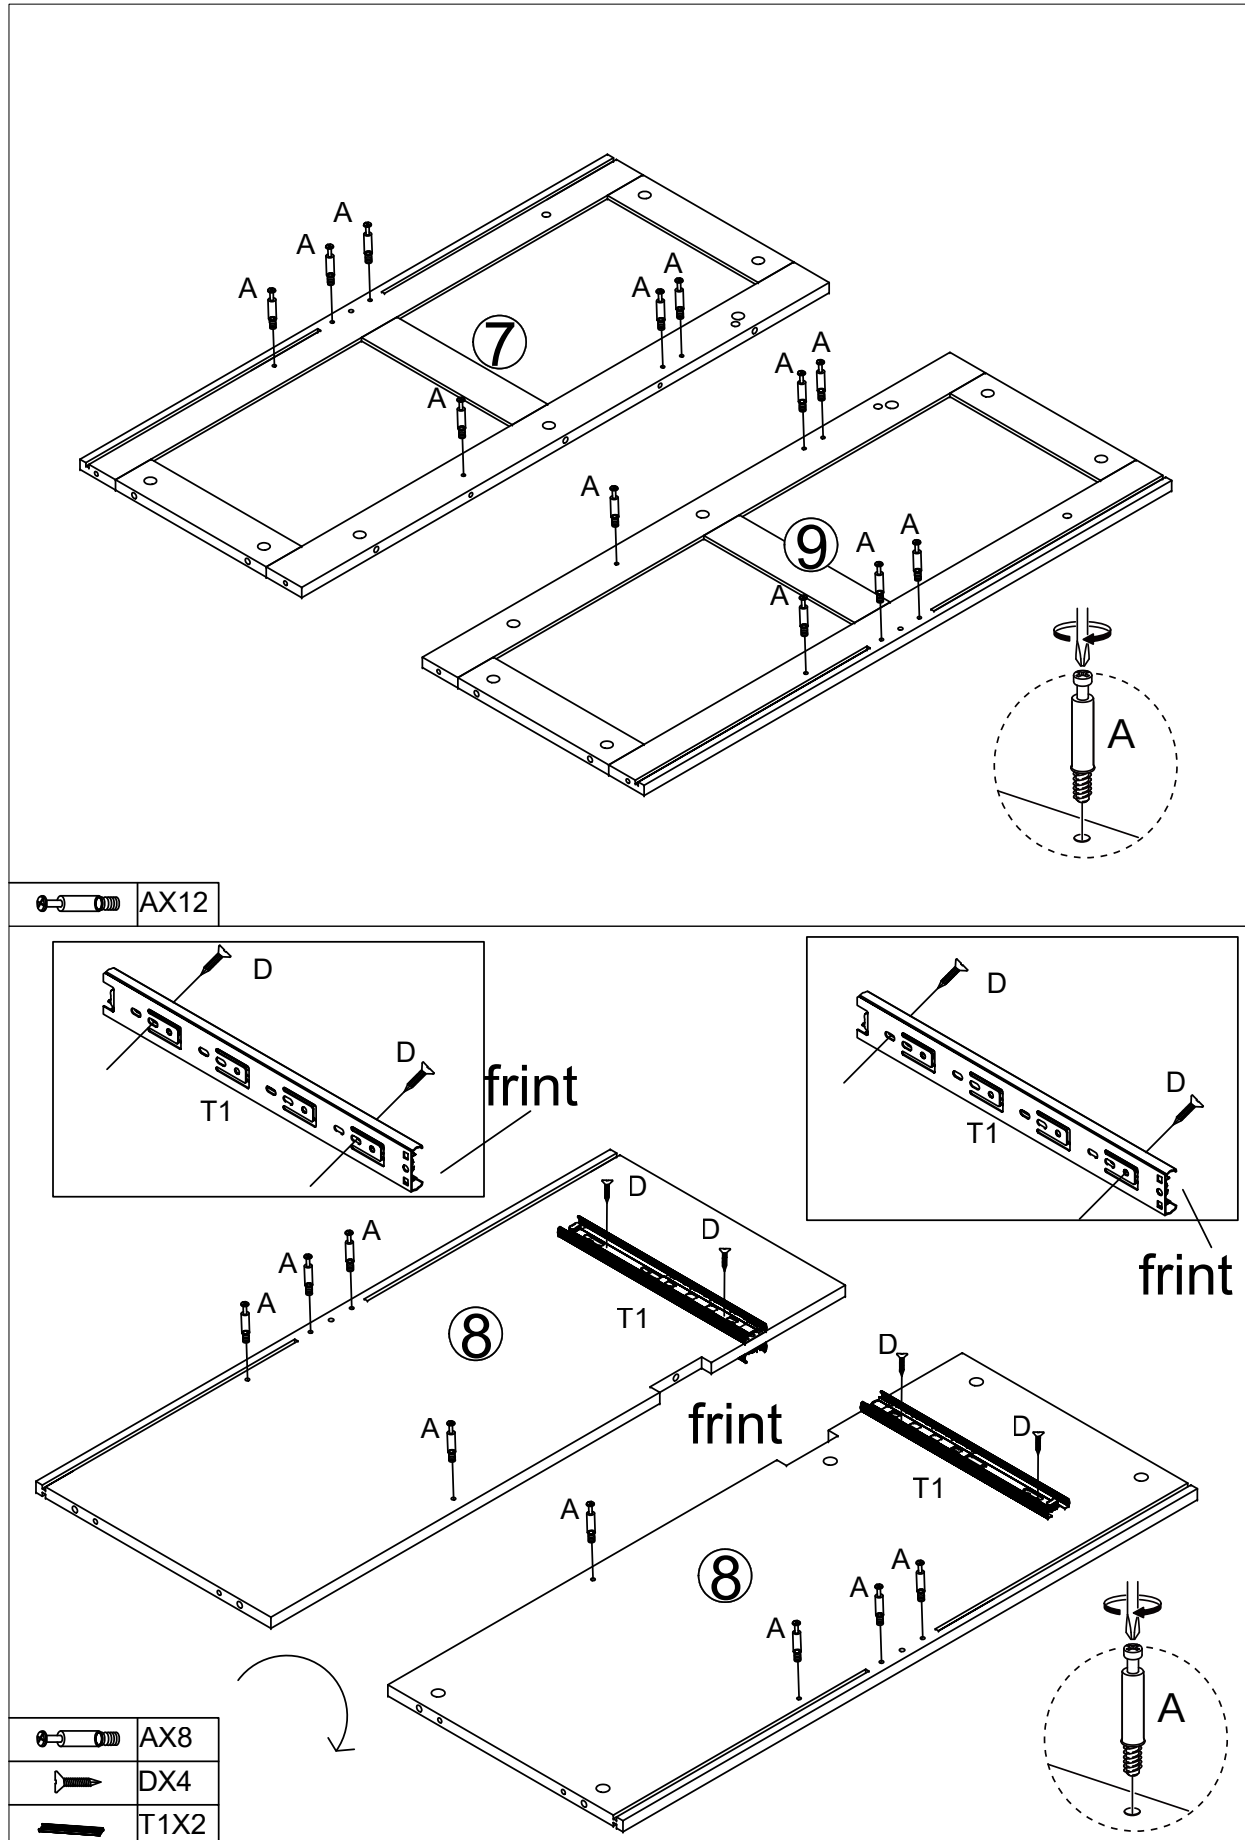


STEP2


will require these parts

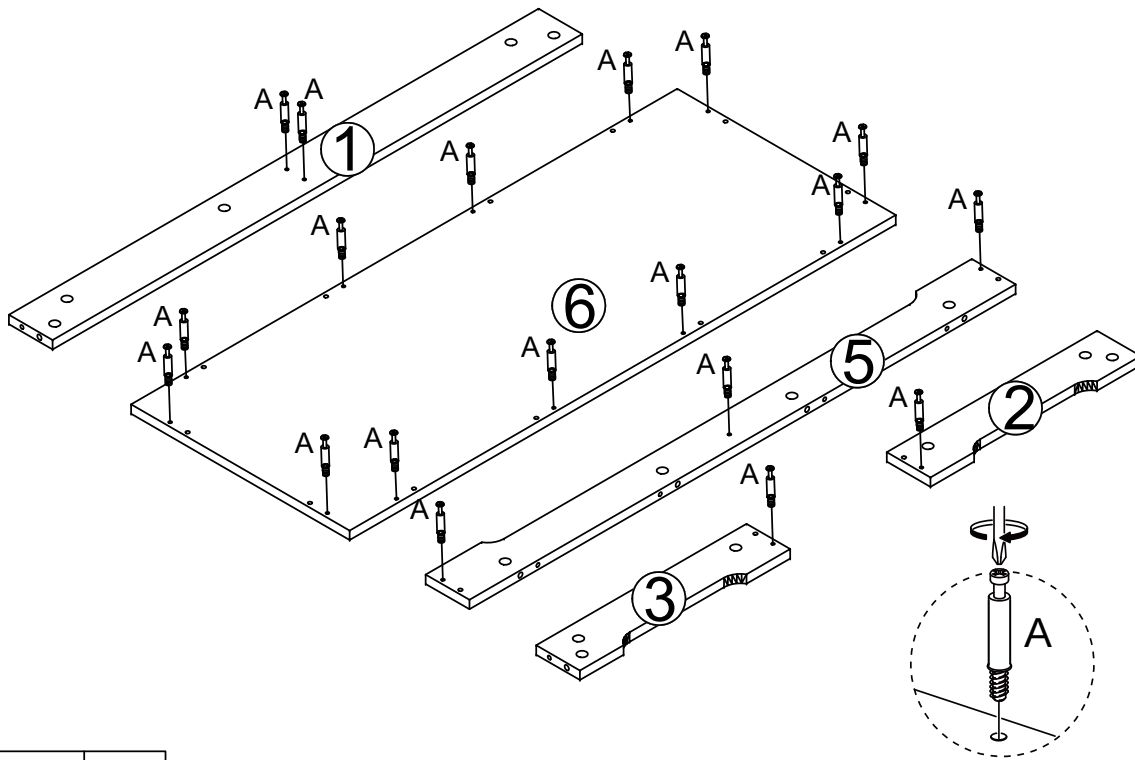

	AX19
--	------

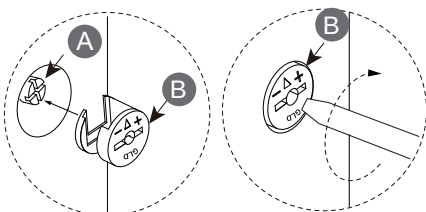**Attention:**

Put (B) into the hole and turn (B) clockwise to lock (A) tightly.

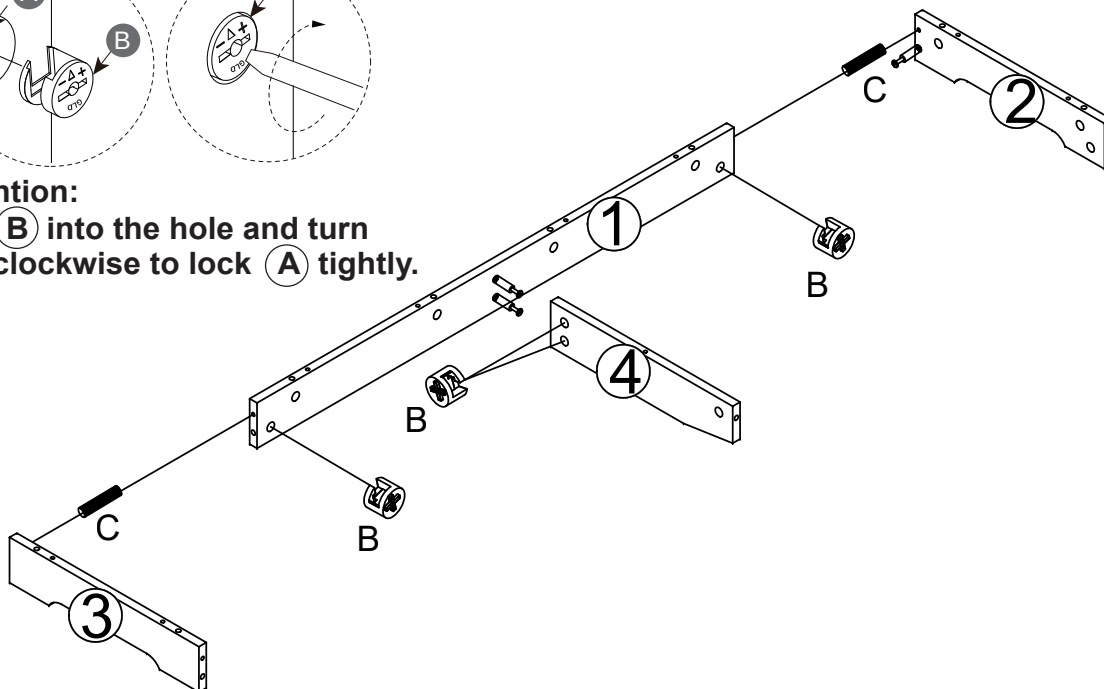


	BX4
--	-----

	CX2
--	-----



STEP3

will require these parts

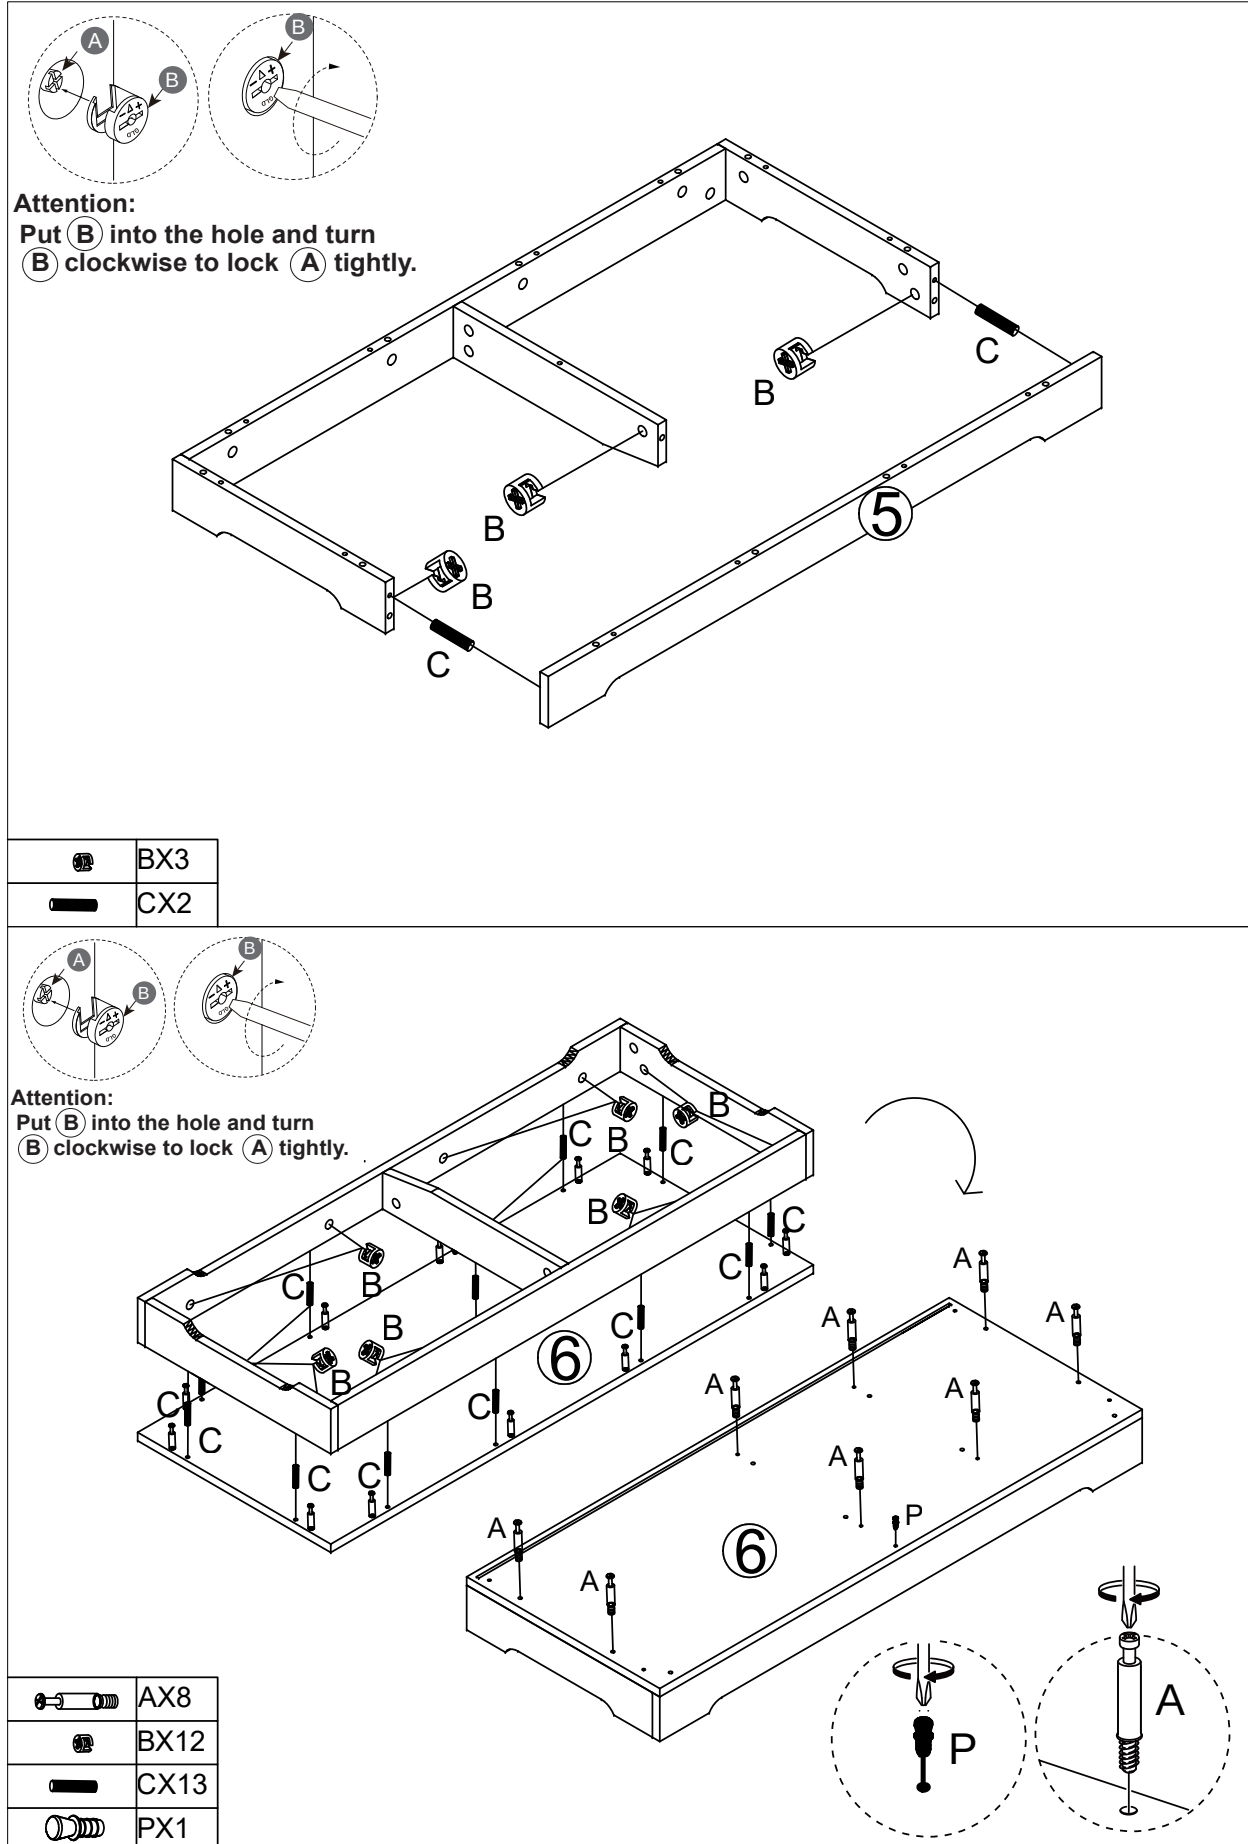


STEP4

will require these parts

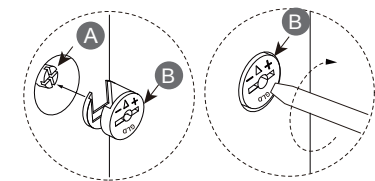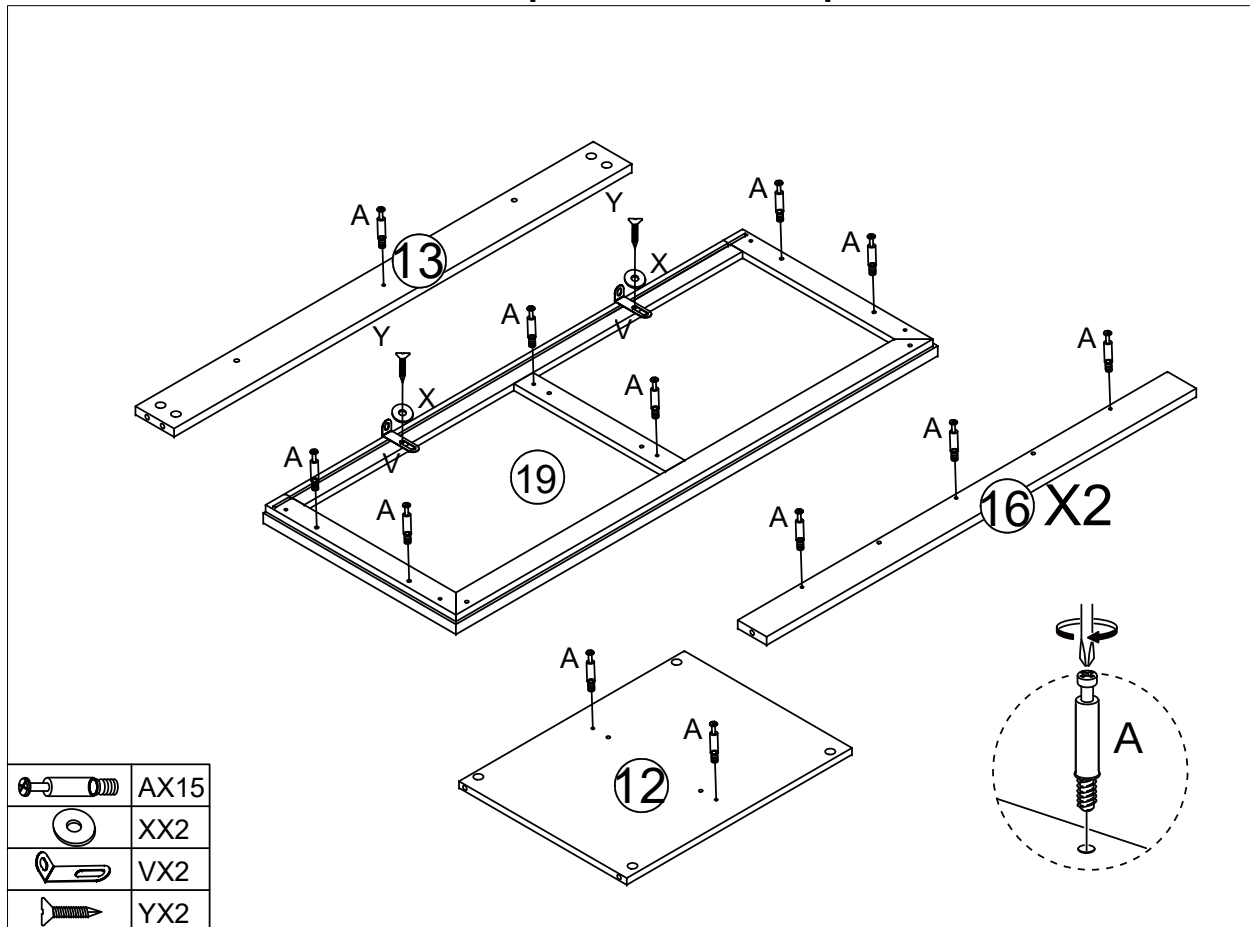**Attention:**


Put **(B)** into the hole and turn
(B) clockwise to lock **(A)** tightly.

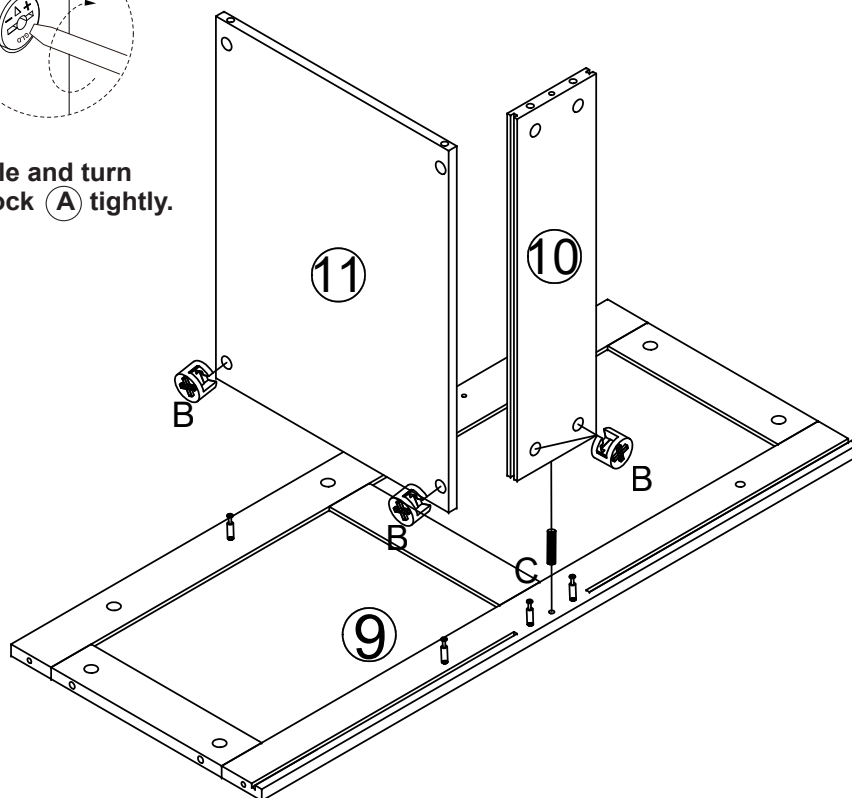


	BX4
	CX1

STEP5


will require these parts

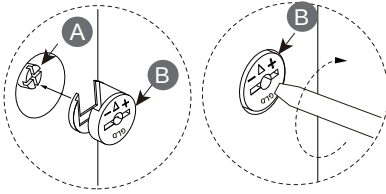**Attention:**


Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

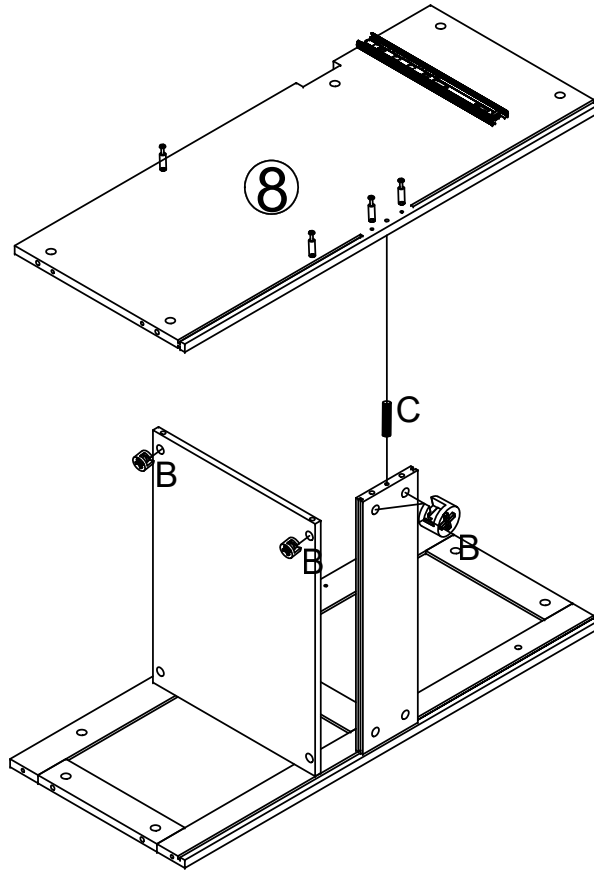

	BX4
	CX1

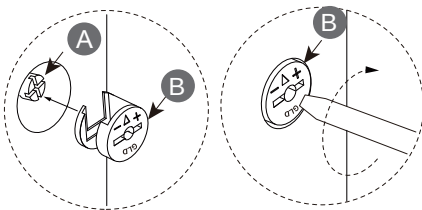**Attention:**



Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

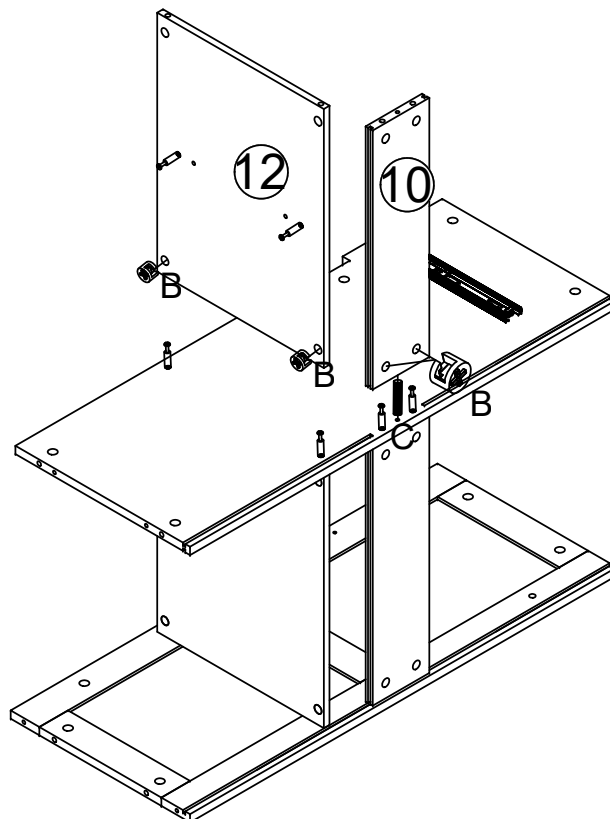



	BX4
	CX1

STEP6

will require these parts

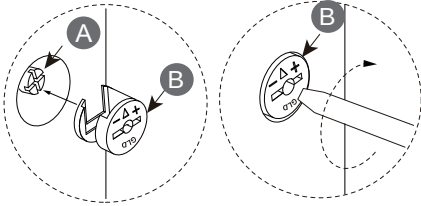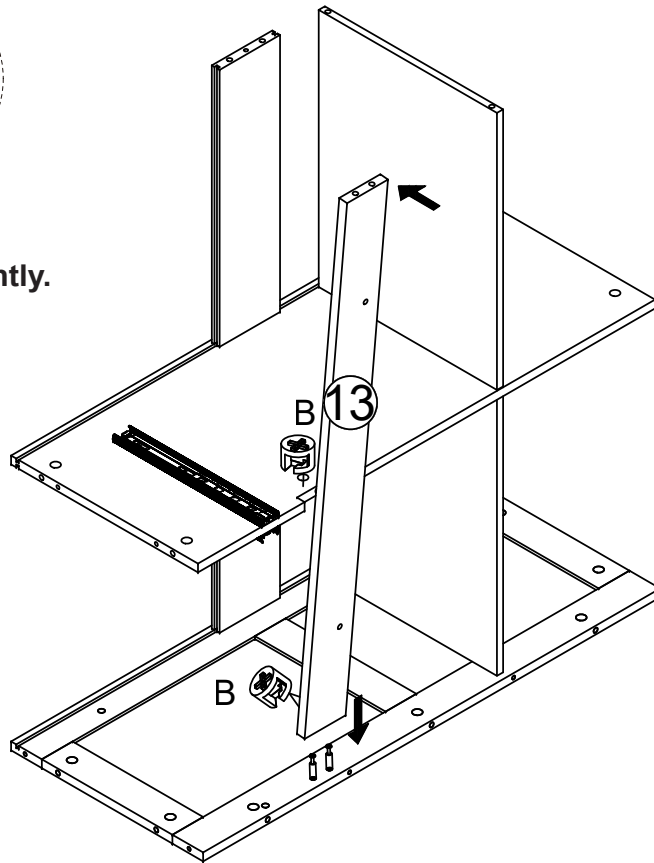**Attention:**Put **(B)** into the hole and turn**(B)** clockwise to lock **(A)** tightly.

BX3

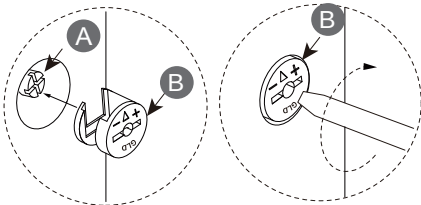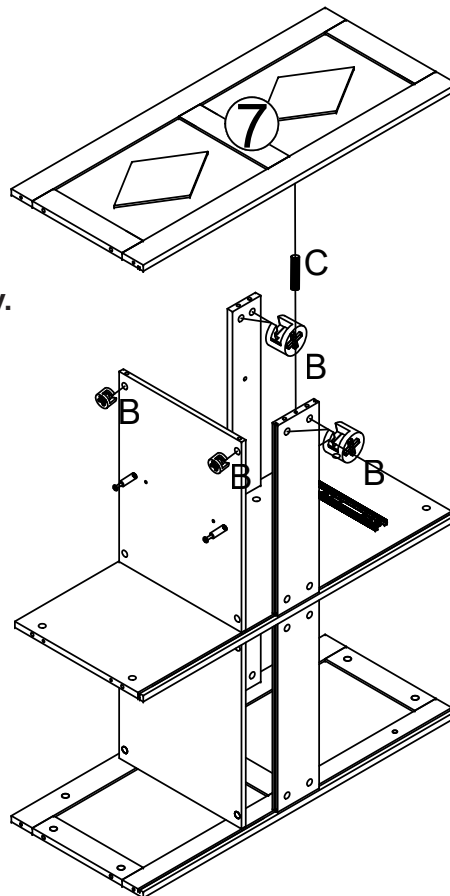**Attention:**Put **(B)** into the hole and turn**(B)** clockwise to lock **(A)** tightly.


BX6




CX1

STEP7


will require these parts

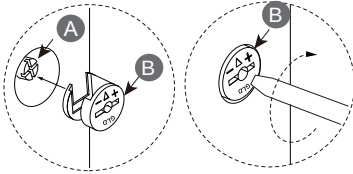

Attention:
Put (B) into the hole and turn (B) clockwise to lock (A) tightly.

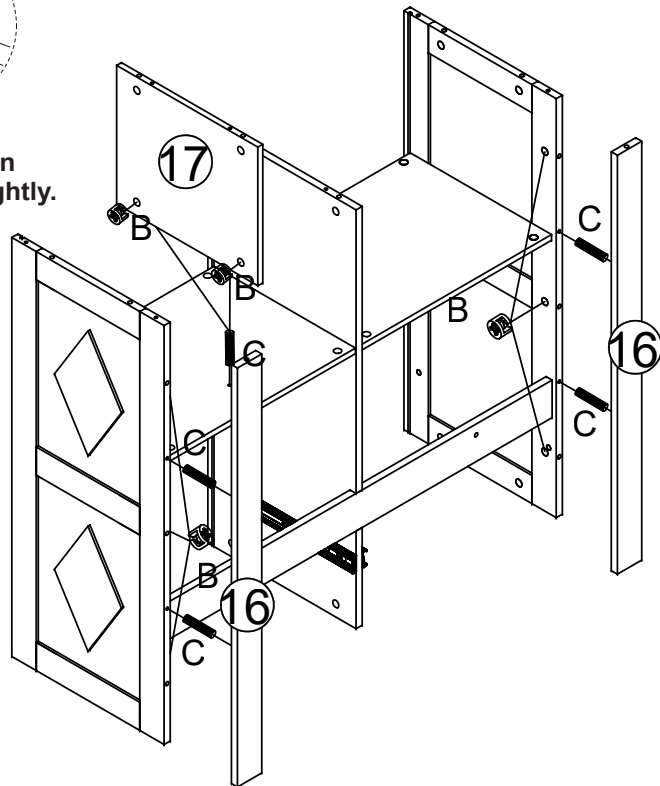


	BX8
	CX6

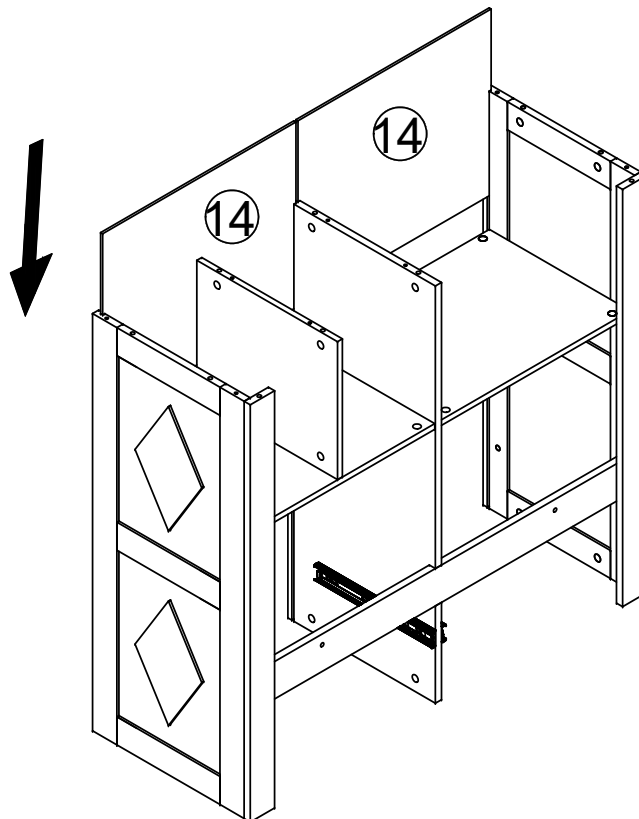


STEP8


will require these parts

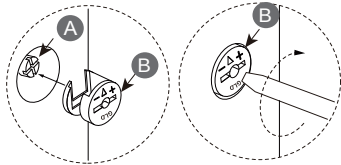

Attention:
Put (B) into the hole and turn (B) clockwise to lock (A) tightly.

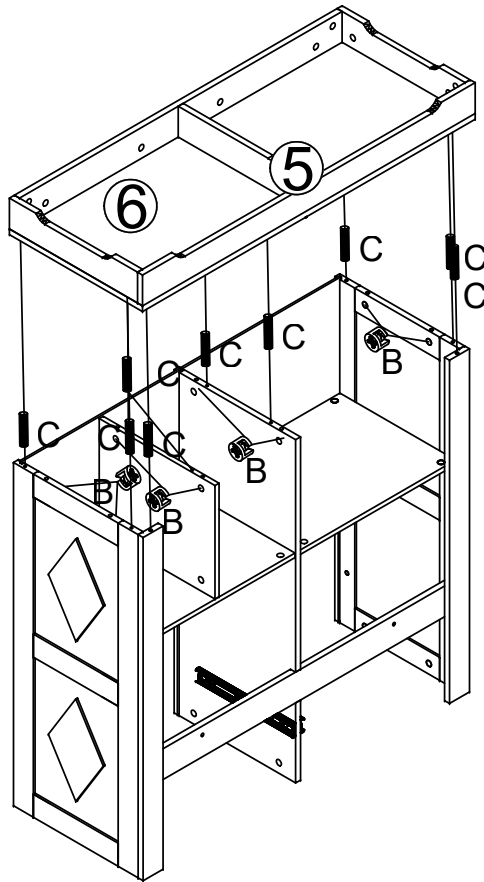


	BX8
	CX10

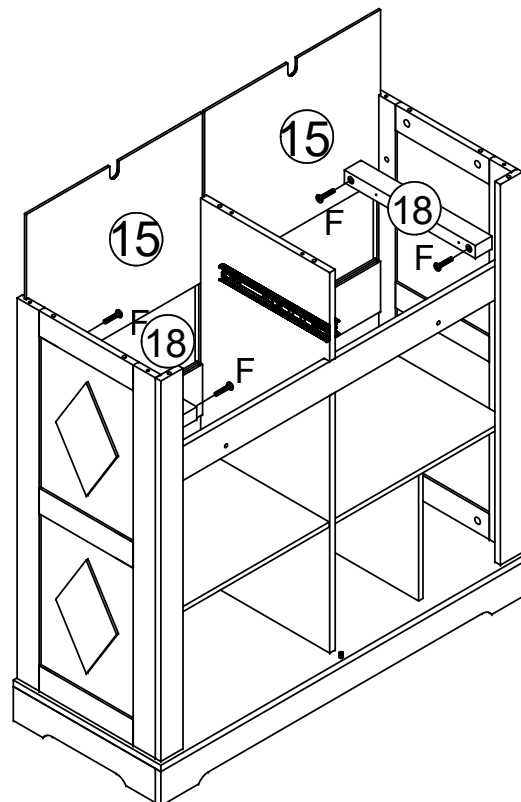

	FX4
--	-----


STEP9

will require these parts

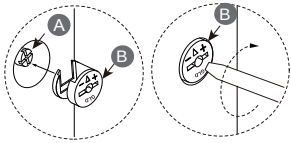


Attention:

Put **(B)** into the hole and turn **(B)** clockwise to lock **(A)** tightly.

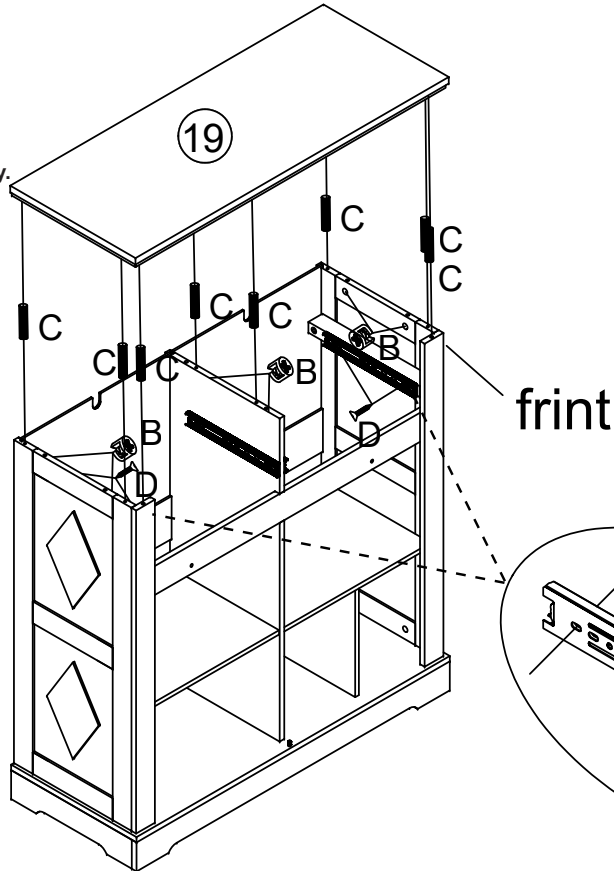


	BX6
	CX8
	DX4
	T1X2

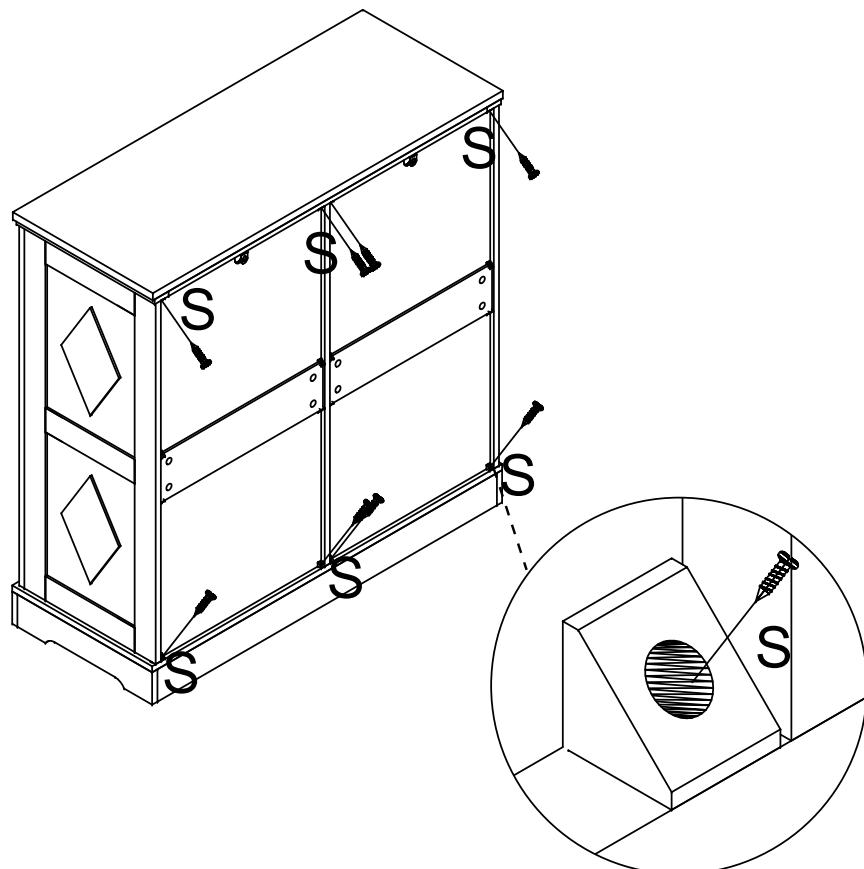

	SX8
---	-----

STEP10


will require these parts

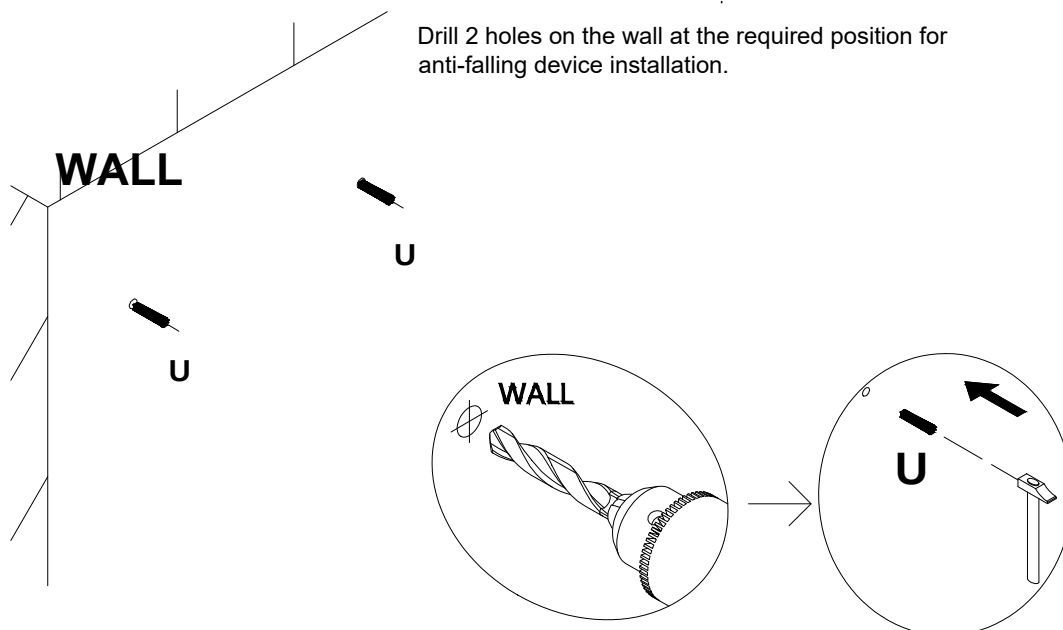

	Ux 2
---	------



Move the cabinet to the required position, use the "W" long screw to fix the cabinet to the wall.

WALL

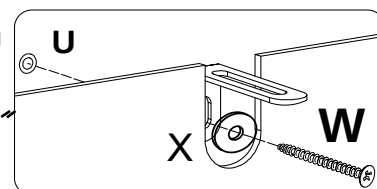

	WX2
	XX2



STEP11 will require these parts

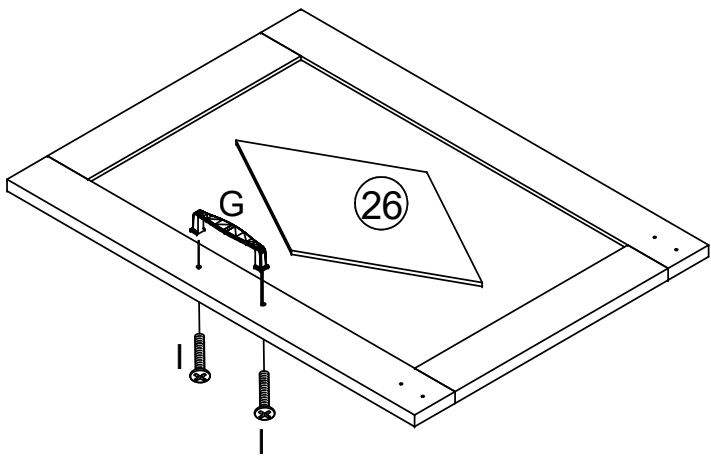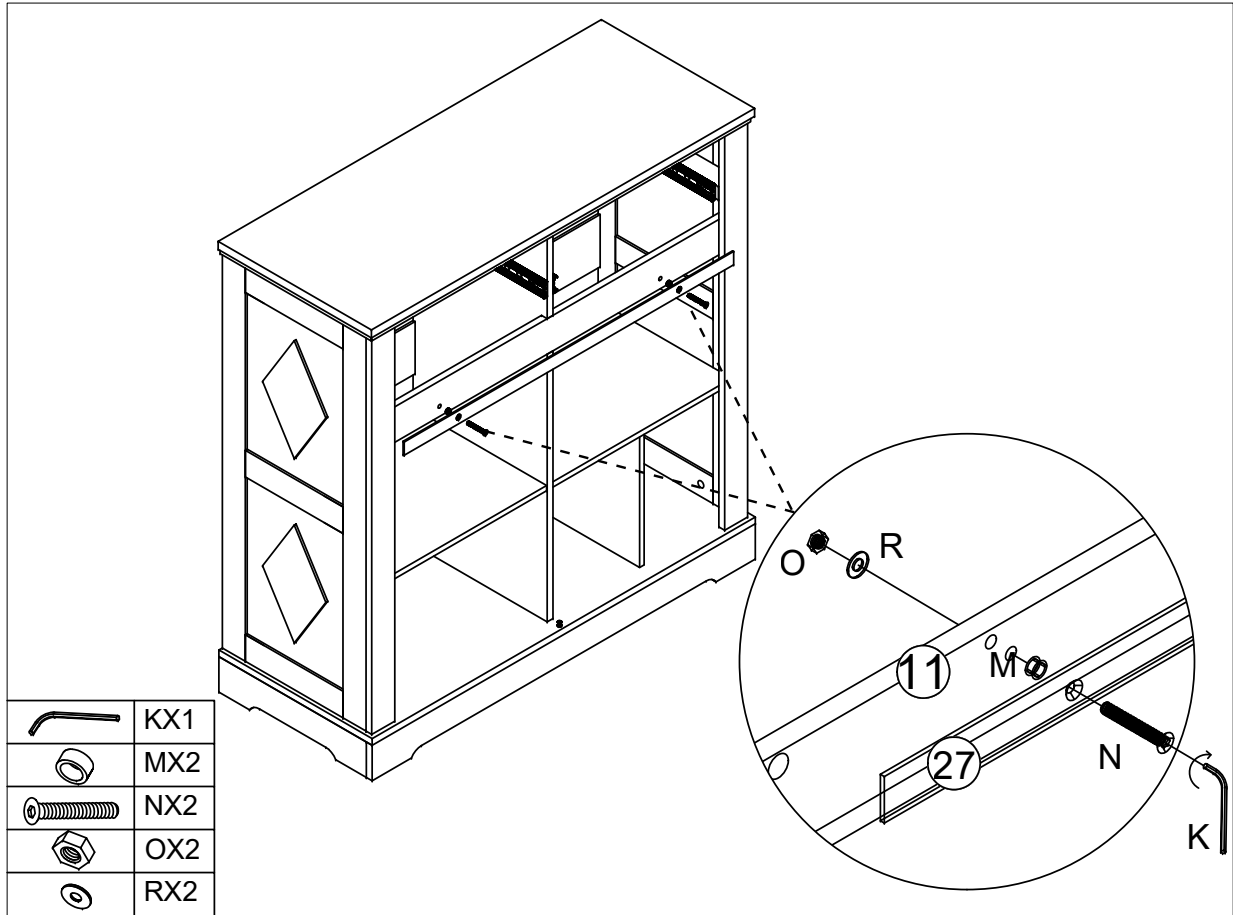


	GX1
	IX2

STEP12


will require these parts

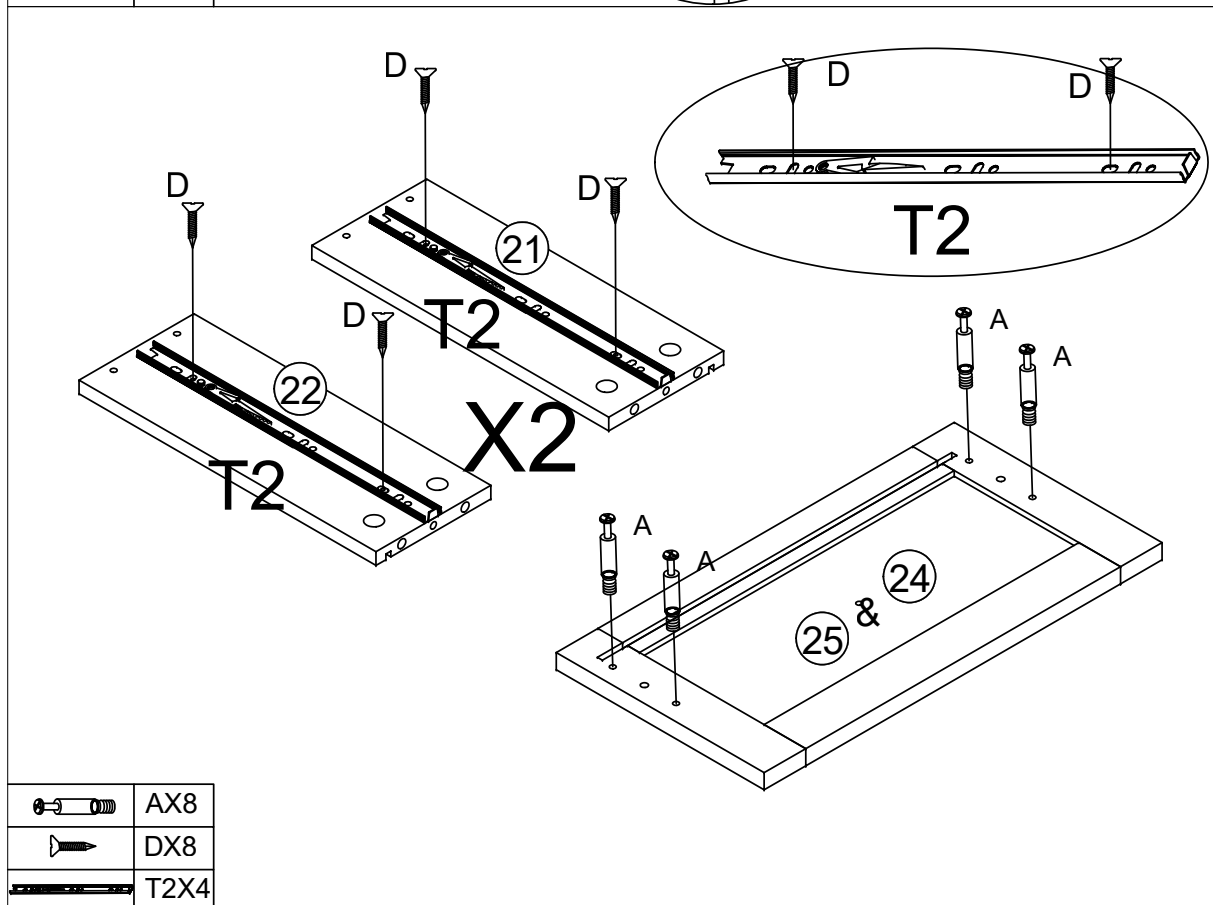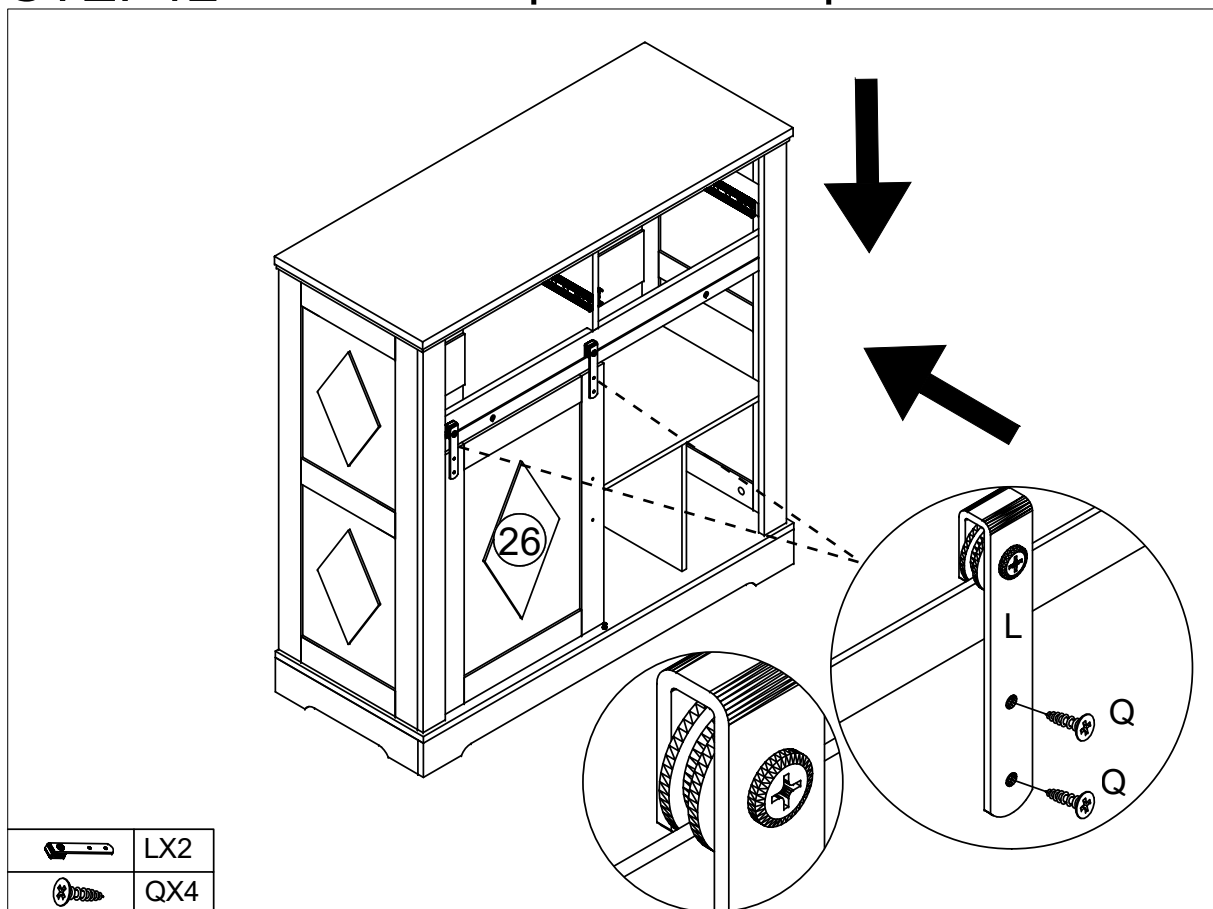

STEP13 will require these parts


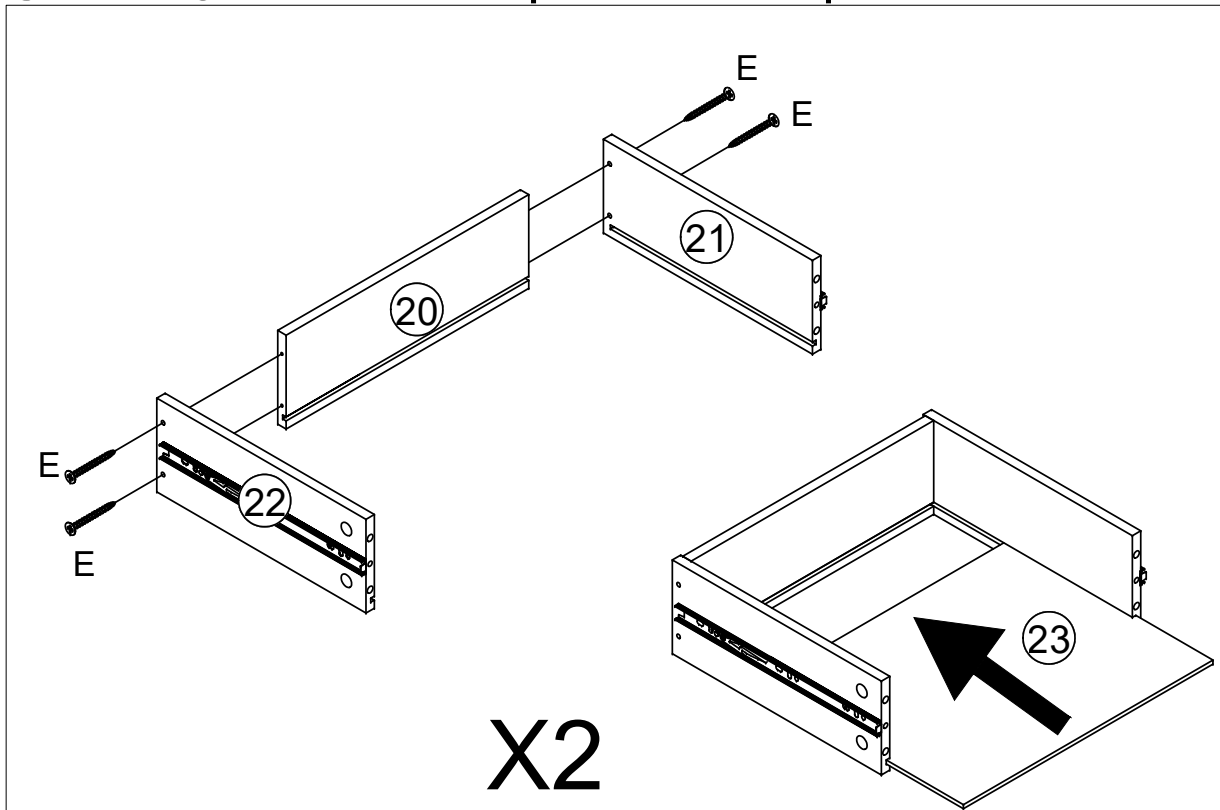


	EX8
---	-----

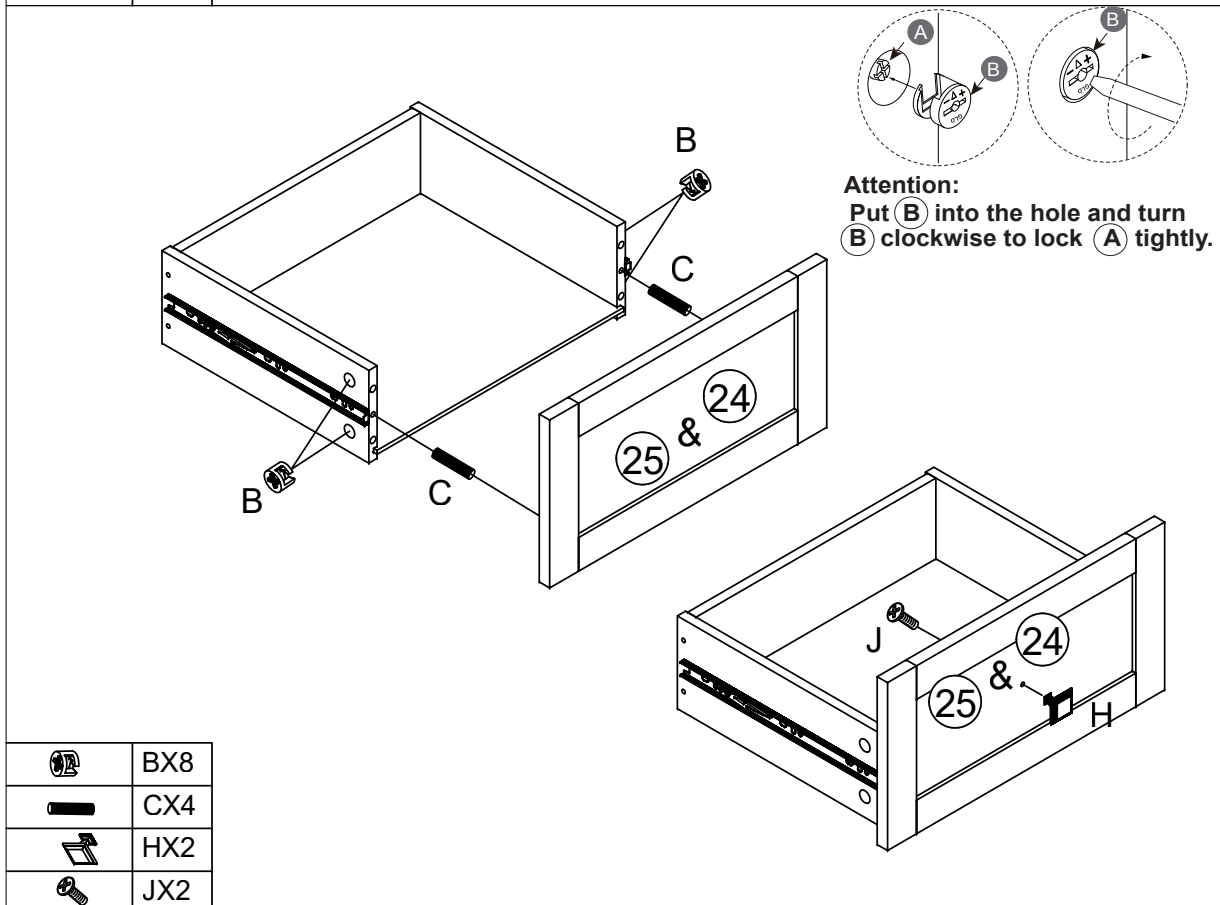

STEP14

will require these parts

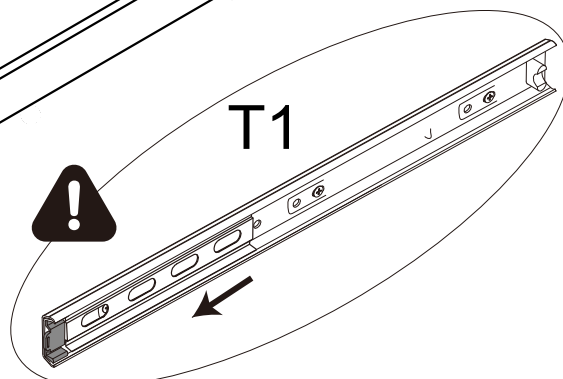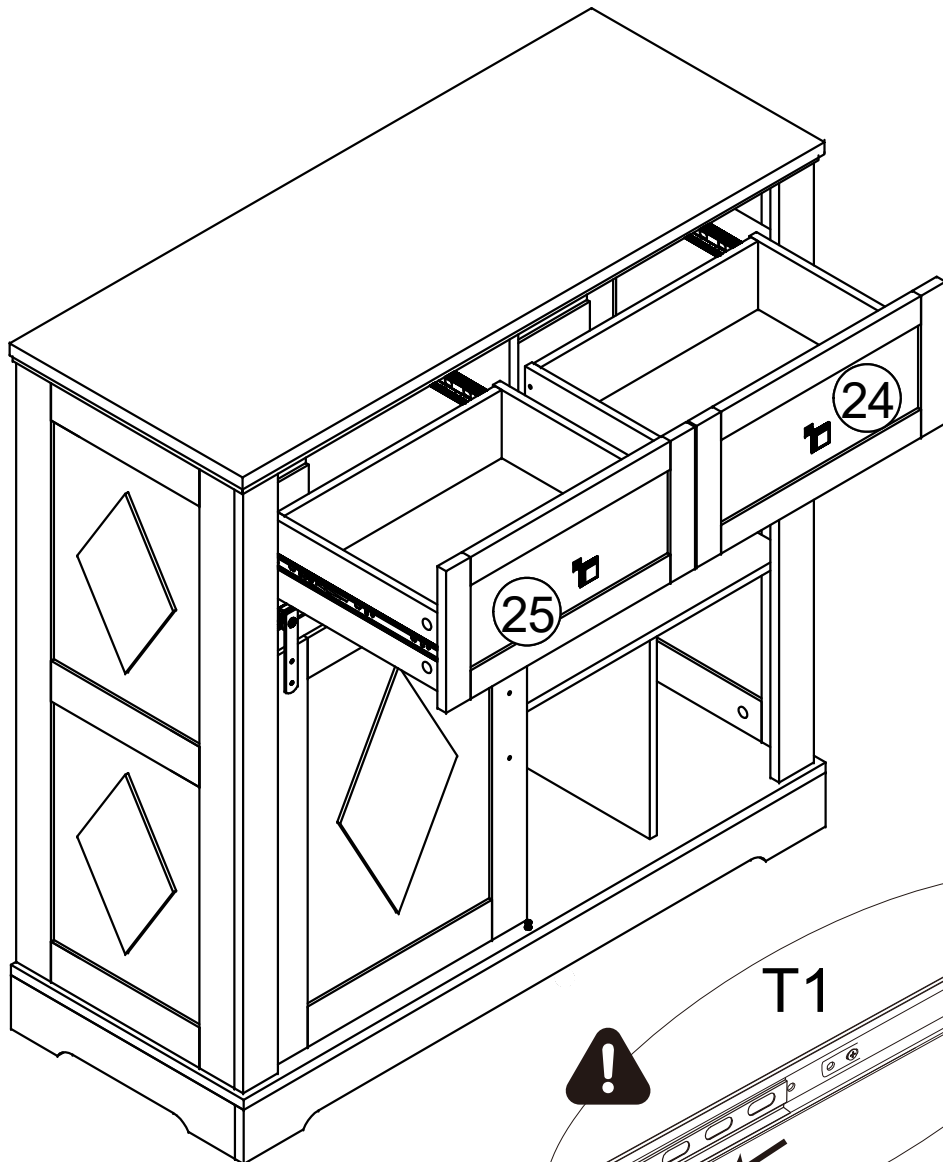

Make sure all the sliders on the front end



EN: 1, Drawers must be **horizontally put into** the cabinet
2, Make sure both side sliders **match well** to avoid damage

Wrong: "T1" and "T2" are not be horizontally placed and pushed

Right: Push "T2" and "T1" horizontally until you hear a "click"

