
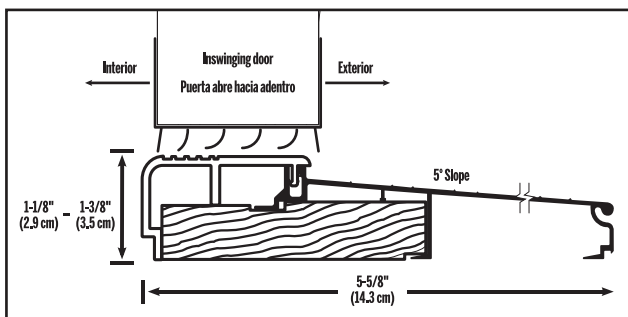


Tools Required:

Herramientas Requeridas:



INSTRUCTIONS:

1. Measure width of doorway. Cut threshold to length with a hacksaw.
2. With screwdriver pry edge of vinyl from aluminum track. Gently lift and bend vinyl back allowing room to install fasteners through the wood.
3. Install threshold with vinyl sill directly below door. Threshold should be secured with fasteners (not included).
4. When installing this threshold on a concrete floor use lead or plastic anchors.

INSTRUCCIONES:

1. Mida el ancho de la entrada. Corte el sardinel al largo necesario con una següeta.
2. Con un destornillador apalanque el borde del vinilo desde el riel de aluminio. Levante suavemente y doble el vinilo hacia atrás permitiendo el espacio para instalar los sujetadores a través de la madera.
3. Instale el sardinel con zócalo de vinilo directamente debajo de la puerta. El sardinel deberá fijarse con los sujetadores (no incluidos).
4. Cuando instale este sardinel a un piso de concreto, use anclajes de plomo o plástico.



QUESTIONS? | PREGUNTAS?
800.654.8454

MDBUILDINGPRODUCTS.COM

